
#### Apollo 15 G&C Checklist

Please note that most of the hand-written additions to this document were added during the compilation of the Apollo 15 Flight Journal in 1998 to 2000. To a large extent, they reflect changes read up to the crews during the course of the mission.

David Woods - Editor: Apollo Flight Journal

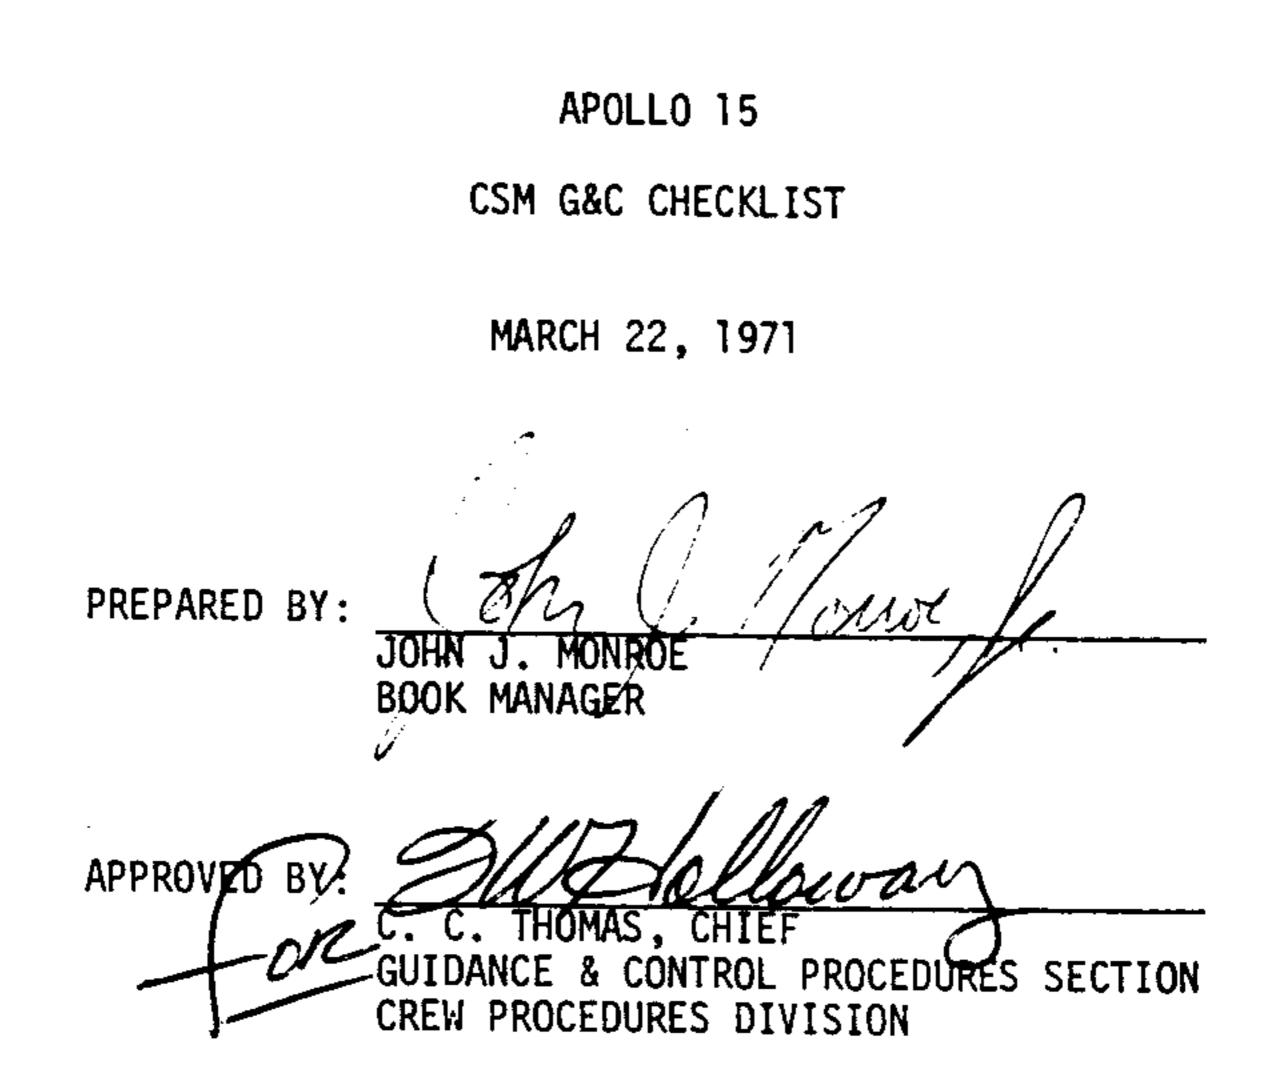



It is requested that any organization having comments, questions, or suggestions concerning this document contact John J. Monroe, Systems Procedures Branch, CG221, Building 4, room 253, telephone 483-4371.

This document is under the configuration control of the Crew Procedures Control Board (CPCB). All proposed changes should be submitted to the Apollo Flight Data File Manager, T. W. Holloway, CG5, Building 4, room 230 telephone 483-4271.

Distribution of this document is controlled by Flight Data File Manager, T. W. Holloway, Flight Planning Branch, Crew Procedures Division. i

**G&C CHECKLIST** 

# LIST OF EFFECTIVE PAGES

Basic

3/22/71

PAGE i ii iii iv v v 1-1 1-2 1-3 1-4 1-5 1-6 1-7 1-8 1-9 1-10 . 1-10 . 1-10 . 1-11 . 1-12 . 1-13 . 1-14 . 1-15 . 1-16 . 1-17 . 1-18 . 1-17 . 1-18 . 1-19 . 1-10 . 1-17 . 1-18 . 1-19 . 1-10 . 1-17 . 1-18 . 1-19 . 1-20 . 1-21 . 1-22 . 1-23 .		DATE 3/22/71	PAGE 1-26 1-27 1-28 1-29 1-30 1-31 2-1 2-2 2-3 2-4 2-5 3-1 3-2 3-3 3-4 3-5 3-6 3-7 3-8 3-9 3-10 3-11 3-12 3-13 3-14 4-1 4-2 4-3 4-4
1-22 .	• • • • • •	3/22/71	4-3 .

PAGE				DATE
1-26		•	•	3/22/71
1-27	•	•	•	3/22/71
1-28	•	•	•	3/22/71
1-29	٠	•	•	3/22/71
1-30	٠	٠	•	3/22/71
1-31	٠	•	•	3/22/71
2-1.	•	•	•	3/22/71
2-2.	٠	•	•	3/22/71
2-3.	•	•	٠	3/22/71
2-4.	•			3/22/71

5/ 44/ / 1 3/22/71 • • 3/22/71 • 3/22/71 . 3/22/71 • • 3/22/71 3/22/71 • • . . . 3/22/71 3/22/71 • 3/22/71 • 3/22/71 • • • 3/22/71 . . 3/22/71 • • 3/22/71 • . . 3/22/71 3/22/71 • . . . 3/22/71 3/22/71 • • • 3/22/71 . . . . 3/22/71 3/22/71 • • 3/22/71 **· ·** 

ii

### (LIST OF EFFECTIVE PAGES CONT)

PAGE 6-4 . 6-5 . 6-6 . 6-7 . 6-8 . 6-9 . 6-10 7-1 . 7-2 . 7-3 . 7-4 . 7-5 . 7-6 . 7-7 . 7-8 . 7-9 . 7-10 7-10 7-11 7-12 7-13 7-14 7-15 7-16 7-17 8-1 . 8-2 . 8-3 . 8-4 . 9-1 . 9-2 . 9-3 . 9-4 . 9-5 . 9-6 . 9-7 . 9-8 . 10-1 10-2 10-3
DATE 3/22/71

PAGE 6-4 6-5 6-6 6-7 6-8 6-9 6-10 7-1 7-2 7-3 7-4 7-5 7-6 7-7 7-8 7-9 7-10 7-10 7-11 7-12 7-13 7-14 7-15 7-16 7-16 7-17 8-1 8-1 8-2 8-3 8-4 9-1 9-2 9-3 9-4 9-5 9-6 9-8 10-1	DATE 3/22/71
	$\begin{array}{cccccccccccccccccccccccccccccccccccc$

### CONTENTS

PAGE

1.	CMC GENERAL	1-1
	Star List	1-1
	Verb List (Decimal)	1-2
	Noun List (Decimal)	1-4
	VO5 NO9 Alarm Codes	1-8
	V50 N25 Checklist Codes	1-14
	VO4 NO6 (N12) Option Codes	1-14
	Monitor Data in Erasable Memory	1-16
	Flag Word Set/Reset	1-16
	Change Data in Erasable Memory	1-16
	Flag Word Bit Assignments	1-17
	Monitor of Input/Output Channels	1-18
	Channel Set/Reset	1-18
	SC Cont/Mode and Optics Mode	
	Override	1-18
	CMC Input/Output Channels	1-19
	VHF RNG DSKY DISPLAY	1-20

		, 20
G&N	Recovery Procedures	1-20
V35	DSKY Condition Light Test	1-23
V41	N91 Coarse Align OCDU's	1-23
V41	N20 Coarse Align ICDU's	1-24
V42	Gyro Torquing	1-24
V48	DAP Data Load & Activate Procedure .	1-25
V49	Crew Defined Maneuver	1-26
V54	Backup Optics Mark	1-26
V55	CMC Time Update	1-27
V57	Display FULTKFLG Condition	1-27
V64	Hi Gain Antenna Pointing	1-27
V67	W-Matrix Error Display	1-28
V74	CMC Downlink	1-28
V82	Orbit Parameter Display	1-28
V83	Rndz Parameter Display #1	1-29
V85	Rndz Parameter Display #2	1-29
V87	Set VHF RNG F1g	1-29
V89	Rendezvous Final Attitude	1-30
V90	Out-of-Plane Display	1-31
V91	Compute Banksum	1-31
	Enable W-Matrix Initialization	1-31
100	$\mathbf{C} = \{ \mathbf{a} \in \{\mathbf{a} \in \{a$	1-21

DATE 3/22/71

### CONTENTS (CONT)

		PAGE
2.	G&C SYSTEM MANAGEMENT	2-1
	Power Up Procedure	2-1 2-1 2-2
	Power Up Procedure	2-2 2-2 2-3
-	Power Up Procedure	2-3 2-3 2-3
	Power Up Power Down Attitude Reference Comparison	2-4 2-4 2-5 2-5

EMS  $\Delta V$  lest & Null Blas Check . . . . . . . . 2-5

3.	NAVIGATION (P20's)3-1P20 Options3-1P20-Universal Tracking (Opts 1&5)3-1P20-Universal Tracking (Opts 0&4)3-2P21 Ground Track Determination3-5P22 Orbital Navigation3-6P23 Cislunar Midcourse Nav Meas3-8P24 Rate-aided Optics Tracking3-11P27 CMC Update3-12P29 Time of Longitude3-13P20 with GDC REFSMMAT3-14	DATE 3/22/71
4.	PRETHRUST (P30's & P70's)       4-1         P30 External ΔV       4-1         Minkey Sequencer       4-2         P31 Ham Prethrust       4-5         P32 CSI Prethrust (P72 LM)       4-7         P36 Plane Change Prethrust       4-9         P33 CDH Prethrust (P73 LM)       4-10	

### CONTENTS (CONT)

	P35 TPM Prethrust (P75 LM)4P79 Rndz Final Program4P37 Return to Earth PGM4Obtain Entry REFSMMAT (NO COMM)4P76 ΔV UPDATE (P77 CSM)4P37 Longitude Iteration4ΔVvs Δ0 Long4	4-12 4-12 4-14 4-14 4-18 4-20 4-20
5.	P40 SPS Thrusting	5-6 5-8 5-12 5-12 5-12 5-12
6.	P51 IMU Orientation P52 IMU Realign P53 Backup IMU Orient Determination P54 Backup IMU Realign	
7.	Rapid IMU Realign Changing Landing Site REFSMMAT For Out-of-Plane Burns GDC Alignment to IMU Gimbal Angles Backup GDC &/or IMU Alignment In-Plane GDC Alignment PGNS Ordeal Initialization	7-1 7-1 7-3 7-3 7-5 7-5 7-6

#### CONTENTS (CONT)

7-7 CMC/LGC Clock Sync/TEPHEM Update . . . V55 CMC Time Update (See EXT VB pg G/1-27) 7-7 7-7 Align LM IMU to CSM IMU . . . . . . . . 7-8 Align LM IMU to CSM GDC . . . . . . . . Align LM AGS to CSM IMU/GDC . . . . . . . 7-8 7-9 Align CSM GDC to LM IMU 7-9 Align CSM GDC to LM AGS LM Steerable Ant Pointing . . . . . . 7-17 8-1 8-1 8-2 Passive Thermal Control (G&N) . . . . . 8 - 3Dessive Thermal Control (SCS)

8.

PAGE

	Pitch Orb Rate Maneuver Pitch Orb Rate Maneuver	(G&N)	•	•	•	•	•	•	8-4
9.	Erasable-LOAD UPDATE Erasable Load Update . LM or CSM S.V. Readout		•	•		•	•	•	9-1
10.	PLANET VECTORS		•	•	•	•	•	•	10-1

DATE \_\_\_\_

3/22/7

	Ģ		
	1- STAR	-	
	FAR NAME	STAR NAME	
•	merical)	(Alphabetical)	-
<u>N0</u> 00	Planet	Acamar	<u>NO</u> 6
1	Alpheratz	Achernar	4
2	Diphda	Acrux	25
3	Navi	Aldebaran	11
4 5	Achernar	Alkaid Alphard	27 21
5	Polaris Acamar	Alphecca	32
7	Menkar	Alpheratz	1
10	Mirfak	Altair	40
11	Aldebaran	Antares	33
12	Rigel	Arcturus	31
13 14	Capella Canopus	Atria Canopus	34 14
15	Sirius	Capella	13
16	Procyon	Dabih	41
17	Regor	Deneb	43
20	Dnoces	Denebola	23
21	Alphard	Diphda	2
22 23	Regulus Denebola	Dnoces Earth	20 47
24	Gienah	Enif	44
25	Acrux	Fomalhaut	45
26	Spica	Gienah	24
27	Alkaid	Menkar	7
30 31	Menkent Arcturus	Menkent Mirfak	30 10
32	Alphecca	Moon	50
33	Antares	Navi	3
34	Atria	Nunki	37
35	Rasalhague	Peacock	42
36 37	Vega Nunki	Planet Polaris	00 5
40	Altair	Procyon	16
41	Dabih	Rasalhague	35
42	Peacock	Regor	17
43	Deneb	Regulus	22
44	Enif Fomalhaut	Rigel Sirius	12 15
45 46	Fomalhaut Sun	Spica	26
47	Earth	Sun	46
50	Moon	Vega	36

22	Reg
23	Den
24	Gie
25	Acr
26	Spi
27	AÌk
30	Men
31	Arc
32	A1p
33	Ant
34	Atr
35	Ras
36	Veg
37	Nur
40	A1t
41	Dat
42	Pea
43	Der
44	Ent
45	For
46	Sur
47	Eaı

3/22//1

DATE —

```
G
                   1-2
                  VERB LIST (Decimal)
01
    Display Oct Compnt 1 (R1)
02
    Display Oct Compnt 2 (R1)
03
    Display Oct Compnt 3 (R1)
04
    Display Oct Compnt 1, 2 (R1, R2)
    Display Oct Compnt 1, 2, 3 (R1,R2,R3)
05
06
    Display Decimal (R1 or R1, R2 or R1, R2, R3)
07
    Display DP Decimal - (R1,R2)
11
    Monitor Oct Compnt 1 (R1)
12
    Monitor Oct Comput 2 (R1)
13
    Monitor Oct Compnt 3 (R1)
    Monitor Oct Compnt 1, 2 (R1, R2)
14
    Monitor Oct Compnt 1, 2, 3 (R1,R2,R3)
15
16
    Monitor Decimal (R1 or R1, R2 or R1, R2, R3)
17
    Monitor DP Decimal - (R1,R2)
21
    Load Compnt 1 (R1)
22
    Load Compnt 2 (R2)
23
    Load Compnt 3 (R3)
24
    Load Compnt 1, 2 (R1, R2)
    Load Compnt 1, 2, 3 (R1, R2, R3)
25
27
    Display Fixed Memory
30
    Request Executive
31
    Request Waitlist
32
    Recycle Prog
33
    Proceed Without DSKY inputs
34
    Terminate Function
35 Test Lights
36
     Request Fresh Start
37
     Change Prog (Major Mode)
*40
    Zero ICDU
     Coarse Align CDU (N20 & N91)
41
42
    Fine Align IMU
43
    Load FDAI ATT Error needles
*44 Set Surface Flag
*45
    Reset Surface Flag
*46 Activate DAP
*47 Set LM State Vector into CSM State Vector
48
    Load DAP (RO3)
49
    Start Crew Defined MNVR(R62)
 50
     Please Perform
51
    Please Mark
*52 Marked on offset landing site
53 Please Mark alternate LOS
 54
    Start REND backup sighting mark (R23)
```

```
55 Increment CMC Time (Decimal)
*56 Terminate Tracking (P20)
57 FULTKFLG Display
*58 Reset Stick Flag and set V50 N18 flag
59 Please Calibrate
*60 Set N17 = N20
*61 Display DAP att error
*62 Display total att error (N22-N20)
*63 Display total astro att error (N17-N20)
64
    Start S-band ant routine (RO5)
*65 Verify Prelaunch Align Optics (CSM)
*66 Set CSM State Vector into LM State Vector
67 W-Matrix RSS Error Display
*69 Restart
70 Update Liftoff Time (P27)
 71
    Univ Update-BLOCK ADR (P27)
72 Univ Update-SINGLE ADR (P27)
73 Update CMC Time (Octal) (P27)
*74 Initialize erasable dump via downlink
*75 Backup Liftoff
```

```
*78 Update prelaunch azimuth
```

3/22/71

DATE

*80	Update LM State Vector
*81	Update CSM State Vector
82	Start Orbit Param Disp (R30)
83	Start REND Param Display No. 1 (R31)
85	Start REND Param Display No.2 (R34)
*86	Reject REND backup sighting mark
*87	Set VHF range flag
*88	Reset VHF range flag
89	Start REND Final ATT Routine (R63)
90	Request REND out of plane display (R36)
91	Compute Banksum
	Enable W matrix initialization
*94	Enable CISLUNAR Tracking recycle
*96	Terminate integration and go to POO
	(Select POO by V37 after use of V96)
97	SPS Thrust Fail (R40)
<del>99</del>	Enable engine ignition
	*Callable with other extended verb in use
	and does not lock out other extended verbs

	G
1	-4

NOUN LIST (Decimal)

01	<pre>Specify Machine Address  (Fract) (R1,R2,R3)</pre>	.XXXXX
02	Specify Machine Address (Whole) (R1,R2,R3)	XXXXX.
03	Specify Machine Address	
	(R1,R2,R3)	.01°
05	Angular Error/Diff	.01°
06	Option Code (R1 & R2)	OCTAL
07	BIT operator: Address, B	SIT ID, OCTAL
	Action	•
08	Alarm Data	OCTAL
09	Alarm Codes	OCTAL
10	Channel to be Specified	(R1) OCTAL
11	TIG (CSI)	hrs,min,.01sec
12	Option code (R1&R2)	OCTAL
13	TIG (CDH)	hrs,min,.01sec
14	VC/0 (R1) (P15)	FPS
15	Increment Machine	OCTAL
	Address (R1)	
16	Time of event	hrs.min01sec

R,P,Y .01° 17 Astronaut total att 18 Auto Maneuver R,P,Y .01° 20 Present ICDU Angles R,P,Y .01° 21 PIPA PULSES X,Y,Z Pulses 22 New ICDU Angles R,P,Y .01° 24 Delta CMC Clock Time hrs,min,.01sec 25 Checklist (please perform) 26 Prio/Delay, ADRES, OCTAL BBCON(R1, R2 & R3)27 Self-Test on/off sw OCTAL 29 X SM LAUNCH Azimuth .01° 30 Target Code(Gyrocomp verif) 31 Time of W-mat. reinit. hrs,min,.01sec 32 Time from Perigee hrs,min,.01sec 33 Time of Ignition (TIG) hrs,min,.01sec 34 Time of Event hrs,min,.01sec 35 Time from Event hrs,min,.01sec 36 Time of CMC Clock hrs,min,.01sec TIG (TPI) 37 hrs,min,.01sec 38 State Vector Time hrs,min,.01sec 39  $\Delta$  Time of hrs,min,.01sec Trans fer

3/22/71 DATE

40	TF GETI/TFC	min-sec
	VG	.1 FPS
	<pre>∆V (Accumulated)</pre>	.1 FPS
41		Azimuth .01°
	-	vation .001°
		Ident 0000X
42	Apogee Alt (HA)(RLS/Pad)	.1 NM
	Perigee Alt (HP) (RLS/Pad)	• • • • • • • •
	ΔV (Required)	.1 FPS
43	Lat	.01°
		(+ North)
	Long	.01°
		(+ East)
	Alt (RLS/Pad)	.1 NM
44	Apogee Alt (HA) (RLS/Pad)	.1 NM
•	Perigee Alt (HP)(N50)(RLS/	Pad) .1 NM
	TEF	min-sec
45	Marks	XXBXX
	TF GETI	min-sec
	MGA	.01°
46	DAP Config (R1&R2)	OCTAL
	CSM weight	LBS

47	USPI WEIGHL	LR2
	LM Weight	LBS
48	Pitch Trim	.01°
	Yaw Trim	.01°
49	ΔR	.01 NM
	۵V	.1 FPS
	SOURCE CODE (1 optics, 2 VHF)	0000X.
50	∆R (miss distance)	.1 NM
	Perigee Alt (HP)(RLS/Pad)	.1 NM
	TFF	min-sec
51	RHO	.01°
	GAMMA	.01°
52	CENTANG (active veh)	.01°
53	RANGE	.01 NM
	RANGE RATE	.1 FPS
	PHI (lcl horiz)	.01°
54	Range	.01 NM
	Range Rate	.1 FPS
	Theta (lcl horiz)	.01°
55	Precision offset	CODE
	E(ELEV ANGLE)	.01°
	CÉNTANG (passive veh)	.01°

	G 1-6	
58	HP alt (post TPI) (RLS/Pad) ΔV (TPI)	.1 NM .1 FPS
59	$\Delta V (TPF)$ $\Delta V LOS 1$ $\Delta V LOS 2$	.1 FPS .1 FPS .1 FPS
60	∆V LOS 3 G Max V Pred	.1 FPS .01 G FPS
61	Gamma EI Impact Lat	01°. 01°. (+ North)
	Impact Long	.01° (+ East)
	Head Up/Down (+	+/-00001 Heads up)
62	VI-Inertial Vel Mag H Dot-Alt Rate H-Alt (RLS/Pad)	FPS FPS 1 NM
63	RTGO from 0.05 G To Splash VIO, Predicted Iner Vel	T NM FPS
64	TFE, time from .05G Drag Acceleration VI, Inertial Velocity RTOGO to Target	min-sec .01 G FPS
65		.1 NM in,.01 sec
66	Beta, CMD Bank Angle CRSRNG Error DNRNG Error	.01° .1 NM .1 NM
67	RTOGO to Target Lat, Present Position	.1 NM .1 NM .01° (+ North)
	Long, Present Position	.01° (+ East)
68	Beta, CMD Bank Angle VI, Inertial Vel. H Dot, Alt Rate	.01° FPS FPS
69	Beta DL VL	.01° .01 G FPS
70	Star Code(before mark) LMK Data Horiz data	OCTAL OCTAL OCTAL

•

.

••

71	Star code (after mark) LMK Data	OCTAL
		OCTAL
70	Horiz data	OCTAL
13	ALT (P21) (RLS/Pad)	10 NM
	VEL (P21)	FPS
	GAMMA (P21)	.01°
74	BETA, CMD Bank Angle	.01°
	VI, Inertial Velocity	FPS
	Drag Acceleration	.01 G
75	∆H (CDH)	.1 NM
	ΔΤ	min-sec
	ΔΤ	min-sec
78	Axis YAW	.01°
	Axis PITCH	.01°
	OMICRON	.01°
79	P20 opt 2 rate	.0001°/sec
/ 5	P20 deadband	
00		.01°
80	TF GETI/TFC	min-sec
	VG	FPS
	$\Delta V$ (Accumulated)	FPS
81	$\Delta VX, Y, Z$ (lc] vert)	.1 FPS
~~		• • •

```
\Delta VX, Y, Z (LV) CDH
82
                                           FPS
                                         .1
    \Delta VX, Y, Z (Body Control Axis)
83
                                         .1 FPS
    ∆VX,Y,Z (Other Vehicle)
84
                                         .1 FPS
85
    VGX,Y,Z (Body Control Axis)
                                         .1 FPS
86
    \Delta VX, Y, Z (lcl vert)
                                            FPS
    Opt Calib Data - Shaft (R1)
                                           .01°
87
                  Trunnion(R2)
                                          .001°
    Planet
88
                                         .XXXXX
                           X
Y
Z
                                         .XXXXX
                                         •XXXXX
89
    Landmark - Lat
                                          .001°
                                     (+ North)
                                          .001°
                 Long/2
                                      (+ East)
                 Alt
                 (Mean lunar radius)
                                         .01 NM
90
    REND out of
                     Y (Active)
                                         .01 NM
    Plane para
                     Y DOT (Active)
                                         .1 FPS
                     Y DOT (Passive)
                                         .1 FPS
                                           .01°
91
    OCDU Angles Shaft (R1)
                  Trunnion (R2)
                                          .001°
92
    New OCDU Angles Shaft (RI)
                                           .01°
                  Trunnion (R2)
                                          .001°
```

93 94	Delta Gyro Angles X OCDU ANGLES (R56 &	
		R1 SHAFT .01°
		R2 TRUNNION .001°
95	TF GETI/TFC (P15)	min-sec
	VG (P15)	FPS
~ ~	VI (P15)	FPS
96	Y (CSM)	.01 NM
	Y DOT (CSM)	.1 FPS
~ 7	Y DOT (LM)	.1 FPS
97	System Test Inputs	XXXXX.
		XXXXX.
	~ ~	XXXXX.
98	System Test Results	XXXXX.
		.XXXXX
00		XXXXX.
99	POS ERR	1 FT
	VEL ERR	.1 FPS
	OPTION Code	0000X

V05 N09 ALARM CODES

00110	Mark reject has been entered but ignored	
	Continue	
00113	No inbits (chan 16)	ļ
	Continue; if alarm recurs use MDC DSKY.	
00114	More marks made than desired	3/22/71
	Continue	123
00115	V41 N91 keyed with OPTICS MODE not	e,
	in CMC	Ì
	OPTICS MODE - CMC and OPTICS ZERO - OFF	بى
00116	Optics switch altered before 15 sec	DATE
	zero time elapsed	<u></u>
	OPTICS ZERO - ZERO (15 sec).	
00117	V41 N91 keyed but CMC has reserved	
	OCDU (from start of gimbal test in	
	P40 until termination of TVC	
	functional allocation of the	
	"optics" CDU Driving Output)	
	V41 N91 not yet available	

00120 Optics torque has been requested but optics have not been zeroed since last FRESH START or RESTART OPTICS ZERO - OFF then ZERO (15 sec). 00121 In 0.05 sec following mark, an ICDU changed by more than 0.033° Repeat MK. (m)00205 PIPA saturated Use SCS control (G&N 12). 00206 The IMU zero routine has been entered with both the GMBL LOCK 1t and NO ATT 1t on Coarse align to 0,0,0 Reselect V40E (m)00207 ISS turn-on request not present for 90 sec Redo IMU turn on (G&N 12). (m)00210 The IMU is not operating Redo IMU turn on. If alarm recurs, perform fresh start (V36E). Consult MSFN. (G&N 12). (m)00211 Coarse align error - / ~ \ / = ~ / + \

	If P51(3)/52(4) in progress record gyr
	torquing angles and perform fine ali
	check in P52(4).
	Otherwise, see G/1-24. (G&N 12).
(m)00212	PIPA fail, but PIPA is not being used
	PIPA BIAS check (G&N 6/8).
(m)00213	<b>,</b> , , ,
	See 00210
00214	Program using IMU when turned OFF
	See 00210 or exit program.
(m)00217	IMU coarse align or pulse torque
	difficulty has occurred
	If code 211 also, perform
	211 cure only
	Reinitiate current program.
	If alarm recurs, terminate use of
	ISS (G&N 12).
00220	IMU orientation unknown
	Align or if aligned set REFSMMAT flag.
00401	Desired middle gimbal angle is excession
	Call N22 - maneuver if MGA < 85° or
	realign IMU.
00402	Second MINKEY pulse torque must be dor

3/22/11

DATE

G 1-10 00404 Target out of view (90 deg test) (G/3-7, 3-11, 6-3)Acceptable star pair is not available 00405 (G/6-3, 6-6)00406 Rend navigation not operating Select P20 or continue. 00421 W-matrix overflow Notify MSFN but continue. W-matrix automatically reinitialized at next mark. 00600 No solution on first iteration in P32/72 (G/4-6, 4-8)00601 Post CSI Perigee/lune alt <85nm/ 5.8nm (G/4-6, 4-8)00602 Post CDH Perigee/lune alt <85nm/ 5.8nm (G/4-6, 4-8)00603 Time from TIG (CSI) to TIG (CDH) <10 min (G/4-6, 4-8)

00604 Time from TIG (CDH) to TIG (TPI)

```
<10 min
          (G/4-6, 4-8)
  00605
          Number of iterations exceeds loop
            maximum
                                                       3/22/71
          (G/4-6, 4-8, 4-15, 4-16)
  00606
          \Delta V (CSI) has been >1000 fps for last
            two iterations
          (G/4-6, 4-8)
  00611
         No TIG for given ELEV angle
                                                        DATE
          (G/4-10, 4-12)
   00612 State vector in wrong sphere of influence
            at TIG
          (G/4-15)
   00613 Reentry angle out of limits
          (G/4-16)
(m)00777 ISS warning caused by PIPA fail
          (G&N 6).
  01102 CMC self test error
          (G/2-3)
         Downlink too fast
(m)01105
          Rset. If alarm recurs DOWNLINK FAILURE.
            (G&N 12).
```

```
G
                   1-11
(m)01106
         Uplink too fast
          Rset. If alarm recurs UPLINK FAILURE.
            (G&N 12).
(m)01107 Phase table failure-assume erasable
            memory is destroyed
          If Comm: 1. V74 CMC DOWNLINK
                   2. P27 As Necessary.
                   3. V48 As Necessary (V46).
                   4. Reestablish REFSMMAT via
                        P51 As Necessary.
                  If FRESH START recurs, CMC
                     FAILURE (SSR-3).
          If no Comm, pg G/9-1
  01301 Arcsin or arccos input is greater thar
            one
          notify MSFN, continue.
(m)01407
          VG increasing
          (G&N 12).
  01426 IMU unsatisfactory
          Realign or use SCS.
  01427
          IMII reversed
```

	Note FDAI operation is inverted.
01520	V37 request not permitted at this time
	Wait till COMP ACTY 1t.
	not on continuously - reselect V37
	if P62-67, select POO and then desi
	program.
01600	Overflow in drift test
	This is gnd test alarm only.
01601	Bad IMU torque abort
	See 01600
01703	Insufficient time for integration.
	TIG slipped
	(G/5-3,5-18)
(m)03777	ISS warning caused by ICDU fail
	(G&N 6)
(m)04777	
	(G&N 6)
(m)07777	ISS warning caused by IMU fail
	(G&N 6)
(m)10777	ISS warning caused by IMU & PIPA
	fail (G&N6)

3/22/71 DATE

(m)13777 ISS warning caused by IMU & ICDU fail (G&N 6) (m)14777 ISS warning caused by IMU,ICDU & PIPA fail (G&N 6) \*\*20430 Orbital integration has been terminated to avoid possible infinite loop. Notify MSFN. Probable S.V. uplink required No solution to conic subroutine \*\*20607 Reselect program. Alt at specified TIG in P37 < 400K ft \*\*20610 Reselect P37 and decrease TIG. Negative or zero time waitlist call. \*\*21204 If ave-g on, continue. Otherwise reselect program. Second job attempts to go to sleep via \*\*21206 keyboard and display program See 21204. \*\*21210 Second attempt is made to stall Reselect program

	Rescrett program
	Do not attempt use of IMU while CMC is
	using it.
**21302	SQRT called with negative argument
	See 21204
**21501	Keyboard and display alarm during internal use
	See 21204
**21502	Illegal flashing display
	See 21204
**21521	POl selected and Pll has already been
	performed
	Select correct program
*31104	Delay routine busy
	Reselect extended verb or continue with
	program.
	Notify MSFN.
*31201	Executive overflow - no vac area
	Reselect Extended Verb and/or Continue
	Program.
*31202	Executive overflow - no core sets
	See 31201

3/22/71

DATE

- \*31203 Waitlist overflow too many tasks See 31201 \*31211 Illegal interrupt of extended verb Reselect extended verb after optics
  - marking is completed.
    (m) Malf procedure indicated
  - - \*(3xxxx) Restart (no lt) and program continues (i.e. attempted recovery)(BAILOUT)
      - NOTE All \*\*alarms act as \*type if they occur when Ave-g is on or display type extended verb is active

### V50 N25 CHECKLIST CODES

<u>R1 Code</u>	ACTION	FUNCTION
00013	Key in	Gyro Torque Option (P52,54)
00014 00015 00016 00017 00020	Key in Perform Key in Perform Perform	Fine Align Option Celestial Body Acq Terminate Mark Sequence MINKEY Rendezvous MINKEY PC pulse
00041 00062 00202 00204	Switch Key Perform Key in	torquing CM/SM SEP to UP CMC to STBY 3-axis MNVR Engine gimbal test opt

# VO4 NO6 (N12) OPTION CODES

<u>R1 Code</u> <u>Purpose</u>

Input for R2

4=Rndz., 3-axis

3-axis

5=Celestial body,

00001	Specify IMU Orientation	1=PREF, 2=NOM 3=REFS, 4=LDG SITE
00002 00004		<pre>1=CSM, 2=LM 0=VHF and optics.</pre>
00007	Specify Propulsion System	1=VHF or optics 1=SPS, 2=RCS
00024	Specify P20 mode	O=Rndz., VECPOINT l=Celestial body, VECPOINT 2=Rotate

### THIS PAGE INTENTIONALLY BLANK

.

.

.

G 1-15

.

DATE 3/22/71

.

.

.

.

### MONITOR DATA IN ERASABLE MEMORY

1		V11 NOIE (OCTAL
2	F 01 01	R1 DATA R3 OCTA
3		N15E (For next
4		ENTR (For each

#### FLAG WORD SET/RESET

V25N 07E

1

2

3

- F 21 07 (LOAD FLAG WORD ADDRESS) E F 21 01
- F 22 07 (LOAD BIT CODE)\* ENTR
  - F 23 07 (SET BIT) Key 1E (RESET BIT) Key 0E

\*To determine code: Find bit in chart Number above bit (4,2 or 1) is code. (Used in correct octal position) For more than one bit, add codes. Bit Code Examples: 2 Λ 40 100 50000 15&13 3/22/71 DATE \_\_\_\_

L ADD) E AL ADD succeeding word) succeeding word)

#### CHANGE DATA IN ERASABLE MEMORY

```
V21 NOIE (ADDRESS) E
OI R3 ADDRESS
Load New Data in R1 E
NI5E (For next succeeding word)
ENTR (For each succeeding word)
```

DATE 3/22/71

IFLAGWORD 7

									•							
AGNORD	ADDRESS	4	2	l	4	2	1	•	2	L	4	2	1	· ·	2	l
		Bit 15	BIT 14	BIT 13	BIT 12	BIT 11	BIT 10	817.9	BIT 0	ait 7	817.6	BIT 5	<b>811 4</b>	BIT 3	BIT 2	DIT 1
•	74		JSWITCH	MIDFLAG	MOONFLAG	FARHOR NORFHOR)	ZMEASURE	MEEDLEFLG	IMU SE	RNDVZFLG	SGTMK (RSSFLAG)	F2RTE	CYCOFFLG	FREEFLAG	AMOONFLG	P2#LAG
1	15.	ZJETSFLG NJETSFLG)	STIKFLAG	ERADCOMP (ERADFLAG)	NODOPOI	RCSBURN RNG2FLG1	LMTRG (TARGIFLG)	LINKTRG (TARG2FLG)	CSMUPDAT IVEHUPFLGI	UPDATFLG	IOLEFAIL	TRACKFLG	MARKFLG	ITERISW (SLOPESW)	GUESSW	AVEGFLA
2	N	DRIFTFLG	RZIMARK	2205PFLG	PEIFLAG	STEEPSW	SKIPVHF	IMPULSW	XDELVFLG	FIRSTFLG HAVEELEV (CTP(FLAG)	FINALFLG	LMACTFLG (AVFLAG)	PFRATFLG	P24MKFLG	CALCMANZ	NODOV 37 NODOFLA
3	п	VSONE AFT.	GLOKFAIL	<b>REFSMFLG</b>	LUNIATLO (LUNAFLAG)	P22MKFLG	VRAG	POOFLAG	PRECIFLG	CULTFLAG	ORDWFLAG	STATEFLG	CONICINT (INTYPFLG)	C SMINTSW IV INTELAGI	9DIMMMAT IDGCR 9FLG I	WMATINI IDIMOFLAI
4	100	MARKIDLE (MRKIDFLG)	PRIOIDLE IPRIODFLEI	NORMIDLE WRMIDFLG)	PDSPFLAG	MARKWAIT (MWAITELG)		MRKWTKEY (MRKNVFLG)	NRMNTKEY NRMNVFLG1	PRONTKEY (PRONVFLG)	PINERFLG	RUPTMARK MRUPTFLG	RUPTNORM INRUPTFLG)	MKOVNORM UMKOVFLAG)	VNFLAG	XDSPFLA
5	101	DSKYFLAG	RETROFLG	SLOWFLG	PZICALIB IVSIFLAGI	FSTINCRP (INCORFLG)	NEWTFLAG	DMENFLG	CMCCOMP (COMPLITER)	ENGONFLG	<b>3AXISFLG</b>	BKUPLO IGRRBKFLG)		NOSOLNSW (SOLNSW)	MGLVFLAG	RENDWFL
6	102	DAPBITI	DAPS112	ENTRYDSP STRULLSW	CMDAPARM	GAMDIFSW	GONEPAST	<b>RELVEL SW</b>	EG SW (KNOWNFEG) LDNKNOWN	NOSWITCH	HIND	INRL SW	LATSW	. <b>0</b> 50 SW	CMDSTBY	GYMDIF
,	103	TERMIFLG	ITSWITCH	IGNFLAG	ASTNFLAG	<b>¥EMRFLAG</b>	NORMSW	RVSW	GONEBYTG IGONEBY)		V37FLAG		UPLOCKFL	VERIFLAG	LMATTCH (ATTCHFLG)	TFFSW
3	104	RPOFLAG	NEWLMFLG	NEWIFLG	CMOONFLG	LMOONFLG	ADVTRK	UTFLAG	SURFFLAG	INFINFLG	ORDERSW	APSESW	COGAFLAG	VINCONFLG	R67FLAG	3605W
•	105	SWTOVER	PZÆLAG	VEZEMFLG	MAXDERLG	VINFLAG	SAVECFLG	VHFRFLAG	VHFSOURC (SOURCFLG)	RZZCAFLG	NZZERNO 5 1NZZERNE 171	QUITFLAG	RBIFLAG	MIDIFLAG	MIDAVFLG	AVEMIDS
10	106	PCMANFLG	(INTINUSE (INTELAG)	INTGRAB MEINTFLGI	REJCTFLG	HOSUPFLG	BURNFLAG	RANGFLAG	PJIFLAG	AUTOSEQ		MANEUFLG	PTV99FLG	TPINOFLG	AULTKALG	PCFLAG
11	107	532.1F1	\$32.¥2	532. IF3A	532. IF38				AZIMFLAG	HAFLAG	CSISPLAG					

G/1-17

#### SSIGNMENTS !

# MONITOR OF INPUT/OUTPUT CHANNELS

F 11 10	V11 N10E (LOAD CHANNEL R1 Octal Cont Channel	ADDRESS) E ents of Specifi	ied
	CHANNEL SET/R	ESET	SC CON
	Note: Only ch may be	annel no's <30 used	V21 N1
	V25N 07E		A=0: U
F 21 07	(LOAD CHANNEL	NUMBER) E	A=1: C A=2: C
F 22 07	(LOAD BIT COD	)* ENTR	A=3: C A=5,6
F 23 07			D=0: U
(SET	BIT) Key 1E ET BIT) Key OE		D=1: 0 D=2: 0
•		-	D=3: 0
*To determ Find bit			
Number ab	ove bit $(4.2)$	or 1) is code.	
(Used in	correct octal	position)	
	than one bit, Bit	Code	
Examples:	3	4	
	6	40	
	7 15&13	100 50000	
	DATE	3/22/71	

2 3

## NT/MODE AND OPTICS MODE OVERRIDE

```
1E, 374E, AOODO ENTR
```

### Use switches (SC CONT and CMC MODE)

- CMC FREE
- CMC HOLD
- CMC AUTO
- or 7: SCS
- Use switches (OPTICS)
- OPT CMC
- OPT ZERO
- OPT MAN

.

G 1-18

								CMC INPU	IT/OUTPUT	CHANNE	15					· · · · · · · · · · · · · · · · · · ·	
<u> </u>		<u>,                                     </u>	1	2	1	4	2	1	4	2	I <u> </u>	4		1	4	2	1
СНА	NNEL	NAME	ALC 15	RIT 14	TB	817 12	<b>BIT 11</b>	F I T 10	PITA	AIT A	RIT 7	BILO	ALC 5	B(14	RITS	BIT 2	<u></u>
	1	L	ļ	· · · · · · · · · · · · · · · · · · ·	SHET PULSE			CP RE	GISTER L. BIT	5 16-1	<b></b>	<b>.</b>		<b> </b>	·	·····	
	2	Q			SHET PULSE				GISTER O, BIT				· ·	<u></u>		<b></b>	d
C.		HESCALAR			SUFT PHUSE		<b>.</b>		DER SCALER		<u>15  4  </u>	<b>.</b>		┫-┅───		<b>{</b>	
Į	1	IDSCALAR			SOFT PULSE		<u> </u>	1688.40	RDER NOALER (		IS 14 1 V YY	¥ ¥'9	• ¥ • ¥ §	14.0		<u>і</u> у р	
	5	PV/ETS							SIM	• Y • Y • Y	• Y"7 X-P	YY.Y.P	• Y'Y • • P	P+/	-p v vv	P . 7	• P ¥ • Y · Y
OUT							∔	┨	SIM	+Y-R	Y IR	Y R	·Y·R	+7-8	-Z +R	-Z -R	+Z+R
<b>1</b>	( * <sup>-</sup>	ROLLIETS							CIM	*1.1	1 · · · ·	<u> </u>		-R-Y4+7	+8+44.7	-R-YY-Z	•R • 51 • 7
	<u> </u>						ł	<u> </u>	<u> </u>		FE7	FES	<i>f</i> £5				
(P	<u>'</u>	SUPERBNK		001.47	00144	OFLAY	RELAY	RELAY	RELAY	BELAY	BELAY	RELAY	BELAY	BELAY	BFHSY	BILAY BIT2	BELAY
	10	OUTO	ADAS 1	ADAS )	ADRS 2	RELAY ADRS I	<b>BEHAY</b>	BEHAY	SELAY	0 IT 8			· · · · ·				
	11	DSALMOUT			SPS ENGINE ON			RESER	TEST CONNECTOR OUTBIT		OPERATOR ERROR LAMP	FLASH	KEY LAMP	TEMP CAUTION LAMP	UPLINK ACTY (AAIP	COMP ACTY LAMP	155 WARNING
าบก	12	CHANL?	ISS THRNOT	El¥n#+	SIV B 1911 Start		DISABLE DALICS	ZERO OPTICS	SIV A IAKENYER ENABLE	TVC ENABLE		EMABLE IANJ ERROR COUNTER	ZERO LAU LOU S	COAR SE ALION INABLE		ENA BLE OPT ERMOR COUNTER	ZERO CRIICS CRIICS
	Ū	CHANS3	ENABLE	₩¥¥¥ <sup>™</sup> 32	RESET 31R	PESET 31A	ENABLE STA JOBY	IEST ALARMS		BMAG CTR ENABLE	DNI NK YO ORD	BLOCK	INHIRIT COPLINK	ANG UNIT	RNG UNIT	RNG UNIT SEL B	REC UNIT SEL C
	14	CHAN14	DRIVE	PRIVE	OR IVE COUZ	DR IVE CDU	COU S	ACTY	GYRO	GYRO	-0440 	GYRO ENABLE					AUTLINK XCTY
<u> </u>	15	MNKEY IN							ļ				MKEYS	MKEY4	MK{Y}	MKEY2	AIKEY1
	16	NAVKEY IN	[								REPECT	MARK	NKEYS	NKEY4	NKEY3	NKEY?	NKEY]
	x	· CHAN 30	TEMP	ISS TURNOR REQUEST	1411	1CDH FAIL	Ente	SIC CONTROL OF SAT	OPERATE		SPTICS		LIFT OFF	SHARAFAR	APADY	SEPARATE	HILACE HIRUSI'T PRESE
IN.	31	• CHAN JI		f KEE	ուն	itans	irans	TRANS	trans	TRANS	TRANS	RHC -ROLL	RHC PROLL	RHEW	₽₩Ç	анс Фітсн	RHC PPLICE
	¥	· CHAN32		PRICEED			ATTACHED						MNIM ROLL	MNEM -YAN	WAY	РИСН	MNIM + P IICH
	"	· CHAN33	nsc Alarm	COMPLITER VARNING	PIPA	DNLK TOTTFAST	PROPERTY	BECCK UPLINK					8146.8 <sup>14</sup>	6Files			
	м	DIITME								WO WORDS	<b> </b>	·····	·····			<u>  ··</u>	
OUT	ж	DNTA12						<b></b>	SECOND OF	INO WORDS				<u> </u>		7	
	• 1NV	ERTED LOGIC	15		13	12	11	10	<u> </u>	8	<u> </u>	<u> </u>	7		L,	• •	

#### CHC INDUT/OUTDUT CHANNELS

DATE

3/22/71

6 1-19

.

```
1-20
VHF RNG DSKY DISPLAY
  VHF RNG - on (up)
  P20 - running in opt 0 or 4
V87E
V16 NO2E
3703E
RI=XXX.XX nm
  (\max R] = 163.83;
  if R1 neg, RNG = 327.67 - R1 )
```

#### G&N RECOVERY PROCEDURES

**Recoveries:** 

```
if PO6 inadvertently selected: (with F 50 25 00062)
    1. a. Press PRO to STBY, press PRO
              again to F 37
     or b. V37E 00E
    2. V25 N7E, 76E, 40000E, 1E (set DRIFT flag)
       V25 N7E, 77E, 10000E, 1E (set REFSMMAT flag)
     3.
```

G

if V36 inadvertently keyed in:

- V25 N7E, 76E, 40000E, 1E (set DRIFT flag) Ι.
- 2. V48
- 3. V46
- Perform General System Checkout 4. as necessary

if GO JAM performed:

V74 when convenient, see V36

<u>if</u> All 8's appear spontaneously on DSKY

- 1. V99 N99
- 2. V25 N1E
- 3. 00000E
- 4. +99999E
- 5. +99999E
- 6. +99999 CLR,CLR,CLR
- 7. 00000E
- 8. 00000E
- 9. 00000E
- If OPR ERR, begin again

General System Checkout:

Get to POO by one of the following:

- 1. V37E OOE
- 2. V96E
- 3. V36E V96E
- 4. Simultaneously press RSET and MARK REJECT

```
(GO JAM), wait 15 sec, V37E OOE
OPT ZERO - OFF
OPT ZERO - ZERO
```

Check for Reasonableness

- 1. V82 with both options
- 2. V83
- 3. P21 NAV CHECK
- 4. P52 check auto optics positioning
  - If nominal, continue; if not, perform P51
- 5. CMC Self Test

G 1-22

THIS PAGE INTENTIONALLY BLANK

.

1

2

1

2

3

- e. ISS lt off CMC lt - off V, N quits Flashing
- POO will be displayed. f.
- Key RSET g. (Don't call ave. G for 15 sec)

V41 N91 COARSE ALIGN OCDU's CMC - on G/N PWR OPTICS - on OPT MODE - CMC OPT ZERO - OFF

**V37E00E** 

V41N 91E

- 3 F 21 92 SHAFT, TRUN NEW OCDU (.01°,.001°) Load desired shaft and trun
- 4 41 OPTICS DRIVE TO SPECIFIED ANGLES

V41 N2O COARSE ALIGN ICDU's CMC - on ISS - on

### 1 V41N 20E

- 2 F 21 22 NEW ICDU ANGLES RPY (.01°) Load desired ICDU angles
- 3 41 NO ATT 1t on \*POSS PROG ALARM \* \*V5 N9E 211 Coarse align error\* \*Repeat V41 N20 \*

4 V40E NO ATT lt - off

	Wait 10 sec	
	V37E XXE	
	<u>V42 GYRO TORQUING</u> CMC MODE - FREE	
F 21 93	V42E LOAD DELTA GYRO ANGLES (XYZ) (In flight - 90° max)	(.001°)
42	NO ATT lt - off Monitor Gyro Torquing on FDAI	

5

2

	<u>V48</u>	- DAP DAT	FA LOAD &	ACTIVAT	
F 04		ABCDE* ABCDE			
	VEHICLE CONFIG	QUAD A/C FOR X	QUAD B/D FOR X	ERR DEADBAND	RATE SELECT
R1	0 = No DAP	0 = Fail A/C	0 = Fa11 8/D	0 = +0.5°	0 - 0.05"/sec
<b>K</b> 1	1 = CSH	1 = Use A/C	1 = Use B/D	1 + <b>+5.0</b> *	1=0.2*/sec
	2 - CSH & LH				2 • 0.5"/sec
	3 = CSN & SIVE				3= 2.0"/sec
	é= CSN & LN (Ascent Stg only)	•			
-	Roll Quad Select	Quad A	Quad 8	Quad C	Quad D
R2	0 = Use 8/0	Q=Fail	- 0=Fail	O=Fail	O=Fail
	1 = Use A/C	1=Use	1=Use	1+Use	1=Use
			· <u>-</u> · · · · ·		

G

1-25


PRO

- 2 F 06 47 CSM WT, LM WT (1bs,1bs Load correct values\* PRO
- 3 F 06 48 TRIM ENGINE GMBL (.01°) Load correct values PRO
  - If activation req'd (Changing to or fro NO DAP or CSM & SIVB DAP): CMC MODE - FREE V46E
- \* For SPS burn w/Ascent Stage, A=1, & load total mass in R1 of N47

4

1

G 1-26 V49 CREW DEFINED MANEUVER CMC - on ISS - on SCS - operating V37E 00E **V62E** V49E NEW ICDU ANGLES RPY F 06 22 (.01°) Load desired angles PRO F 50 REQ MNVR TO FDAI RPY ANGLES 18  $(.01^{\circ})$ (AUTO) BMAG MODE (3) - RATE 2 SC CONT - CMC CMC MODE - AUTO PRO (MAN) MNVR - To 5 06 18 AUTO MNVR TO FDAI RPY ANGLES (.01°)

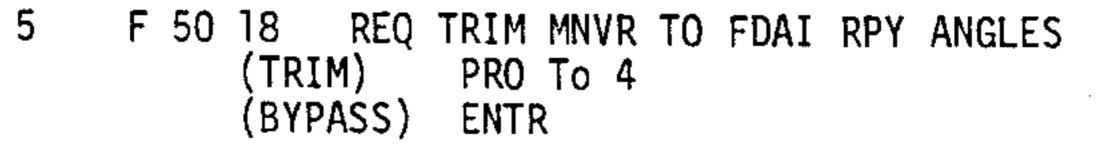

V54 BACKUP OPTICS MARK

P20 - running in opt. 0 or 4 and tracking

V54E

1

2

3

4

\*PROG ALARM \*
\*V5 N9E - 00406 \*
\*Not rend tracking\*

2 F 06 94 Backup SHAFT, TRUN (.01°,.001°) Load angles PRO 3/22/71


G 1-27 3 F 53 45 PERFORM BACKUP MARK MARKS, TFI, MGA or code (marks,min-sec,.01°) RHC - Align target on alt. LOS ENTR (V86Ē to reject - within 10 sec) \*POSS F 06 49  $\Delta R$ ,  $\Delta V$ , source code\* \* (.01NM,.1fps,0000X)\* \*(REJECT) V32E \* \*(ACCEPT) PRO × When marking complete: PRO (return to Program in process) V55 - CMC TIME UPDATE 1 **V55E** F 21 24 LOAD  $\triangle$  CMC TIME (hrs,min,.01sec **V57 DISPLAY FULTKFLG CONDITION** 

1 1575

3/22/71

DATE

I		V5/E
2	F 04 12	R1 00004 Specify FULTKFLG setting R2 00000 VHF and Optics working 00001 VHF or Optics working Load desired value in R2 (If display erased upon ENTR, verify by repeating V57)
l	F 06 51	PRO <u>V64 HI GAIN ANTENNA POINTING</u> V64E RHO, GAMMA (.01°,.01° HGA TRACK - MAN Set in required P&Y Angles S BD ANT - HI GAIN HGA TRACK - AUTO PRO

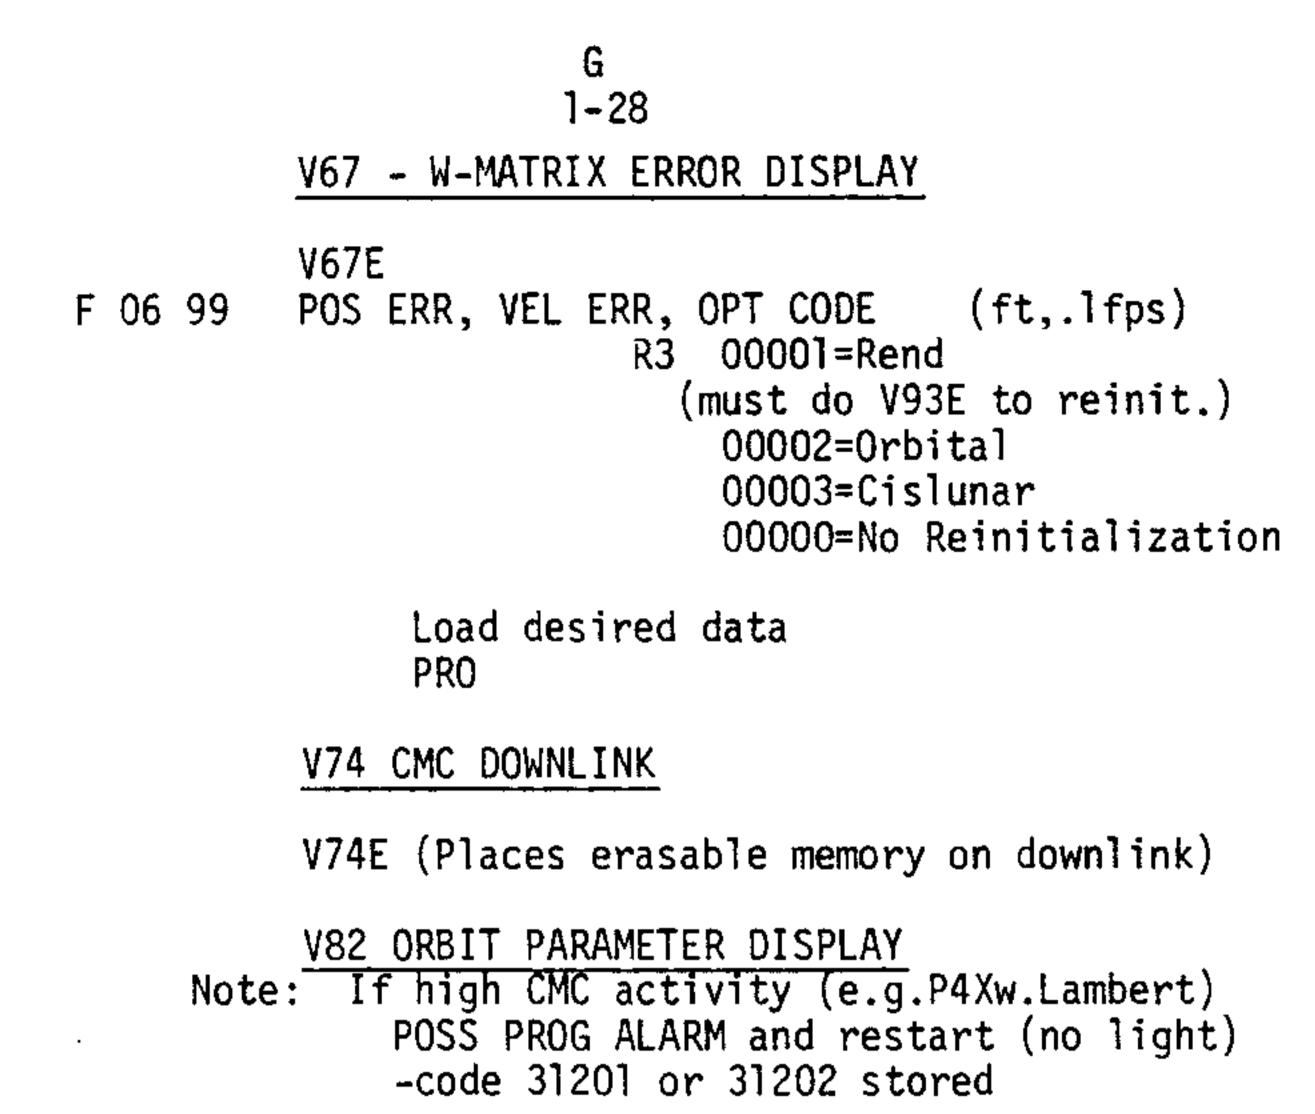

]	F 04	12	V82E (If AVE G On, Go To 3) R1 00002 Specify Vehicle R2 00001 CSM 00002 LM PRO	.71
2	F 06	16	GET EVENT (hrs,min,.Olsec) Load desired time (present time, use all zeroes) PRO	E 3/22/71
3	F 16	44 (REC\ (∆R-r (TF   (EXI)	HA, HP, TFF (.lnm,.lnm,min-sec) YCLE) V32E To 2 (Not Nec If AVE G On) miss dist DISP-P11 & POO) N50E To 4 PER) N32E To 5 T) PRO	DATE
4	F 16	50	∆R (miss dist), HP, TFF(.lnm,.lnm,min-sec, KEY RLSE To 3	
5	F 16	32	TIME FROM PER (Useful only if TFF=-59B59) (hrs,min,.01sec) KEY RLSE To 3	

G 1-29 V83 RNDZ PARAMETER DISPLAY #1 Note: If high CMC activity (e.g.P3X or P7X w P20), POSS PROG ALARM and restart (no light)-code 31201 or 31202 stored If alt above earth or moon >432 nm: P23 running - do not key V83 (or 85) P23 not running: Wait for no integration (COMP ACTY not on continuously) V96E (selects POO) V83E (or 85E) - perform routine V37E 00E **V83E** RANGE, RANGE RATE, THETA (.01nm, .1fps, .01° F 16 54 PRO V85 - RNDZ PARAMETER DISPLAY #2 Note: See V83 restrictions

V85E

RANGE, RANGE RATE, PHI (.01nm,.1fps,.01° F 16 53 PRO

> V87 - SET VHF RNG FLAG VHF AM B - DUPLEX VHF RNG - on (up) P20 - running in opt. 0 or 4 V87E (starts VHF range sampling) V88E (TERMINATE) or V37E XXE

DATE 3/22/71

1

1

]

2

G 1-30 V89 - RENDEZVOUS FINAL ATTITUDE CMC - on ISS - on SCS - operating 1 **V37E 00E V62E** 2 **V89E** F 06 78 AXIS YAW, AXIS PITCH  $(.01^{\circ})$ Load axis to be pointed at LM PRO 3 F 06 18 FINAL FDAI RPY ANGLES  $(.01^{\circ})$ (AUTO MNVR) PRO (UPDATE DISPLAY) V32E 4 F 50 18 REQ MNVR TO FDAI RPY ANGLES  $(.01^{\circ})$ (AUTO) BMAG MODE (3) - RATE 2 SC CONT - CMC CMC MODE - AUTO

PRO (MAN) MNVR To 6


5

- 06 18 AUTO MNVR TO FDAI RPY ANGLES (.01°)
- 6 F 50 18 REQ MNVR TO FDAI RPY ANGLES (.01°) (TRIM) ALIGN SC about pointing axis PRO To 5 (BYPASS) ENTR

DATE

3/22/71

		G 1-31
		<u>V90 - OUT-OF-PLANE DISPLAY</u>
1	F 06 16	V90E GET EVENT (hrs,min,.01sec) Load desired time (present time, use all zeroes) PRO
2	F 06 06	
2	F 06 96 (REC) (EXI)	Y(CSM),YDOT(CSM),YDOT(LM) (.01nm,.1fps,.1fps) YCLE) V32E to 2 T) PRO
		<u>V91 - COMPUTE BANKSUM</u> CMC - on (req)
1		V37E 00E
2	F 05 01	V91E R1 - Sum of all cells in bank

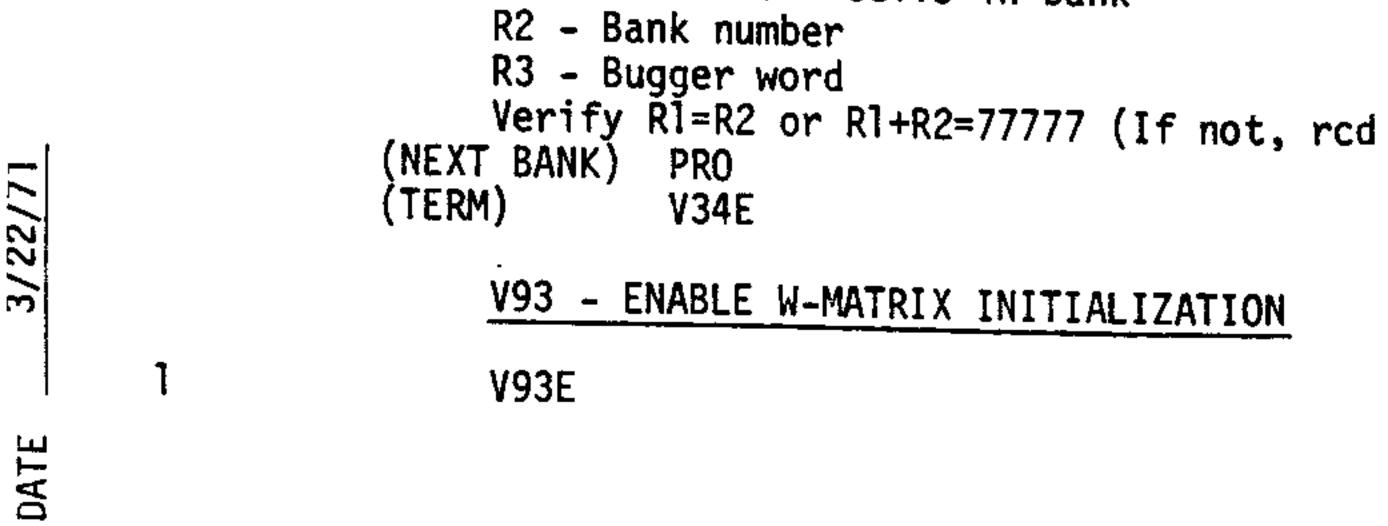

IMU POWER UP PROCEDURE

```
LOGIC POWER 2/3-on
     FDAI POWER - BOTH
     FDAI SELECT - 1/2
     CMC MODE - FREE
     G/N IMU PWR - on (up)
       NO ATT 1t - on (90 sec)
       NO ATT 1t - out
     Wait 15 sec (To allow PIPA inhibit
                    reset)
V37E XXE
     *If CMC not available:
                                 *
     * G/N IMU PWR - on(up)
                                *
     * Wait 90 sec
                                 *
    * IMU CAGE - on(up) 5 sec,*
     *
                   then release *
```

IMU POWER DOWN PROCEDURE

2

1

CMC MODE - FREE G/N IMU PWR - OFF \*ISS warning\* \*RSET \*

## MEASUREMENT & LOADING OF PIPA BIAS

DET - RESET SC RATES <0.1°/sec CMC MODE - FREE

V25N 21E, E,E,E/Start Event Timer

VO6 N21 (do not ENTR) 06 21 XYZ PIPA COUNTS

2

3


4

5

At T + 1:04 - ENTRRecord (X) R1 (Y) R2 (Z) R3 (+000AB)

V21N 01E (use same sign as above) F 21 01 1452 E (CALCULATED X BIAS) E,E,(+AB000) 1454 E (CALCULATED Y BIAS) E,E 1456 E (CALCULATED Z BIAS) E

CMC POWER UP PROCEDURE

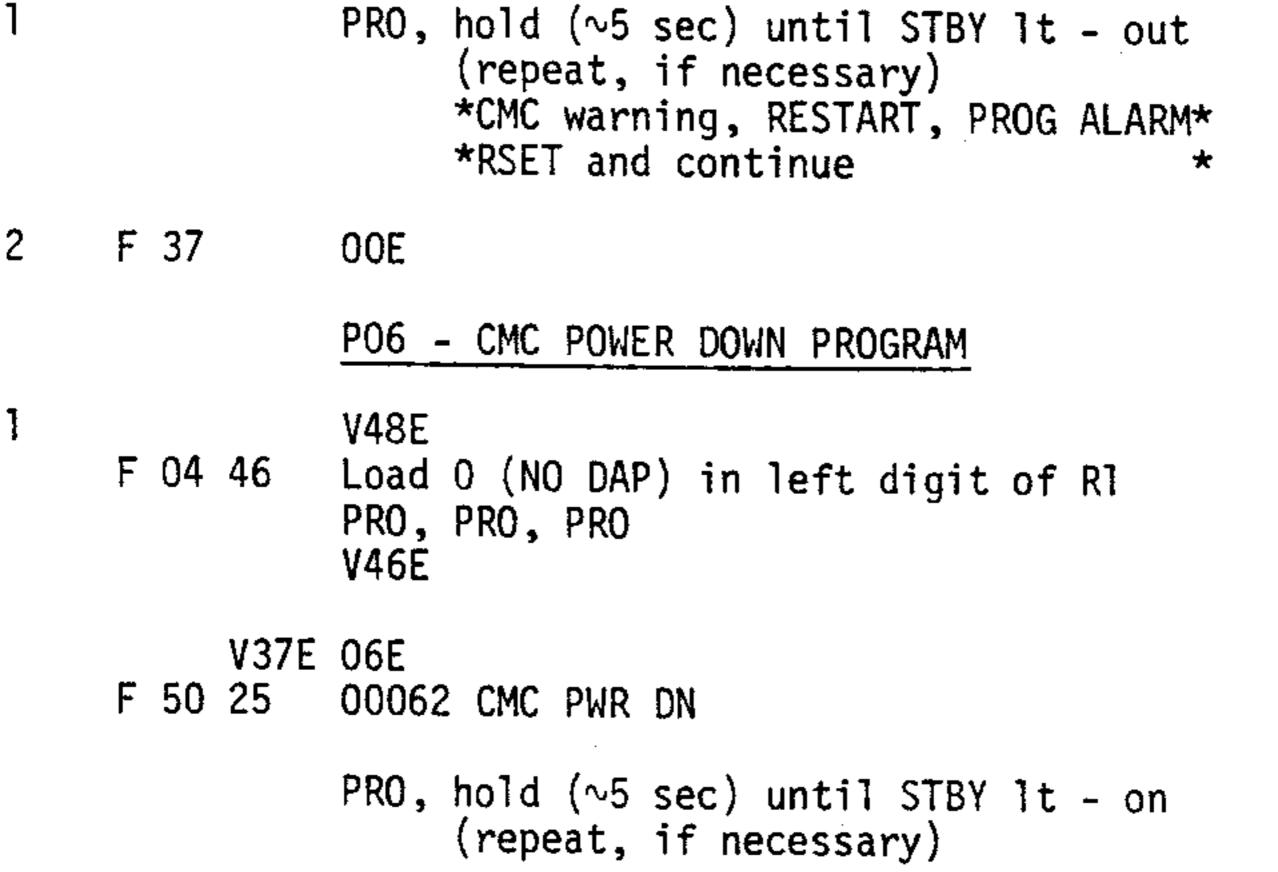

3/22/71 DATE

		G 2-3 CMC SELF CHECK
1	F 21 01	V25 NO1E, 1365E E,E,E
2	15 01	V15 NO1E, 1365E R1 NUMBER OF ERRORS R2 NUMBER OF TESTS STARTED R3 NUMBER OF TESTS SUCCESSFUL
3		V21 N27E 10E SELF TEST FIXED & ERASABL (4E SELF CHECKS ERASABLE 5E SELF CHECKS FIXED)
4	15 01 (TERM)	TEST SUCCESSFUL WHEN R2>3 (78 sec mini * IF PROG 1t - On * * VO5 NO9E 01102 SELF * * TEST ERROR * *N8E-Rec for MSFN * V21N27E OE

OPTICS POWER UP PROCEDURE Verify optics manual drive diseng 1 G/N PWR OPTICS - on (up) 2 OPT ZERO - OFF OPT ZERO - ZERO (15 sec) OPTICS POWER DOWN 1 G/N PWR OPTICS - OFF SCT MANUAL DRIVE PROCEDURE Verify G&N PWR OPTICS - OFF 1 Insert tool E and rotate ~1 rev CC to engage drive (socket backs ou 2 Drive optics either direction (~1 rev/degree) 3 To disengage, push and rotate ∿l rev CW(button will remain flu

3/22/71

G 2-4SCS POWER UP AUTO RCS SELECT (16) - OFF BMAG MODE (3) - RATE 2 CMC MODE - FREE SC CONT - CMC cb SCS LOGIC PWR (4) - close  $\Delta V$  CG - as required LOGIC PWR 2/3 - on (up) SIG COND/DRIVER BIAS PWR (2) - AC1 SCS ELEC PWR - GDC/ECA (88 watts) FDAI PWR - OFF (verify) BMAG PWR (2) - ON (145 watts)FDAI PWR - BOTH (58 watts) AUTO RCS SELECT (16) - enable SCS POWER DOWN EMS FUNCTION - OFF EMS MODE - STBY FDAI SCALE - 5/1 FDAI SELECT-1/2 FDAI SOURCE - ATT SET ATT SET - GDC

```
MAN ATT (3) - MIN IMP
ATT DB - MAX
RATE - LOW
AUTO RCS SELECT (16) - OFF
TRANS CONTR PWR - OFF
RHC PWR NORMAL (2) - OFF
RHC PWR DIRECT (2) - OFF
CMC MODE - FREE
BMAG MODE (3) - RATE 2
SCS TVC (2) - RATE CMD
.05G sw - OFF
\alpha/Pc \, sw - Pc
TVC GMBL DRIVE (P&Y) - AUTO
BMAG PWR (2) - WARMUP (105 watts)
TVC SERVO PWR (2) - OFF
FDAI PWR - OFF
LOGIC PWR 2/3 - OFF
SCS ELEC PWR - OFF
SIG COND/DRIVER BIAS PWR (2) - OFF
```

3/22/7

G 2-5 SCS ATTITUDE REFERENCE COMPARISON CMC - on IMU - on SCS - operating If SIVB SEPARATED: Damp vehicle rate Key V16 N2OE (present IMU angs) FDAI SELECT - 1 FDAI SOURCE - ATT SET ATT SET - GDC ATT SET dials - null FDAI 1 error needles Key VERB when nulled (freeze display Record from DSKY: R Q P Y О Record ATT SET dials: R °, P 0 EMS AV TEST & NULL BIAS CHECK

1 2

```
1/177/0
```

```
EMS MODE - STBY
           EMS FUNC - \Delta V SET/VHF RNG
           SET \Delta V ind to 1586.8 fps
           EMS MODE - NORMAL
           EMS FUNC - \Delta V TEST
             SPS THRUST Lt - on/off (10 sec)
             \Delta V ind. stops at -0.1 to -41.5
           EMS MODE - STBY
           EMS FUNC - \Delta V SET/VHF RNG
           SET \Delta V ind to - 100.0 fps
           CMC MODE - FREE (Until meas complete
        or BMAG MODE (3) - RATE 2
           EMS FUNC - \Delta V (wait 5 sec)
           Start DET
00:00
           EMS MODE - NORM
01:40
           EMS MODE - STBY
                 If \Delta V < 1 fps, do not bias
                 If \Delta V \ge 1 fps but <10 fps, bias
                   if desired
                 If \Delta V > 10 fps, EMS is NO-GO
           *Bias check is invalidated by EMS
               FUNC - OFF*
```

3-1 P20 - OPTIONS 0 - Rendz, VECPOINT, p. G/3-2 1 - Celestial body, VECPOINT, p. G/3-1 2 - Rotate, p. G/8-1 4 - Rendz, 3-axis, p. G/3-2 5 - Celestial body, 3-axis, p. G/3-1 P20 - UNIVERSAL TRACKING Options 1 & 5 - Celestial Body (1:VECPOINT; 5:3-axis) CMC - on (req)ISS - on and aligned (req) BMAG MODE (3) - RATE 2 V37E 20E F 04 06 R1 00024 TRACKING OPTION R2 00000

G

Load 1 or 5 in R2

PRO

1

3/22/71

3/22/11	2	F 06 78*	AXIS YAW, AXIS PITCH, OMICRON Load values (OMICRON ignored for op Sim. Bay: 90°, 52.25° OMICRON SEF: 180 BEF: 0 PRO	(.01°) t 1)	
DATE -	3	F 06 79*	R2 DEADBAND Load d.b. PRO	(.01°)	
	4	F 01 70	R1 OOODE STARCODE Load code PRO (DE ≠ OO to 6)		
	5	F 06 88	CELESTIAL BODY VECTOR Load vector PRO (If required mnvr <10°, go to 7)		

F 50 18 MNVR request  $(.01^{\circ})$ (AUTO) SC CONT - CMC CMC MODE - AUTO PRO 06 18 RPY (.01°) to 6 when MNVR complete (MAN) RHC - MNVR to N18 angles When att. acceptable SC CONT - CMC CMC MODE - AUTO ENTR \*POSS UPLINK ACTY 1t \* \*(Mnvr >10° req'd) × \*To reestablish F 50 18\* \* Key V58E ×

6

CMC continues tracking center of celestial body \*CMC will react to changes in N78 and N79 (May take 2 sec)

To terminate P20 - V56E

```
P20 - UNIVERSAL TRACKING

Options 0 & 4 - Rendezvous

(0:VECPOINT; 4:3-axis)

CMC - on (req)

ISS - on and aligned (req)

SCS - on (des)

BMAG MODE (3) - RATE 2

G/N OPT PWR - on

OPT ZERO - OFF then ZERO (15 sec)

OPT MODE - CMC

Note: For VHF RNG display

see p G/1-20
```

1 V37E 20E	
------------	--

- F 04 06 R1 00024 TRACKING OPTION R2 00000 Load 0 or 4 in R2 PR0
- 2 F 06 78\* AXIS YAW, AXIS PITCH, OMICRON (.01° Load values (OMICRON ignored for Opt. 0) PRO
- 3 F 06 79\* R2 DEADBAND (.01° Load d.b. PRO (If required mnvr <10°, go to 5)
- 4 F 50 18 MNVR request (.01°

(AUTO) SC CONT - CMC CMC MODE - AUTO PRO

```
06 18 RPY (.01°) to 4 when MNVR complete

(MAN) RHC - MNVR to N18 angles

When att. acceptable

SC CONT - CMC

CMC MODE - AUTO

ENTR

*POSS UPLINK ACTY 1t *

*(Mnvr >10° req'd) *

*To reestablish F 50 18*

* Key V58E *

OPT ZERO - OFF
```

3/22/71

DATE

5

```
G
                      3-4
 CMC continues LM attitude and optics tracking
*CMC will react to changes made to N78 and N79
  (May take 18 sec)
 To start VHF marks - V87E (V88E to stop)
 MARK at will (Reject within 10 sec)
          *POSS F 06 49 \Delta R, \Delta V, source code*
                         (.01nm,.1fps,0000X)*
          \star
          *(REJECT) V32E
                                             *
          *(ACCEPT) PRO
                                             *
  For backup marks, see V54 (p G/1-26)
  To terminate P20 - V56E
     OPT ZERO - ZERO
     G/N OPT PWR - OFF
Note: To display N49 for each measurement:
     V1 N1E
     2002 E
     Rcrd: R1
```

V21 E 2002 E 77776 E

> To return: V21 N1E 2002 E Load previously recorded value

		G 3-5
		P21 GROUND TRACK DETERMINATION CMC - on (req)
1	F 04 06	V37E 21E R1 00002, Specify Vehicle R2 00001, CSM or 00002, LM PRO
2	F 06 34	GET LAT,LONG (hrs,min,.Olsec) Load desired GET (for present time, use all zeroes) PRO
3	F 06 43 (REC (EXI	LAT,LONG,ALT (.01°,.01°,.1nm) YCLE) V32E to 2 (Increment GET 10 min) T) PRO
4	F 37	XXE

NOTE: Additional Information is availab

by V6 N73E N73 Alt,VEL,GAMMA(10nm,fps,.01°

G 3-6 P22 - ORBITAL NAVIGATION CMC - on (req) ISS - on and aligned (req) SCS - on (reg) BMAG MODE (3) - RATE 2 G&N PWR OPTICS - on COUPLING - RESOLVED SPEED - MED OPT ZERO - OFF then ZERO (15 sec) OPT MODE - CMC To remove rate limit: V21N1E,1341E,E V37E 22E F 06 45 R3=MAX MGA  $(.01^{\circ})$ (REJECT) R3>60° to P52 R3<60° IMU ALIGNED MNVR TO SIGHTING ATTITUDE Roll to keep shaft axis >10° from plane defined by X axis & LOS to LMK (For 60nm alt, LMK >10nm from gnd track requires no roll)

```
(MAN)
               OPT MODE - MAN
               OPT ZERO - OFF
          PRO (To 3 for earth orbit)
     (AUTO) OPT ZERO - OFF
     PRO (To 3 for earth orbit)
F 05 70 (lunar orbit only)
          R2 ABCDE 1mk code
          Load 1mk code: SITE = 10001
                         KNOWN = 10000
                         UNKN = 20000
            A=1(known), 2(unknown)
            B=INDEX OF OFFSET designator
            C=not used
      DE=LMK ID (0,1, 5X are legal)
          IF A=2
               OPT MODE - MAN
          PRO to 5
          IF A=1 & DE≠00
      or
          PRO to 4 (To 5 if OPTICS - MAN)
          IF A=1 & DE=00
      or
          PRO to 3
```

# DATE 3/22/71

2

]

3 F 06 89 LAT,LONG/2,ALT (.001°,.001°,.01nm) Load 1mk coords PRO (To 5 if OPTICS - MAN)

Establish proper pitch rate OPTICS MODE - MAN 5 F 51 MARK REQUEST (Avoid 1mk near horiz)

MARK After sufficient MARKS:

\*After 5 MARKS: \* \*F 50 25 00016 TERM MARKS\*

### PRO

3/22/71

6 F 05 71 R2 ABCDE LMK DATA Load lmk code (if nec)

11/77/6			A=1 if KNOWN LMK A=2 if UNKNOWN LMK B=INDEX OF OFFSET DESIGNATOR (If only 1 mark made, insure B=0) C=Not used in P22 DE=LMK ID NO. (0,1 are valid) PRO - if A=2 (or A is 1 & DE = 01) to 8
	7	F 06 89	LAT,LONG/2,ALT (.001°,.001°,.01nm) PRO
DATE	8	( F	ΔR,ΔV (SV PARA) (.01nm,.1fps) ECYCLE) V32E to 2 CCEPT) Hold for 30 sec PRO
	9	F 06 89 (0 (s) (t)	LAT,LONG/2,ALT LMK ID (.001°,.001°,.01nm) ON'T STORE) PRO to 2 TORE-CODE 01) V32E to 2 erminate Prog) V34E

10 F 37

1

2

XXE OPT ZERO - ZERO G/N PWR OPTICS - OFF To restore rate limit (CDU transient detection): V21N1E,1341E,5E P23 - CISLUNAR MIDCOURSE NAV MEASUREMENT CMC - on SCS - on ISS - on & aligned G/N PWR OPTICS - on (30 min prior) OPT ZERO - OFF then ZERO (15 sec) OPT MODE - CMC V37E 23E F 50 25 R1 00015 ACQ CALIBRATION STAR

(MAN MNVR) Mnvr veh. to point LLOS at body ENTR to 7 (AUTO MNVR) PRO

3 F 01 70 R1 000DE STAR CODE Load desired code PRO (to 5 if  $DE \neq 00$ ) 3/22/71 4 F 06 88 CELESTIAL BODY VECTOR Load desired vector PRO 5 F 50 18 REQUEST MNVR TO FDAI R,P,Y  $(.01^{\circ})$ (AUTO) SC CONT-CMC CMC MODE - AUTO BMAG MODE (3) -RATE 2 PRO to 6 (MAN) V62E MNVR to 5 (BYPASS) ENTR to 7 6 06 18 AUTO MNVR FDAI R, P, Y (.01°) AUTO MNVR COMPLETE RETURN TO 5

G	
3-9	

7 F 59 REQUEST OPTICS CALIB (BYPASS) ENTR to 9 (CALIB) OPT MODE - MAN OPT COUPLING - DIR SPEED - LOW OPT ZERO - OFF SUPERIMPOSE LLOS ON SLOS MARK 8 F 06 87 **R2 TRUN BIAS** (.001°) (Repeat until 2 measurements agree within .003°) For manual load: V22 N94E XXXXXE (RECALIB) MARK to 8 (INCORP CALIB) PRO 9 F 05 70 000DE R1 STAR ID

		LMK ID HOR ID	
	STAR/ENH	STAR/LNH	STAR/EL
	000DE 00000 00110	000DE 00000 00210	000DE 00100 00000
	STAR/EFH	STAR/LFH	STAR/LL
	000DE 00000 00120	000DE 00000 00220	000DE 00200 00000
	STAR/HOR PRO TO STAR/LMK PRO	) 12 (DE=00	to 11)
F 06 89	LAT, LONG/2, AL PRO (DE≠00 to 1	T (LMK)(.00 2)	1° +N/E,.01nm)
F0688	CELESTIAL BODY LOAD DESIRED VE		

DATE 3/22/71

10

11

F 50 25 00202 3-AXIS MNVR REQUEST 12 (3-AXIS) PRO (VECPOINT)ENTR

 $(.01^{\circ})$ 13 F 50 18 REQUEST MNVR TO FDAI R,P,Y (AUTO) SC CONT - CMC CMC MODE - AUTO BMAG MODE (3) - RATE 2 PRO to 14 V62E (MAN) MNVR to 13

(BYPASS) OPT MODE - CMC OPT ZERO - OFF ENTR to 15

(.01°) AUTO MNVR FDAI R, P, Y 06 18 14 AUTO MNVR COMPLETE RETURN TO 13

 $(.01^{\circ}, .001^{\circ})$ 06 92 AUTO OPT SHFT/TRUN 15 (MNVR) V94E to 12

		(MARK) MNVR SC TO POSITION LMK/HOR IN FOV OPT MODE - MAN
16	F 51	MARK REQUEST (MNVR) V94E to 12 (MARK) SUPERIMPOSE STAR ON LMK/HOR MARK
17	F 50 25	00016 TERM MARKS (REJECT) MARK REJECT to 16 (Noun + R1 not blanked) (TERM) PRO
18	F 05 71	R1 OOODE STAR ID R2 OOCOO LMK ID R3 OOCDO HOR ID
		(STAR/HOR) PRO to 21 (DE=00 to 20) (STAR/LMK) PRO to 19

3/22/71

DATE

LAT, LONG/2, ALT(LMK) (.001°+N/E,.01nm) 19 F 06 89 PRO (DE≠00 to 21)

- 20 F 06 88 CELESTIAL BODY VECTOR Verify vector PRO
- 21 F 06 49 △R,△V (SV PARA) (REJECT) V37E 23E (UPDATE) PRO

(.01nm,.1 fps)

- 22 F 37 XXE OPT ZERO - ZERO G/N PWR OPTICS - OFF
  - P24 RATE-AIDED OPTICS TRACKING

```
CMC - on (req)
ISS - on and aligned
SCS - on
BMAG MODE (3) - RATE 2
G&N PWR OPTICS - on
OPT ZERO - OFF then ZERO (15 sec)
```

		OPT MODE - CMC TVC SERVO PWR 1 & 2 - OFF (verify) GMBL MTRS (4) - OFF (verify)
1		V37E 24E
2	F 06 89	LAT, LONG/2, ALT (.001°,.001°,.01nm LOAD LMK COORDS OPT ZERO - OFF MNVR to SIGHTING ATT Roll to keep shaft axis > 10° from plane defined by X-axis & LOS to LMK (For 60nm alt, LMK > 10nm from gnd track requires no roll) PRO
3	06 92	AUTO OPT SHFT/TRUN (.01°,.001°) *F 05 09 00404 (TRUN >90°)* * MNVR to acquire * * PRO * * or V34E, F 37 * OPTICS MODE - MAN
	1 2	

G 3-12 F 51 MARK REQUEST MARK (as often as desired) To terminate: PRO F 37 XXE OPT ZERO - ZERO G/N PWR OPTICS - OFF P27 CMC UPDATE CMC - on (reg) Auto Update: V37E 00E (Not nec. if P20 opt 1,2,5 in foreground) UP TLM (2) - ACCEPT UPLINK ACTY 1t - on \*POSS LOS before completion\* \*If V33 NO2 showing: \* Key ENTR ×

5

4

```
UPLINK ACTY 1t - out
               *
                                           *
                                           ×
               * POO or P2O displayed
               *If V21 N01
                                           *
               *or V21 NO2
                                           *
               *
                 Key V34E
                                           *
                  UPLINK ACTY 1t - out
                                           *
               *
                                           ×
               *
                  POO or P20 displayed
               *UP TLM (2) - BLOCK
                                           ×
Update complete:
          UPLINK ACTY 1t - out
          UP TLM (MDC) - BLOCK
Voice Transmission Update:
     V37E OOE (Not nec. if P20 opt 1,2,5 in
               foreground)
     V70E LIFT-OFF TIME UPDATE
  or V71E LOAD DATA CONSEC ADD
  or V72E LOAD DATA IN NON CONSEC
  or V73E CMC TIME UPDATE
     P27 Displayed
```

3

1

2

DATE

3/22/71

```
3-13
4
    F 21 01
              R3 UPDATE BUFFER ADD (initially 304)
               R1 Data E (R3 Increments)
               (If change - To 6)
               Repeat Step 4 for all data
5 F 21 02 R3 330
               (Verify Data) V1 N1E
                             R3 304E
                             RI Verify Data
                             N15E (R3 305)
                             R1 Verify Data
                             Consecutive ENTR's display
                               remaining comps. Note
                               octal ident (01-24) of
                               comps which need change
                             KEY REL To 6
6
     F 21 02 R3 330
          (CHANGE) Load octal ident, XXE to 4
          (ACCEPT UPDATE) Key Verb, then PRO
```

G

	7		POO or P2O Displayed	
			<u>P29 TIME OF LONGITUDE</u> CMC-on (req)	
3/22/71	1		V37E29E	
DATE 3/2	2	F 04 06	R1 00002 Specify Vehicle R2 00001, CSM 00002, LM PRO	
	3	F 06 34	GET BASE TIME (hrs,min,.( Load time from which CMC will begin search (all O's present time) PRO	
	4	F 06 43	R2 DESIRED LONG Load long PRO	(.01°)

- 5 F 06 34 GET LONG (Change long) V32E to 4 (see lat.) PRO
- 6 F 06 43 LAT, LONG, ALT (Recycle) V32E to 2 (Term) PRO

(hrs,min,.01 sec)

(.01°,.01°,.1nm)

7 F 37

P20 with GDC REFSMMAT

```
CMC - on (req)
IMU - off
GDC - on and REFSMMAT Known (pg G/7-13)
SCS - operating
G/N OPT PWR - on
OPT ZERO - OFF then ZERO (15 sec)
OPT MODE - CMC
```

```
Load present GDC angles
                Perform P20 opt 4 (p. G/3-2)
2
                Return after PRO on N79
                                                                3/22/71
                Display desired att.
3
                                             (R,P,Y) (.01°)
                V16N18E
                Mnvr to Roll 0° or 180°, Yaw 0°
4
                   and Pitch shown in N18
                                                                 DATE
                V25N20E
                Load present GDC angles
                 OPT ZERO - OFF
5
                MARK (repeat as necessary)
                      * POSS F 06 49 \Delta R, \Delta V, source code *
                                       (.lnm, .lfps, 0000X)*
                      *
                      * (REJECT) V32E
                                                             *
                      * (ACCEPT) PRO
                                                             *
                     (To Terminate P20 - V56E
                        G/N OPT PWR - OFF)
```

P30 EXTERNAL  $\Delta V$ If uplinked REFSMMAT, do P52 (OPT 1) before P30 1 **V37E 30E** (hrs,min,.01sec) F 06 33 TIG Load desired TIG PRO F 06 81  $\Delta V XYZ(LV)$ (.lfps) 2 Load desired  $\Delta V$ 's (Do not use all O's) PRO (.lnm,.lnm,.lfps) F 06 42 HA, HP,  $\Delta V(REQ)$ 3 Set  $\Delta V$  Counter PRO MARKS, TFI, MGA (marks, min-sec, .01°) 4 F 16 45 (MGA Set to -00002 IF REFSMMAT FLAG NOT SET)

Set DET PRO

5 F 37

3/22/71

DATE -

# G 4-2

# MINKEY SEQUENCER

31.1 △V mag. <7 fps, perform P41 (CMC begins at step 4) △V mag. >7 fps, perform P40 (CMC begins at step 4)

31.2 Perform P76

Go to P32, step 2

- 32.1 △V mag. <7 fps, perform P41 (CMC begins at step 4) △V mag. ≥7 fps, perform P40 (CMC begins at step 4)
- 32.2 Perform P76
- 32.3 R1 of N55 (P32) < 3, Go to P36, step 2 = 4, Go to P31, step 2

> 4, Go to P32, step 2

3/22/71

36.1 If 
$$\Delta V$$
 mag. = 0, go to 36.2  
52 in MM lights (.01°)  
(RECOMP) MNVR; V32E  
(ACCEPT) PRO  
F 50 25 00020 MINKEY PULSE TORQUE  
(TORQUE) CMC MODE - FREE  
PRO  
(16 20 during torque)  
Torque complete:  
CMC MODE - AUTO  
 $\Delta V < 7$  fps - P41 (step 4)  
 $\Delta V \ge 7$  fps - P40 (step 4)  
(BYPASS) ENTR  
Perform P41 (step 4)

- 36.2 Perform P76
- 36.3 If pulse torque not done, go to P33 step 2.
- 36.4 If all gimbal angle changes for mnvr back to rend. att < 10°, go to 36.5
  - F 50 18 Request MNVR to RPY angles (.01°) (ACCEPT) SC CONT - CMC CMC MODE - AUTO PRO (REJECT) ENTR to 36.5
    - 06 18 MNVR in progress (.01°) MNVR complete, to 36.5
- 36.5 52 in MM lights

DATE 3/22/71

F 06 22 New ICDU angles (.01°) (RECOMP) MNVR; V32E

(ACCEPT) PRO F 50 25 00020 MINKEY PULSE TORQUE CMC MODE - FREE PRO (16 20 during torque) Torque complete: CMC MODE - AUTO Go to P33, Step 2 33.1  $\Delta V$  mag. <7 fps, perform P41 (CMC begins at step 4)  $\Delta V$  mag > 7 fps, perform P40 (CMC begins at step 4) 33.2 Perform P76 33.3 Go to P34, step 2

- 34.1 △V mag. <7 fps, perform P41 (CMC begins at step 4)  $\Delta V$  mag.  $\geq$  7 fps, perform P40 (CMC begins at step 4)
- 34.2 Perform P76

34.3 Go to P35, step 2

35.1 △V mag <7 fps, perform P41 (CMC begins at step 4)  $\Delta V$  mag.  $\geq 7$  fps, perform P40 (CMC begins at step 4)

35.2 Perform P76

35.3 MCC2 complete, go to P79 step 2 MCC2 not complete, go to P35, step 2



		G 4-5	
		P31 HAM PRETHRUST	
1		V37E 31E (If no REFSMFLG, To 3)	
	F 50 25 (ACCEPT) (REJECT)	PRO	
2	F 50 18	(Req'd Mnvr <10°, To 3) Request MNVR To RPY angles	(.01°)
	(ACCEPT)	SC CONT – CMC CMC MODE – AUTO PRO	
	(REJECT)	ENTR To 3	
	06 18	MNVR in progress When MNVR complete: MINKEY To 3 Non - MINKEY To 2	(.01°)

3	F 06 11	TIG (CSI) Load if needed PRO	(hrs,min,.01sec)
4	F 06 55	CENTRAL ANGLE, P	ATION ANGLE(+0000N,.01° assive Vehicle (ωt) m CSI, load non-zero
5	F 06 37	TIG (TPI) Load data PRO	(hrs,min,.01sec)
6	F 06 33	TIG (HAM) PRO	(hrs,min,.01sec)

DATE 3/22/71

4-6 F 16 45 MARKS, TFI, -00001 (marks,min-sec) (RECYCLE) **V32E** (FINAL COMP) TERM MARKS PRO \*F 05 09 \* \* 00600 No Intersection on \* × First Iteration \* 00601 Post CSI hp<85/5.8nm\* \* 00602 Post CDH hp<85/5.8nm\* × 00603 TIG(CDH) - TIG(CSI)× × × <10 min \* 00604 TIG(TPI) - TIG(CDH)\* × \* <10 min \* 00605 NO SOL IN 15 TRIES \* \* 00606 ∆V(CSI)>1000fps in 2\* × \* Iterations × V32E To 3: Adjust \* \* ★ Inputs \* Y(Active), YDOT(Active), YDOT(Passive) F 06 90

G

PRO


- 9 F 06 81 ∆V XYZ (LV) HAM (.1fps) PRO (If recycle - To 7)
- 10 F 16 45 MARKS,TFI,MGA (marks,min-sec,.01°) (MGA = -00002 if no REFSMFLG) SET EVENT TIMER PRO (If MINKEY, to Sequencer 31.1)

```
11 F 37
```

7

8

(.01nm, .1fps, .1fps)

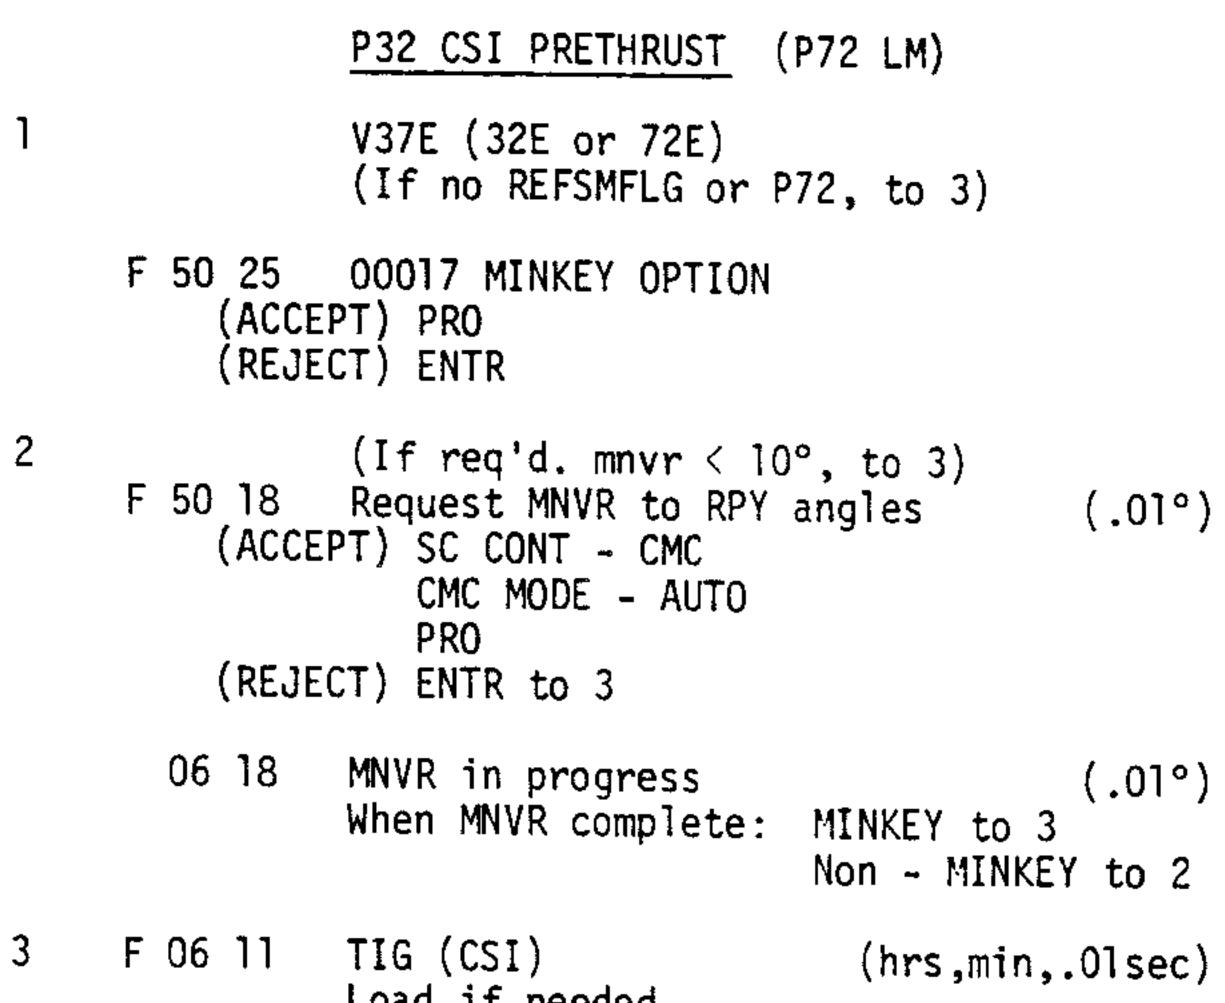

			Load if needed PRO	
3/22/71	4	F 06 55	CENTRAL ANGLE,	EVATION ANGLE,(+0000N,.01 Passive Vehicle (ωt) rom CSI, load non-zero
DATE	5	F 06 37	TIG (TPI) Load data PRO	(hrs,min,.01sec)
	6	( REC	MARKS,TFI,-00001 YCLE) V32E (MINK AL PASS) TERM MA PRO (MINKEY to 8	(EY to 8) NRKS

		G 4-8	
		<pre>*F 05 09 * 00600 No Intersection on * First Iteration * 00601 hp+CSI &lt;85nm/5.8nm * 00602 hp+CDH &lt;85nm/5.8nm * 00603 TIG(CDH)-TIG(CSI) * &lt;10 min * 00604 TIG(TPI)-TIG(CDH) * &lt;10 min * 00605 NO SOL IN 15 Tries * 00606 ΔV(CSI)&gt;1000fps in * Iterations * V32E to 3 Adjust * Inputs</pre>	*****************
7	F 06 75	∆H(CDH),∆T(CDH-CSI),∆T(TPI-CDH) PRO (.1nm,min-se	ec)
8	F 06 90	Y(Active), YDOT(Active), YDOT (Passiv (.01nm,.1fps,.1fp PRO	

9	F 06 81	∆V XYZ(LV)CSI (.1fps) Change if desired PRO (If MINKEY: recycle, to 6 final pass, to 11)
10	F 06 82	∆V XYZ(LV)CDH (.lfps) PRO (If Recycling to 6)
11	F 16 45	MARKS,TFI,MGA (marks,min-sec,.01°) (MGA Set to -00002 If No REFSMFLG or If P72) SET EVENT TIMER TO TFI PRO (If MINKEY, to Sequencer 32.1)
12	F 37	

P72 - Transmit mnvr Parameters to LM

DATE 3/22/71

	G 4-9	
	<u> P36 – PLANE CHANGE PRETHRUST</u>	
	V37E 36E (If no REFSMFLG, to 3)	
F 50 25 (ACCEPT) (REJECT)	00017 MINKEY OPTION PRO ENTR	
F 50 18	(Req'd Mnvr <10°, to 3) Request MNVR to RPY angles	(.01°)
(ACCEPT)	SC CONT - CMC CMC MODE - AUTO PRO	
(REJECT)	ENTR to 3	
06 18	MNVR in progress When MNVR complete: MINKEY to 3 non-MINKEY to 2	(.01°)

1

3	F	06	33	TIG (PC) PRO	(hrs,min,.01sec)
4	F	16	45 (RECY (FINA	MARKS,TFI,-00001 CLE) V32E AL COMP) TERM MARKS PRO	(marks,min-sec)
5	F	06	90	Y(Active),YDOT (Act PRO	tive),YDOT (Passive) (.01nm,.1fps,.1fps)
6	F	06	81	∆V XYZ (LV) PC PRO (If recycle –	(.lfps) to 4)
7	F	16	45	MARKS, TFI, MGA (MGA = -00002 if SET EVENT TIMER PRO (If MINKEY, to	
~		~			

8 F 37

DATE 3/22/71

```
G
                      4 - 10
          P33 CDH PRETHRUST (P73 LM)
          V37E (33E or 73E)
          (If no REFSMFLG or P73, to 3)
F 50 25 00017 MINKEY OPTION
     (ACCEPT) PRO
     (REJECT) ENTR
          (If req'd. mnvr <10°, to 3)
F 50 18 Request MNVR to RPY angles
                                             (.01^{\circ})
     (ACCEPT) SC CONT - CMC
               CMC MODE - AUTO
               PRO
     (REJECT) ENTR to 3
                                              (.01^{\circ})
  06 18
          MNVR in progress
          When MNVR complete: MINKEY to 3
                                 Non - MINKEY to 2
```

2

3 F O6 13 TIG(CDH) PRO (hrs,min,.01sec)

```
4 F 16 45 MARKS,TFI,-00001 (marks,min-sec)
(RECYCLE) V32E (MINKEY to 6)
(FINAL PASS) TERM MARKS
PRO (MINKEY to 6)
```

```
*F 05 09 00611 NO TIG FOR*
         SPECIFIED ANGLE *
*
×
  (REDO)V32E to 3
                           *
*
         PRO to 5
                           *
            (6 if MINKEY)
*
                           *
*CMC will use last
                           *
                           *
   calculated value of
×
   TIG (TPI)
                           *
×
```

5 F 06 75 △H(CDH),△T(TPI-CDH),△T(TPI-NOMTPI) PR0 (.lnm,min-sec)

6 F 06 90 Y(Active), YDOT(Active), YDOT(Passive) (.01nm,.1fps,.1fps) PRO 7 F 06 81 △V XYZ(LV)CDH (.lfps) PRO (If Recycling to 4)

8 F 16 45 MARKS,TFI,MGA (marks,min-sec,.01°) (MGA Set to -00002 If No REFSMFLG or If P73) SET EVENT TIMER TO TFI PRO (If MINKEY, to Sequencer 33.1)

9 F 37

1

3/22/71

DATE

P73 - Transmit mnvr Parameters to LM

P34 TPI PRETHRUST (P74 LM)

```
V37E (34E or 74E)
(If no REFSMFLG or P74, to 3)
F 50 25 00017 MINKEY OPTION
(ACCEPT) PRO
(REJECT) ENTR
```

```
2
                (If req'd. mnvr <10°, to 3)
                Request MNVR to RPY angles
     F 50 18
                                                   (.01^{\circ})
          (ACCEPT) SC CONT - CMC
                    CMC MODE - AUTO
                    PRO
          (REJECT) ENTR to 3
       06 18
                MNVR in progress
                                                   (.01^{\circ})
                When MNVR complete:
                                      MINKEY to 3
                                      Non - MINKEY to 2
3
     F 06 37
               TIG (TPI)
                                        (hrs,min,.01sec)
                Load desired TIG
                PRO
4
     F 06 55 PRECISION OFFSETS, ELEV ANGLE, ωt
                                       (0000X,.01°,.01°)
                Load desired values
                (+00000 in R2 to CALC ELEV
                 ANGLE AT TIG TIME)
                PRO
```

G 4 - 12(marks,min-sec) F 16 45 MARKS, TFI, -00001 5 (RECYCLE) V32E (TIG option, to 7) (FINAL PASS) TERM MARKS PRO (TIG option, to 7) \*F 05 09 (00611 NO.SOL)\* \*PRO To 3 (hrs,min,.01sec) 6 F 06 37 TIG (TPI) PRO (If not MINKEY final pass, to 8) F 06 55 PRECISION OFFSETS, ELEV ANGLE, ωt 7 (0000X,.01°,.01°) PRO F 06 58 HP, $\Delta V(TPI)$ , $\Delta V(TPF)$  (.1nm,.1fps,.1fps) 8 PRO (.lfps) F 06 81  $\Delta V XYZ(LV)TPI$ 9 PRO (recycle, to 5)

```
MARKS,TFI,MGA (marks,min-sec,.01°)
   F 16 45
10
                 (MGA SET To -00002 IF NO
                    REFSMFLG or If P74)
               SET EVENT TIMER TO TFI
               PRO (If MINKEY, to Sequencer 34.1)
     F 37
11
               P74 - Transmit Mnvr Parameters To LM
               P35 TPM PRETHRUST (P75 LM)
               V37E (35E or 75E)
1
               (If no REFSMFLG or P75, to 3)
               00017 MINKEY OPTION
     F 50 25
           (ACCEPT) PRO
           (REJECT) ENTR
```

3/22/71

2

3

4

5

3/22/7]

DATE

(If req'd.  $mnvr < 10^\circ$ , to 3) F 50 18 Request MNVR to RPY angles  $(.01^{\circ})$ (ACCEPT) SC CONT - CMC CMC MODE - AUTO PRO (REJECT) ENTR to 3 06 18 MNVR in progress  $(.01^{\circ})$ When MNVR complete: MINKEY to 3 Non - MINKEY to 2 F 16 45 MARKS, TFI, -00001 (marks,min-sec) (RECYCLE) V32E (FINAL PASS) TERM MARKS PRO F 06 81  $\Delta V XYZ(LV)TPM$ (.lfps) PRO (If recycle - to 3) F 16 45 MARKS, TFI, MGA (marks, min-sec, .01°) (MGA SET TO -00002 IF NO

REFSMELG on If P75)

6	6	E 27	REFSMFLG or If P75) PRO (If MINKEY, to Sequencer 35.1)		
	0	F 37	P75 - Trai	nsmit Mnvr Parameters To LM	
			To change	ATIGINC: V24N1E 2021E	
			6 min:	00002E 06240E	
			10 min:	00003E 25140E	
			3 min:	00001E 03120E	

		G 4-14	
		P79 RNDZ FINAL PROGRAM	
1		V37E 79E	
2	F 50 18	(All gimbal angle errors <10°, to 3) Request MNVR to RPY angles (.01°) (X-axis track)	
		SC CONT – CMC CMC MODE – AUTO PRO	
	06 18	MNVR in progress (.01°) When MNVR complete: to 3	
3	F 16 54	RANGE,RANGE RATE,THETA(.01nm,.1fps,.01°) (Ext. vbs. locked out) PRO	
4	F 37 For	P37 RETURN TO EARTH PGM (LONG CONTROL CANNOT BE DONE WHEN TIME TO ENTRY IS <4 HRS: Lunar return only)	
	LONGATUDE LOOKS AT RI VALUE AT ADDRESS 3012.	<pre>Perform the following once: V1N1E 3012E Verify R1=</pre>	3/22/71
1	ENTER \$37 F 06 33	V37E 37E TIG (hrs,min,.Olsec) <u>Load desired TIG</u> From P37 PAD PRO	DATE
2	F 06 60	BLANK, ΔV DESIRED, GAMMA EI DESIRED (fps,01°) Load desired ΔV: FROM p37 PMg PAD ΔV IF ON TLC -> A5 on ourward PADS 0. IF ON TEC Load R3=0 PRO	

.

G 4-15 \*F 05 09 00612 State vector in\* \* Lunar Influence\* \* 00605 Solution not \* \* \* Convergent \*V32E, RSET TO 1 \* 20607 Conic Routine \* × \* Failed \* \* 20610 State vector is\* \* below 400K ft \* \* altitude \* \*F 37 37E to 1 \* 3 CONIC SOLN IMPACT LAT, IMPACT LONG (+E) 06 61  $(.01^{\circ})$ If Impact LONG>12° from desired: TEC:N4OE Record R2 as ∆Vmin (fps) TLC: V32E to V32E to 1 & use  $|\Delta V| > \Delta V$  min Decrease  $\Delta V$  to ∆V neg to move LONG WEST move LONG WEST Load 18 dr.  $\Delta V$  pos to move LONG EAST Increase  $\Delta V$  t Load move LONG EAS Continue recycles til <12° from desired LON

If Impact LONG <12° from desired:  
Record Impact LONG as 
$$\underline{\partial c1}$$
 (.01°)  
Record  $\underline{\Delta Vin1}$  (fps)  
PRO  
4 F 06 39  $\Delta T$  TRANSFER (TIG to EI) (hrs,min,.01se  
PRO  
is the two (RECYCLE) V32E To 1  
He GET of EL  
W is estimated for the formula of t

53:41

*F 05 09	00605	Solution not *
*		Convergent *
*	00613	Flt Path Ang *
*		not reached *
*RSET V32	2E to 1	*
*	20607	Conic Routine*
*		Failed *
*F 37 371	E to l	*

PRECISION SOLN

7 F 06 61 IMPACT LAT, IMPACT LONG (.01°) Record LONG as <u>0p1</u> (.01°) If 0p1, acceptable, PRO to step 15

PRO

- 8 F 06 39 ∆T TRANSFER PRO
- 9 F 06 60 BLANK, VPRED, GAMMA EI (fps,.01°) PRO

10 F 06	Record R1 as <u>AVxp1</u> (.1fps) Record R3 as <u>AVzp1</u> (.1fps) V32F to 11	
11 F 06	3 TIG (hrs,min,.Olsec) Load same value used initially PRO	3/22/71
12 F 06	<pre>0 BLANK, ΔV DESIRED, GAMMA EI DESIRED To move WEST from opl: Load ΔVin2 = ΔVcl-l0 (If ΔVin1 = 0 for TEC, ΔVin2 = -ΔVcl-l0) To move EAST from opl: Load ΔVin2=ΔVcl+l0 Record ΔVin2 (.lfps) R2: Load ΔVin2 PR0 *F 05 09 SAME AS IN 2* *V32E. RSET to ll *</pre>	DATE

13 F 06 61 IMPACT LAT, IMPACT LONG (.01°) Record LONG as 0c2 (.01°)

N81E Record R3 as  $\Delta Vzc2$  (.1fps)

Compute 
$$K = \left\lfloor \frac{\Theta c^2 - \Theta c^1}{Vzc^2 - \Delta Vzc^1} \right\rfloor$$

Compute  $\Delta\theta$  LONG =  $\theta d - \theta pl (.01^{\circ})$ Obtain from chart  $\Delta Vo$  (fps) Make sign of  $\Delta Vo$  same as  $\Delta\theta$  LONG Compute  $\Delta Vd$ : If TLC and  $\Delta Vzpl>3\Delta Vxpl$ :  $\Delta Vd = \Delta Vcl + \Delta Vo$ V32E to step 1 and use  $\Delta Vd$  in R2 of N60 Otherwise:  $\Delta Vzd = \Delta Vzpl + \Delta Vo$  $\Delta Vzd = (\Delta Vzd^2 + \Delta Vxpl^2)^{1/2}$ 

14

```
To solve for ∆Vd:
                  V37E 30E, Use present time in N33.
                  Load N81:
                     Rl = \Delta Vxpl (should be)
                     R2 = 0 (should be)
                     R3 = \Delta Vzd (.1fps)
                  PRO and rcrd \Delta Vd (.1fps)
                     from N42 R3.
                  Make sign of ∆Vd same as ∆Vzd
                   V37E 37E to step 1 and use \Delta Vd
                     in R2 of N60
15
     F 06 39 \Delta T TRANSFER
                                           (hrs,min,.01sec)
           (RECYCLE) V32E To 1
                PRO
16
     F 06 60 BLANK, V PRED, GAMMA EI
                                                  (fps,.01°)
           (RECYCLE) V32E To 1
                PRO
```

DATE 3/22/71

G 4-18 17 F 06 81 \_ AV XYZ(LV) TIG (.lfps) (OPTION) N40E - VG MAG avail in N40 and N80 KEY REL PRO 18 F 04 06 THRUST OPTION R1 00007 R2 0000X X=1 (SPS) 2 (RCS) Perform RO3 (V48) if not performed just prior to P37 call PRO 19 F 06 33 TIG (hrs,min,.01sec) PRO 20 F 16 45 MARKS, TFI, MGA (00 00,min-sec,.01°) (MGA SET TO -00002 If No


```
REFSMMAT SET)
PRO
```

21 (40E or 41E)F 37

```
OBTAIN ENTRY REFSMMAT (No Comm)
(Use only after final MCC)
1. Record 400K time from final P37
     solution.
     (Step 1 TIG + FNL N39)
2. Use 400K time for T-align P52
     (Option 2).
          *If PROG ALARM 401, Yaw 45°*
          * and V32E
```

3/22/71 DATE

\*

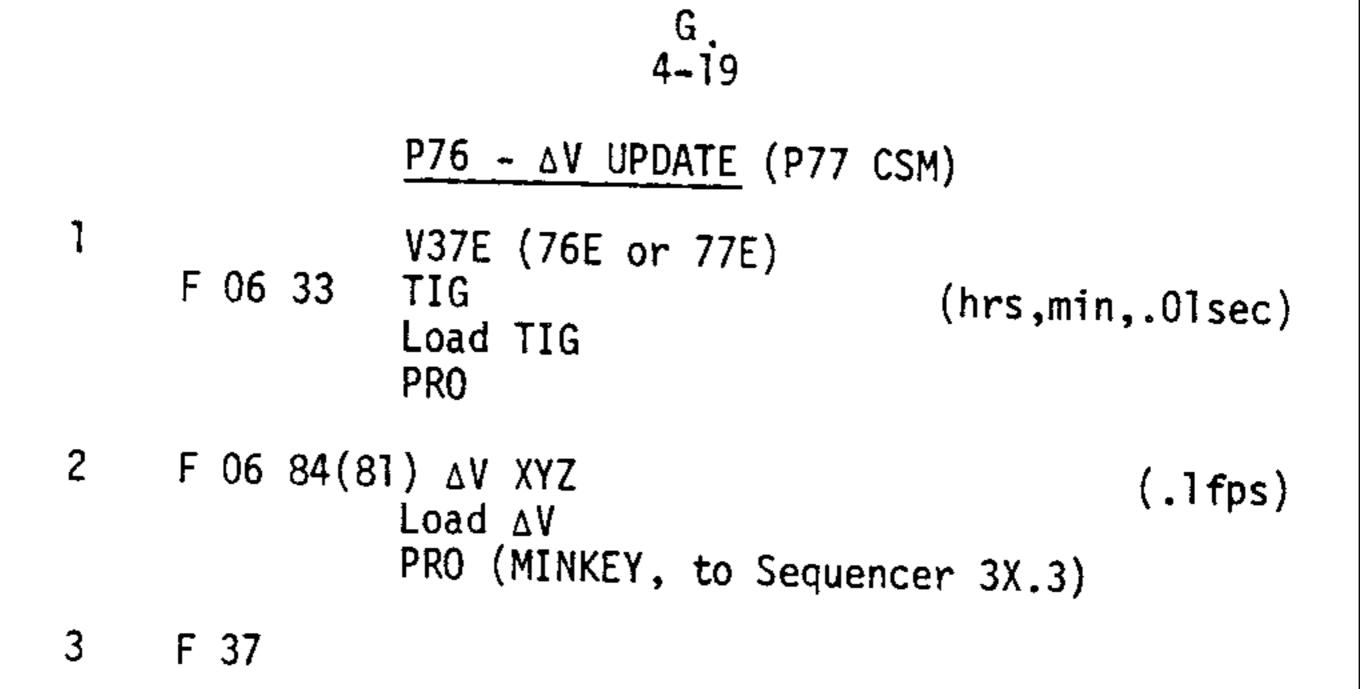


DATE 3/22/71

.

		G -20			
<u>P37</u>	/ LONGI	TUDE ITE	RATION		
PARAMETER	STEP	1	2	3	
∆Vmin	3	·	•	<u> </u>	fps
θ <b>cl</b>	3	•	•	•	0
∆Vinl	3	•	•	•	fps
∆Vzcl	6	°	•	•	fps
∆Vcl (Same sign as ∆Vinl)	6	•	*	·····	fps
өр]	7	·	<u> </u>	··•	o
∆Vxpl	10	• <b></b> _	***	•	fps
∆Vzpl	10	*	······•	<u> </u>	fps


∆Vin2	12	fps
θc2	13	·
∆Vzc2	13	fps
ec2-ec1	13	·
∆Vzc2-∆Vzc1	13	fps
K	13	•••
<pre>0d(desired long)</pre>	13	•••••
0 <b>d-0pl(∆0 long)</b>	13	••• °
∆Vo(from chart)	13	<u>00</u> fps
∆Vzd	13	fps
∆Vd	13/14	fps

DATE 3/22/71

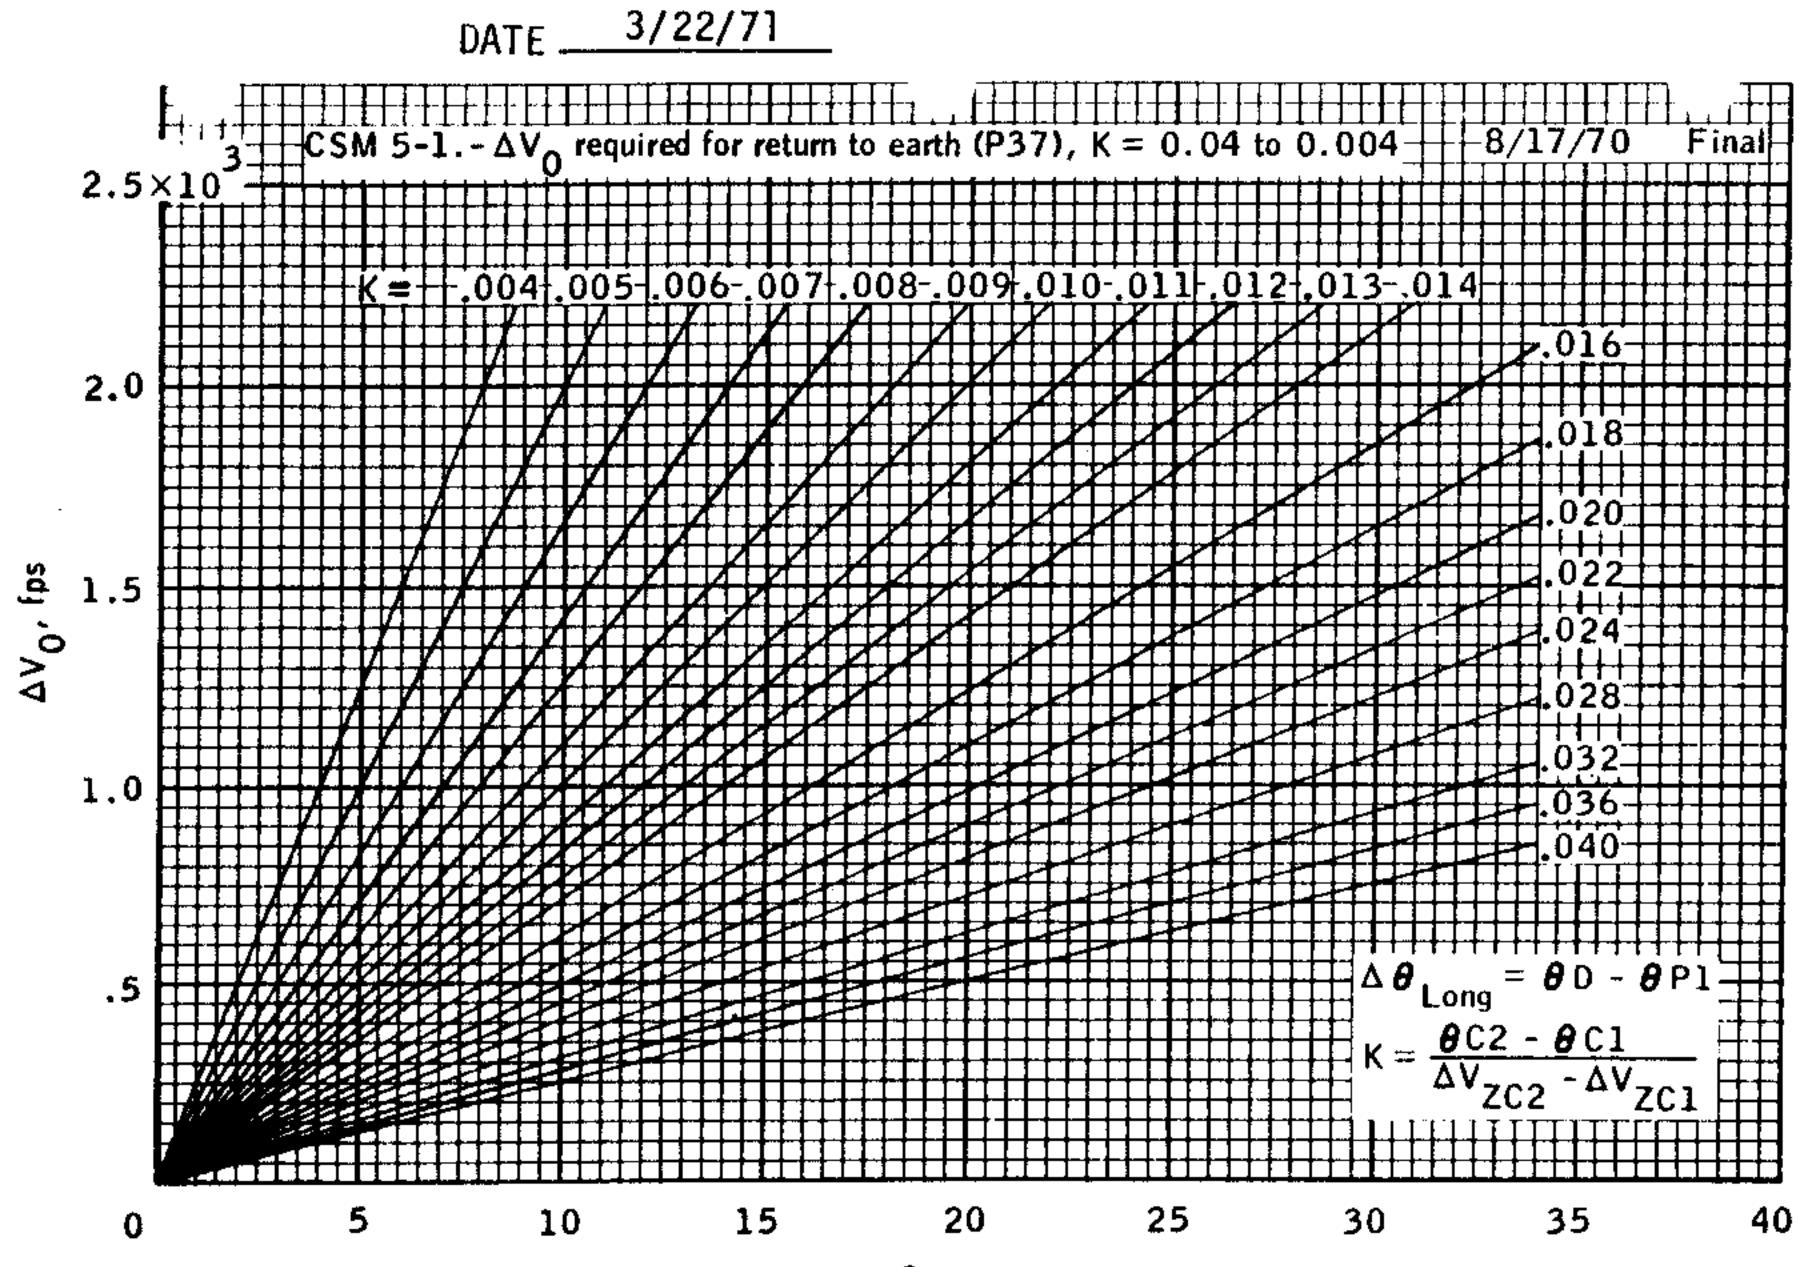


 $\Delta \theta_{Long}$ , deg




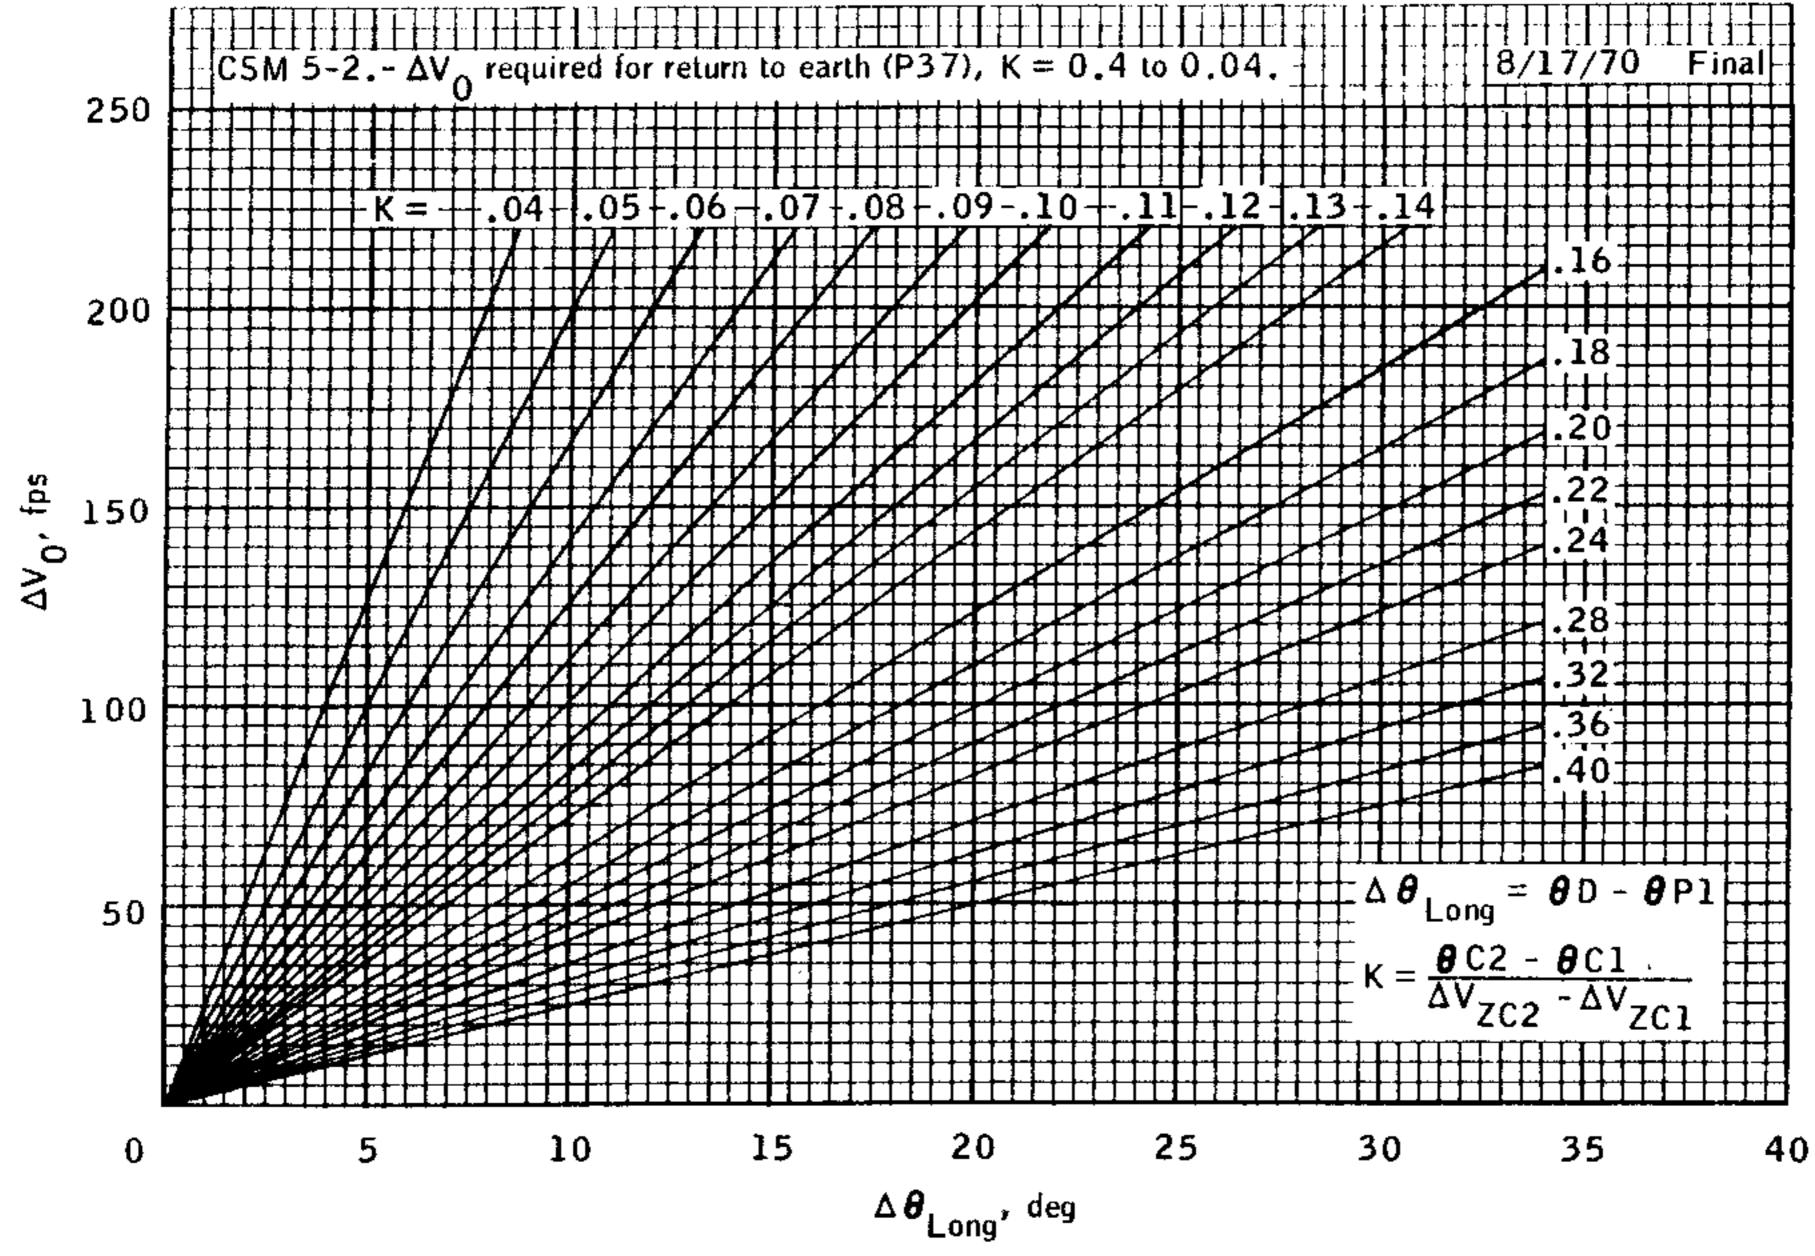

 $\Delta V_0$  required for return ' rarth (P37), K = 0.4 to 0.04.

 DATE 3/22/71



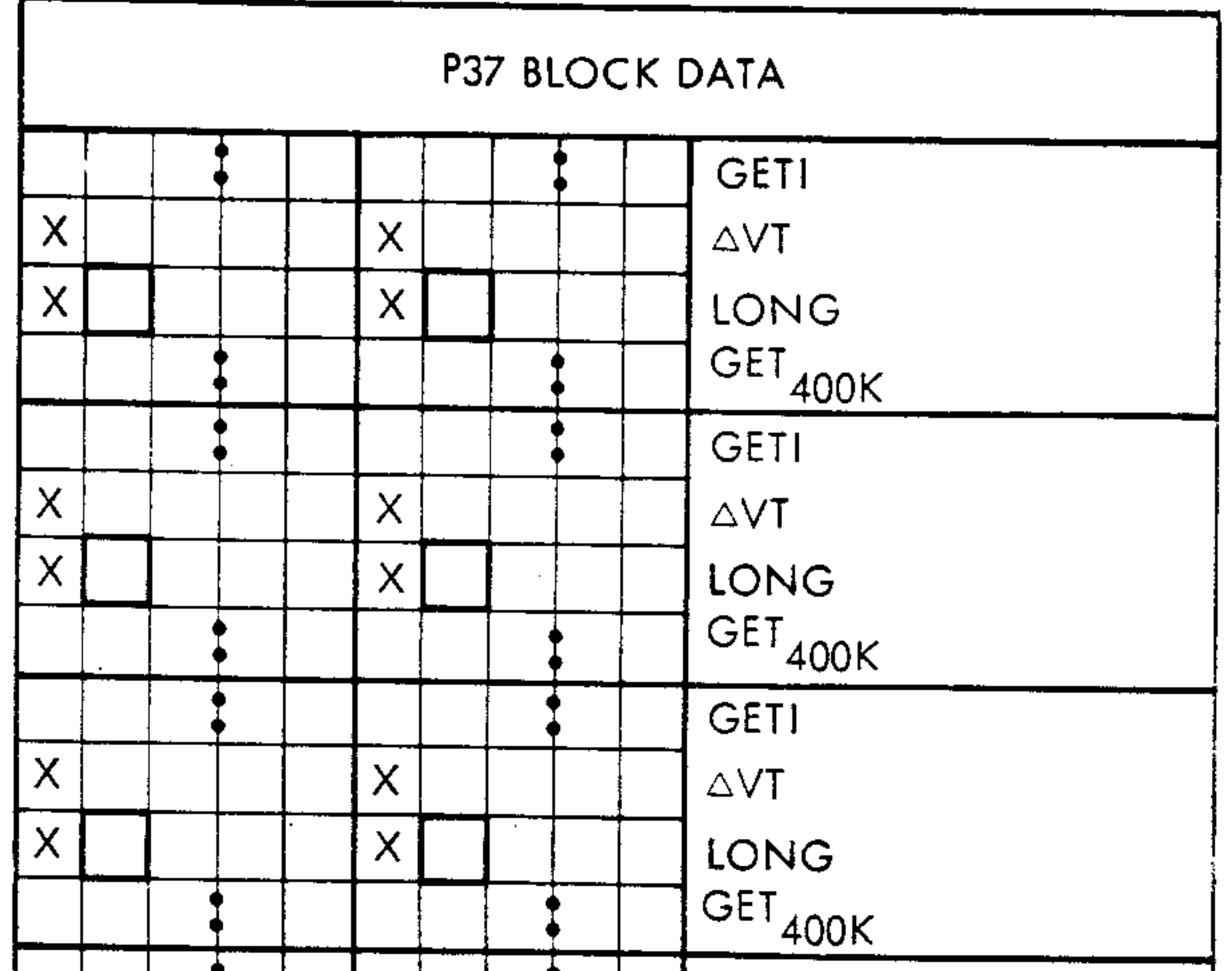

GETI Х Х  $\Delta V T$ LONG Х Х GET<sub>400K</sub> GETI Х Х  $\Delta V T$ LONG Х Х GET400K GETI Х Х  $\Delta VT$ Х LONG X GET<sub>400K</sub> GETI Х Х  $\Delta VT$ LONG GET<sub>ADDY</sub> Х Х

3/22/71 DATE

			G 4-3	24
		P3	7 BLOCI	K DATA
				GETI
X		X		
Х		X		LONG
	•			LONG GET <sub>400K</sub>
	•		*	GETI
X		X		∆VT
Х		X		LONG GET <sub>400K</sub>
			*	GET <sub>400K</sub>
	*		•	GETI
X		X		
Х		X		LONG
				LONG GET <sub>400K</sub>
	•		•	GETI
X		X		∆VT
X		X		LONG GET <sub>400K</sub>
				GET <sub>400K</sub>
			•	GETI
X		X		
X		X		LONG GET <sub>400K</sub>
				GET <sub>400K</sub>
				GETI
X		X		
X		X		LONG GET <sub>400K</sub>
				GETI △VT LONG GET <sub>400K</sub>
X		X		∆VT
X		X		LONG
				GET400K

DATE 3/22/71

.

```
Changes read down of 58:59:03
They are Meand for G2C Actoriany
This version and of date.
                                                  G
                                                 5-1
should be a line:
                                   P40 SPS THRUSTING
  VERIFY SIM PALEDOWN
                                         Prethrust Program Complete
After this, insert
                                         CMC & ISS - on
 CB, SPS PILOT VALVES (2) OPEN VERIFY / Cycle CRYO FANS
CB EPS, GROUP 5, (2) CLOSED, VERIFY /
                                         SCS - OPERATING
                                        _TEST C/W LAMPS
   EMS FUNCTION, OFF. VERIFY
                                         Perform EMS AV TEST & NULL
CBEMS MNA+B (2) CLOSE
                                            BIAS CHECK, pg G/2-5
                                          Set ∆VC
                                         EMS FUNC - \Delta V
                                          SPS GAUGING - AC1
                                          PUG MODE - NORMAL
                                          OXID FLOW vlv - PRI
                                         MAP CAMR ON - STBY
                                          PAN CAMR PWR - BOOST
                                          SM/AC PWR - on (up)
                                          BMAG MODE (3) - RATE 2
                                          CMC MODE - FREE
                                          AUTO RCS SELECT(16)-as reg'd
                                          LOAD DAP (Check roll jets)
                                          ROT CONTR PWR NORM (2) - AC/DC
```

		Set DET V37E OOE SC CONT - CMC/AUTO
22/71 3/22/71	]	MNVR TO PAD BURN ATT V49E
3/;	2	<u>PERFORM BORESIGHT &amp; SXT STAR CHECK</u> V41 N91E
DATE	3	V37E 40E (TFI available via N40, N45 or N35)
	4	F 50 18 REQUEST MNVR TO FDAI RPY ANGLES (.01°) (AUTO) BMAG MODE (3) - RATE 2 SC CONT - CMC/AUTO PRO
	5	06 18 AUTO MNVR TO FDAI RPY ANGLES (.01°)

G 5-2 F 50 18 REQUEST TRIM MNVR TO FDAI RPY ANGLES ALIGN S/C ROLL GDC ALIGN TVC CHECK & PREP

cb STAB CONT SYS (all) - close (Pnl 8) cb SPS (12)<sup>(2)</sup> close SET  $\Delta VC$  (verify) durges due to EMS FUNC -  $\Delta V$  (verify) SPS short. MAN ATT (3) - RATE CMD = h @ 59:00.34

 $(.01^{\circ})$ 

ATT DB - MIN RATE - LOW TRANS CONT PWR - ON SCS TVC (2) - RATE CMD ∆VCG - LM/CSM or CSM TVC GMBL DRIVE P&Y - AUTO


+54:00m (-06:00)

MN BUS TIE (2) - ON TVC SERVO PWR #1 - AC1/MNA TVC SERVO PWR #2 - AC2/MNB RAT CONTR PWR NORMAL


sugar due to 1 21 21 to @ 34:00-34 G 5-3 Verify GPI returns to 0,0(CMC) or t (SCS) ROT CONT PWR NORM (2) - AC/DC ROT CONT PWR DIRECT (2) - MNA/MNB (TRIM) BMAG MODE (3) - RATE 2 PRO BMAG MODE (3) - ATT1/RATE 2 (verify ENTR 7 F 50 25 00204 GMBL TEST OPTION (ACCEPT) SC CONT - CMC (verify) PRO changes due la SPS short. Monitor GPI Response: ch@59:00:34 00,02,-02,00,02,-02,00, Trim **\*TEST FAIL:** × \*SC CONT - SCS \* \*SCS TVC(2) - AUTO\* (REJECT) ENTR 06 40 TFI, VG, ∆VM 8 (min-sec, .1fps) \*PROG ALARM - TIG Slipped\* \*V5N9E 01703 3/22/71 \*KEY RLSE TO 8 \* FDAI SCALE - 5/5 RATE - HIGH UPDATE DET DATE SPS He vlvs (2) - AUTO (verify) Check N2 A and N2 B CB SPS PILOT VALVE MAIN B, CLOSE 58:00 (-02:00) $-\Delta V$  THRUST A(B) - NORMAL THC - ARMED RHC (2) - ARMED TAPE RCDR - HBR/RCD/FWD/CMD RESET 59:25 (~00:35)

DSKY BLANKS

```
changes due to SPS Short:
Ch @ 59:01:54
                              G
                             5-4
             (AVE G ON)
  59:30
(-00:30)
                    EMS MODE - NORMAL
     06 40 TFI,VG,∆VM
                                           (min-sec, .1fps)
              CHECK PIPA BIAS <2fps for 5 sec
  59:XX
              ULLAGE
(-00:XX)
                          *If no ULLAGE:
                                                     *
                          * DIR ULLAGE PB - PUSH*
                            Control Att with RHC*
                          *
              MONITOR AVM (R3) COUNTING UP
  59:55
(-00:05)
   F 99 40 ENG ON ENABLE REQUEST (2) THROST A + B
(AUTO IGN) DRO AT TET > 2 2
(2) THROST A + B
         (AUTO IGN) PRO AT TFI >0 Sec____
         (BYPASS IGN) ENTR to 11 (Perform switching in 10)
                        EXIT - V37E 00E
```

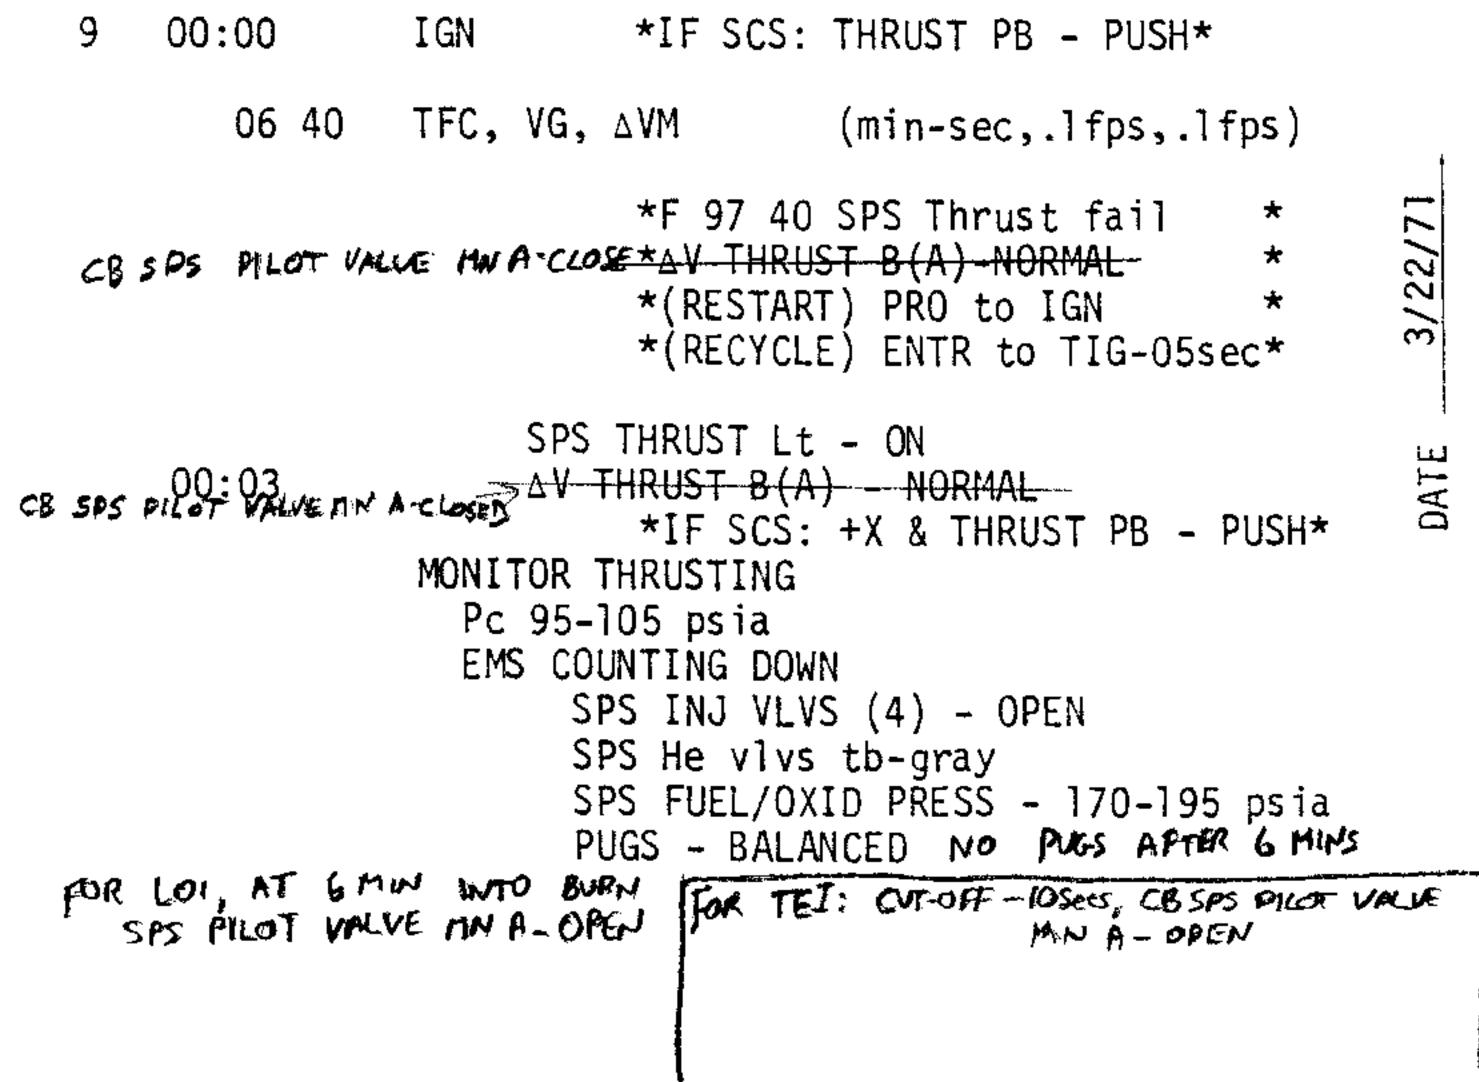

	FOR LOI	+ TEI	BMAG MODE (3) – R cb DIRECT ULLAGE	ATE 2 (2) - open
	مار	LOT VEN MINE	PCM BIT RATE - LO MAP CAMR ON - OFF PAN CAMR PWR - OF SM/AC PWR - OFF	Open W F TEI TEI
ļ	1		PRO (If MINKEY, To Se	quence 3X.2)
DATE	12	F 37	V82E	
	13	F 16 44	HA,HP,TFF	(.lnm,min-sec)
			PRO	
	14	F 37	00E	

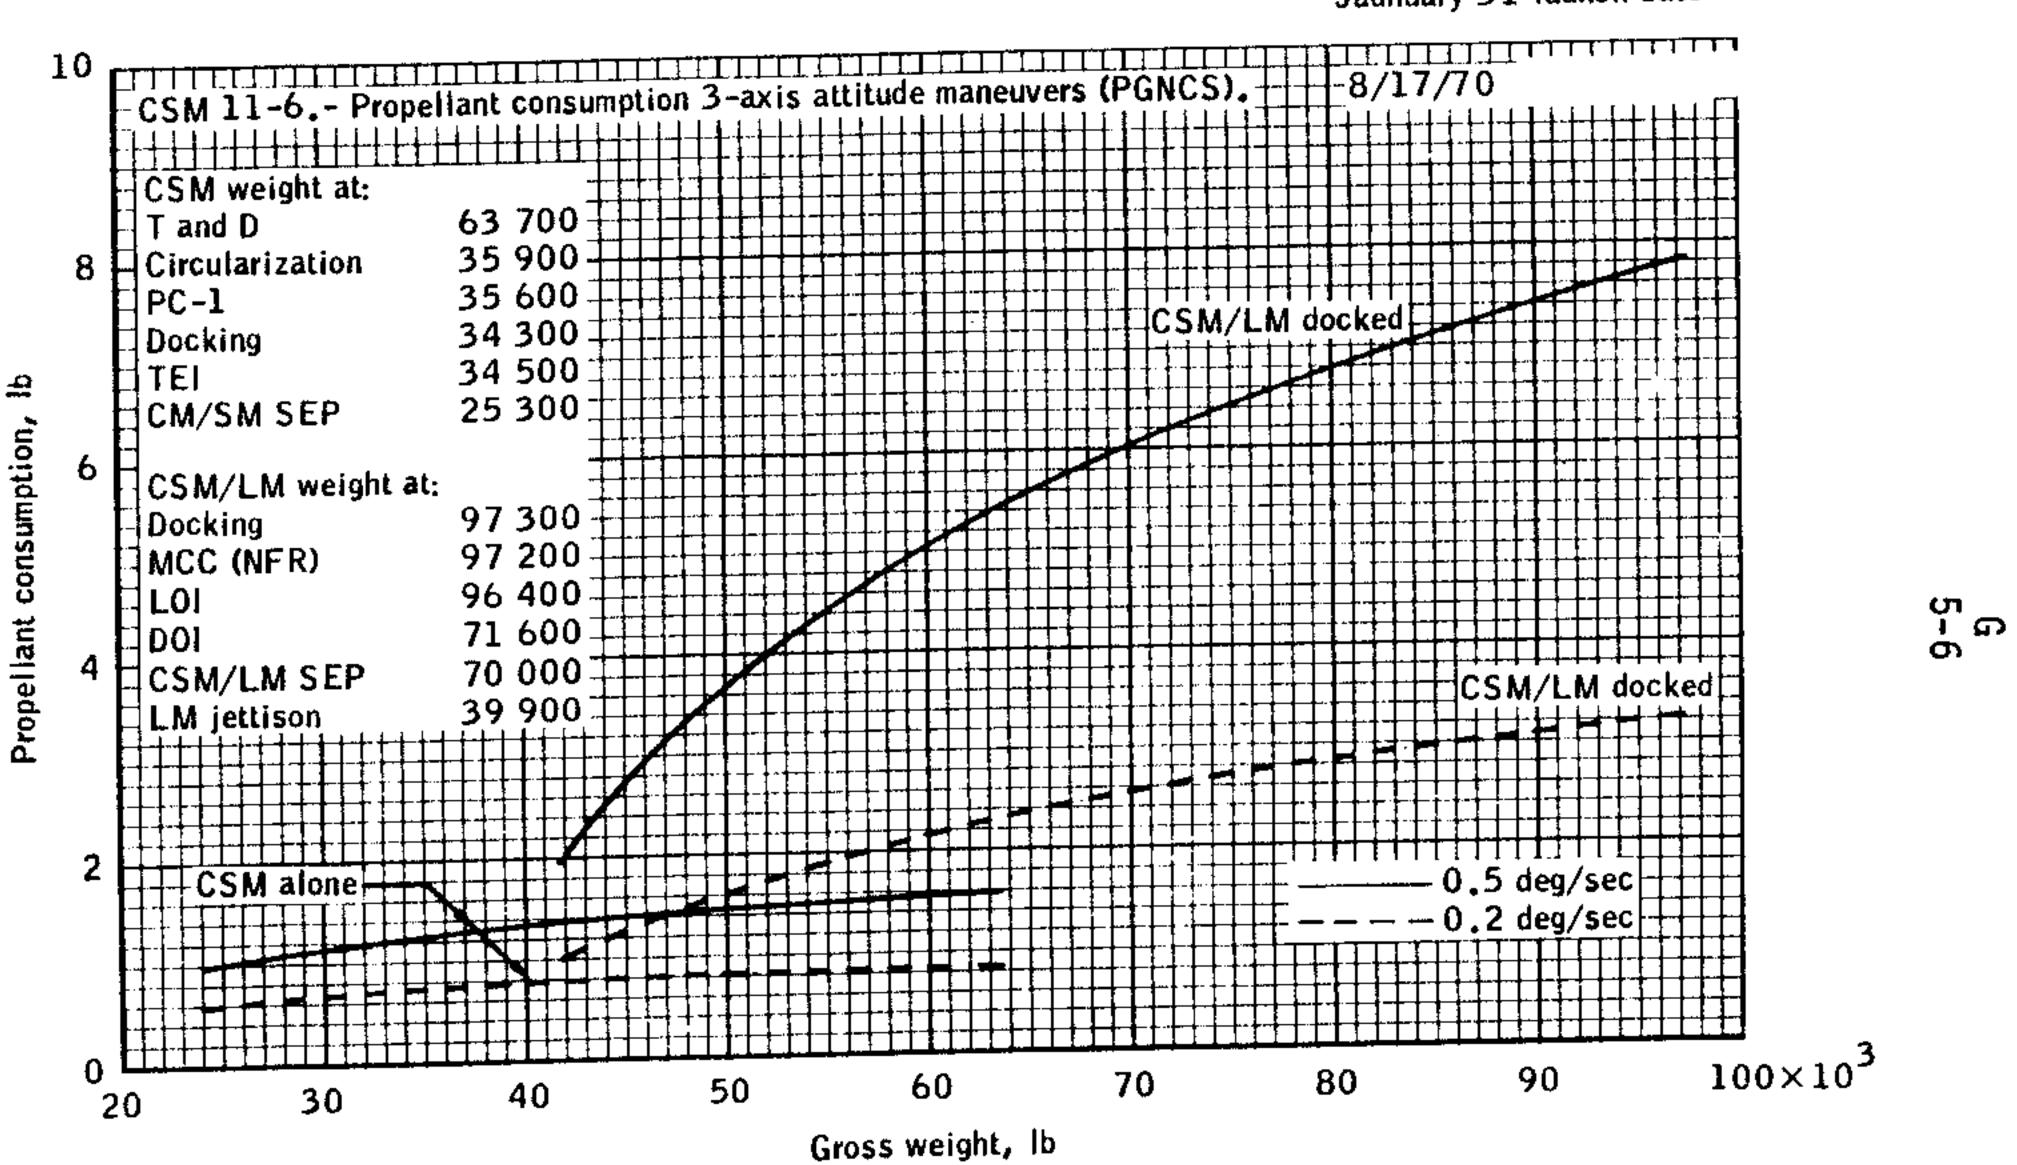


Propellant consumption 3-axis attitude maneuvers (PGNCS).


DATE <u>3/22/71</u>

Jaunuary 31 launch date

Propellant consumed, lb/fps

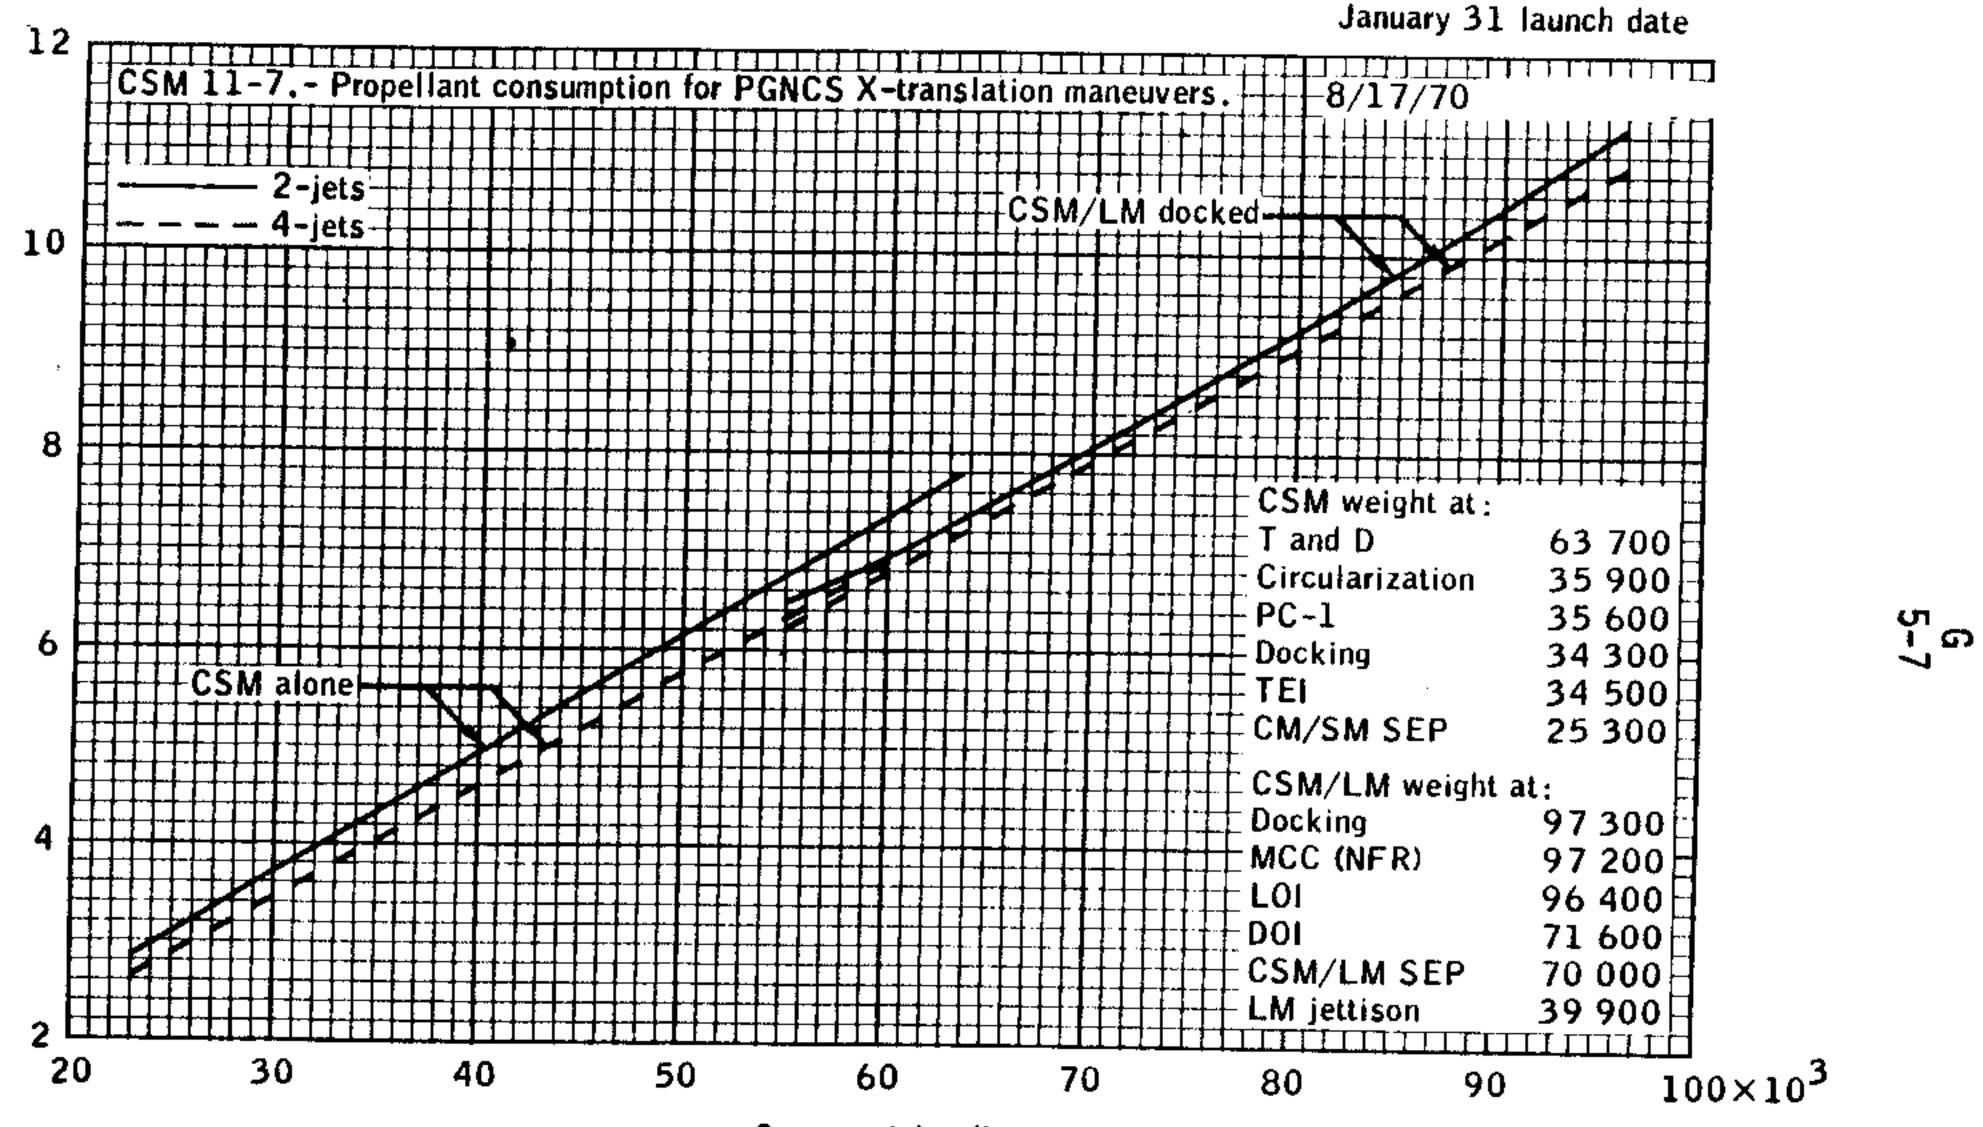


Gross weight, Ib

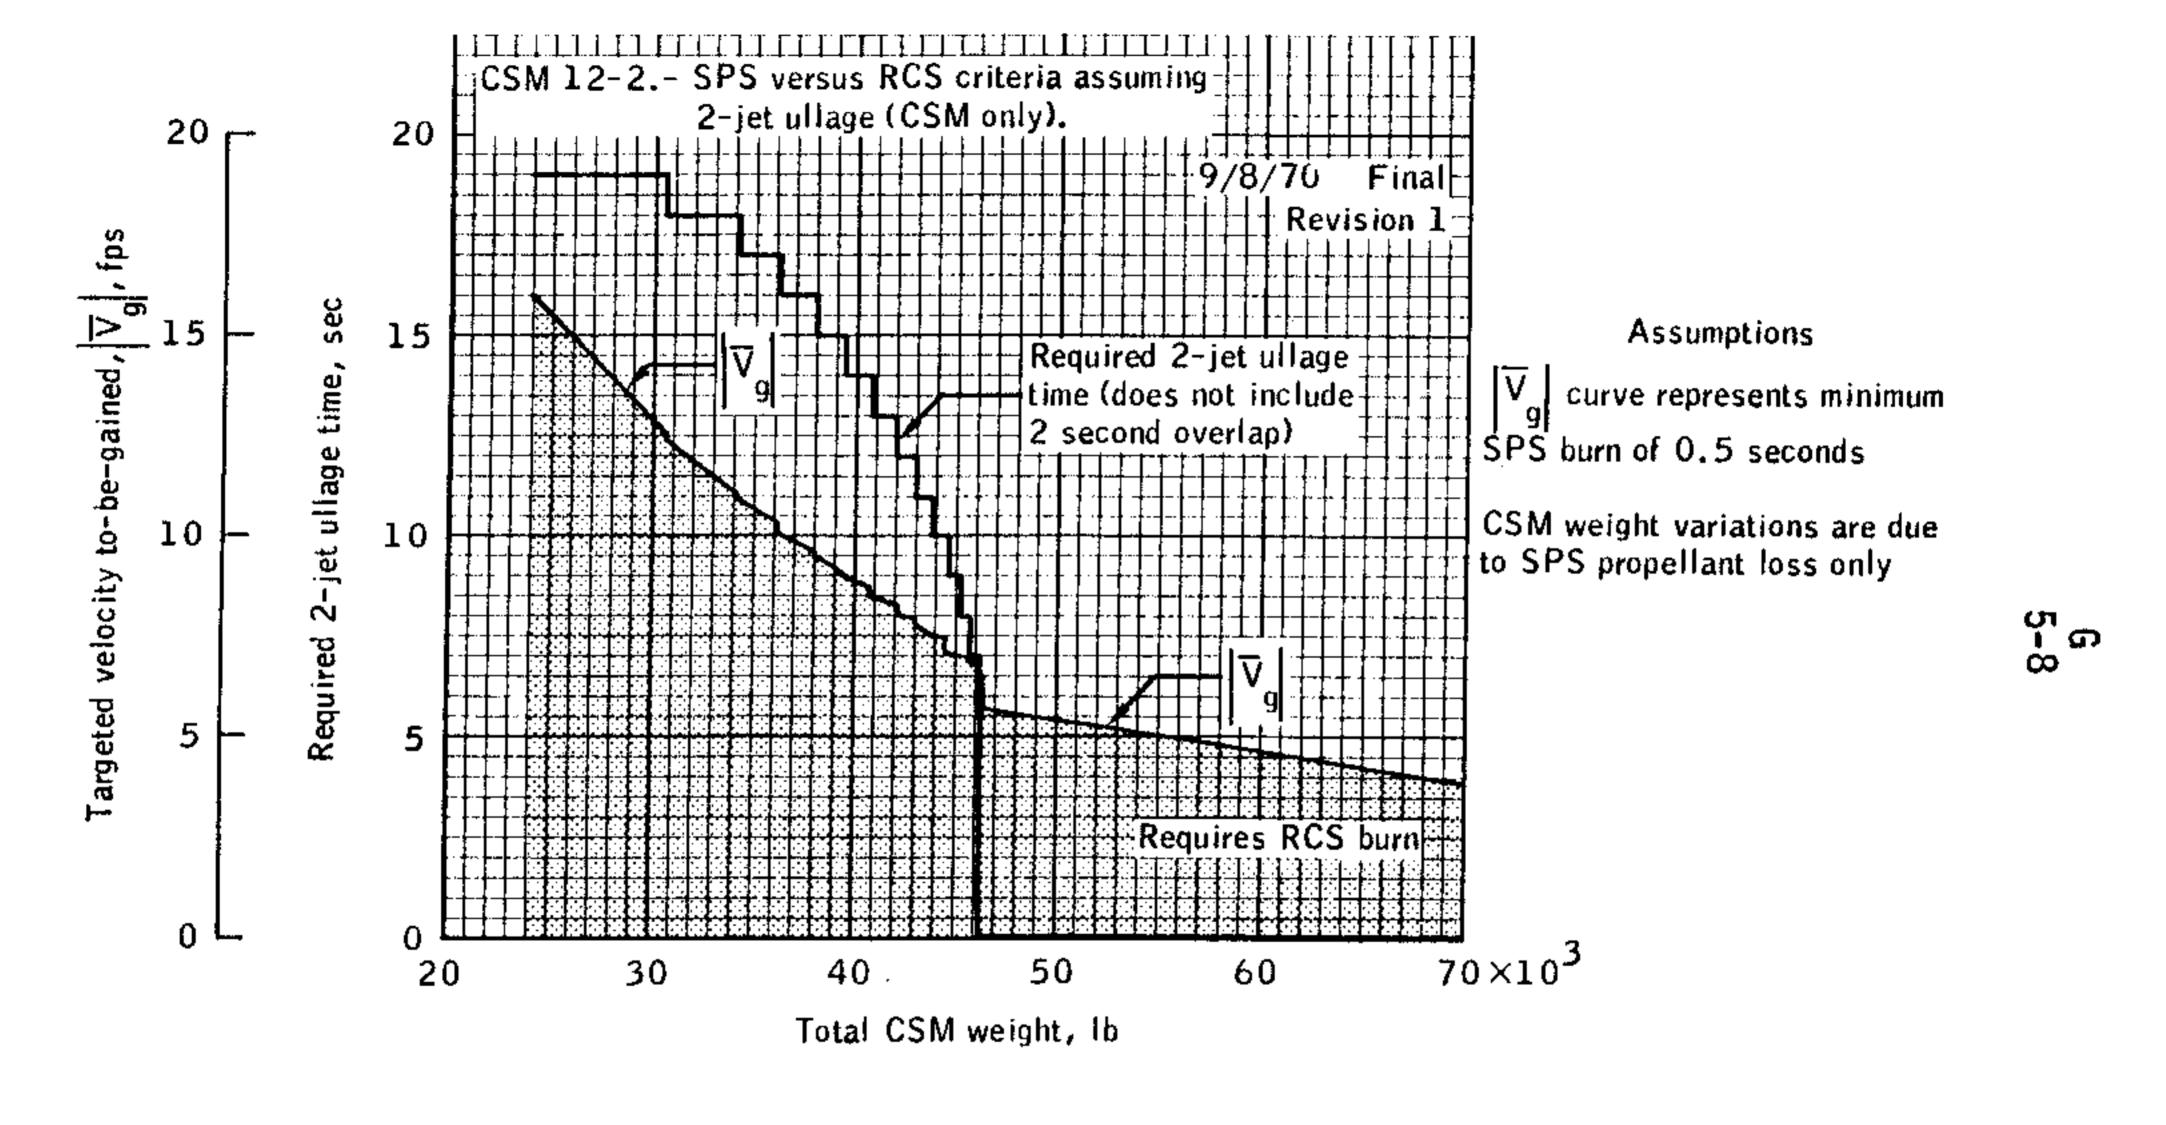

SPS versus RCS criteria assuming 2-jet ullage (CSM only).

DATE 3/22/71

.

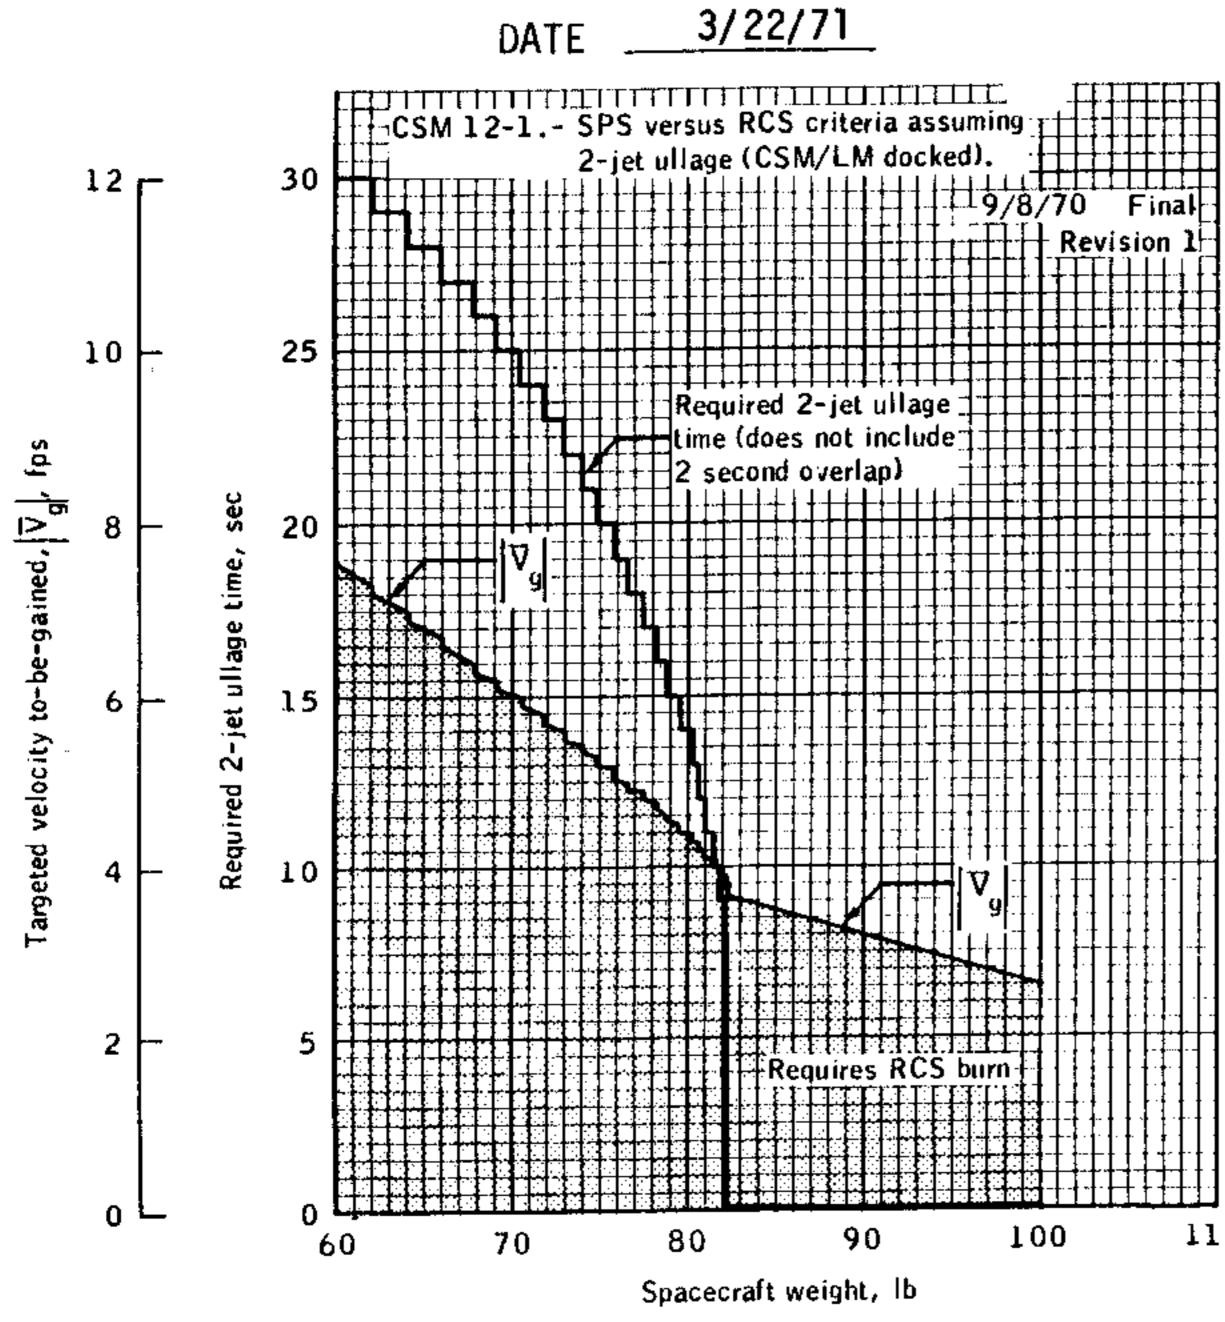





Spacecraft weight assumed to consist of CSM and fully loaded LM

 $\left|\overline{V}_{g}\right|$  curve represents minimum SPS burn of 0.5 seconds

5-9

 CSM weight variations are due to SPS propellant loss only




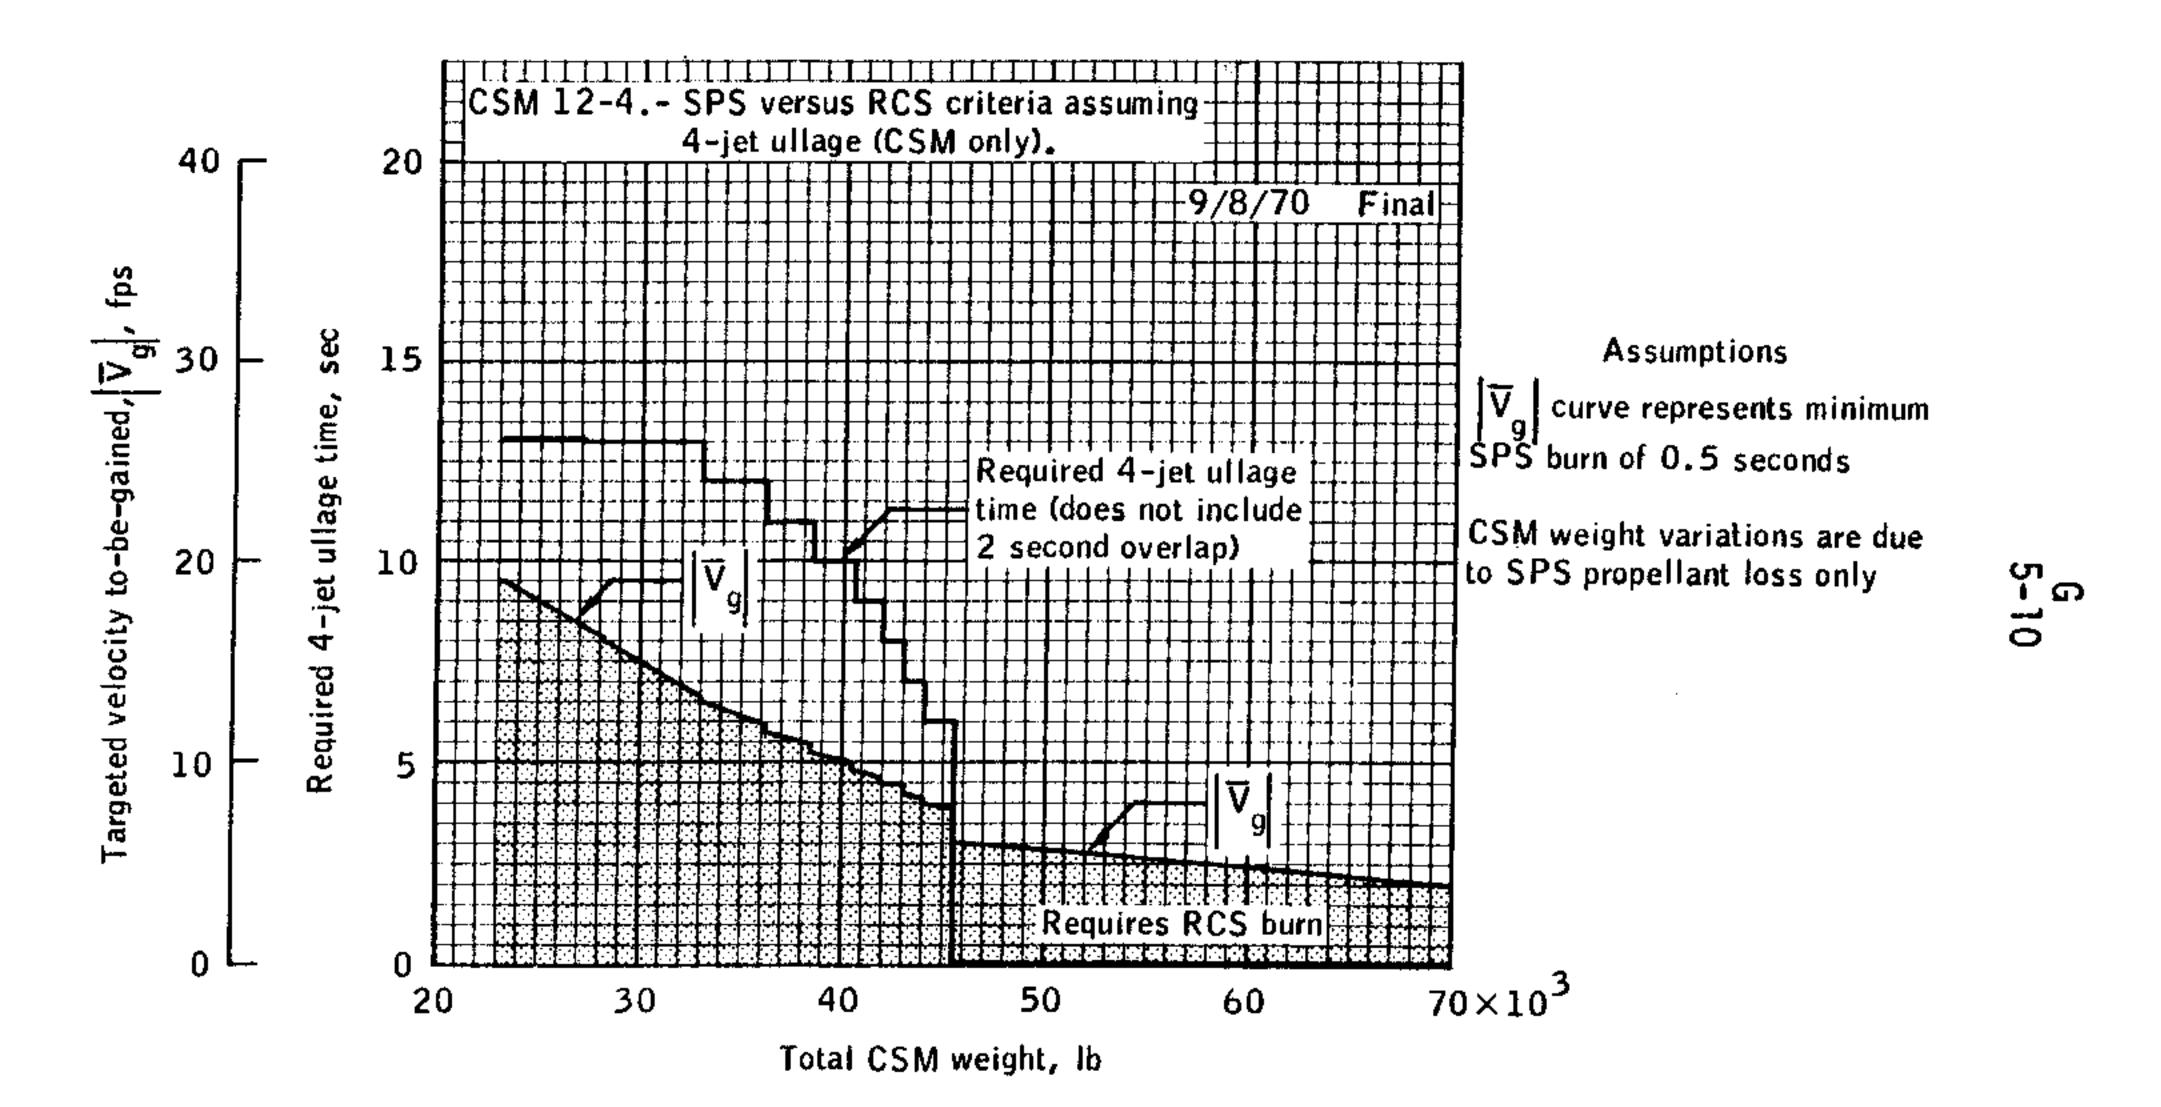

SPS versus RCS criteria assuming 4-jet ullage (CSM only).

3/22/71 DATE

DATE 3/22/71

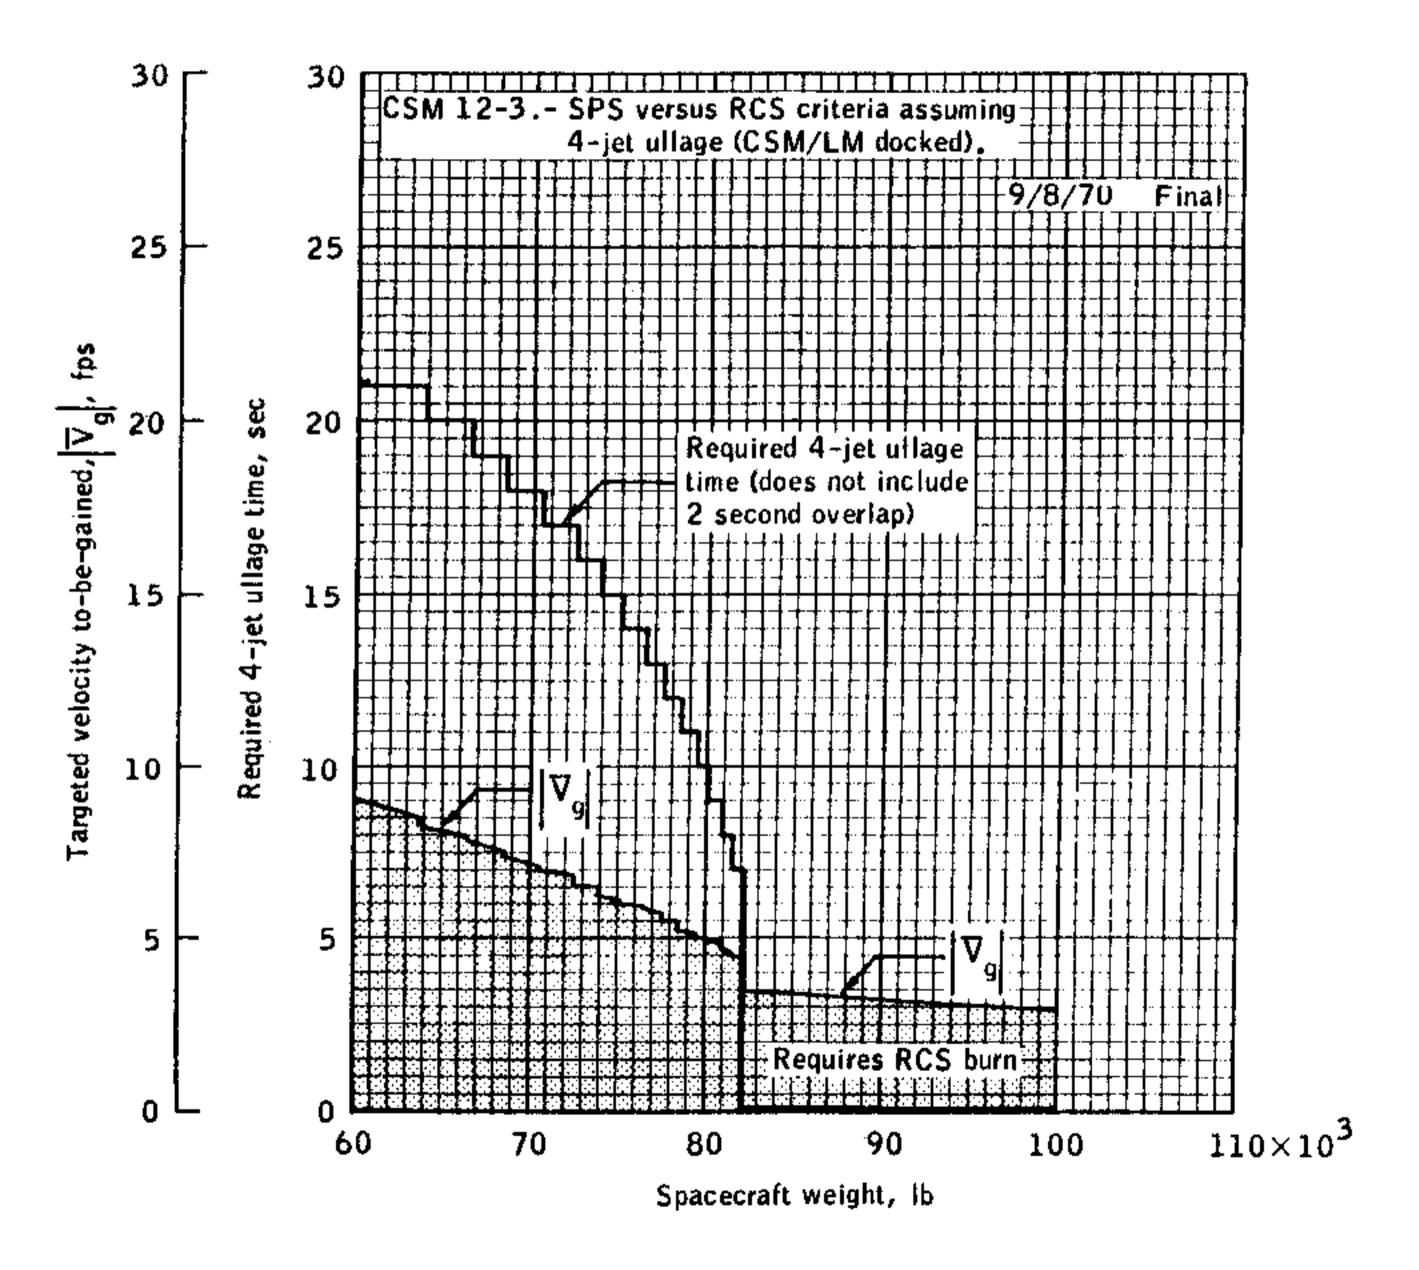


### Assumptions


Spacecraft weight assumed to consist of CSM and fully loaded LM


 $\left|\overline{V}_{g}\right|$  curve represents minimum SPS burn of 0.5 seconds

 CSM weight variations are due to SPS propellant loss only



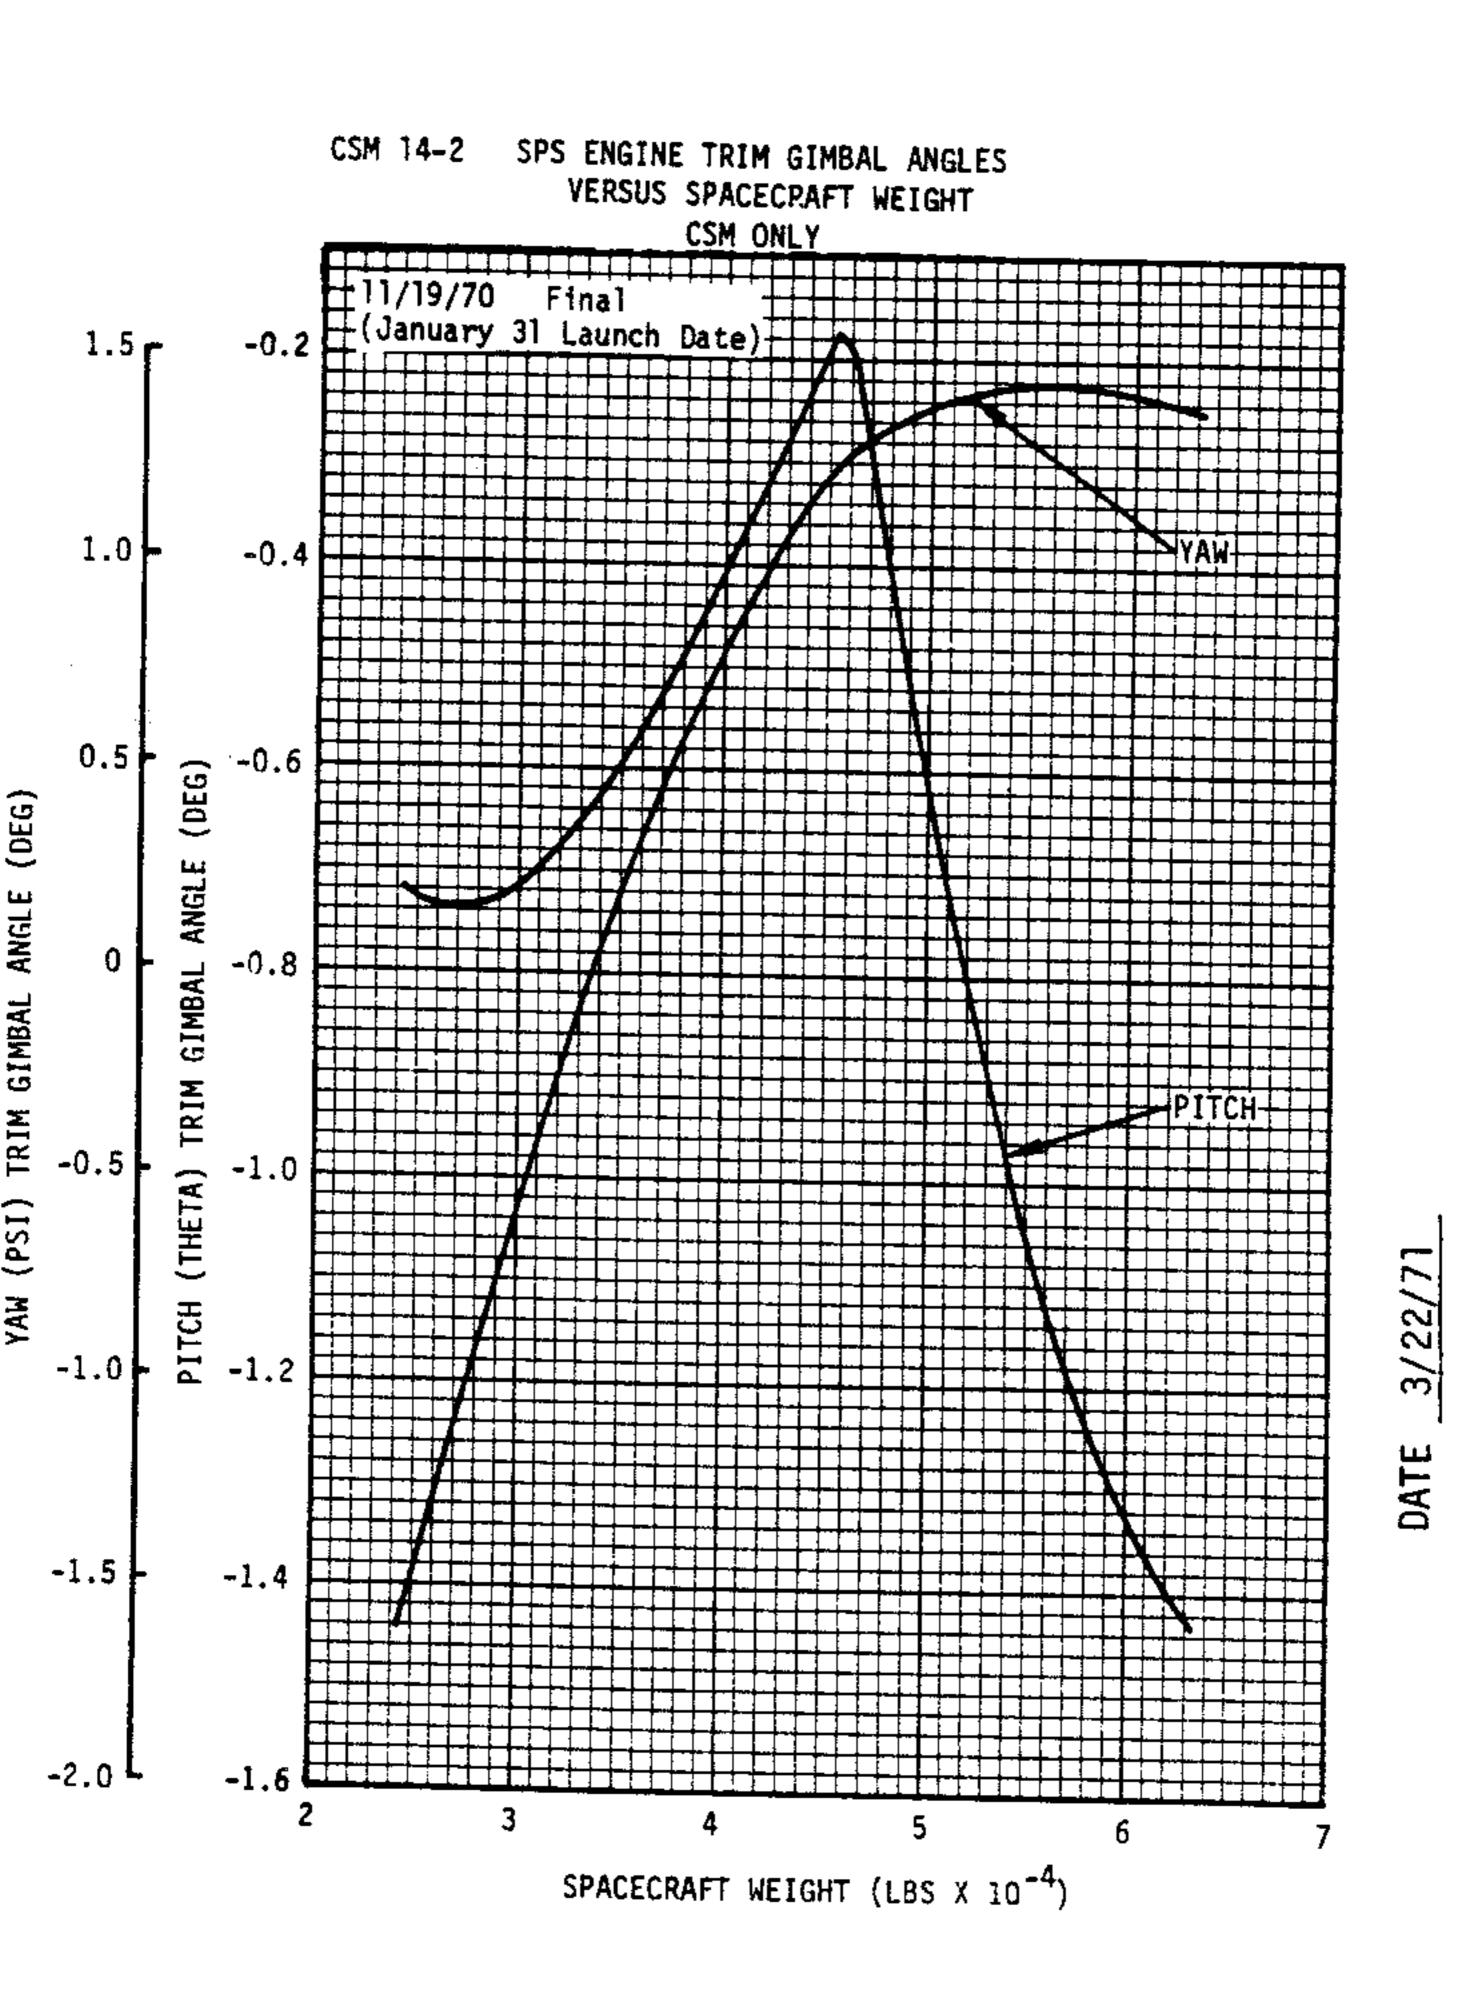



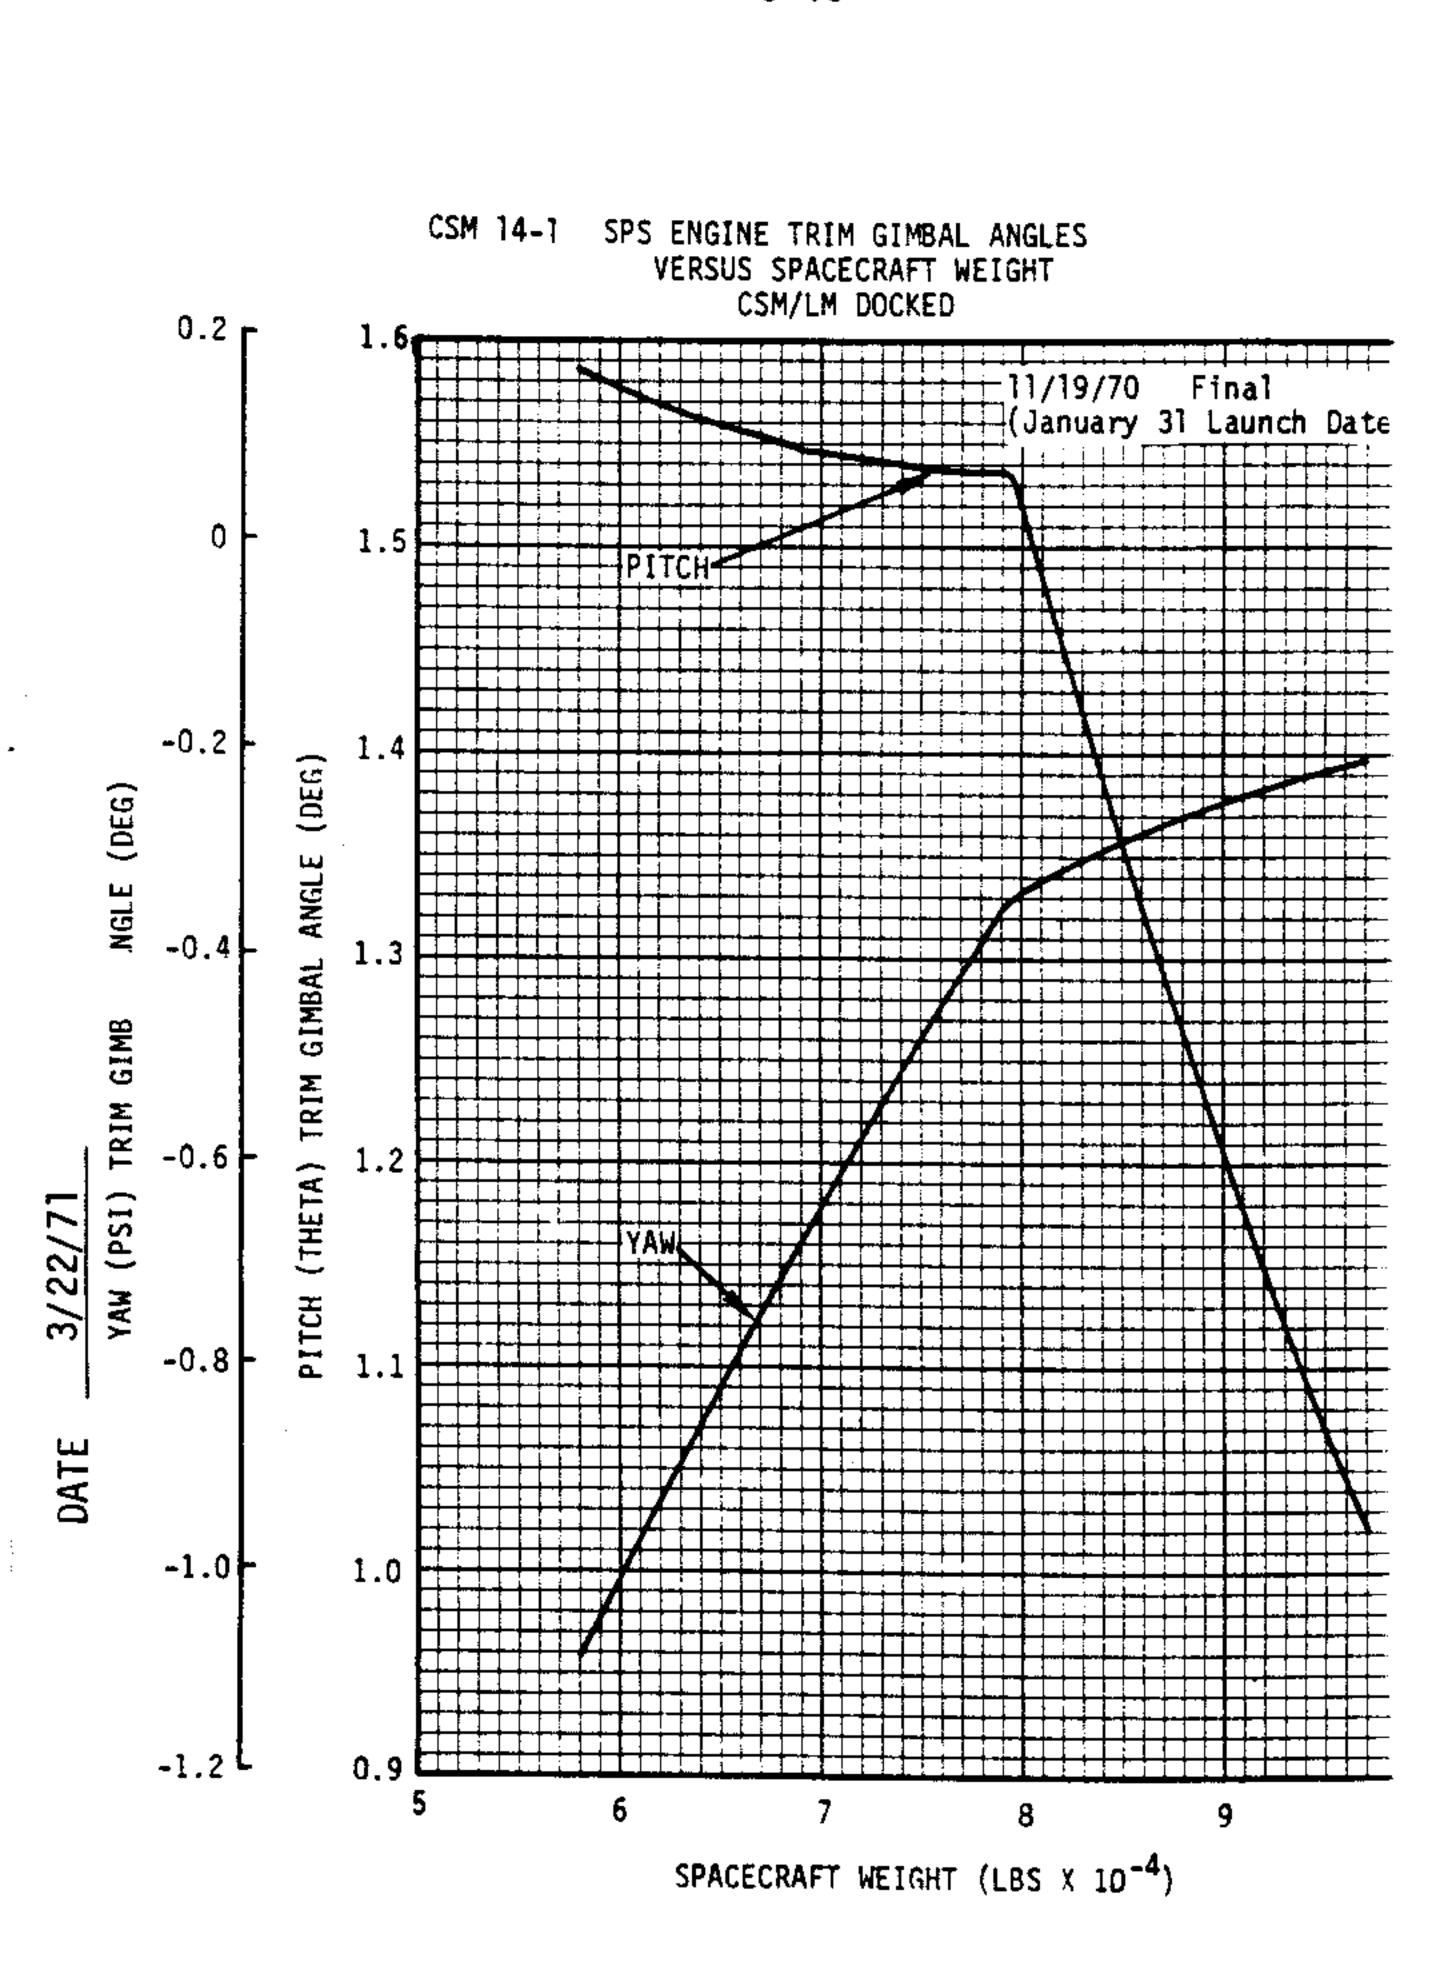

G 5-13

# THIS PAGE INTENTIONALLY BLANK

ы 5-14

DATE 3/22/71

•

**G&N CRITICAL BURNS** 

IF NO START OR ISS LITE + PROG LITE IF CMC LITE, PROG ALARM 1407 OR EARLY CUTOFF

SCS TVC (2) - AUTO SC CONT - SCS ✓ ATTITUDE SPS THRUST - DIRECT (momentary), if req'd

IF ABNORMAL DYNAMICS

THC CW, control rates by MTVC After SHUTDOWN, AUTO RCS (16) - OFF

IF MN BUS A LOST

TVC GMBL DR (P&Y) - 2, Go to pg EMER/1-10

IF NO CUTOFF AFTER AV THRUST (BOTH - OFF)

cb SPS PILOT VLVS - open

IF EMS & N40 (R3) STILL COUNTING AFTER SHUTDOWN

```
SC CONT - SCS
TRANS CONT PWR - OFF
cb DIR ULLAGE (2) - open
IF CONDITION PERSISTS, AUTO RCS SEL (16) - OFF
SM RCS PRPLNT (AFFECTED QUAD) - OFF
```

IF SPS PRESS LITE

3/22/71

DATE

CONTINUE CRITICAL BURN IF FUEL & OX PRESS (both) > 200 psi SPS HE vlvs (2) - OFF, then control manually between 170-200 psi IF FUEL/OX  $\Delta P > 20$  psi, SPS HE vivs (2) - OFF IF CONDITION PERSISTS, SPS HE vivs (2) - ON

SCS CRITICAL BURN

IF NO START OR EARLY CUTOFF

SPS THRUST - DIRECT (momentary)

IF RATE NEEDLE HARDOVER & FDAIs DIVERGE OPPOSITE

BMAG MODE (3) - RATE 1 THC - CW, use MTVC

IF ABNORMAL DYNAMICS IN AUTO MODE

THC - CW, use MTVC BMAG MODE (3) - RATE 2

IF ABNORMAL DYNAMICS IN MTVC MODE

THC - CW IF PROBLEM PERSISTS, SHUTDOWN AUTO RCS (16) - OFF

IF MN A LOST

TVC GMBL DR (P&Y) = 2SCS TVC (2) - RATE CMD, use MTVC, Go to pg EMER/1-10

### IF MN B LOST

SCS TVC (2) - RATE CMD, use MTVC, Go to pg EMER/1-11

## IF AC BUS 1 LOST

TVC SERVO PWR 2 - AC2/MNB SCS TVC (2) - RATE CMD, use MTVC, Go to pg EMER/1-11

### IF AC BUS 2 LOST

```
TVC SERVO PWR 1 - AC1/MNA
BMAG MODE (3) - RATE 1
SCS TVC (2) - AUTO
△V CG - LM/CSM, MTVC w/trim tw's, Go to pg EMER/1-11
```

```
G
             5-17
P41
    RCS THRUSTING
     Prethrust Program Complete
     CMC - on
     ISS - on
     SCS - OPERATING
     TEST C/W LAMPS
     Perform EMS AV TEST & NULL
       BIAS CHECK, pg G/2-5
     Set ∆VC
     EMS FUNC - \Delta V
     BMAG MODE (3) - RATE 2
     CMC MODE - FREE
     AUTO RCS SELECT (16) - as Req'd
     LOAD DAP (Check roll jets)
     ROT CONTR PWR NORMAL (2) - AC/DC
     ROT CONTR PWR DIRECT (2) - MNA/B
     Set DET
V37E 00E
     SC CONT - CMC/AUTO
```

MNVR TO PAD BURN ATTITUDE

V49E

2 PERFORM BORESIGHT & SXT STAR CHECK V41 N91E

> V37E 41E (TFI available via N40, N45 or N35)

Т

3/22/71

DATE

3

4

F 50 18 REQUEST MNVR TO FDAI RPY ANGLES (.01°) (AUTO) BMAG MODE (3) - RATE 2 SC CONT - CMC/AUTO PRO

5 06 18 AUTO MNVR TO FDAI RPY ANGLES (.01°)


G 5-18 6 F 50 18 REQUEST MNVR TO FDAI RPY ANGLES (.01°) (AUTO TRIM) BMAG MODE (3) - RATE 2 ALIGN SC ROLL SC CONT - CMC/AUTO PRO MAN ATT (3) - RATE CMD ATT DB - MIN RATE - LOW BMAG MODE (3) - ATT1/RATE 2 GDC ALIGN ENTR 06 85 VG X,Y,Z 7 (.lfps) \* PROG Alarm lt  $\star$ \* V5N9E - 01703 - TIG SLIPPED \* \* KEY RLSE To 7 \* 55:00 (-05:00)TRANS CONT PWR - on (up) HAND CONTROLLERS - ARMED

59:25 (-00:35)	DSKY BLANKS
59:30 (-00:30)	
8 16 85	VG X,Y,Z (AVE G ON) TAPE RCDR - HBR/RCD/FWD/CMD RESET LIMIT CYCLE - OFF EMS MODE - NORMAL

3/22/71

DATE

G 5-19 00:00 9 F 16 85 VG X,Y,Z NULL COMPONENTS RECORD AV COUNTER & RESIDUALS ΔVC EMS FUNC - OFF VGX EMS MODE - STBY VGY RHC & THC - LOCKED VGZ TRANS CONT PWR - OFF ROT CONTR PWR DIRECT - OFF BMAG MODE (3) - RATE 2 TAPE RCDR - off (ctr) PCM BIT RATE - LOW PRO (IF MINKEY, to sequencer 3X.2) F 37 10 **V82E** 11 HA, HP, TFF F 16 44 (.lnm,min-sec) PRO 12 F 37 **00E** 

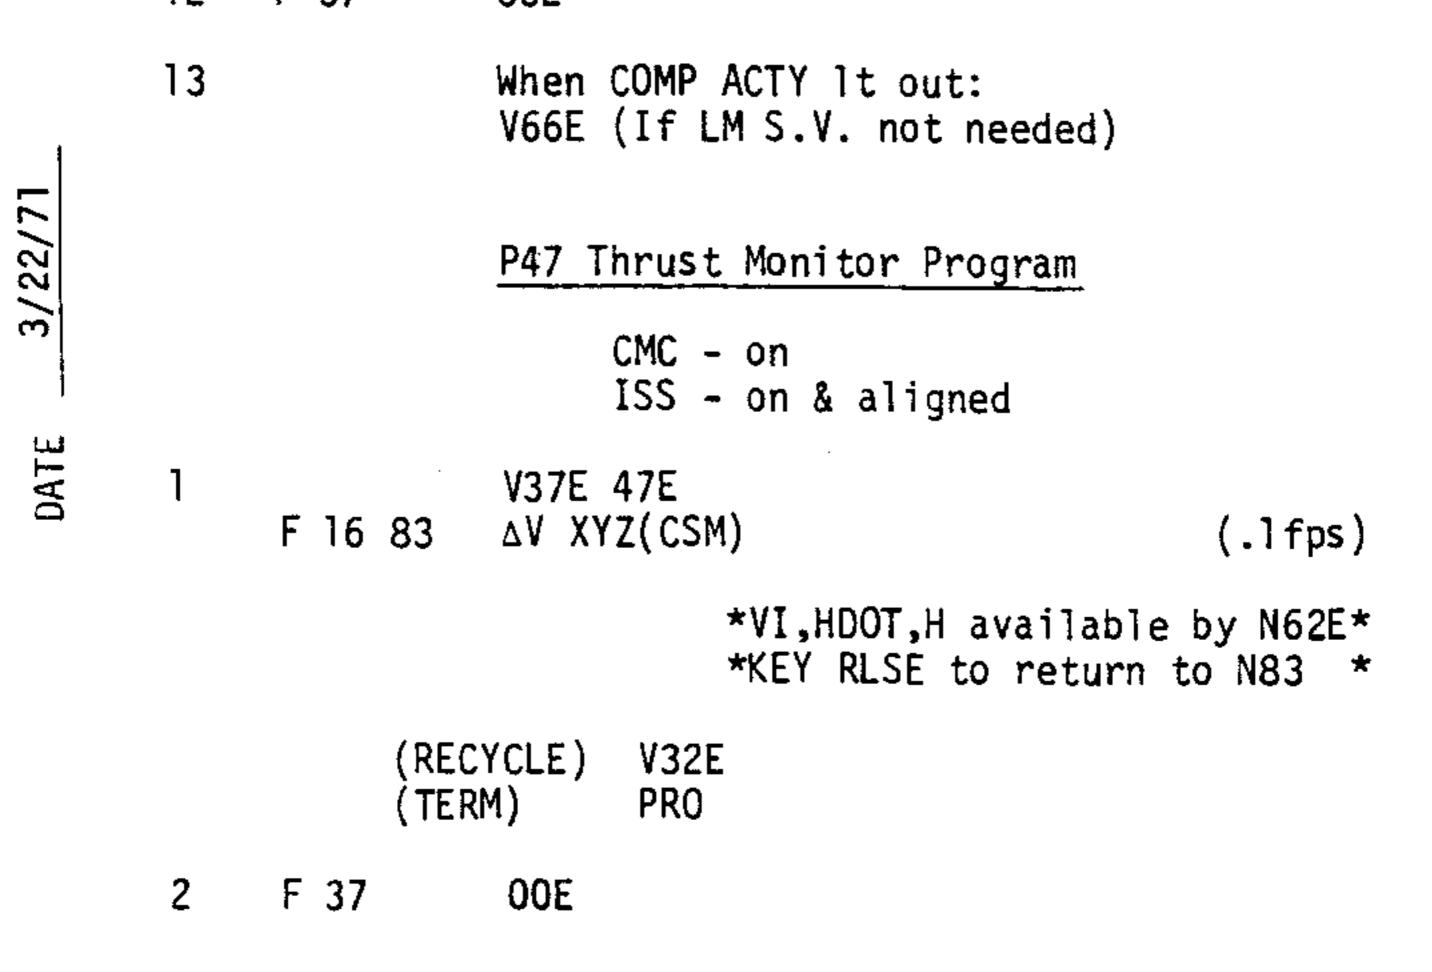

	G 6-1
	P51 IMU ORIENTATION CMC - on ISS - on SCS - operating BMAG MODE (3) - RATE 2 G/N PWR OPTICS - on OPT ZERO - OFF then ZERO (15 sec) OPT MODE - MAN
1	V37E 51E F 50 25 00015 MNVR TO ACQ STARS (Coarse Align IMU To 0,0,0) - ENTR to 2 (BYPASS) PRO to 3
· 2	41 22 DESIRED GIMBAL ANGLES (0,0,0) NO ATT 1t - on then off, to 1
<b>3</b>	F 51 PLEASE MARK OPT ZERO - OFF MARK
4	F 50 25 00016 TERMINATE MARKS PRO
5	F 01 71 000DE STAR CODE Load desired code PRO to 3 after 1st MARK (to 6 if DE=00) to 7 after 2nd MARK (to 6 if DE=00)
6	F 06 88 CELESTIAL BODY VECTOR Load desired vector PRO to 3 after 1st MARK to 7 after 2nd MARK
7	F 06 05 STAR ANGLE DIFFERENCE (.01°) N 05 LIMITS 2 stars: $SXT \le + 00003$ SCT $\le + 00011$
	Star/planet: $SXT \leq + 00018$ SCT $\leq + 00021$ (RECYCLE) V32E to 1 (ACCEPT) PRO

÷

ALIGNMENTS (P50'S)

J

0ATE 3/22/71

G 6-2

F 37 52E - bypass ZERO OPTICS or XXE

OPT ZERO - ZERO

P52 IMU REALIGN CMC - on ISS - on SCS - operating BMAG MODE (3) - RATE 2 G/N PWR OPTICS - on OPT ZERO - OFF then ZERO (15 sec) OPT MODE - CMC Note: MINKEY displays not shown V37E 52E F 04 06 R1 00001 IMU ALIGN OPTION R2 00001 PREF PRO to 4 2 NOM PRO to 2 3 REFSMMAT PRO to 7 LDG SITE PRO to 2 4

F 06 34 GET ALIGN (0,0,0 initially)

1

2

6

- (hrs,min,.01sec) Load desired GET TO SPECIFY PRESENT TIME - PRO on (0,0,0) PRO (NOM go to 4)
- 3 F 06 89 LAT, LONG/2, ALT (.001°,.001°,.01nm) Load ldg site coords PRO

DATE 3/22/71

- 4 F 06 22 NEW ICDU ANGLES OG, IG, MG (.01°) (IF MG>+70°, MNVR) V32E - to 4 PRO
- 5 F 50 25 00013 GYRO TORQUE (COARSE) PRO - NO ATT 1t - on then off - to 7 (TORQUE) CMC MODE - FREE ENTR
  - 16 20 ICDU ANGLES (.01°) When torque complete - go to 17

G 6-3 7 F 50 25 00015 STAR SELECT (MNVR If Necessary) (PICAPAR) PRO \*F 05 09 00405 NO PAIR \* \*(CREW SPECIFY) PRO - to 8\*
\*(PICAPAR) MNVR-V32E to 7 \* (MAN ACQ) ENTR 8 F 01 70 000DE STAR CODE Load desired code OPT MODE - CMC (verify) OPT ZERO - OFF PRO to 10 (to 9 if DE=00) \*F 05 09 00404 (TA>90°)\* \*MNVR - PRO to 10 \* 9 F 06 88 CELESTIAL BODY VECTOR Load desired vector P<sub>R</sub>O \*F 05 09 00404 (TA>90°)\* \*MNVR - PRO to 10 \*

1(	)	06	92	SHAFT, TRUN	(.01°,.001°
			(MARK	( ROUTINE) OPTICS MODE - MAN	
1.	l F	51		PLEASE MARK MARK	
1:	2 F	50	25	00016 TERMINATE MARKS PRO	
1:	3 F	01	71	000DE STAR CODE Load code (if necessary) PRO to 8 after 1st MARK (to to 15 after 2nd MARK (to	L .
14	4 F	06	88	CELESTIAL BODY VECTOR Verify vector PRO to 8 after 1st MARK to 15 after 2nd MARK	

3/22/71

DATE

6-4  $(.01^{\circ})$ 15 F 06 05 STAR ANGLE DIFFERENCE N 05 LIMITS SXT < + 00003 2 stars: SCT ₹ + 00011 Star/planet: SXT  $\leq$  + 00018 SCT  $\leq$  + 00021 (REJECT) V32E to 17 (ACCEPT) PRO  $(.001^{\circ})$ F 06 93 TORQUING ANGLES OG, IG, MG 16 (TORQUE) CMC MODE - FREE PRO (BYPASS) V32E F 50 25 00014 ALIGNMENT CHECK 17 (RECHECK) PRO to 7 ENTR (BYPASS) XXE 18 F 37 OPT ZERO - ZERO

G

G/N PWR OPTICS - OFF P53 - BACKUP IMU ORIENT DETERMINATION 3/22/71 CMC - on ISS - on SCS - operating MAN ATT (3) - MIN IMP COAS LOS DETERMINATION - complete DATE V37E 53E 1 00015 MNVR To ACQ STARS F 50 25 (BYPASS) (Coarse Align IMU to 0,0,0) - ENTER to 2 PRO to 3 DESIRED GIMBAL ANGLES (0,0,0) 41 22 2 NO ATT 1t - on then off, to 1 ALT LOS OPT ANGS SHAFT, TRUN (.01°,.001°) F 06 94 3 Load proper angles COAS NOM: Shaft +00000 Trun +57470 PRO

- 4 F 53 PLEASE MARK Center Target ENTR
- 5 F 50 25 00016 TERMINATE MARKS (REJECT) ENTR to 4 PRO
- 6 F 01 71 000DE STAR CODE Load desired code PRO to 3 after 1st MARK (to 7 if DE=00) to 8 after 2nd MARK (to 7 if DE=00)
- 7 F 06 88 CELESTIAL BODY VECTOR Load desired vector PRO to 3 after 1st MARK to 8 after 2nd MARK
- 8 F 06 05 STAR ANGLE DIFFERENCE <u>N 05 LIMITS (COAS)</u>

2 stars:  $\leq + 00070$ 

(.01°)

		(RE) (AC)	Star CYCLE) V32 CEPT) PRO	r/planet: <u>&lt;</u> + 00072 E to l
3/22/71	9	F 37	XXE	
DATE			CMC ISS SCS MAN	<u>CKUP IMU REALIGN</u> - on - on - operating ATT (3) - MIN IMP S LOS DETERMINATION - complete
	1	F 04 06	V37E 54E R1 00001 R2 00001 2 3 4	IMU ALIGN OPTION

- F 06 34 GET ALIGN (0,0,0 initially) 2 (hrs,min,.01sec) Load desired GET TO SPECIFY PRESENT TIME - PRO on (0,0,0) PRO (NOM go to 4)
- 3 F 06 89 LAT, LONG/2, ALT (.001°,.001°,.01nm) Load ldg site coords PRO
- 4 F 06 22 NEW ICDU ANGLES OG, IG, MG  $(.01^{\circ})$ (IF MG>70°, MNVR) V32E to 4 PRO
- 5 F 50 25 00013 GYRO TORQUE (COARSE) PRO - NO ATT 1t - on then off - to 7 (TORQUE) CMC MODE - FREE ENTR
- 6 16 20 ICDU ANGLES (.01°) When Torque complete go to 17

3/22/71

DATE


```
7
     F 50 25 00015 STAR SELECT
          (Mnvr If Necessary)
          (PICAPAR) PRO
                         *F 05 09 00405 NO PAIR
                         *(CREW SPECIFY) PRO to 8 *
                         *(PICAPAR) MNVR-V32E to 7*
```

```
(MAN ACQ) ENTR
```


- 8 F 01 70 **OODE STAR CODE** Load desired code PRO to 10 (to 9 if DE=00)
- 9 F 06 88 CELESTIAL BODY VECTOR Load desired vector PRO


		G 6-7
10	F 06	<pre>94 ALT LOS OPT ANGS SHAFT, TRUN(.01°,.001°) Load angles     COAS Nom: Shaft +00000     Trun +57470 PRO</pre>
11	F 53	PLEASE MARK Center Target ENTR
12	F 50	25 00016 TERMINATE MARKS (REJECT) ENTR to 11 PRO
13	F 01	71 OOODE STAR CODE Load code (if necessary) PRO to 8 after 1st MARK (to 14 if DE=00) to 15 after 2nd MARK (to 14 if DE=00
14	F 06	88 CELESTIAL BODY VECTOR Verify vector PRO to 8 after 1st MARK to 15 after 2nd MARK
15	F 06	05 STAR ANGLE DIFFERENCE (.01°) $N  ext{ 05 LIMITS (COAS)}$ 2 stars: $\leq +  ext{ 00070}$ Star/planet: $\leq +  ext{ 00072}$ (REJECT) V32E to 17 (ACCEPT) PRO
16	F 06	93 TORQUING ANGLES OG, IG, MG (.001°) (TORQUE) CMC MODE - FREE PRO (BYPASS) V32E
17	F 50	25 00014 ALIGNMENT CHECK (RECHECK) PRO to 7 (BYPASS) ENTR
18	F 37	XXE

DATE 3/22/71

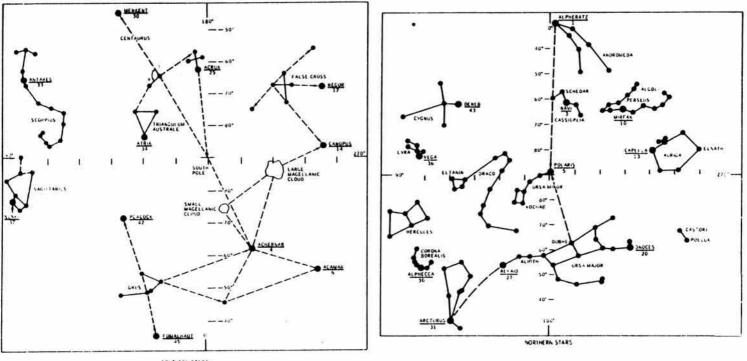

SOUTHERN STARS

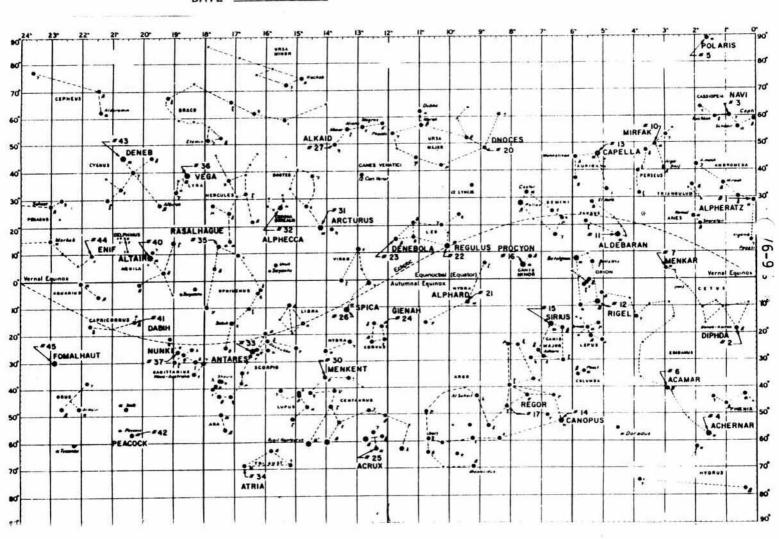

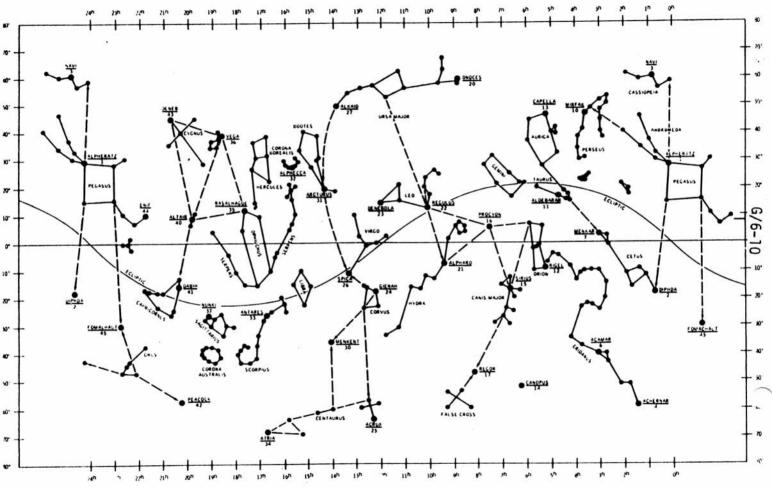

#### RAPID IMU REALIGN

NOTE: This procedure assumes a good GDC alignment

1 V41 N20E Load R,P,Y from GDC Ball

- 2 V40 Verify R,P,Y on GDC Ball - ENTR (Releases Platform And Recovers PGNS Control Modes)
- 3 V25 N07E 77E, 10000E, 1E (Sets REFSMMAT FLAG)
- 4 V37E 51E, PRO (Sets Drift Flag) V37E 00E
- 5 Perform P52, Option 3

3/22/71

DATE -

NOTE: If loss of Alignment Is Due

		NOIE	To Temporary L BUS, Update CN V55 To Complet	loss of DC MC Clock W	ith
CHANC	GING	LANDI	NG SITE REFSMMAT	FOR OUT-0	F-PLANE BURNS
1	V37E	52E			
2	F 04	06	R1=00001 R2=00004 (LOAD L	ANDING SI	TE OPTION)
3	F 06	34	GET ALIGN Present Pitch	<u>∆Vy</u>	<u>R1</u>
	Load	R1:	0 <u>+</u> 90°	+	RLS LAT <u>+</u> 35°
			180 <u>+</u> 90°	+	RLS LAT +35°
5	F 06	22	NEW ICDU ANGLES		

- F 50 25 R1=00013 CMC MODE-FREE ENTR TO GYRO TORQUE
  - 16 20 UNTIL TORQUING COMPLETE
- F 50 25 R1=00014 ALIGNMENT CHECK CMC MODE - AUTO ENTR

P30

P40

- YAW BACK TO O° (MANUALLY) V37E 52E F 04 06 R1=00001 R2=00004 (LOAD LANDING SITE OPTION)
- F 06 34 GET ALIGN (LOAD TIME OBTAINED FROM MSFN)
- F 06 89 LAT, LONG/2,ALT (LAT WILL BE CHANGED BACK TO STORED RLS)
- F 06 22 NEW ICDU ANGLES
- F 50 25 R1=00013 CMC MODE-FREE ENTR TO START TORQUING
  - 16 20 UNTIL TORQUING COMPLETE
- F 50 25 R1=00014 ALIGNMENT CHECK CMC MODE - AUTO PRO (TO SELECT 2 STARS IF TIME PERMITS) ENTR (TO LEAVE P52)

7-3 GDC ALIGNMENT TO IMU GIMBAL ANGLES IMU - on SCS - operating Damp vehicle rates ATT SET dials - set to IMU angles o FDAI 1 FDAI SELECT - 1 FDAI SOURCE - ATT SET ATT SET - IMU ATT SET dials - null FDAI 1 err needles ATT SET - GDC GDC ALIGN PB - push until needles nulled FDAI SEL - 1/2 BACKUP GDC AND/OR IMU ALIGNMENT (IMU or CMC failed)

2

1

```
SCS - operating
RECORD: R,P,Y ALIGN from MSFN
IMU PWR - OFF
Wait ∿5 min for gyros to run
down before step 8
Set SCT to 0° SHFT, 352.5° TRUN
OPTICS PWR - OFF
ATT SET dials - R,P,Y ALIGN
Mnvr to position stars in SCT
0° mark - Vega (36)
R line - Deneb (43)
```

```
or
```

<u>SOUTH</u> Acrux (25) Atria (34)

3/22/71 DATE

1

2

3

```
G
7-4
FDAI SELECT - 1
ATT SET - GDC
GDC ALIGN PB - push until needles
nulled
ATT SET dials - 0,0,0
MNVR to 0,0,0 and null error needles
IMU PWR - on (up)
```

```
(IMU drives to 0°, 0°, 0°)
Wait 90 sec.
```

```
Uncage IMU
IMU CAGE - on (up) ~5 sec
then release
```

IN-PLANE GDC ALIGNMENT CMC - on ISS - on SCS - operating

5

6

7

8

9

1	F 04 06	V37E 52E 00001 Load R2=00002 PRO
2	F 06 34	GET ALIGN 0,0,0 PRO
3	F 06 22	R,P,Y
4		Set ATT SET dials to R,P,Y on DSKY
5		FDAI SELECT - 1 ATT SET - GDC GDC ALIGN - push
5		V37E XXE

3/22/71

DATE

		G 7-5	
		<u>PGNS ORDEAL INITIALIZATI</u> (In-Plane Alignment Req'	<u>ON</u> d)
1		FDAI 1 or 2 - ORB R EARTH/LUNAR - as re	
2	F 04 12	V82E 00002 SPECIFY VEHICLE 00001 PRO	
3	F 06 16	GET EVENT PRO	(hrs,min,.01sec)
4	F 16 44	HA, HP Calculate Average ALT SET - Set Average PRO	(.lnm,.lnm) ge
5	F 16 54	V83E R,RDOT,THETA (.(	Dlnm,.lfps,.01°)

3/22/11		MODE - HOLD/FAST SLEW - To THETA MODE - OPR/SLOW PRO
		<u>SCS ORDEAL INITIALIZATION</u> (IN-PLANE GDC ALIGNMENT REQ'D)
DATE	1	FDAI 1 or 2 - ORB RATE EARTH/LUNAR - as req'd
DA	2	MSFN Supply Altitude ALT SET - Set
	3	SC +X At the Horizon
	4	MODE - HOLD/FAST SLEW FDAI (See table) MODE - OPR/SLOW

	G 7-6		
	LUNAR	<u>EARTH</u>	
<u>Alt(nm)</u> 8 60 170	<u>Angle*</u> 7° 20° 32°	<u>Alt(nm)</u> 100 200 500	<u>Angle*</u> 14° 19° 29°

\*Angle from +X S/C axis to horiz

COAS LOS DETERMINATION CMC - on ISS - on SCS - operating SC CONT - SCS MAN ATT (3) - MIN IMP G/N PWR OPTICS - on OPT MODE - CMC OPT ZERO - OFF then ZERO (15 sec) V37E 52E

- --- ---

1 .

2	F 04 06	00003 PRO		
3	F 50 25	00015 ENTR		12/
4	F 01 70	000DE STAR CODE LOAD BORESIGHT STAR CODE OPT ZERO - OFF PRO		ΓE 3/22/71
5	06 92 (REF (EXI	SHAFT, TRUN Center target MARK with VERB key Record SHAFT, TRUN, PEAT) KEY RLSE T) V37E XXE OPT ZERO - ZERO	(.01°,.001°)	DATE

CMC/LGC CLOCK SYNC/TEPHEM UPDATE V16 N65E (On LM request) (hr,min,.01sec) Voice CMC time to LM VO5 NO1E 1706E (On LM request) Voice TEPHEM to LM V55 CMC TIME UPDATE (See EXT VERBS pg. G/1-27) ALIGN LM IMU TO CSM IMU ATT DB - MIN RATE - LO LIMIT CYCLE - ON SC CONT - SCS MAN ATT (3) - RATE CMD BMAG MODE (3) - ATT1/RATE2 V06 N20E Voice ICDU angles to LM\* Terminate attitude hold on LM cmd VO6 N20 (On LM request)


```
On LM MARK, Key ENTR
Copy ICDU angles and transmit to
MSFN
*LM (IGA)p = P20 + 180°
LM (OGA)y = 300^{\circ} - R20 + \Delta \emptyset
LM (MGA)r = 360^{\circ} - Y20
```

G 7-8 Align LM IMU to CSM GDC SCS - on GDC - on and aligned On LM Request, hold att.: 1 ATT DB - MIN RATE - LO LIMIT CYCLE - ON BMAG MODE (3) - ATT 1/RATE 2 On LM Request, Read GDC FDAI R, P, Y then 2 ATT SET dials - Set to FDAI R,P,Y FDAI SELECT - 1 FDAI SOURCE - ATT SET FDAI SCALE - 5/1 ATT SET - GDC Null FDAI 1 error needle using ATT SET dials Read ATT SET dial angles to LM 3

On LM Request, terminate att hold

## ALIGN LM AGS TO CSM IMU/GDC CMC - on ISS - on and orientation known or SCS - on GDC - on and aligned Upon LM request, MNVR to ] $R = 300^\circ + \Delta \emptyset$ $P = 180^{\circ}$ $Y = 0^{\circ}$ and hold att., min DB (If SCS: RATE-LO, LIMIT CYCLE-ON) Notify LM when at attitude 2

When LM alignment complete - terminate att hold 3

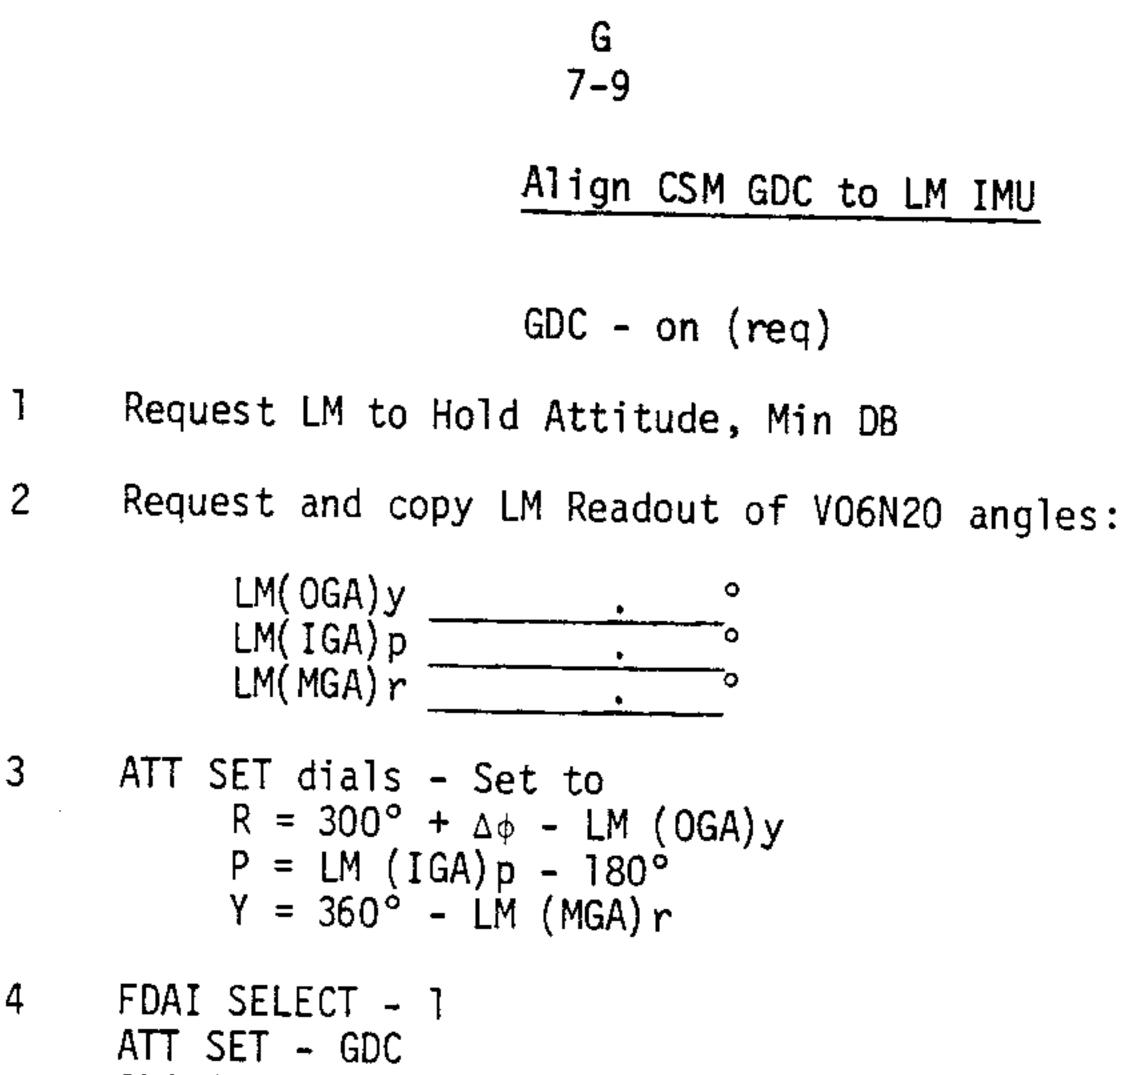

```
GDC ALIGN - Push
5
     Notify LM att hold not req
                          Align CSM GDC to LM AGS
      Request LM MNVR to 0,0,0 on AGS FDAI, min DB
1
2
     ATT Set dials - Set to
            R = 300^\circ + \Delta\phi
            P = 180^{\circ}
             Y = 0^{\circ}
3
      FDAI SELECT - 1
      ATT SET - GDC
4
     When LM at Attitude:
     GDC ALIGN - Push
     Notify LM Att Hold not req'd
5
```

0ATE 3/22/71

G 7-10 Align CSM IMU to LM IMU CMC - on ISS - on SCS - on

Verify LM in MIN DB, ATT HOLD 1


- Request and copy LM Readout of V06N20E 2 LM(OGA)y \_\_\_\_\_ LM(IGA)p • LM(MGA)r
- Calculate Gimbal Angles: 3  $CM (OGA) = 300^\circ + \Delta \phi - LM (OGA)y$  $CM (IGA) = LM (IGA)p - 180^{\circ}$  $CM (MGA) = 360^{\circ} - LM (MGA)r$
- 4 V41N20E Load Gimbal Angles

```
5
     V40E
     Allow 10 sec before step 7
     Notify LM Att Hold Not Req.
6
     Set REFSMFLG:
     V25N7E, 77E, 10000E, 1E
7
     V37E51E
     PRO
     V37E00E
     Request MSFN Uplink REFSMMAT
       then Perform P52 (OPT 3)
            or
     VO6N20 On CM Mark - ENTR
     Voice Angles to MSFN for calculation
       of Gyro Torquing Angles.
     Perform V42 GYRO TORQUING using ground
        calculated Torquing Angles (pg. G/1-24)
```


8

3/22/71

DATE

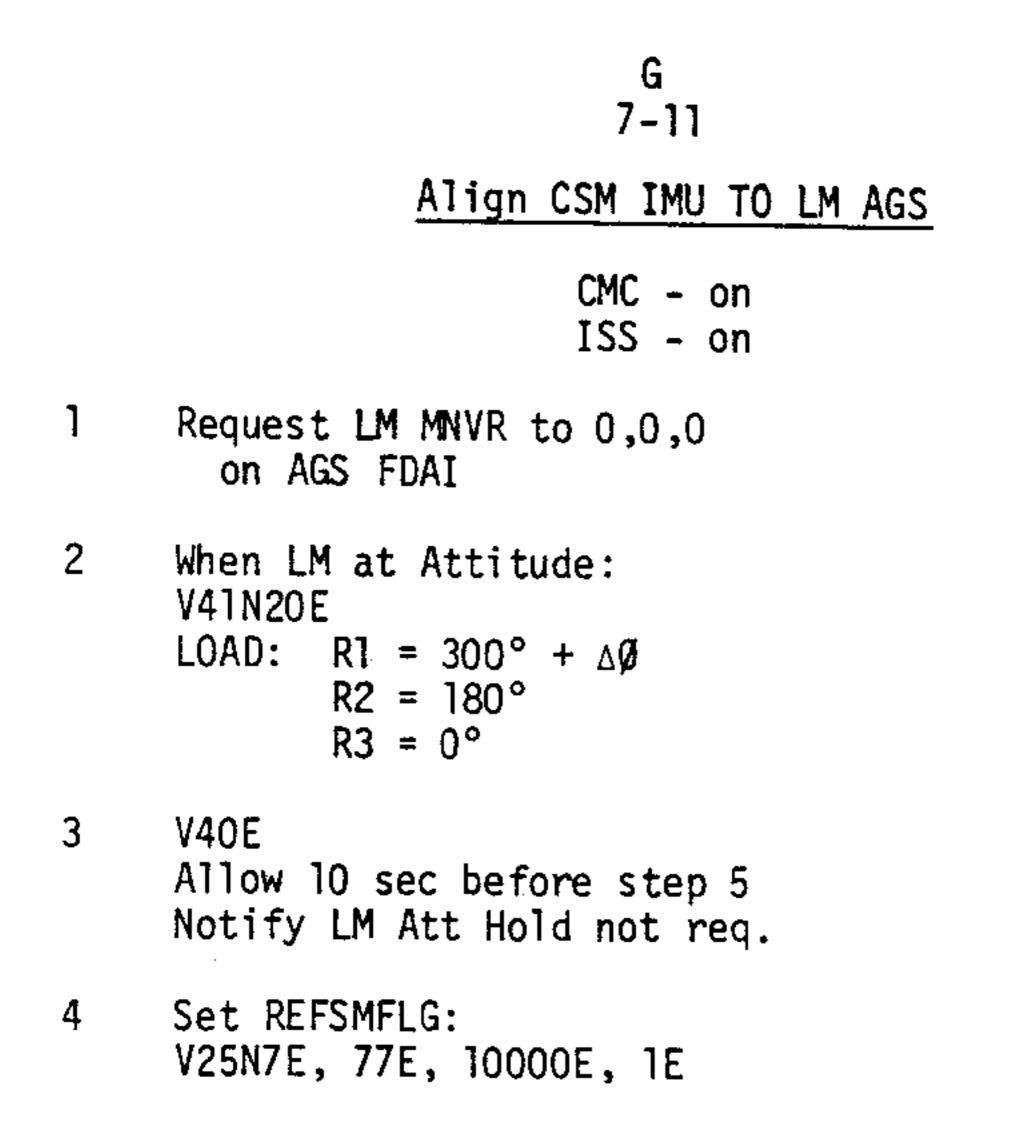

- 5 V37E51E PRO V37E00E
- 6 Request MSFN Uplink REFSMMAT, then, if desired, perform P52 (OPT 3)

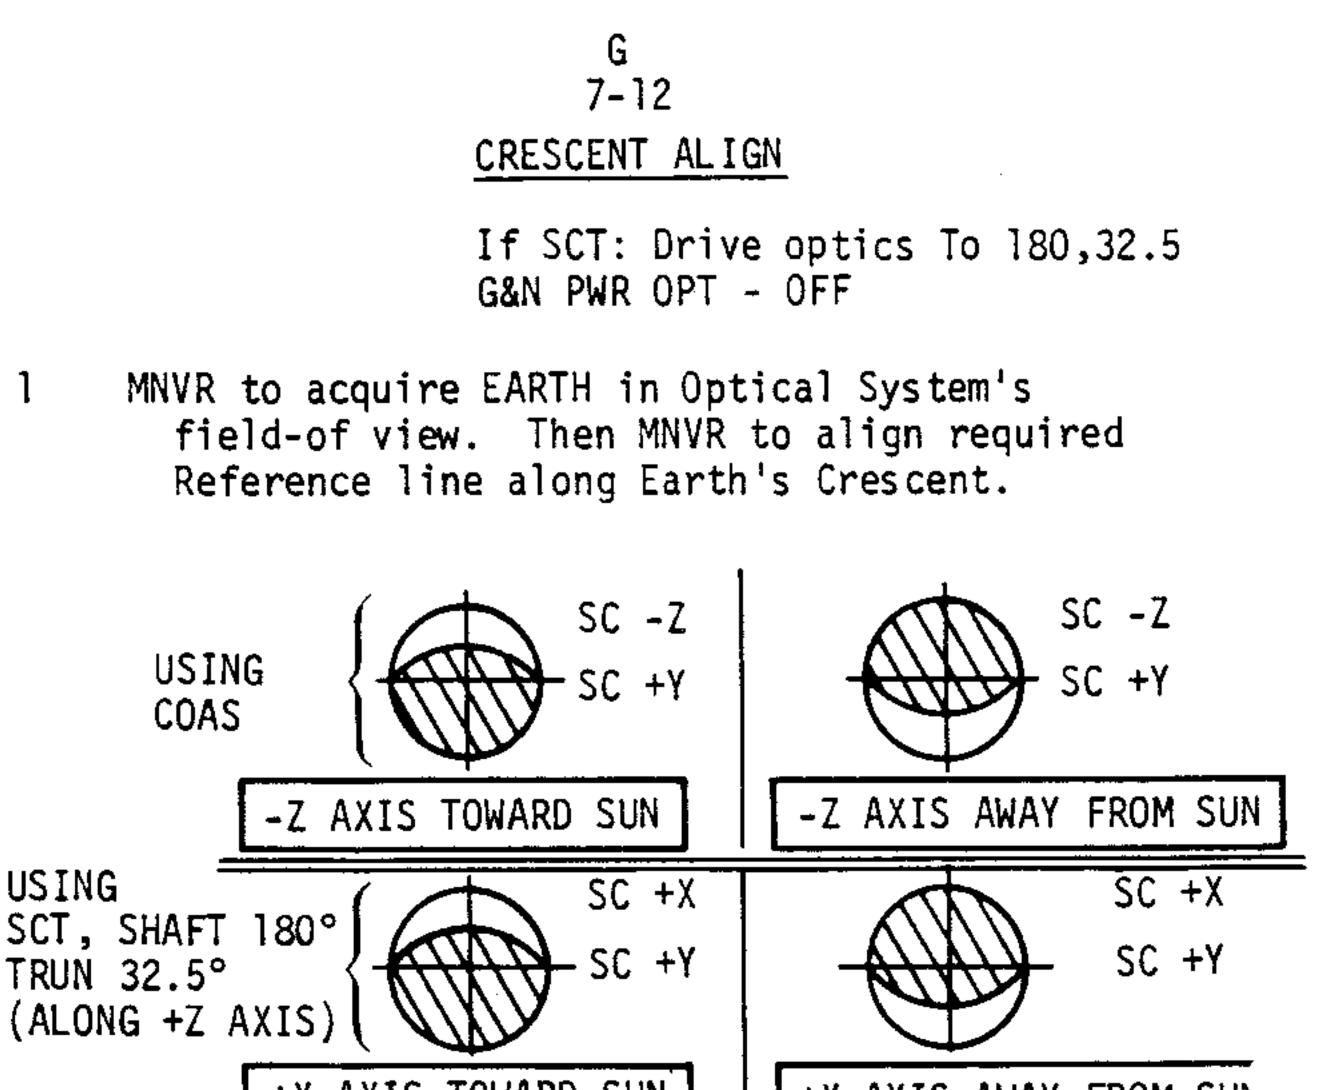

+X AXIS TOWARD SUN +X AXIS AWAY FROM SUN

MSFN will provide -Z or +X axis direction

2 (For GDC only, see step 8)
If CMC not avail:
 Verify IMU PWR - OFF (5 min)
 Go to Step 9

- 3 V41N2OE, load desired angles from MSFN or 0,0,0
- 4 V40, Verify Ref. Line Aligned with Crescent ENTR Allow 10 sec before step 6
- 5 V25N07E, 77E, 10000E, 1E
- 6 V37E51E, PRO, V37E00E (Request MSFN uplink REFSMMAT and, if desired, do P52

MODE MAN OPT

```
3/22/71
  DATE
```

-

```
3
```

2

```
Acquire Apollo Nav star
in optics
FDAI Scale - 5/1
Hold att (ATT DB - MIN, RATE - LO)
Align GDC to 0,0,0
V25 N20E
E,E,E
V37E00E
V96E
Initiate P51 logic
as follows:
   V21N1E
    1214E
      63E (65 if P53 desired)
  V25N26E
   13001E
    3425E
   30005E
     V30E
(Note: Major mode Its. on DSKY do not
          change from 00 to 51)
```

		G 7-14
4	F 50 25	00015 ACQ STARS PRO
5	F 51	PLEASE MARK If necessary, mnvr and: V25N2OE Load present GDC angles OPT ZERO - OFF Null FDAI needles with Min imp then: MARK
6	F 50 25	00016 TERM MARKS PRO
7	F 01 71	000DE STAR CODE Load star code PRO to 5 after 1st MARK (8 if DE = 00) to 9 after 2nd MARK (8 if DE = 00)
_		

8 F 06 88 CELESTIAL BODY VECTOR

Load vector PRO to 5 after 1st MARK to 9 after 2nd MARK (.01°) F 06 05 STAR ANGLE DIFFERENCE 9 (Expect <.1°) (RECYCLE) V32E to 1 (ACCEPT) PRO F 37 XXE 10 OPT ZERO - ZERO CMC has now calculated a REFSMMAT for the GDC, has set REFSMFLG and DRIFTFLG.

DATE 3/22/71

#### GDC REFSMMAT REALIGN (P52)

1

2

3/22/71

DATE

GDC - on and REFSMMAT Known (pg G/7-13) CMC - on SCS - operating IMU - off G/N PWR OPTICS - on OPT ZERO - OFF THEN ZERO (15 sec.) OPT MODE - MAN Acquire nav. target in optics Hold att (ATT DB-MIN, RATE-LO) V25N20E Load GDC angles **V37E52E** F 04 06 R1 00001 R2 00001 PREF PR0 to 5 2 NOM PRO to 3 3 REFSMMAT PRO to 7

		4 LDG SITE PRO to 3
3	F 06 34	GET ALIGN (0,0,0 initially) (hr,min,.01 sec)
		Load desired GET TO SPECIFY PRESENT TIME - PRO on (0,0,0) PRO (NOM go to 5)
4	F 06 89	LAT, LONG/2, ALT (.001°,.001°,.01nm) Load ldg site coords PRO
5	F 06 22	<pre>NEW ICDU ANGLES OG,IG,MG (.01°) (If MG &gt; + 70°, MNVR and reload N20) V32E - to 5 Align GDC to new angles V25N20E Load new angles PR0</pre>
6	F 50 25	00013 GYRO TORQUE PRO (NO ATT 1t-on then off, PROG ALM - ianore)

G 7-16 7 F 50 25 00015 ACQ STARS (opt 3) PRO (Not opt 3) OPT ZERO - ZERO G/N PWR OPTICS - OFF V37EXXE - procedure complete 8 F 01 70 000 DE STAR CODE Load desired code OPT MODE - CMC (verify) OPT ZERO - OFF PRO to 10 (to 9 if DE = 00) \*F 05 09 00404 (TA > 90°) × \*MNVR & reload N20 - PRO to 10\* F 06 88 CELESTIAL BODY VECTOR 9 Load desired vector PR0 \*F 05 09 00404 (TA > 90°) × \*MNVR & reload N20 - PRO to 10\* 10 06 92 SHAFT, TRUN  $(.01,.001^{\circ})$ 

(MARK ROUTINE) OPTICS MODE - MAN

- 11 F 51 PLEASE MARK (If required) V25N2OE Load present GDC angles Null FDAI needles with min imp, then: MARK
- 12 F 50 25 00016 TERMINATE MARKS PRO
- 13 F 01 71 000DE STAR CODE Load code (if necessary) PRO to 8 after 1st MARK (to 14 if DE=00) to 15 after 2nd MARK (to 14 if DE=00)

3/22/71

DATE

14 F 06 88 CELESTIAL BODY VECTOR Load vector PRO to 8 after 1st MARK to 15 after 2nd MARK

- 15 F 06 05 STAR ANGLE DIFFERENCE (.01°) (Expect < .1°, if not V32E to 17) (Accept) PRO
- 16 F 06 93 TORQUING ANGLES OG,IG,MG (.001°)
  N93 is indicative of BMAG drift
   since last alignment
   If torque angles excessive
   perform P51
   Otherwise: OPT ZERO ZERO
   G/N PWR OPTICS OFF
  - V37EXXE procedure complete
- 17 F 50 25 00014 ALIGNMENT CHECK PRO to 7

### LM STEERABLE ANT POINTING

- 1. Select V64 (pg G/1-27)
- 2. Mnvr to N51 angles:

R1 = +03000, R2 = 09000 (+Z orien) R1 = -03000, R2 = 27000 (-Z orien)

DA

ł

		رتم. 1 – 8
		P20 Opt 2 (PTC/Orb rate)
1	F 04 06	V37E 20E R1 00024 TRACKING OPTION R2 00000 Load 2 in R2 PR0
2	F 06 78	AXIS YAW, AXIS PITCH, OMICRON (.01°) Load values (OMICRON ignored) PRO
<b>3</b>	F 06 79	RATE, DEADBAND, Blank (.0001°/sec,.01°) Load desired values PRO
4	F 06 34	START TIME (hrs,min,.01 sec) Load desired GET (all 0's for present time) PRO
5		Maneuver starts at requested GET

#### at requested GE

```
Selection of the following programs will
not stop rotation:
    P21, P22, P24, P27, P29,
    P30
    P52,P54
    P72-P75
```

:

ļ

PASSIVE THERMAL CONTROL (G&N) RHC - Locked FDAI SCALE - 5/1 RCS DAP - Activated 1 LOPO DPP V48E (Select 0.5° DB) CHANGE PROS V37E OOE 70 "00" MANEUVER REQ V49E 2 F 06 22 Load PTC Attitude R - Present DISP DEC ANGLES (PLLOWS LOAD?) P - 90° (TLC) or 270° Y - 0° (TEC) PRO 3 F 50 18 BMAG MODE (3) - RATE 2 PLEASE PERFORM SC CONT - CMC AUTO MANE WER CMC MODE - AUTO PRO DISP ANTO MANEU. 06 18 AUTO MANEUVER 4 F 50 18

5

6

7

G

8-2

```
PLEASE PERF
  ANTO Partic
            Damp vehicle rates:
               ENTR
                Disable all jets on two adjacent quads
               Wait 20 minutes for rates to damp
            AUTO RCS SEL (2)-MNA or MNB as follows:
                    +ROLL -ROLL
                    A1,C1 A2,C2
                 or B1,D1 or B2,D2
             Remaining AUTO RCS SEL (14) - OFF
             MAN ATT (ROLL) - RATE CMD
             Perform P20, opt-2 (p. G/8-1)
             Use 0,0,0 in N78
             Disable RCS and Term. P20
                  AUTO RCS SEL (16) - OFF
                  ROT CONTR PWR DIR (2) - OFF (verify)
                  V56E
```

3/22/71

DATE

```
G
                          8-3
To exit G&N PTC to new att:
     1. MAN ATT (3) - ACCEL CMD
         AUTO RCS SEL (12) - MNA/B
     2. Verify DAP load
     3.
         Select new desired att:
         V37E00E
         V49E
         F 06 22 New ICDU angles
         PRO
         F 50 18
     4. Start auto manevuer:
         PRO within 180° (in direction of roll)
             of new att
         MAN ATT (3)-RATE CMD
               PASSIVE THERMAL CONTROL (SCS)
                 SCS - operating
                 S/C CONT - SCS
                 ROT CONTR PWR NORMAL #2 - AC/DC
```

```
1
               MAN ATT (3) - RATE CMD
               LIMIT CYCLE - on(up)
               DEADBAND - MIN
               RATE - LOW
               BMAG MODE (3) - ATT 1/RATE 2
2
               AUTO RCS SEL -
                 Configure for single jet operation
               (Wait 20 min to allow rates to damp)
3
               FDAI SCALE - 5/1
               MAN ATT (ROLL) - ACCEL CMD or MIN IMP
               DEADBAND - MAX
               RATE - HIGH
4
               Enable jet couple in roll
               Initiate Desired Roll Rate
5
               AUTO RCS SEL (16) - OFF
               ROT CONTR PWR DIR (2) - OFF (verify)
               BMAG MODE (3) - RATE 2
```

DATE 3/22/71

G 8-4
TERMINATE PTC
AUTO RCS SEL (12) - MNA/B Null Rates
PITCH ORBIT RATE MANEUVER (G&N)
Note: P20, opt 1 or 5 (p. G/3-1) may also be used to achieve orb rate.
Establish initial attitude
Perform P20 Opt. 2 (p. G/8-1)
To terminate: V56E
PITCH ORBIT RATE MANEUVER (SCS)
ORDEAL - initialized (p G/7-5)

ORDEAL - initialized (p G/7-5) SCS - Operating

٦

2

3

```
FDAI SCALE - 5/1
Maneuver to desired LCL Vert
  Att (Roll = 7.25° or 187.25°)
BMAG MODE (3) - ATT 1/ RATE 2
DEADBAND - MAX
RATE - LOW
MAN ATT (ROLL, YAW) - RATE CMD
MAN ATT (PITCH) - MIN IMP
Establish desired Pitch Rate
using MIN IMP & ORDEAL FDAI
To terminate:
  MAN ATT (PITCH) - RATE CMD
```

3/22/71 DATE

9-1 ERASABLE LOAD UPDATE In the event of PROG ALARM 1107, perform the following: V74E (Wait 42 sec:HBR) (DUMP E MEMORY) **V36E** V48E (LOAD DAP as DESIRED - use V46E latest known weights) V25N07E 77E 10000E 1E (set REFSMMAT) VINIE 104E (verify CMOON FLAG and LMOON FLAG) (BITS 11 AND 12 SHOULD BE O IN EARTH SPHERE and 1 in MOON SPHERE) Verify E MEMORY (should be done ASAP) VINIE XXXXE (LOAD OID 2 OF UPDATE) N15E, READ R1, E REPEAT FOR UPDATES A-L FOR UPDATE M

```
VINIE
1. XXXXE (LOAD EVEN OID'S)
2. READ R1, E (READ ODD OID'S IN R1)
```

### RETURN TO 1

```
IN CASE OF A DISCREPANCY
LOAD THAT UPDATE AS A NORMAL P27
```

```
V37E51E, PRO
V37E00E (Sets drift flag)
OPT ZERO - OFF
OPT ZERO - ZERO
```

P52-OPTION 3-AUTO OPTICS AUTO OPTICS SUCCESSFUL, REFSMMAT VALID AUTO OPTICS UNSUCCESSFUL, DO P51 V16 N65 verify CMC CLOCK (UPDATE) TO CHECK STATE VECTOR CALL P21 AND LOAD PRESENT TIME. WHEN COMP CYCLE IS COMPLETE VO6 N73E READ R1 (R1 X 10=CURRENT ALT (NM)) COMPARE TO SOME KNOWN VALUE (E.G., FLIGHT PLAN) IF ANSWER COMPARES - STATE VECTOR IS OK AND P23 SHOULD BE USED TO IMPROVE IT. IF GROSS ERRORS ARE OBSERVED, P23 IS UNLIKELY TO CORRECT THEM. IN THIS CASE PERFORM V71 LOAD OF LATEST PAD S.V. - SELECT P00 TO BRING S.V. TO PRESENT TIME.

DATE 3/22/71



THIS PAGE INTENTIONALLY BLANK



OID	A	В	C	D	E	F	G	]
· · · · · · · · · · · · · · · · · · ·	V71	V71	V71	V71	V71	V71	V71	
01	00021	00013	00012	00015	00023	00023	00024	
02	01452	01706	01346	01765	02000	02021	02042	
03	77143	00006	00005	00001	00137	00001	00001	
04	71737	33304 32251	06510	27404	00763	03120	33443	
05	00110	10000 07000 26157	07025	-0+577 00000 -0+605 ~	00023	00001	00003	
06	67635	00000	00620	τη (β. 12919 15514	ິ <b>ບໍ່ດີ</b> 0001	03120	02115	el
07	76745	17356	00000	00542	00000	00311	77775	5
10	72727	00000	33260	02210	00000	31727	70001	
11	<b>00477</b>	22764	37723	36321	00471	77700	77777	
12	77115	37777	01163	12160	00364	60177	40174	
13	00314	37777		03363	04400	77762	77774	
14	00000			00233	77772	55276	62760	

A 11 00634 13 77425 13 77317 .

DATE 3/22/71

G 9-4

# DATE <u>3/22/71</u>

•

OID	A	В	С	D	E	F	G
	٧71	V71	٧71	V71	V71	V71	V71
15	77640			00502	53647	00007	00004
16	01371		-		00002	04312	36300
17	00023				12573	07147	00002
20	00071				00001	77775	15226
21	77706				35676	77411	00077
22					00002	00003	03412
23					27310	31036	77754
24							75526

OID	Н	I	J	K	L	Μ	S.V.
VID	V71	V71	V71	V71	V71	V72	V71
01	00024	00024	00022	00023	00021	00017	
02	02064	02106	02130	03000	03025	00736	
03	77771	01077	02375	00436	37777	37777	
04	72235	27652	04715	02732	00000	01477	
05	77461	02631	14650	00000	00000	00000	,,,,,,
06	70714	37371	12113	00000	54360	02377	
07	77510	70643	65411	77777	21075	00142	
10	61414	71747	72642	77777	37777	03021	
11	77622	74315	73351	42757	60465	01000	
12	70025	55007	43037	10510	00000	03022	
13	76777	66437	14427	06477	54360	00232	
14	71317	70077	13747	74470	21075	03376	<u> </u>

DATE 3/22/71

Addition of the second 9-6 9

# DATE 3/22/71

.

OID	Н	Ι	J	K	L	M	S.V.
	٧7٦	V71	V71	V71	V71	V72	V71
15	01363	75440	14732	01605	37777	00000	
16	04371	54216	02326	00105	57142	03377	
17	00555	76105	05465	00123	33106	00000	
20	13342	73515	20402	00175	50741		
21	04303	76002	00545	17433	31162		
22	36426	71056	36577	04500			
23	01477	04770		00334			
24	27000	07136					

.

.

10/10/4 գ 9-7


#### LM OR CSM S.V. READOUT

V83E

After Integration: V05N01E

CSM S.V.

LM S.V.

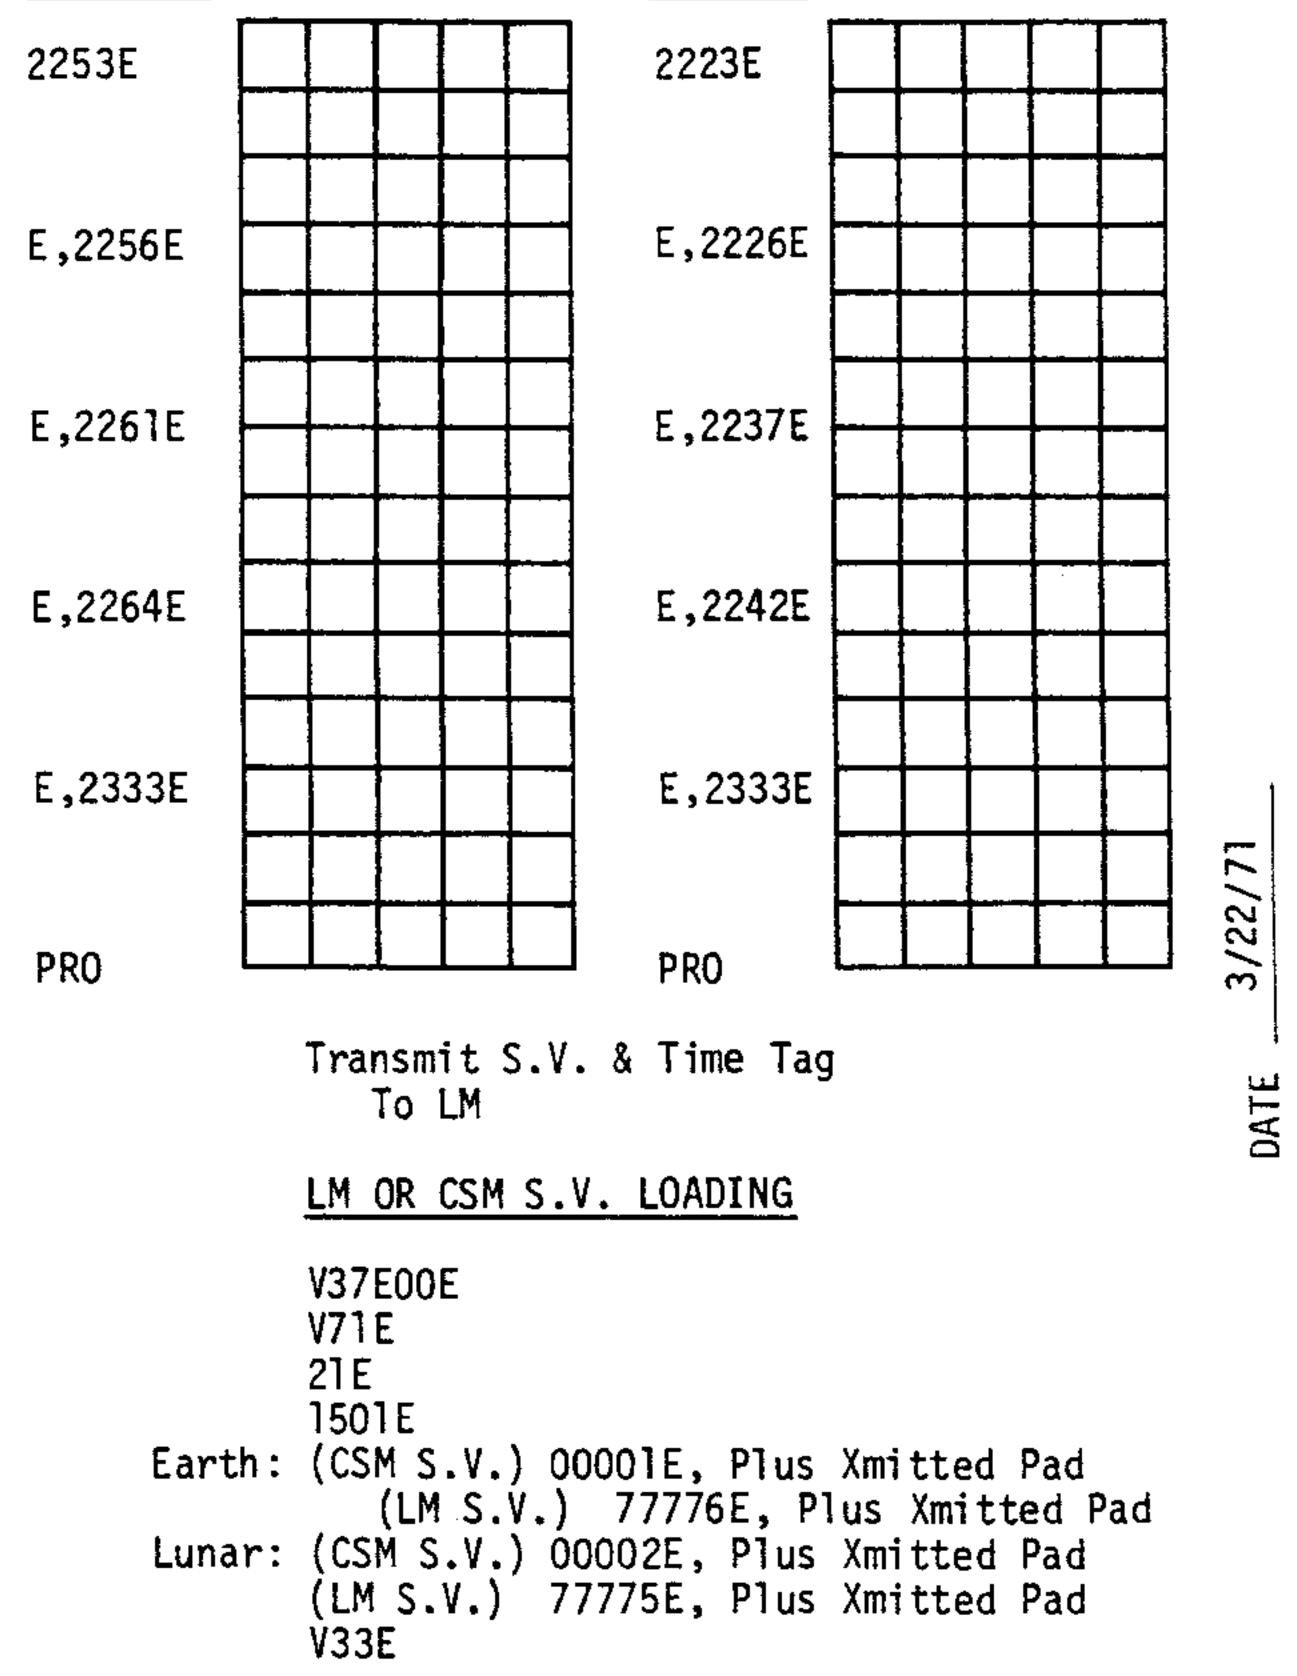

CSM 6-1.- Venus unit vectors.

0 HR GET = 1:31:20:20 GMT

L0 = 1.31					
	· · •	VENUS	UNIT VI		
20.0HR GMT1 Z(R3)	TIME (GET) HOURS	TLAUNCH JA X(R1)	N 31,1971 Y(R2)	ZÓJOHR GMT Z(R3)	
34550	12.0	03327	93633	34954	
34575	76.0	03016	93636	34974	
34600	80.0	C2705	93639	34993	
34624	84.0	02394	93640	35012	
34648	88.0	02083	93640	35031	
34672	92.0	01771	-,93640	35049	
34695	96.0	01459	93638	35067	
34718	100.0	C1148	93636	-,35085	
34741	104.0	00836	93633	35103	
34764	108.0	00524	93629	35120	
34786	. 112-0	-+00211	-,93623	-,35137	
-, 34808	116.0	.00101	93617	35153	
34830	120.0	+00414	93610	35170	
34851	124.0	.00727	93603	35186	
34872	128.0	.01040	93594	35201	
34893	132.0	•C1 353	93584	35217	
34914	136.0	-01667	93573	35232	
34934	140.0	.01980	93562	35246	

	VENUS	UNIT V		= 1:31::	VENUS	UNIT	
TIME (GET) HOURS	LAUNCH J		20.0HR GNT Z(R3)	TIME (GET) HOURS	(LAUNCH J X(R1)	AN 31,1971 Y(R2)	20,0HR GMT) Z(R3)
.0	08900	93419	34550	72.0	03327	93633	34954
4.0	08591	93439	34575	76.0	03016	93636	34974
8.0	08282	93457	34600	80.0	02705	93639	34993
12.0	07973	93475	34624	84.0	02394	93640	35012
16.0	07664	93492	34648	88.0	02083	93640	35031
20.0	07355	93508	34672	92.0	01771	-,93640	35049
24+0	07046	93523	34695	96.0	01459	93638	35067
28.0	06737	93537	34718	100.0	C1148	93636	35085
32.0	06428	93551	34741	104.0	~.00836	93633	35103
36.0	06118	93563	34764	108.0	00524	93629	35120
40.0	05809	93574	34786	. 112-0	-+00211	93623	35137
44.0	05499	93585	-, 34 80 8	116.0	.03101	93617	35153
48.0	05189	~.93595	34830	120.0	+00414	93610	35170
52.0	04879	93803	34851	124.0	.00727	93603	35186
56+0	04569	93611	34872	128.0	.01040	93594	35201
60.0	04259	93618	34893	1 32 . 0	•C1 353	93584	35217
64-0	03948	93624	34914	136.0	-01667	93573	35232
68 0	- 03638	-, 93629	34934	140.0	.01980	93562	35246

9/8/70 Final

0 イ

#### CSM 6-1. - Concluded.

.

0 HR GET = 1:31:20:20 GMT L0 = 1:31:\_\_:\_

. .

.

	VENUS	UNIT		L;31::	VENUS	UNIT V	ECTOR
TIME (GET) HOURS			20.0HR GMT) Z(R3)	TIMË (GET) HOURS	(LAUNCH JA X(R1)	N 31,1971 Y(R2)	20.0HR GMT) Z(R3)
144.0	.02294	93549	35261	216.0	. 07978	93161	35460
148.0	.02608	93536	35275	0.655	.08295	93130	35468
152.0	.02922	-,9352 L	35288	224.0	.08613	-,93098	35475
156.0	.03237	93506	35302	228.0	.08932	93066	35482
160.0	.03551	93489	35315	232.0	.09250	93032	35489
164.0	.03866	93472	35327	236.0	.09568	92998	35495
168.0	.04181	93454	35340	240.0	.09887	92962	35501
172-0	.04496	93435	35352	244.0	.10206	92925	35506
176.0	.04812	93415	35363		_		
180.0	.05128	93393	35375				
184.0	.05443	93371	35386				
188.C	.05759	93348	35396				
192.0	.06076	93325	35406				
196.C	.06392	93300	35416				
200.0	.06709	93274	35426	· · ·			
204.0	.07026	93247	35435				
208.0	.07343	93219	35444				
212.0	.07660	93190	35452				

DATE 3/22/71

9/8/70 Final

G 10-2

 $\sim$ 

VO

DATE 3/22/71

CSM 6-2 Mars, Jupiter,	Saturn unit vectors.
------------------------	----------------------

0 HR GET = 1:31:20:20 GMT L0 = 1:31:

	4405		LQ =	1:31::				·
TIME (GET)	HARS	UNIT V IAN 31,1971		<u>ר</u> ר	TIME (GET)	MARS	UNIT Y	ECTOR
HOURS	X(R1)	Y(R2)	Z(R3)		HOURS	X(RL)	JAN 31,1971 Y{R2}	20.0HR GMT1 Z1R31
•0	41404	83881	35351	1	180.0	33922	86614	36705
10.0	40993	84048	35432		190.0	33499	86750	36774
20.0	40582	84214	35512		200.0	33075	-,86883	36842
30.0	40170	84378	35592		210.0	32650	87015	36910
40.0	39758	84540	35671		Z20.0	32224	87145	36977
50.0	39345	84699	35749		230.0	31797	87274	37044
60.0	38932	84857	35826		240.0	31369	87401	37 109
70.0	38518	85014	35903		250.0	30940	~.87526	37175
80.C	38104	85168	35979			JUPITER		EC TOR
90.C	37689	85320	36055	T	THE (GET) HOURS		AN 31,1971 Y(R2)	20.0HR GHTE Z(R3)
100.0	37274	85471	36129		.0	45824	82167	33894
116.0	36858	85620	36203	-	50.0	45392	82372	33978
120.0	36441	85767	36 277		100.0	44974	82568	34057
130.0	36023	85913	36350		150.0	44570	82755	34134
140.0	35605	86057	36422		200.0	44178	82935	34207
159.0	35186	86199	36494		250.0	43797	83107	34278
160.0	34765	86339	36565			SATURN	UNIT VE	CTOR
170.0	34344	86477	36635	Ť	IME (GET) HOURS	(LAUNCH JA X(R1)		20.0HR GMTE Z(R3)

.

NASA N N N

r

	SATURN	UNIT V	
ME (GET) HOURS	(LAUNCH JAN X(R1)	31,1971 Y(R2)	20.0HR GMT) Z(R3)
.0	.69562	.67354	.24992
100.0	.69393	.67492	.25091