Saturn Instrument Unit

# SATURN PREFLIGHT PROGRAM VERIFICATION PLAN

IBM

Contract No. NAS8-14000 MSFC-DRL-008A Line Item 292 IBM No. 72W-00291

1 September 1972

B. G. Oxley 51-K99 22-184

# SATURN PREFLIGHT PROGRAM VERIFICATION PLAN

Contract No. NAS8-14000 MSFC-DRL-008A Line Item 292 IBM No. 72W-00291

1 September 1972

 
Prepared for the GEORGE C. MARSHALL SPACE FLIGHT CENTER Huntsville, Alabama

Classification and Content Approval

Data Manager Approval

Program Office Approval

tanter Redel Z L



PART I

BASELINE PROGRAM VERIFICATION REQUIREMENTS

#### PREFACE

The Saturn Preflight Program Verification Plan for the Saturn Launch Vehicle Preflight Program describes the methods which will be used to insure that the Preflight program meets all functional requirements and is operational for use in Saturn mission countdowns and preflight testing.

The Saturn Preflight Program Verification Plan combines the objectives formerly covered by the Program Verification Plan for Saturn Launch Vehicle Prepare to Launch Programs, MSFC-DRL-008A, Line Item 293, IBM No. 71W-00143 and the Saturn Preflight Program Verification Plan, MSFC-DRL-008A, Line Item 292, IBM No. 71W-00141. This document supersedes the two documents formerly directed towards Preflight verification and should, therefore, be the only reference for Preflight verification.

The objective of this plan is to specify the verification requirements for the baseline Preflight Program and the verification requirements for the changes implemented as a function of specific mission and/or vehicle operational requirements. Since the Preflight Program as defined applies to all mission configurations, any corrections to deviations or changes implemented to satisfy specific mission requirements will be reflected in periodic updates to this document. Program configuration control is maintained through use of a digital symbolic program comparison routine executed for each program revision to identify all the differences in the new configuration. This method insures that only those areas specified to change are different.

Part I contains the requirements for verifying the baseline Preflight program common to all Saturn launch vehicles. Part II defines the verification required to validate specific mission and vehicle dependent Preflight program changes to the baseline. Part II will be updated for each vehicle and will contain the methods to be used to verify changed areas of the Preflight program.

The 360/44 simulator will be used as the major tool for the PTL verification effort. This simulation contains a mathematically modeled platform, flight type LVDC/LVDA hardware and simulated LVDA interfacing equipment (DCS, switch selector, CIU, etc.).

# PART I

# TABLE OF CONTENTS

| Paragraph  | Title  | Page        |
|------------|--|-------------|
| SECTION 1: | General Preflight Verification Requirements  | 1-1         |
|            | 1.1 Introduction   | 1 <b>-1</b> |
|            | 1.2 General Requirements   | 1-2         |
|            | 1.2.1 Program Functional Requirements  | 1-2         |
|            | 1.2.1.1 <u>General Preflight Routines</u><br>1.2.1.2 <u>Prepare to Launch</u>                    | 1-2<br>1-3  |
|            | 1.2.2 Verification Requirements  | 1-3         |
|            | 1.2.2.1 <u>General Preflight Routines</u><br>1.2.2.2 <u>Prepare to Launch</u>                    | 1-3<br>1-4  |
|            | 1.2.3 Applicable Documents List  | 1-4         |
| SECTION 2: | Detailed Verification Requirements   | 2-1         |
|            | 2.1 Introduction   | 2-1         |
|            | 2.2 General Preflight Routines   | 2-1         |
|            | 2.2.1 Nominal Conditions   | 2-1         |
|            | 2.2.1.1 <u>Memory Load, Verification, and</u><br>Initialization Programs                         | 2-1         |
|            | 2.2.1.1.1 Sector Dump/Sector Sum Check<br>2.2.1.1.2 Verify & Prepare to Load &<br>Load Routines  | 2-2<br>2-2  |
|            | 2.2.1.1.3 Special Loader   | 2-2         |
|            | 2.2.1.1.4 Power Up Initialize Routine  | 2-2<br>2-2  |
|            | 2.2.1.2 <u>Guidance &amp; Control System Test and</u><br>Monitor Programs                        | 2-2         |
|            | 2.2.1.2.1 Accelerometer Pulse Count<br>Routine   | 2-3         |
|            | 2.2.1.2.2 CIU Read Routine   | 2-3         |
|            | 2.2.1.2.3 Command Receiver Linkage and   | 2-3         |
|            | Command Flight Linkage Tests<br>2.2.1.2.4 Discrete Input and Discrete<br>Output Monitor Routines | 2-3         |
|            | 2.2.1.2.5 Exercise Attitude Command<br>and G&C Steering Test<br>Routines                         | 2-4         |

.

i

Paragraph

| Τ | i | t | 1 | e |
|---|---|---|---|---|
|   |   |   |   |   |

Page

|     |          |           | 2.2.1.2.6 Gi  | imbal Angle Monitor Routine   | 2-4  |
|-----|----------|-----------|---------------|---|------|
|     |          |           |               | vitch Selector Test Routine   | 2-4  |
|     |          |           |               | elemetry Test Routine   | 2-4  |
|     |          | 2.2.1.3   | LVDC/LVDA Te  |   | 2-4  |
|     |          |           |               | M Test Routine  | 2-5  |
|     |          |           |               | adder Error Test Routine  | 2-5  |
|     |          |           |               | emory Error Test Routine  | 2-5  |
|     |          |           |               | nor Loop Switch Selector  | 2-5  |
|     |          |           |               | nd Real Time Counter Test   |      |
|     |          |           |               | outine  |      |
|     |          | 2.2.1.4   |               | y Called Routines and   | 2-5  |
|     |          |           | Subroutines   |   |      |
|     | 2.2.2    | Error Co  | nditions      |   | 2-7  |
| 2.3 | Prepai   | re to Lau | unch          |   | 2-8  |
|     | 1 L opus |           |               |   | 2 () |
|     | 2.3.1    | LVDC/LVI  | A Internal E  | Crror Detection Verification  | 2-8  |
|     |          | 2311      | LVDA Timing   | and Counter Test  | 2-9  |
|     |          | 2.3.1.1   | 2.3.1.1.1 R   | Real Time Clock (RTC)   | 2-9  |
|     |          |           |               | Accuracy Test   | 2 )  |
|     |          |           |               | nor Loop and Switch   | 2-9  |
|     |          |           |               | elector Interrupt   |      |
|     |          |           |               | ounter Tests  |      |
|     |          |           | 2.3.1.1.3 Ac  | celerometer Optisyn Delay<br>.ne Test   | 2-9  |
|     |          |           |               | ossover Detection (COD)   | 2-10 |
|     |          |           |               | ounter Test   | 2-10 |
|     |          | 2.3.1.2   | LVDC Self Te  | est Subroutine  | 2-10 |
|     |          |           | 2.3.1.2.1 Tr  | ansfer Operation  | 2-10 |
|     |          |           | 2.3.1.2.2 Ar  | ithmetic Operation  | 2-11 |
|     |          | 2.3.1.3   | Error Monito  | or Subroutine   | 2-11 |
|     | 2.3.2    | Digital   | Input Detect  | ion   | 2-11 |
|     |          | 2.3.2.1   | Interrupt De  | etection  | 2-11 |
|     |          |           |               |   |      |
|     |          |           |               | terrupt Processor   | 2-12 |
|     |          |           |               | terrupt Storage Register  | 2-12 |
|     |          |           |               | est   |      |
|     |          | 2.3.2.2   | Discrete Inp  | out Detection   | 2-12 |
|     | 2.3.3    | Analog 1  | nput Tests    |   | 2-12 |
|     |          | 2 3 3 1   | Acceleromete  | er Monitor Subroutine   | 2-13 |
|     |          |           | Gimbal Angle  | the second | 2-13 |
|     |          | ~•••••••  | - indui ingit |   | - 15 |
|     | 2.3.4    | Prepare   | to Launch/Gr  | ound Computer Interface   | 2-13 |
|     |          | 2.3.4.1   | Verify and P  | Prepare to Load Routine   | 2-13 |

•

Paragraph

|       |         | Title               | Page |
|-------|---------|---------------------|------|
|       | 2.3.4.2 | PTL Telemetry Cycle | 2-14 |
| 2.3.5 | Utility | Routines            | 2-14 |
|       |         | Issue Status Code   | 2-14 |

#### SECTION 1

#### GENERAL PREFLIGHT VERIFICATION

#### 1.1 INTRODUCTION

The LVDC Preflight Verification Plan outlines the procedures which require the LVDC Preflight Program to use all of its program logic. An LVDC preflight routine performs its function by executing a set of program logic. The only variations from a fixed logic path are determined by:

- RCA-110A input word options
- Error conditions

Verification of the LVDC Preflight Program is divided into two parts:

- General Preflight Routines
- Prepare to Launch

The first part is divided into Nominal Conditions and Error Conditions. In the Nominal Conditions verification, variations introduced by RCA-110A input word options are exercised. The combination of options selected for input to the preflight routine requires the routine to perform all of its functions.

In the Error Conditions verification, variations introduced by anomalies are exercised. The LVDC preflight routines which respond to error conditions are exercised. Each RCA-110A input word error or each hardware performance error tested by the routine is generated by the control program.

In the Prepare to Launch verification, the same requirements apply to the input as in the nominal and error conditions verification of the General

Preflight Routines. That is, the input exercises the functions of the routine for both nominal and error conditions. However, the launch criticality of the monitor functions of the Prepare to Launch routine necessitates an emphasis on the test status of external inputs to the routine. Thus, the plan details the contents of external inputs such as discrete inputs, discrete input spares, staging interrupts, accelerometers, and gimbals.

### 1.2 GENERAL REQUIREMENTS

1.2.1 Program Functional Requirements

# 1.2.1.1 General Preflight Routines

The LVDC Preflight Program performs the following functions under control of the SLCC:

- Load and/or verify the LVDC memory.
- Exercise, monitor, and verify internal functions of the LVDC and LVDA.
- Exercise and/or monitor selected Instrument Unit subsystems.
- Participate in overall guidance and control system tests.
- Perform limited data processing for the Launch Computer Complex.

These preflight routines are versatile and flexible in that they are adaptable to prelaunch conditions for the entire Saturn series of missions as presently conceived. In conjunction with the launch complex computer, these routines provide the following subsystem checkout capabilities.

- Operational checkout of the LVDC.
- Operational checkout of the LVDA.
- Operational checkout of the Switch Selector LVDA interface.
- Operational checkout of the accelerometer and gimbal angle processing features.
- Operational checkout of the vehicle discretes.
- Operational checkout of the LVDA/PCM interface.

# 1.2.1.2 Prepare to Launch

The PTL program's primary functions during prelaunch testing and launch countdown are:

- Checks active interrupt and discrete input status.
- Checks Sim Flight Indicator status.
- Checks validity of input data used to compute azimuth.
- Computes azimuth and checks to see if it is within limits.
- Checks platform output data for validity.
- Checks LVDC/LVDA internal hardware status.

#### 1.2.2 Verification Requirements

#### 1.2.2.1 General Preflight Routines

The functions of these routines are verified by exercising variations introduced through the RCA-110A input word option. The combination of options selected for input to each routine requires the routine to perform all of its functions. Correct error detection logic of the routines is confirmed by simulating error conditions and verifying the proper error telemetry.

#### 1.2.2.2 Prepare to Launch

The PTL verification effort is directed toward verifying the adequacy of the PTL program to perform the sequence of events which occur before Guidance Reference Release (GRR). Correct sequencing of the RCA-110A ground routine/flight program interface, proper GMT synchronization and azimuth management will be verified. Errors will be simulated during PTL to insure that all error detection logic is functioning correctly.

The PTL functions will be verified through analysis of logic tests designed to detect any implementation errors. Both nominal and perturbed configurations will be tested to exercise all logic paths and check for possible program interactions. Assurance that Discrete Output (DO) 13 (LVDC/LVDA Firing Commit Inhibit) will be set upon detection of errors in a subroutine entered from Prepare-to-Launch is obtained.

Assurance that program module interaction will not degrade the performance of the overall PTL program will be obtained through analysis of cases specifically designed to test both nominal and perturbed configurations of the program operating as a complete system.

#### 1.2.3 Applicable Document List

The specification documents used in the process of PTL program verification (see Appendix A) are the LVDC Preflight Program Descriptions document and the approved Program Change Requests (PCR's) for the mission. The Astrionics System Handbook is used for interpretation of requirements, and the Programmer's Operating Manual is used to interpret programming techniques.

#### SECTION 2

#### DETAILED VERIFICATION REQUIREMENTS

# 2.1 INTRODUCTION

This section describes the verification requirements for the Preflight Program in detail. In many sections of this document, reference is made to the applicable sections of the Preflight Program Descriptions Document (Reference 1, Appendix A). This approach facilitates a cross reference between verification requirements and program specifications while, at the same time, providing a verification plan format suitable for conducting a verification effort.

# 2.2 GENERAL PREFLIGHT ROUTINES

#### 2.2.1 Nominal Conditions

The Nominal Conditions section of General Preflight Verification requires the routines to execute all of their nominal program logic. Successful execution under nominal conditions is indicated through the absence of any preflight error message. Also, the preflight routines which produce an output are verified by checking their output against expected values.

# 2.2.1.1 Memory Load and Verification Programs

The following paragraphs illustrate how the various memory load and verifications techniques of the Preflight Program are verified.

# 2.2.1.1.1 Sector Dump/Sector Sum Check

The functions of these routines are verified by forcing dumps and sum checks through the RCA-110A input word option and checking the results against dumps and sum checks performed by the the preflight simulator. Refer to paragraphs 3.1.6 and 3.1.7 of Reference 1, Appendix A for the specific requirements of these routines.

# 2.2.1.1.2 Verify & Prepare to Load & Load Routines

These routines are verified by loading data into the LVDC and verifying the change. The contents of the telemetered control word is verified by the control program, and any failure is reported. Refer to paragraphs 3.1.4 and 3.1.5 of Refence 1, Appendix A.

# 2.2.1.1.3 Special Loader

The Special Loader routine is verified by exercising the routine and performing the same tests outlined in the two previous sections. Refer to paragraph 3.1.22 or Reference 1, Appendix A.

# 2.2.1.1.4 Power Up Initialize Routine

This routine is verified by commanding its execution. Output is received only if there is an error. Refer to paragraph 3.1.1 of Reference 1, Appendix A.

# 2.2.1.2 Guidance & Control System Test & Monitor Program

The following paragraphs present the methods used to verify the Guidance & control system test and monitor capabilities of the Preflight Program.

#### 2.2.1.2.1 Accelerometer Pulse Count Routine

Different pulse counts are specified, and all three axes are interrogated. The computed accelerometer rates are then verified to be within tolerance. Refer to paragraph 3.1.9 of Reference 1, Appendix A.

#### 2.2.1.2.2 CIU Read Routine

Twelve bit CIU addresses are input to the CIU Read Routine, and ten CIU data bits are supplied by the preflight simulator to the LVDC for each input. The corresponding data output by the routine is checked against expected output. Refer to paragraph 3.1.11 of Reference 1, Appendix A.

2.2.1.2.3 Command Receiver Linkage and Commanded Flight Linkage Tests The Command Receiver Linkage Routine is verified as follows. All preflightflight interfaces are exercised through execution of DCS commands, and the control program verifies the Flight DCS Processor output data. It is assured that the Preflight Program does not interfere with the execution of repeatable flight simulation by commanding the Repeatable Flight Sim Linkage Routine and taking sum checks after repeatable flight simulation has completed. Refer to paragraphs 3.1.24 and 3.1.25 of Reference 1, Appendix A.

2.2.1.2.4 Discrete Input and Discrete Output Monitor Routines The Discrete Input Monitor Routine is verified by setting different bit patterns in the DIN, DIS, and ISR registers and checking for the expected output. The Discrete Output Monitor Routine is verified by setting bit patterns in the DOR and by specifying different Switch Selector Register outputs. Refer to paragraphs 3.1.14 and 3.1.15 of Reference 1, Appendix A.

2.2.1.2.5 Exercise Attitude Command and G&C Steering Test Routines The functions of these routines are verified by exercising the routines and comparing their pitch, roll, and yaw ladder outputs against expected values. Refer to paragraphs 3.1.12 and 3.1.13 of Reference 1, Appendix A.

# 2.2.1.2.6 Gimbal Angle Monitor Routine

Simulated platform gimbal angle values are input to the Gimbal Angle Monitor Routine by the preflight simulator, and the corresponding data telemetered by the routine is verified by the simulator. Refer to paragraph 3.1.8 of Reference 1, Appendix A.

# 2.2.1.2.7 Switch Selector Test Routine

The Switch Selector Routine is verified by specifying switch selectors to be driven by way of the RCA-110A input words of the routine. If the routine does not complete execution completely, an error message will be issued by the Preflight Program. Refer to paragraph 3.1.10 of Reference 1, Appendix A.

# 2.2.1.2.8 Telemetry Test Routine

The functions of this routine are verified by exercising valid telemetry rates of the routine. Refer to paragraph 3.1.23 of Reference 1, Appendix A.

# 2.2.1.3 LVDC/LVDA Test Programs

The following paragraphs illustrate the methods used in verifying the preflight routines designed to test specific functions of the LVDC/LVDA.

#### 2.2.1.3.1 DOM Test Routine

The functions of the DOM Test Routine are verified by executing the routine and monitoring DOM telemetry. Refer to paragraph 3.1.16 of Reference 1, Appendix A.

# 2.2.1.3.2 Ladder Error Test Routine

The Ladder Error Test Routine is verified by commanding execution of the routine. Output is received only if there is an error. Refer to paragraph 3.1.1.17 of Reference 1, Appendix A.

#### 2.2.1.3.3 Memory Error Test Routine

The Memory Error Test routine is verified by commanding execution of the routine. Output is received only if there is an error present. Refer to paragraph 3.1.19 of Reference 1, Appendix A.

2.2.1.3.4 Minor Loop Switch Selector and Real Time Counter Test Routine The functions of this routine are verified by exercising the routine. Output is received only if there is an error. Refer to paragraph 3.1.18 of Reference 1, Appendix A.

#### 2.2.1.4 Automatically Called Routines and Subroutines

All other General Preflight Routines and Subroutines not previously specified in this document are automatically called from the routines listed in the verification procedures above or are called from the PTL program and are therefore verified when the requirements of these procedures are satisfied. Those routines or subroutines that are called from the PTL program are also tested, as described in the Prepare to Launch section of

this document. A cross reference table of preflight called routines and calling routines is presented in Appendix D.

The routines and subroutines automatically called from the General Preflight Routines are listed below. Refer to Reference 1, Appendix A for the specific functions of these routines.

- Accelerometer Monitor\*
- Control Word Execute\*
- Forced Begin
- Error Monitor\*
- HOP 400 Initialize
- Instruction Execute\*
- Interrupt Processing\*
- Issue Status Code\*
- LVDA Timing & Counter\*
- LVDC Self Test\*
- Mode Sort
- Output Interrupt Generate\*
- Output\*
- PTL Real Time Update\*
- Read Input Data\*
- Real Time Delta\*
- Register Initialize
- Resolver Error\*
- Sync Reset\*

\*Additional testing and verification are performed on these routines when the Prepare to Launch Routine is verified.

#### 2.2.2 Error Conditions

The LVDC Preflight Error Conditions verification exercises all Preflight Program variations caused by recognition of error conditions. The preflight routines report the error conditions by the telemetry of error messages. The Error Conditions verification, therefore, exercises each routine of the LVDC Preflight Program which can telemeter error messages. The control program, used to perform the verification, forces the RCA-110A input word error or the hardware performance error tested for by each routine. The preflight routine telemetry is compared against expected, and any deviations are reported by the control program. Upon successful completion of the tests for a preflight routine, the error message telemetry received is printed.

Certain control program capabilities and limitations are pertinent to the error test definition. These include:

- The contents of COD counter 1 and 2 for any axis and any resolver may be specified in failure control counter 'A' and 'B'.
- Timing functions within the LVDA may be stopped while LVDC continues operation (DST discrete control). This control stops real time clock from incrementing and simultaneously stops timer 1 and 2 counters from decrementing.
- The rate at which accelerometers increment by channel and axis may be specified.
- The contents and operation of most registers internal to the LVDA can not be directly controlled. These include interrupt inhibit, interrupt limit, ladder error circuitry, and memory error circuitry functions.

 The preflight simulator control program can, however, identify execution of any PIO by the LVDC Preflight Program. The control program can stop execution, specify results of PIO by loading the LVDC accumulator and then restarting the LVDC Preflight Program. In this operation the LVDC Preflight Program timing is unaffected. Thus, the effect is a real time operation of the preflight routines where error conditions are supplied by a control program.

Appendix C lists the error message telemetry by routine and by sequence executed within the routine.

Under certain error conditions, the Preflight Program telemeters a status code denoting the specific error present, rather than issuing an error message. Each of these error conditions will be simulated, and the status code telemetered will be verified.

#### 2.3 PREPARE TO LAUNCH

This section contains a detailed description of the methods applied to verify that the baseline Prepare to Launch program meets all functional requirements.

Nominal and error conditions verification of PTL are combined and described in the following paragraphs.

2.3.1 LVDC/LVDA Internal Error Detection Verification The PTL program's ability to correctly detect internal hardware malfunctions and perform the defined program action for a malfunction are verified as described in the following paragraphs.

#### 2.3.1.1 LVDA Timer and Counter Test

Verification that correct implementation of the LVDA timer and counter test (see Appendix A, Reference 1, 3.2.14) has been accomplished will be done through analysis of the perturbation cases described below. These cases are designed to intentionally force execution of each error detection logic path. PTL program error telemetry analysis will be the primary instrument used to accomplish verification.

#### 2.3.1.1.1 Real Time Clock (RTC) Accuracy Test

In order to verify proper error detection, positive and negative clock count biases will be simulated by altering the clock read instructions.

2.3.1.1.2 Minor Loop and Switch Selector Interrupt Counters The values of the minor loop and switch selector interrupt counters will be perturbated in order to simulate interrupts occuring earlier and later than expected. All possible error paths will be simulated to verify correct program action and detection of errors.

# 2.3.1.1.3 Accelerometer Optisyn Delay Line Test

Assurance that the PTL program can detect errors in the vertical, downrange, and crossrange accelerometer optisyn delay lines will be obtained through analysis of a series of perturbations forcing reading errors above and below the specified two count tolerance. Both positive and negative differences in the A and B channel readings will be simulated for each platform axis.

2.3.1.1.4 Crossover Detector (COD) Counter Test All of the COD hardware logic tests and controlling Internal Control Regis-

ter (ICR) bits will be exercised under nominal and perturbed conditions to verify the program's capability to correctly detect malfunctions. The counters will be configured such that the difference between the duplex counter readings will lie on each side of the specified tolerance of +3, -4 counts. It will be shown that differences outside the tolerance are treated as an error, and the proper action is executed and that the values within the tolerance are acceptable. Assurance that the subtract and limit circuitry checkout logic is functioning correctly will be obtained by disagreement bit monitoring with proper ICR setting. The disagreement bit inhibit feature will be exercised with the bit forced on to verify correct implementation of the associated error test. COD reading order reversal will be perturbed to cause the reading to appear not reversed with the required ICR setting to force this error path.

# 2.3.1.2 LVDC Self Test Subroutine

The function of the LVDC Self Test Subroutine is the internal verification of the LVDC control and arithmetic logic through the comparison of test solutions with known results. Failure conditions will be simulated by forcing error paths through modifications to the LVDC Self Test Subroutine constants. PTL program error telemetry will be analyzed in verification of the following functions. Requirements for this section are given in paragraph 3.2.13 of Appendix A.

# 2.3.1.2.1 Transfer Operations

Conditional transfer instruction tests will be verified by forcing the accumulator to contain the required error condition. This will demonstrate both the validity of the test and proper execution of the associated error paths.

#### 2.3.1.2.2 Arithmetic Operations

Perturbations to the arithmetic tests will be accomplished by modifying the bit patterns within the constants used to verify the operation of the arithmetic logic circuits.

# 2.3.1.2.3 Multiply and Divide Operations

These functional checkout routines will be verified in the same manner as is described in 2.3.1.2.2.

#### 2.3.1.3 Error Monitor Subroutine

All possible set/reset combination of the SCA and SCB bits in the discrete input spares register and the error monitor register will be simulated during verification. The result of each bit combination will be checked. It will also be verified that the ENR is periodically telemetered during execution of the PTL program. Verification of proper telemetry of error messages for specific routines and setting of DO 13 will also be accomplished by telemetry analysis. Paragraph 3.2.3 of Reference 1, Appendix A gives requirements for this routine.

# 2.3.2 LVDA Digital Input Detection

These paragraphs describe how digital input detection verification is accomplished. Nominal and error conditions will be simulated to verify program response to all possible logic paths.

# 2.3.2.1 Interrupt Detection

The following paragraphs describe the verification of interrupt detection which includes both interrupt processing (requirements given in paragraph 3.1.20 in Reference 1 of Appendix A) and interrupt storage register testing.

# 2.3.2.1.1 Interrupt Processing

The Interrupt Processing Routine determines which interrupt occurred and directs the LVDC to the corresponding processing routine. An error message will be forced by simulating an interrupt with no bit set in the interrupt sotrage register. In addition, the TLC bit will be set in the accumulator with all interrupts inhibited, and the resulting interrupt error message will be verified. It will also be verified that the GRR interrupt is processed with correct priority.

## 2.3.2.1.2 Interrupt Storage Register Testing

The interrupt storage register will be checked by setting all possible external interrupt bits and combinations of valid and invalid bits to insure that valid bit combinations are accepted and that invalid bits and bit combinations are flaged as errors.

# 2.3.2.2 Discrete Input Detection

The contents of the discrete input and discrete input spares registers are checked periodically by the Prepare to Launch Routine.

Verification of discrete settings in the registers is accomplished by setting each bit and several bit combinations on in both the discrete input register and the discrete input spares register. Valid bits and bit combinations are verified as are invalid bits and bit combinations.

# 2.3.3 Analog Input Tests

These paragraphs describe how the analog input verification will be accomplished. The two analog inputs are the accelerometer data and the gimbal angle data.

# 2.3.3.1 Accelerometer Monitor Subroutine

The purpose of the Accelerometer Monitor Subroutine (AMP3) is to monitor the ST-124-M inertial platform accelerometers. The requirements for this subroutine are given in paragraph 3.2.8 in Reference 1 of Appendix A. The accuracy of the AMP3 calculation of platform off-level will be verified by perturbations to the accelerometer readings by (1) initial accelerometer misalignments, (2) accelerometer constant bias errors, and (3) accelerometer scale factor errors. These perturbations will be used individually and in combinations; perturbations sufficient to force all AMP3 error detection logic will also be input to the program.

# 2.3.3.2 Gimbal Angle Monitor

The purpose of the gimbal angle monitor routine is to accurately read platform attitude utilizing the multi-speed resolvers and the LVDA analog to digital converters. The requirements for this routine are given in paragraph 3.1.8 of Reference 1 of Appendix A.

Perturbations to gimbal angle readings are accomplished by (1) constant drift rate simulation and (2) constant bias simulation. Correct program reaction is verified by introducting all combinations of these perturbations and monitoring all error messages resulting from these perturbations.

2.3.4 Prepare to Launch/Ground Computer Interface

#### 2.3.4.1 Verify and Prepare to Load Routine

During the Prepare to Launch Routine, the Verify and Prepare to Load routime is used to allow the RCA-110A ground checkout computer to load data

into the LVDC memory or examine a memory location in the LVDC. Only certain locations can be loaded during PTL. An attempt will be made in PTL to load a location other than those designated, and the Prepare to Launch Routine's response will be verified. The requirements for the Verify and Prepare to Load Routine are found in paragraph 3.1.4 of Reference 1, Appendix A.

### 2.3.4.2 PTL Telemetry Cycle

All telemetry from the PTL routine will be printed by the preflight simulation program and checked against expected values. Verification of telemetered data will include that data telemetered every pass through PTL, every other pass through PTL, and the data telemetered after the platform is aligned.

# 2.3.5 Utility Routines

## 2.3.5.1 Issue Status Code

Each commanded LVDC routine issues a status code indicating the present mode of operation to the launch computer. This subroutine is verified by checking telemetry for proper issuance of the status code after commanding a known routine. Paragraph 3.2.4 of Reference 1, Appendix A gives requirements for this subroutine.

#### 2.3.5.2 PTL LVDA Initialize Subroutine

The function of this routine is to inhibit all interrupts except GRR and TLC, to set and reset specified ICR and DOR bits, and to clamp all ladders to zero. The routine is verified by checking the interrupt inhibit regis-

ter contents in PTL and by checking and manipulating the contents of the ICR and DOR set and reset constants in core.

# PART II

.

\*

# VEHICLE AND MISSION DEPENDENT VERIFICATION

REQUIREMENTS

# PART II

# TABLE OF CONTENTS

| Paragraph  | Title   | Page               |
|------------|---|--------------------|
| SECTION 1: | AS-200 Series Vehicles                                    | <mark>1-1</mark>   |
|            | 1.1 Introduction  | 1-1                |
|            | 1.2 General Preflight                                     | 1-1                |
|            | 1.2.1 Program Change Requests                             | 1 <b>-</b> 1       |
|            | 1.2.2 Tape Compare Program                                | 1-1                |
|            | 1.3 AS-206 Prepare to Launch Verification Requirements    | 1-1                |
|            | 1.3.1 DCS Command Verification                            | 1-2                |
|            | 1.3.2 Azimuth Calculation Verification                    | 1-2                |
|            | 1.3.3 Backup Target Load Verification                     | 1-3                |
| SECTION 2: | AS-500 Series Vehicles                                    | 2 <mark>-</mark> 1 |
|            | 2.1 Introduction  | 2-1                |
|            | 2.2 General Preflight                                     | 2-1                |
|            | 2.2.1 Program Change Requests                             | 2-1                |
|            | 2.2.2 Tape Compare Program                                | 2-1                |
|            | 2.3 AS-511 Prepare to Launch Verification Requirements    | 2-2                |
|            | 2.3.1 GMT and PLOT Synchronization and Azimuth Management | 2-2                |



## SECTION 1

# AS-200 SERIES VEHICLES

#### 1.1 INTRODUCTION

This section contains the verification requirements that are applicable to Saturn IB Launch vehicles. Any changes made to the Prepare to Launch program to satisfy the functional requirements of a specific mission must be verified, and the test required to accomplish this effort are outlined herein. This document was originated for the AS-206 mission, thus, all previous vehicles are not included. Updates for future vehicles will be distributed in a periodic manner for inclusion in the verification plan.

## 1.2 GENERAL PREFLIGHT

#### 1.2.1 Program Change Requests

All program changes will be verified as received for each subsequent mission. Program Change Requests (PCR) and methods of verification will be described in the Preflight Verification Results document.

# 1.2.2 Tape Compare Program

A tape compare program will be used to compare all future Preflight Programs to the previous mission program. This comparison will be an added check on changes to the Preflight Program and will also insure that no redundant or unnecessary changes are made.

1.3 AS-206 PREPARE TO LAUNCH VERIFICATION REQUIREMENTS The primary area of change for the AS-206 mission is in the DCS targeting load capability. This function is required to provide an accurate

targeting for linkup with the previously launched orbiting Workshop based on tracking data. Verification of the implementation of this scheme will be accomplished as outlined in the following paragraphs.

#### 1.3.1 DCS Command Verification

Assurance that the program is capable of accepting the target load data sequence and properly formatting each of the eight parameters required to target the launch vehicle will be obtained through analysis of a test series designed to exercise the following requirements:

- Command and data only accepted during the defined time frames.
- Program manipulation with respect to scaling is correct.
- Data overflow conditions are properly handled.
- Negative data quantities (two's complement) are formatted properly.
- Formatted quantities are stored in the right locations for subsequent program use.

All realistic input error configurations will be simulated to insure that only valid data will be accepted and used by the program.

# 1.3.2 Azimuth Calculation Verification

A test series designed to demonstrate the PTL program's ability to compute and telemeter the required platform azimuth as a function of the difference (TD) between the predicted time of GRR ( $T_L$ ) and the nominal time of GRR ( $T_{GRRO}$ ) will be used to verify correct azimuth calculations. Azimuths for values of TD in increments of five seconds will be tested throughout the launch window limits specified for the AS-206 mission.

# 1.3.3 Backup Target Load Verification

The backup method of target data loading (should the DCS fail) will be verified by demonstrating that the LVDC/LVDA/RCA-110A interface is enabled and functional after three DCS load attempts have been made and that the capability is disabled at the correct time during the launch vehicle countdown sequence.

#### SECTION 2

#### AS-500 SERIES VEHICLES

# 2.1 INTRODUCTION

This section contains the verification requirements that are applicable to Saturn V launch vehicles. Any changes made to the Prepare to Launch program to satisfy the functional requirements of a specific mission must be verified, and the tests required to accomplish this effort are outlined herein. This document was originated for the AS-512 mission, thus, all previous vehicles are not included. Updates for future vehicles will be distributed in a periodic manner for inclusion in the verification plan.

# 2.2 GENERAL PREFLIGHT

All program changes will be verified as received for each subsequent mission. The Program Change Requests (PCR) and methods of verification will be described in the Preflight Verification Results document.

# 2.2.1 Program Change Requests

All program changes will be verified as received for each subsequent mission. Program Change Requests (PCR) and methods of verification will be described in the Preflight Verification Results document.

#### 2.2.2 Tape Compare Program

A tape compare program will be used to compare all future Preflight Programs to the previous mission program. This comparison will be an added check on changes to the Preflight Program and will also insure that no redundant or unnecessary changes are made.

# 2.3 AS-512 PREPARE TO LAUNCH VERIFICATION REQUIREMENTS

The primary functional requirements needed in the Prepare to Launch programs for AS-500 series lunar missions is the variable launch azimuth capability. This requirement has been nominally verified in the course of previous flight program verification efforts, i.e., the PTL program has been cycled under nominal conditions to verify the PTL/flight program interface. A thorough verification is required with perturbed inputs to the program to validate error detection implementation. This verification effort will be accomplished as outlined in the following paragraphs.

2.3.1 GMT and PLOT Synchronization and Azimuth Management Verification of proper program usage and testing of these input functions (from RCA-110A) will be obtained through analysis of a series of tests designed to exercise the following checks.

- The requirement to receive GMT and PLOT within 60 seconds of entry into PTL will be violated to check these error paths.
- PLOT values outside the launch window opening and close times will be tested to check error detection.
- The RCA-110A interrupt (handled as a discrete input) will be inhibited indicating no platform alignment and GRRA issued to test for program response.
- Perturbed fine and backup roll gimbal angle readings will be used to check the gimbal angle reasonableness test (a function of computed azimuth).
- PLOT values outside the range safety limits will be tested to check error detection.

• It will be verified that the program can correctly process combinations of PLOT and PTL entry times before, after, and across midnight GMT.

In all error conditions forced, proper DO13 setting will be demonstrated.

#### APPENDIX A

#### REFERENCES

- LVDC Preflight Program Descriptions, MSFC No. DRL-008A, IBM No. 67-F11-0011.
- LVDC Equation Defining Document for the Saturn V Flight Programs Revision I, MSFC III-4-423-15, IBM No. 69-207-0001.
- Astrionics System Handbook Saturn Launch Vehicles, MSFC No. IV-4-401-1, IBM No. 68-966-0002.
- Programmers Operating Manual Saturn Launch Vehicle Digital Computer, Launch Vehicle Data Adapter and Programmable Test Controller, Contracts NAS8-11561 and NAS8-11562.
- Program Verification Plan for Saturn Launch Vehicle Prepare to Launch Programs, IBM No. 71W-00143.
- 6. IBM Memo K96-70-048, Determination of AMP3 Error Equations

# APPENDIX

# TABLE OF CONTENTS

| Paragraph   | Title  | Page             |
|-------------|--|------------------|
| APPENDIX A: | References   | A-1              |
| APPENDIX B: | Verification Test Case Description                     | <mark>B-1</mark> |
| APPENDIX C: | Error Message Telemetry vs. Preflight Routine          | C-1              |
| APPENDIX D: | Preflight Program Calling Routines vs. Called Routines | <b>D-</b> 1      |

i

### APPENDIX B

#### VERIFICATION TEST CASE DESCRIPTION

The verification cases which are described in this Appendix constitute the minimum tests to be performed for verification of the Preflight Program.

GENERAL PREFLIGHT NOMINAL CONDITIONS TEST CASES

| Case | Desctiption   |
|------|---|
| 1.0  | Memory Load, Verification, and Initialization Programs          |
| 1.1  | Command sector dumps from modules 0, 2, 5.                      |
| 1.2  | Command sector sum checks of modules 0, 2, 5.                   |
| 1.3  | Load various core locations, and verify the data loaded through |
|      | the Verify & Prepare to Load Routine.                           |
| 1.4  | Command sector dumps of modules 0, 1, 2, 4 through the Special  |
|      | Loader Routine.   |
| 1.5  | Load various core locations, and verify the data loaded through |
|      | the Special Loader Routine.                                     |
|      |   |
| 2.0  | Guidance and Control System Test and Monitor Programs           |
| 2.1  | Specify various pulse counts and order of axis interrogation    |
|      | to the Accelerometer Pulse Count Routine.                       |
| 2.2  | Input twelve-bit CIU addresses to the CIU Read Routine.         |
| 2.3  | Command execution of the Command Receiver Linkage Routine.      |
| 2.4  | Command execution of the Commanded Flight Linkage Routine, and  |
|      | sum check all sectors, when Repeatable Flight Simulation has    |
|      | completed.  |

B-1

| Case | Description   |
|------|---|
| 2.5  | Command execution of the Discrete Input Monitor Routine with    |
|      | various patterns set in the DIN, DIS, and ISR registers.        |
| 2.6  | Input different pitch, roll, and yaw increments to the Exercise |
|      | Attitude Command Routine.                                       |
| 2.7  | Command execution of the G&C Steering Test Routine.             |
| 2.8  | Specify different combinations of fine, backup, and coarse      |
|      | resolvers to be monitored, and command execution of the Gimbal  |
|      | Angle Monitor Routine.  |
| 2.9  | Specify different switch selectors to be driven, and command    |
|      | execution of the Switch Selector Test Routine.                  |
| 2.10 | Specify each rate in both modes of the Telemetry Test Routine.  |
|      |   |
| 3.0  | LVDC/LVDA Test Programs   |
| 3.1  | Command execution of the DOM Test Routine, and monitor the      |
|      | resulting DOM telemetry.  |
| 3.2  | Command execution of the Ladder Error Test Routine.             |
| 3.3  | Command execution of the Memory Error Test Routine.             |
| 3.4  | Command execution of the Minor Loop Switch Selector and Real    |
|      | Time Counter Test Routine.                                      |
|      |   |
|      |   |

B-2

# PREPARE TO LAUNCH TEST CASES

| Case | Description  |
|------|--|
| 1.0  | LVDC Real Time Counter Tests                                   |
| 1.1  | Simulate a positive one count clock bias by adding a low order |
|      | bit to the latest clock reading.                               |
| 1.2  | Simulate a negative one count clock bias as in 1.1 above.      |
| 1.3  | Simulate a real time clock failure - zero increment.           |
|      |  |
| 2.0  | Minor Loop and Switch Selector Interrupt Counters              |
| 2.1  | Modify the constants loaded into each counter to force an      |
|      | interrupt time in error by 3 (equivalent to 1 RTC count)       |
|      | LVDC word times.   |
| 2.2  | Same as 2.1 with a $-3$ LVDC word time error.                  |
|      |  |
| 3.0  | Accelerometer Optisyn Delay Line Tests                         |
| 3.1  | One count difference in A and B channel readings; all three    |
|      | axes.  |
| 3.2  | Two count difference in A and B channel readings; all three    |
|      | axes.  |
| 3.3  | Three count difference in A and B channel readings; all three  |
|      | axes.  |
|      |  |
| 4.0  | Crossover Detector Counter Tests                               |
| 4.1  | Positive three count difference between duplex counter         |
|      | readings.  |

B-3

•

| Case | Description   |
|------|---|
| 4.2  | Positive four count difference between duplex counter       |
|      | readings.   |
| 4.3  | Negative four count difference between duplex counter       |
|      | readings.   |
| 4.4  | Negative five count difference between duplex counter       |
|      | readings.   |
| 4.5  | ICR and disagreement bit combinations to check subtract and |
|      | limit circuitry and disagreement bit inhibit logic.         |
|      |   |
| 5.0  | LVDC Instruction Execution Tests                            |
| 5.1  | Execute conditional transfers by forcing the accumulator    |
|      | to contain the required error condition.                    |
| 5.2  | Execute arithmetic tests with perturbations to the com-     |
|      | parison constants.  |
|      |   |
| 6 0  | Error Manitar Desistor (EMD) Tests                          |

- 6.0 Error Monitor Register (EMR) Tests
- 6.1 Real Time telemetry analysis to verify EMR telemetry.
- 6.2 Set the EAM bit and the EBM bit in the EMR.
- 6.3 Simulate all possible set/reset combinations of the SCA and SCB bits in the EMR and the DISR.

### 7.0 Interrupt and Discrete Cases

- 7.1 Forced interrupt with no bit set in ISR.
- 7.2 Forced interrupt with all bits set in ISR.
- 7.3 Forced interrupt with several bits set in ISR, including GRR, but excluding TLC.

B-4

# Desciption Case 7.4 Verify ISR AND ing constant. 7.5 Set (one at a time) all external interrupts. 7.6 Verify DIN ANDing and XORing constants. 7.7 Set all discrete inputs. 7.8 Set (one at a time) all discrete inputs. 7.9 Verify DIS ANDing and XORing constants. 7.10 Set all discrete input spares. 7.11 Set bit combinations of discrete inputs (both valid and nonvalid bits). 8.0 Accelerometer and Gimbal Angle Perturbation Cases

- 8.1 Initial accelerometer misalignment test cases.
- 8.2 Accelerometer constant bias error test cases.

8.3 Accelerometer scale factor error test cases.

- 8.4 Initial accelerometer misalignment and constant bias error test cases.
- 8.5 Initial accelerometer misalignment and scale factor error test cases.
- 8.6 Accelerometer constant bias and scale factor error test cases.
- 8.7 Initial accelerometer misalignment, constant bias, and scale factor error test cases.
- 8.8 Gimbal angle constant drift rate test cases.
- 8.9 Gimbal angle constant bias test cases.
- 8.10 Gimbal angle constant drift rate and constant bias test cases.

| Case | Description  |  |  |  |  |
|------|--|--|--|--|--|
| 9.0  | Prepare to Launch/Ground Computer Interface              |  |  |  |  |
| 9.1  | Load location 0,16,357 with any value.                   |  |  |  |  |
| 9.2  | Check all phases of PTL telemetry.                       |  |  |  |  |
|      |  |  |  |  |  |
| 10.0 | Utility Routines   |  |  |  |  |
| 10.1 | Verify contents of Interrupt Inhibit Register.           |  |  |  |  |
| 10.2 | Verify ICR and DOR set and reset constants.              |  |  |  |  |
| 10.3 | Modify DOR and ICR set and reset constants, execute PTL, |  |  |  |  |
|      | and monitor FCDD register contents.                      |  |  |  |  |
| 10.4 | Real Time telemetry analysis to check issuance of        |  |  |  |  |

status codes.

#### APPENDIX C

The following table lists the error message telemetry for the preflight routines. For each routine the error name, the error message number in octal, and the sequence that the error occurs within the routine is outlined. The model 44, unlike the LVDC, also possesses a description of each error message number. The decimal number is assigned in the model 44 to each error message description.

### ERROR MESSAGE TELEMETRY VS. PREFLIGHT ROUTINE

| LVDC Preflight Routi | Test<br>ine Sequence | Preflight<br>Error<br>Name | Octal<br>Error<br>Telemetry | Decimal<br>Assigned<br>Number |
|----------------------|----------------------|----------------------------|-----------------------------|-------------------------------|
| 1. LVDA Timing &     | 1                    | DAEM1                      | 111000000                   | 51                            |
| Counter              |                      | DAEM2                      | 112000000                   | 59                            |
|                      |                      | DAEM4                      | 114000000                   | 70                            |
|                      |                      | DAEM7                      | 117000000                   | 34                            |
|                      |                      | DAEM9                      | 112000000                   | 53                            |
|                      |                      | DAEM12                     | 111500000                   | 56                            |
|                      |                      | DAEM1 3                    | 111600000                   | 57                            |
|                      |                      | DAEM14                     | 111700000                   | 58                            |
|                      |                      | DAEM15                     | 112100000                   | 60                            |
|                      |                      | DAEM16                     | 112200000                   | 61                            |
|                      |                      | DAEM 33                    | 114500000                   | 63                            |
|                      |                      | DAEM1 8                    | 112400000                   | 64                            |
|                      |                      | DAEM19                     | 112500000                   | 66                            |
|                      |                      | DAEM21                     | 112700000                   | 68                            |
|                      |                      | DAEM22                     | 113100000                   | 69                            |

C-1

| LVD | C Preflight Routine | Test<br>Sequence | Preflight<br>Error<br>Name | Octal<br>Error<br>Telemetry | Decimal<br>Assigned<br>Number |
|-----|---------------------|------------------|----------------------------|-----------------------------|-------------------------------|
|     |                     | 2                | DAEM23                     | 113200000                   | 71                            |
|     |                     |                  | DAEM5                      | 115000000                   | 72                            |
|     |                     | 3                | DAEM10                     | 111300000                   | 54                            |
|     |                     | 4                | DAEM3                      | 113000000                   | 67                            |
|     |                     | 5                | DAEM8                      | 111100000                   | 52                            |
|     |                     | 6                | DAEM6                      | 116000000                   | 73                            |
|     |                     | 7                | DAEM11                     | 111400000                   | 55                            |
|     |                     | 8                | DAEM20                     | 112600000                   | 65                            |
|     |                     | 9                | DAEM17                     | 112 300000                  | 62                            |
|     |                     | 10               | NONE                       |                             |                               |
| 2.  | Minor Loop, Switch  | 1                | CTEM1                      | 13000000                    | 11                            |
|     | Selector, and Real  | 2                | CTEM2                      | 131000000                   | 12                            |
|     | Time Counter        | 3                | CTEM3                      | 132000000                   | 13                            |
|     |                     | 4                | CTEM4                      | 133000000                   | 14                            |
|     |                     | 5                | CTEM5                      | 134000000                   | 15                            |
|     |                     | 6                | CTEM6                      | 135000000                   | 16                            |
|     |                     | 7                | NONE                       |                             |                               |
| 3.  | Mode Sort Routine   | 1                | MSEMO                      | 000000000                   | 21                            |
|     |                     |                  | MS EM1                     | 001000000                   | 23                            |
|     |                     |                  | MSEM3                      | 001200000                   | 141                           |
|     |                     | 2                | MSEM2                      | 001100000                   | 22                            |
|     |                     | 3                | NONE                       |                             |                               |
| 4.  | Telemetry Test      | 1                | TLEM1                      | 327000000                   | 136                           |
|     |                     | 2                | NONE                       |                             |                               |
| 5.  | Read Input Data     | 1                | RIEM1                      | 451000000                   | 138                           |
|     | Subroutine          | 2                | NONE                       |                             |                               |
|     |                     |                  |                            |                             |                               |

C-2

| LVDC | Preflight Routine | Test<br>Sequence | Preflight<br>Error<br>Name | Octal<br>Error<br>Telemetry | Decimal<br>Assigned<br>Number |
|------|-------------------|------------------|----------------------------|-----------------------------|-------------------------------|
| 6. 0 | CIU Read Routine  | 1                | CIUEM1                     | 141000000                   | 103                           |
|      |                   | 2                | CIUEM2                     | 142000000                   | 104                           |
|      |                   | 3                | NONE                       |                             |                               |
| 7. G | &C Steering       | 1                | GCEM1                      | 061000000                   | 25                            |
|      |                   | 2                | NONE                       |                             |                               |
| 8. D | 00M Test          | 1                | DIEM1                      | 071000000                   | 26                            |
|      |                   | 2                | NONE                       |                             |                               |
| 9. L | adder Error Test  | 1                | LEEM1                      | 101000000                   | 27                            |
|      |                   | 2                | LEEM2                      | 102000000                   | 35                            |
|      |                   |                  | LEEM4                      | 104000000                   | 47                            |
|      | ¥                 |                  | LEEM5                      | 105000000                   | 48                            |
|      |                   |                  | LEEM7                      | 107000000                   | 50                            |
|      |                   |                  | LEEM9                      | 101200000                   | 29                            |
|      |                   |                  | LEEM11                     | 101400000                   | 31                            |
|      |                   |                  | LEEM23                     | 103100000                   | 44                            |
|      |                   |                  | LEEM12                     | 101500000                   | 32                            |
|      |                   |                  | LEEM14                     | 101700000                   | 34                            |
|      |                   |                  | LEEM16                     | 102200000                   | 37                            |
|      |                   |                  | LEEM20                     | 102600000                   | 41                            |
|      |                   | 3                | LEEM3                      | 10300000                    | 43                            |
|      |                   |                  | LEEM8                      | 101100000                   | 38                            |
|      |                   |                  | LEEM10                     | 101300000                   | 30                            |
|      |                   |                  | LEEM22                     | 103300000                   | 46                            |
|      |                   |                  | LEEM13                     | 101600000                   | 33                            |
|      |                   |                  | LEEM15                     | 102100000                   | 36                            |
|      |                   |                  |                            |                             |                               |

| LVD | C Preflight Routine | Test<br>Sequence | Preflight<br>Error<br>Name | Octal<br>Error<br>Telemetry | Decimal<br>Assigned<br>Number |
|-----|---------------------|------------------|----------------------------|-----------------------------|-------------------------------|
|     |                     |                  | LEEM17                     | 102300000                   | 38                            |
|     |                     |                  | LEEM21                     | 102700000                   | 42                            |
|     |                     | 4                | LEEM4                      | 104000000                   | 47                            |
|     |                     |                  | LEEM6                      | 106000000                   | 49                            |
|     |                     | 5                | LEEM18                     | 102400000                   | 39                            |
|     |                     | 6                | LEEM19                     | 102500000                   | 40                            |
|     |                     | 7                | LEEM11                     | 101400000                   | 31                            |
|     |                     |                  | LEEM24                     | 103200000                   | 45                            |
|     |                     | 8                | NONE                       |                             |                               |
| 10. | Interrupt           | 1                | INEM1                      | 331000000                   | 1                             |
|     | Processor           | 2                | INEM2                      | 332000000                   | 137                           |
|     |                     | 3                | NONE                       |                             |                               |
| 11. | Verify & Prepare    | 1                | LVEM1                      | 211000000                   | 122                           |
|     | to Load             | 2                | LVEM2                      | 212000000                   | 123                           |
|     |                     | 3                | LVEM 3                     | 213000000                   | 124                           |
|     |                     | 4                | LVEM4                      | 214000000                   | 125                           |
|     |                     | 5                | LVEM5                      | 215000000                   | 126                           |
|     |                     | 6                | LVEM6                      | 216000000                   | 127                           |
|     |                     | 7                | LVEM7                      | 217000000                   | 0                             |
|     |                     | 8                | NONE                       |                             |                               |
| 12. | Exercise Attitude   | 1                | ECEM1                      | 171000000                   | 118                           |
|     | Command             | 2                | ECEM2                      | 172000000                   | 119                           |
|     |                     | 3                | ECEM 3                     | 173000000                   | 120                           |
|     |                     | 4                | ECEM4                      | 174000000                   | 121                           |
|     |                     | 5                | NONE                       |                             |                               |

**C-4** 

| LVDC | Preflight Routine | Test<br>Sequence | Preflight<br>Error<br>Name | Octal<br>Error<br>Telemetry | Decimal<br>Assigned<br>Number |
|------|-------------------|------------------|----------------------------|-----------------------------|-------------------------------|
| 13.  | Load Routine      | 1                | LDEM1                      | 231000000                   | 128                           |
|      |                   | 2                | LDEM2                      | 231200000                   | 129                           |
|      |                   | 3                | NONE                       |                             |                               |
| 14.  | Resolver Error    | 1                | REEM1                      | 441000000                   | 2                             |
|      | Subroutine        | 2                | NONE                       |                             |                               |
| 15.  | Switch Selector   | 1                | SSEM1                      | 151000000                   | 105                           |
|      | Test              | 2                | SSEM2                      | 152000000                   | 112                           |
|      |                   | 3                | SSEM3                      | 153000000                   | 113                           |
|      |                   | 4                | SSEM4                      | 154000000                   | 114                           |
|      |                   | 5                | SSEM5                      | 155000000                   | 115                           |
|      |                   | 6                | SSEM7                      | 157000000                   | 116                           |
|      |                   | 7                | SSEM11                     | 151400000                   | 109                           |
|      |                   | 8                | SSEM7                      | 157100000                   | 117                           |
|      |                   |                  | PASS2                      |                             |                               |
|      |                   | 9                | SSEM11<br>PASS2            | 151410000                   | 110                           |
|      |                   | 10               | SSEM8                      | 151100000                   | 106                           |
|      |                   | 11               | SSE <b>M9</b>              | 151200000                   | 107                           |
|      |                   | 12               | SSEM12                     | 151500000                   | 111                           |
|      |                   | 13               | SSEM10                     | 151300000                   | 108                           |
|      |                   | 14               | NONE                       |                             |                               |
| 16.  | Self Test         | 1 - 35           | STEM1                      | 002000000                   | 24                            |
|      | Subroutine        |                  |                            |                             |                               |
| 17.  | Memory Error      | 1                | MEM1                       | 220000000                   | 3                             |
|      | Test              | 2                | MEM2                       | 220000010                   | 4                             |
|      |                   |                  | MEM 3                      | 220000020                   | 5                             |

| LVDC | Preflight Routine | Test<br>Sequence | Preflight<br>Error<br>Name | Octal<br>Error<br>Telemetry | Decimal<br>Assigned<br>Number |
|------|-------------------|------------------|----------------------------|-----------------------------|-------------------------------|
|      |                   |                  | MEM4                       | 220000030                   | 6                             |
|      |                   |                  | MEM 5                      | 220000040                   | 7                             |
|      |                   |                  | MEM6                       | 220000050                   | 8                             |
|      |                   |                  | MEM 7                      | 220000060                   | 9                             |
|      |                   |                  | MEM 8                      | 220000070                   | 10                            |
|      |                   |                  | MEM9                       | 220000100                   | 11                            |
|      |                   |                  | MEM10                      | 220000110                   | 12                            |
|      |                   |                  | MEM11                      | 220000120                   | 13                            |
|      |                   |                  | MEM12                      | 220000130                   | 15                            |
|      |                   |                  | MEM13                      | 220000140                   | 17                            |
|      |                   |                  | MEM14                      | 220000150                   | 19                            |
|      |                   | 3                | NONE                       |                             |                               |
| 18.  | Prepare to        | 1                | PLEM1                      | 121000000                   | 87                            |
|      | Launch            |                  | PLEM2                      | 122000000                   | 88                            |
|      |                   |                  | PLEM3                      | 123000000                   | 92                            |
|      |                   | 2                | PLEM52                     | 125200000                   | 93                            |
|      |                   |                  | PLEM54                     | 125400000                   | 94                            |
|      |                   | 3                | PLEM5                      | 125000000                   | 90                            |
|      |                   |                  | PLEM51                     | 125100000                   | 91                            |
|      |                   | 4                | PLEM6                      | 126000000                   | 98                            |
|      |                   | 5                | PLEM61                     | 126100000                   | 99                            |
|      |                   | 6                | PLEM62                     | 126200000                   | 100                           |
|      |                   | 7                | PLEM63                     | 126 300000                  | 101                           |
|      |                   | 8                | PLEM56                     | 125600000                   | 96                            |
|      |                   | 9                | PLEM57                     | 125700000                   | 97                            |
|      |                   | 10               | PLEM7                      | 127000000                   | 140                           |

4

| LVDC Preflight Routine | Test<br>Sequence | Preflight<br>Error<br>Name | Octal<br>Error<br>Telemetry | Decimal<br>Assigned<br>Number |
|------------------------|------------------|----------------------------|-----------------------------|-------------------------------|
|                        | 11               | PLEM4                      | 124000000                   | 139                           |
|                        | 12               | PLEM00                     | 120000000                   | 75                            |
|                        |                  | PLEM01                     | 120040000                   | 76                            |
|                        |                  | PLEM02                     | 120100000                   | 77                            |
|                        |                  | PLEM03                     | 120140000                   | 78                            |
|                        |                  | PLEM04                     | 120200000                   | 79                            |
|                        |                  | PLEM05                     | 120240000                   | 80                            |
|                        |                  | PLEM06                     | 120300000                   | 81                            |
|                        |                  | PLEM07                     | 120340000                   | 82                            |
|                        |                  | PLEM08                     | 120400000                   | 83                            |
|                        |                  | PLEM09                     | 120440000                   | 84                            |
|                        |                  | PLEMOA                     | 120500000                   | 85                            |
|                        |                  | PLEMOB                     | 120540000                   | 86                            |

#### APPENDIX D

The following table presents a cross reference between Preflight calling routines and called routines. The column on the left of the table lists and numbers all Preflight routines and subroutines. The top row of the table lists the routines and subroutines by the numbers corresponding to the routines listed in the left hand column. The left hand column lists all Preflight routines whether or not they call other routines, but the row at the top of the table lists only those routines which are called automatically, when another Preflight routine is executed. It should be noted that this table depicts a cross reference for Preflight only under nominal conditions. Logic paths for error conditions or interrupt processing are not included.

### PREFLIGHT PROGRAM CALLING ROUTINES VS. CALLED ROUTINES

|     | Calling Routines           |          |       |      | С  | alled | l Rot | utin | es |    |    |    |    |    |    |    |    |
|-----|----------------------------|----------|-------|------|----|-------|-------|------|----|----|----|----|----|----|----|----|----|
|     |                            | 1 3 6 10 | 12 13 | 15 1 | L6 | 18 21 | 22    | 25   | 26 | 27 | 30 | 31 | 34 | 35 | 41 | 44 | 45 |
| 1.  | Accelerometer Monitor      |          |       |      |    |       |       |      |    |    |    |    |    |    |    |    |    |
| 2.  | Accelerometer Pulse Count* |          |       |      | X  | Х     |       |      |    | X  | X  |    | X  | X  |    |    |    |
| 3.  | CIU Read*                  |          |       |      |    | Х     |       |      |    | Х  |    |    | Х  | X  |    |    |    |
| 4.  | Command Receiver Linkage*  |          |       |      |    | Х     |       |      |    |    |    |    |    |    |    |    |    |
| 5.  | Commanded Flight Linkage*  |          |       |      |    | Х     |       |      |    |    |    |    |    |    |    |    |    |
| 6.  | Control Word Execute       |          |       |      | X  |       |       |      |    |    |    |    |    |    |    |    |    |
| 7.  | Discrete Input Monitor*    |          |       |      |    | Х     |       |      |    | Х  |    |    |    |    | Х  |    |    |
| 8.  | Discrete Output Monitor*   |          |       |      |    | Х     |       |      |    |    |    |    | Х  |    |    |    |    |
| 9.  | DOM Test*                  |          |       |      |    | Х     |       |      |    |    |    |    |    |    | X  |    |    |
| 10. | Error Monitor              |          |       |      |    |       |       |      |    |    |    |    |    |    |    |    |    |
| 11. | Exercise Attitude Command* |          |       |      |    | Х     |       |      |    |    |    |    | Х  | X  | X  |    |    |
| 12. | Forced Begin               |          |       | Х    |    | Х     |       | X.   | Х  |    |    |    |    |    | X  |    | Х  |
| 13. | Gimbal Angle Monitor*      |          |       |      | X  | Х     |       |      |    | X  | Х  |    | Х  |    |    |    |    |
| 14. | G&C Steering*              |          |       |      |    | X     |       |      |    |    |    |    |    |    |    |    |    |
| 15. | HOP 400 Initialize         |          |       |      | Х  |       |       |      |    |    |    |    |    |    |    |    |    |

PREFLIGHT PROGRAM CALLING ROUTINES VS. CALLED ROUTINES (CONTINUED)

|                   | Calling Routines                                     |     |    |    |    |    |    | С  | a11 | ed | Roi | ıtir | ies |    |    |    |    |    |    |    |    |
|-------------------|--|-----|----|----|----|----|----|----|-----|----|-----|------|-----|----|----|----|----|----|----|----|----|
|                   |  | 1 : | 36 | 10 | 12 | 13 | 15 | 16 | 18  | 21 | 22  | 25   | 26  | 27 | 30 | 31 | 34 | 35 | 41 | 44 | 45 |
| 16.               | Instruction Execute                                  |     |    |    |    |    |    |    |     |    |     |      |     |    |    |    |    |    |    |    |    |
| 17.               | Interrupt Processing****                             |     |    |    |    |    |    |    |     |    |     |      |     |    |    |    |    |    |    |    |    |
| 18.               | Issue Status Code                                    |     |    |    |    |    |    |    |     |    |     |      | X   |    |    |    |    |    |    |    |    |
| <mark>19</mark> . | Ladder Error Test*                                   |     |    |    |    |    |    |    | Х   |    |     |      |     |    |    |    |    | X  |    |    |    |
| 20.               | Load**   |     | Х  |    |    |    |    |    | Х   |    |     |      |     |    |    |    |    |    |    |    |    |
| 21.               | LVDA Timing and Counter Test                         |     |    |    |    |    |    |    |     |    |     |      |     |    |    |    |    |    |    |    |    |
| 22.               | LVDC Self Test                                       |     |    |    |    |    |    |    |     |    |     |      |     |    |    |    |    |    |    |    |    |
| 23.               | Memory Error Test*                                   |     |    |    |    |    |    |    | Х   |    |     |      |     |    |    |    |    |    |    |    |    |
| 24.               | Minor Loop, Switch Selector, & Real<br>Time Counter* |     |    |    |    |    |    |    | х   |    |     |      |     |    |    |    |    |    |    |    |    |
| 25.               | Mode Sort  | X   |    | Х  |    |    |    |    | X   | Х  | Х   |      |     |    |    |    |    |    | Х  |    |    |
| 26.               | Output Interrupt Generate                            |     |    |    |    |    |    |    |     |    |     |      |     |    | X  |    |    |    | Х  |    |    |
| 27.               | Output   |     |    |    |    |    |    |    |     |    |     |      | X   |    |    |    |    |    |    |    |    |
| 28.               | Power Up Initialize                                  |     |    |    | X  |    | X  |    |     |    |     | •    |     |    |    |    |    |    |    |    | X  |
| 29.               | Prepare to Launch*                                   | X   |    | X  |    | Х  |    | X  | Х   | X  | X   |      | X   |    | X  | Х  |    |    | Х  |    |    |
| 30.               | PTL Real Time Update                                 |     |    |    |    |    |    |    |     |    |     |      |     |    |    |    |    | X  |    |    |    |

# PREFLIGHT PROGRAM CALLING ROUTINES VS. CALLED ROUTINES (CONTINUED)

|     | Calling Routines              |             |       | С  | alled | Rou | tines |    |    |    |    |    |    |    |    |
|-----|-------------------------------|-------------|-------|----|-------|-----|-------|----|----|----|----|----|----|----|----|
|     |                               | 1 3 6 10 12 | 13 15 | 16 | 18 21 | 22  | 25 26 | 27 | 30 | 31 | 34 | 35 | 41 | 44 | 45 |
| 31. | PTL LVDA Initialize           |             |       |    |       |     |       |    |    |    |    |    |    |    |    |
| 32. | Program Continue*             |             |       |    | X     |     |       |    |    |    |    |    |    |    |    |
| 33. | Program HOP                   |             |       |    |       |     |       |    |    |    |    |    |    |    |    |
| 34. | Read Input Data               |             |       |    | Х     |     |       |    | Х  |    |    | Х  | Х  |    |    |
| 35. | Real Time Delta               |             |       |    |       |     |       |    |    |    |    |    |    |    |    |
| 36. | Resolver Error                |             |       |    |       |     |       |    |    |    |    |    |    |    |    |
| 37. | Sector Dump*                  |             |       | Х  | X     |     |       | X  |    |    | X  |    |    | X  |    |
| 38. | Sector Sum Check*             |             |       | Х  | Х     |     |       | Х  |    |    | Х  |    |    | Х  |    |
| 39. | Special Loader***             |             |       |    |       |     |       |    |    |    |    |    |    |    |    |
| 40. | Switch Selector Test*         | X           |       |    | X     |     |       |    |    |    | Х  |    |    |    |    |
| 41. | Sync Reset                    |             |       |    |       |     |       |    | X  |    |    |    |    |    |    |
| 42. | Telemetry Test*               |             |       | Х  | Х     |     |       |    |    |    |    |    |    |    |    |
| 43. | Verify and Prepare to Load ** | Х           |       |    | Х     |     |       | Х  |    |    | Х  |    |    |    |    |

**D-4** 

### PREFLIGHT PROGRAM CALLING ROUTINES VS. CALLED ROUTINES (CONTINUED)

| Calling Routines |     |   |    |    |    |    | (  | Call | ed | Rou | itir | ies |    |    |    |    |    |    |    |    |
|------------------|-----|---|----|----|----|----|----|------|----|-----|------|-----|----|----|----|----|----|----|----|----|
|                  | 1 3 | 6 | 10 | 12 | 13 | 15 | 16 | 18   | 21 | 22  | 25   | 26  | 27 | 30 | 31 | 34 | 35 | 41 | 44 | 45 |

44. TLC Monitor

Ъ

45. Register Initialize

\*Commanded only through Mode Sort.

\*\*Commanded through Mode Sort and/or PTL.

\*\*\*Commanded through Mode Sort and/or Power Up Initialize.

\*\*\*\*Can be entered during any routine or subroutine, when an interrupt allowed by that routine or subroutine is received.



Federal Systems Division Electronics Systems Center Huntsville, Alabama







Apollo/Saturn Team