

approved takeoff thrust or power without exceeding engine operating limits; and

(2) Provide a means to verify to the flightcrew before takeoff and before beginning an approach for landing that the ATTCs is in a condition to operate.

3. *Critical Time Interval.* The definition of the Critical Time Interval in appendix I, § 125.2(b) shall be expanded to include the following:

a. When conducting an approach for landing using ATTCs, the critical time interval is defined as follows:

(1) The critical time interval begins at a point on a 2.5 degree approach glide path from which, assuming a simultaneous engine and ATTCs failure, the resulting approach climb flight path intersects a flight path originating at a later point on the same approach path corresponding to the part


25 one-engine-inoperative approach climb gradient. The period of time from the point of simultaneous engine and ATTCs failure to the intersection of these flight paths must be no shorter than the time interval used in evaluating the critical time interval for takeoff beginning from the point of simultaneous engine and ATTCs failure and ending upon reaching a height of 400 feet.

(2) The critical time interval ends at the point on a minimum performance, all-engines-operating go-around flight path from which, assuming a simultaneous engine and ATTCs failure, the resulting minimum approach climb flight path intersects a flight path corresponding to the part 25 minimum one-engine-inoperative approach climb gradient. The all-engines-operating go-around flight path

and the part 25 one-engine-inoperative approach climb gradient flight path originate from a common point on a 2.5 degree approach path. The period of time from the point of simultaneous engine and ATTCs failure to the intersection of these flight paths must be no shorter than the time interval used in evaluating the critical time interval for the takeoff beginning from the point of simultaneous engine and ATTCs failure and ending upon reaching a height of 400 feet.

b. The critical time interval must be determined at the altitude resulting in the longest critical time interval for which one-engine-inoperative approach climb performance data are presented in the Airplane Flight Manual (AFM).

c. The critical time interval is illustrated in the following figure:

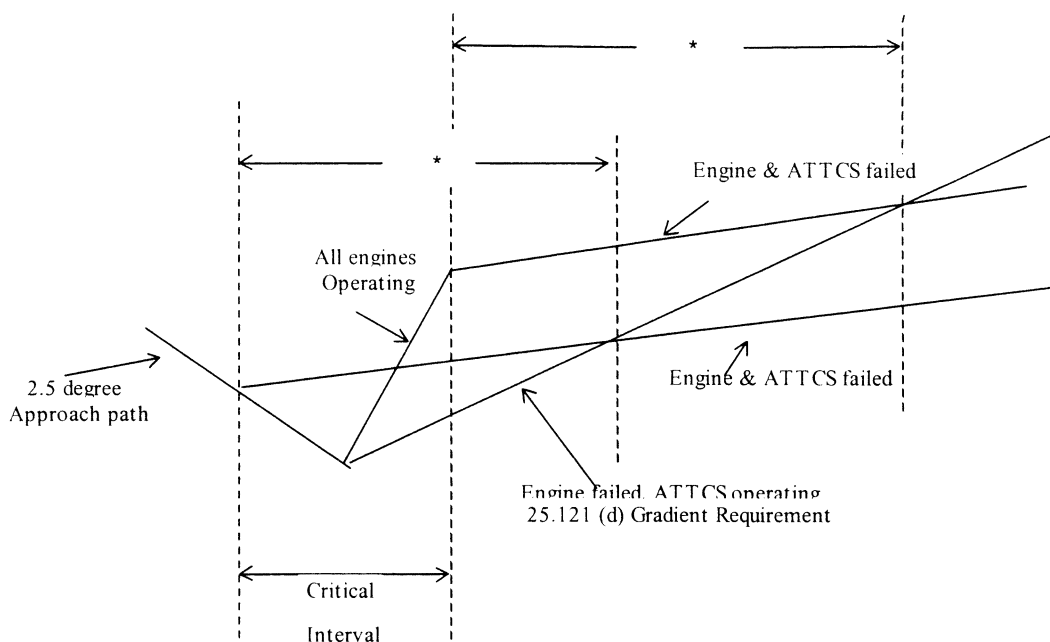

\* The engine and ATTCs failed time interval must be no shorter than the time interval from the point of simultaneous engine and ATTCs failure to a height of 400 feet used to comply with 125.2(b) for ATTCs use during takeoff.