

PDRS Operations Checklist

**Mission Operations Directorate
EVA, Robotics, & Crew Systems
Operations Division**

**Generic, Rev F
February 23, 2007**

NOTE

For STS-117 and subsequent flights per schedule

National Aeronautics and
Space Administration

Lyndon B. Johnson Space Center
Houston, Texas



PDRS OPERATIONS CHECKLIST

GENERIC, REV F (February 23, 2007)

PCN-1 (May 18, 2007) Sheet 1 of 1

List of Implemented Change Requests (482s):

PDRS-1050
PDRS-1051
PDRS-1052
PDRS-1053

NOTE

For STS-117 and subsequent flights

Incorporate the following:

1. Replace iii thru vi
2. Replace 7-3 thru 7-8, 7-21 and 7-22, 7-25 and 7-26, 7-31 thru 7-34, 7-39 thru 7-46
3. Replace CC 12-7 and CC 12-8

Prepared by:




Book Manager

Approved by:

Lead, Shuttle and Exploration Robotics
Operations Group

Accepted by:



Chief, Robotics Operations Branch

Encl: 28 pages


File this PCN immediately behind the front cover as a permanent record

MISSION OPERATIONS DIRECTORATE

PDRS OPERATIONS CHECKLIST

GENERIC, REVISION F
February 23, 2007

PREPARED BY:

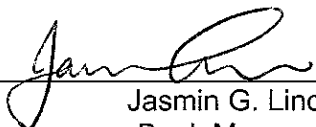


Jasmin G. Lindo
Book Manager

APPROVED BY:



Aaron D. Goldenthal
Lead, Robotics Systems Group



Franklin S. Markle
Chief, Robotics Operations Branch

This document is under the configuration control of the Crew Procedures Control Board (CPCB). All proposed changes must be submitted via FDF Workflow Crew Procedure Change Request (CR) to DO3/FDF Manager.

Additional distribution of this book, for official use only, may be requested in writing to DO3/PMO Administrator. The request must include justification and requester's name, organization, position, and phone number. Contractor requests are made through the NASA or DOD organization supported. Deletions, reduction in quantity, or change of address may be submitted to DO3/FDF Management Office, 281-244-1184.

Incorporates the following:	
482#:	PDRS-1046 PDRS-1047

AREAS OF TECHNICAL RESPONSIBILITY

Book Manager

DX22/J. Lindo

281-483-5761

PDRS OPERATIONS CHECKLIST

LIST OF EFFECTIVE PAGES

GENERIC 08/08/88

REV F 02/23/07

PCN-1 05/18/07

Sign Off	*	ALL/GEN F	6-11	ALL/GEN F
ii	*	ALL/GEN F	6-12	ALL/GEN F
iii	*	ALL/GEN F,1	6-13	ALL/GEN F
iv	*	ALL/GEN F,1	6-14	ALL/GEN F
v	*	ALL/GEN F,1	6-15	ALL/GEN F
vi	*	ALL/GEN F,1	6-16	ALL/GEN F
vii	*	ALL/GEN F	6-17	ALL/GEN F
viii	*	ALL/GEN F	6-18	ALL/GEN F
ix		ALL/GEN F	6-19	ALL/GEN F
x		ALL/GEN F	6-20	ALL/GEN F
1-1		ALL/GEN F	6-21	ALL/GEN F
1-2		ALL/GEN F	6-22	ALL/GEN F
1-3		ALL/GEN F	6-23	ALL/GEN F
1-4		ALL/GEN F	6-24	ALL/GEN F
2-1		ALL/GEN F	6-25	ALL/GEN F
2-2		ALL/GEN F	6-26	ALL/GEN F
2-3		ALL/GEN F	6-27	ALL/GEN F
2-4		ALL/GEN F	6-28	ALL/GEN F
3-1		ALL/GEN F	6-29	ALL/GEN F
3-2		ALL/GEN F	6-30	ALL/GEN F
3-3		ALL/GEN F	6-31	ALL/GEN F
3-4		ALL/GEN F	6-32	ALL/GEN F
3-5		ALL/GEN F	6-33	ALL/GEN F
3-6		ALL/GEN F	6-34	ALL/GEN F
3-7		ALL/GEN F	6-35	ALL/GEN F
3-8		ALL/GEN F	6-36	ALL/GEN F
3-9		ALL/GEN F	6-37	ALL/GEN F
3-10		ALL/GEN F	6-38	ALL/GEN F
4-1		ALL/GEN F	6-39	ALL/GEN F
4-2		ALL/GEN F	6-40	ALL/GEN F
4-3		ALL/GEN F	7-1	ALL/GEN F
4-4		ALL/GEN F	7-2	ALL/GEN F
5-1		ALL/GEN F	7-3	ALL/GEN F,1
5-2		ALL/GEN F	7-4	ALL/GEN F,1
6-i		ALL/GEN F	7-5	ALL/GEN F,1
6-ii		ALL/GEN F	7-6	ALL/GEN F,1
6-1		ALL/GEN F	7-7	ALL/GEN F,1
6-2		ALL/GEN F	7-8	ALL/GEN F
6-3		ALL/GEN F	7-9	ALL/GEN F
6-4		ALL/GEN F	7-10	ALL/GEN F
6-5		ALL/GEN F	7-11	ALL/GEN F
6-6		ALL/GEN F	7-12	ALL/GEN F
6-7		ALL/GEN F	7-13	ALL/GEN F
6-8		ALL/GEN F	7-14	ALL/GEN F
6-9		ALL/GEN F	7-15	ALL/GEN F
6-10		ALL/GEN F	7-16	ALL/GEN F

* – Omit from flight book

Δ – Color page for pre-assigned users

7-17	Δ	ALL/GEN F	7-71	Δ	ALL/GEN F
7-18	Δ	ALL/GEN F	7-72	Δ	ALL/GEN F
7-19	Δ	ALL/GEN F	7-73		ALL/GEN F
7-20		ALL/GEN F	7-74	Δ	ALL/GEN F
7-21	Δ	ALL/GEN F	7-75	Δ	ALL/GEN F
7-22	Δ	ALL/GEN F,1	7-76	Δ	ALL/GEN F
7-23	Δ	ALL/GEN F	7-77		ALL/GEN F
7-24		ALL/GEN F	7-78		ALL/GEN F
7-25	Δ	ALL/GEN F,1	7-79		ALL/GEN F
7-26	Δ	ALL/GEN F	7-80	Δ	ALL/GEN F
7-27	Δ	ALL/GEN F	7-81		ALL/GEN F
7-28	Δ	ALL/GEN F	7-82		ALL/GEN F
7-29		ALL/GEN F	7-83	Δ	ALL/GEN F
7-30	Δ	ALL/GEN F	7-84	Δ	ALL/GEN F
7-31	Δ	ALL/GEN F	7-85		ALL/GEN F
7-32		ALL/GEN F,1	7-86	Δ	ALL/GEN F
7-33	Δ	ALL/GEN F,1	7-87	Δ	ALL/GEN F
7-34	Δ	ALL/GEN F,1	7-88	Δ	ALL/GEN F
7-35	Δ	ALL/GEN F	7-89	Δ	ALL/GEN F
7-36		ALL/GEN F	7-90	Δ	ALL/GEN F
7-37	Δ	ALL/GEN F	7-91	Δ	ALL/GEN F
7-38	Δ	ALL/GEN F	7-92	Δ	ALL/GEN F
7-39	Δ	ALL/GEN F	7-93	Δ	ALL/GEN F
7-40	Δ	ALL/GEN F,1	7-94	Δ	ALL/GEN F
7-41	Δ	ALL/GEN F	7-95	Δ	ALL/GEN F
7-42	Δ	ALL/GEN F,1	7-96	Δ	ALL/GEN F
7-43		ALL/GEN F	7-97	Δ	ALL/GEN F
7-44	Δ	ALL/GEN F,1	7-98	Δ	ALL/GEN F
7-45	Δ	ALL/GEN F,1	7-99	Δ	ALL/GEN F
7-46	Δ	ALL/GEN F,1	7-100	Δ	ALL/GEN F
7-47	Δ	ALL/GEN F	7-101	Δ	ALL/GEN F
7-48	Δ	ALL/GEN F	7-102	Δ	ALL/GEN F
7-49	Δ	ALL/GEN F	7-103		ALL/GEN F
7-50		ALL/GEN F	7-104	Δ	ALL/GEN F
7-51	Δ	ALL/GEN F	7-105	Δ	ALL/GEN F
7-52	Δ	ALL/GEN F	7-106		ALL/GEN F
7-53	Δ	ALL/GEN F	7-107	Δ	ALL/GEN F
7-54		ALL/GEN F	7-108	Δ	ALL/GEN F
7-55		ALL/GEN F	7-109	Δ	ALL/GEN F
7-56	Δ	ALL/GEN F	7-110	Δ	ALL/GEN F
7-57		ALL/GEN F	7-111	Δ	ALL/GEN F
7-58		ALL/GEN F	7-112	Δ	ALL/GEN F
7-59	Δ	ALL/GEN F	7-113	Δ	ALL/GEN F
7-60	Δ	ALL/GEN F	7-114	Δ	ALL/GEN F
7-61		ALL/GEN F	7-115	Δ	ALL/GEN F
7-62		ALL/GEN F	7-116	Δ	ALL/GEN F
7-63	Δ	ALL/GEN F	7-117	Δ	ALL/GEN F
7-64	Δ	ALL/GEN F	7-118	Δ	ALL/GEN F
7-65		ALL/GEN F	7-119	Δ	ALL/GEN F
7-66		ALL/GEN F	7-120	Δ	ALL/GEN F
7-67	Δ	ALL/GEN F	7-121	Δ	ALL/GEN F
7-68	Δ	ALL/GEN F	7-122	Δ	ALL/GEN F
7-69		ALL/GEN F	8-1		ALL/GEN F
7-70		ALL/GEN F	8-2		ALL/GEN F

8-3	ALL/GEN F	11-1	ALL/GEN F
8-4	ALL/GEN F	11-2	ALL/GEN F
9-1	ALL/GEN F	11-3	ALL/GEN F
9-2	ALL/GEN F	11-4	ALL/GEN F
9-3	ALL/GEN F	11-5	ALL/GEN F
9-4	ALL/GEN F	11-6	ALL/GEN F
9-5	ALL/GEN F	12-1	ALL/GEN F
9-6	ALL/GEN F	12-2	ALL/GEN F
9-7	ALL/GEN F	CC 12-3	ALL/GEN F
9-8	ALL/GEN F	CC 12-4	ALL/GEN F
9-9	ALL/GEN F	CC 12-5	ALL/GEN F
9-10	ALL/GEN F	CC 12-6	ALL/GEN F
10-1	ALL/GEN F	CC 12-7	ALL/GEN F
10-2	ALL/GEN F	CC 12-8	ALL/GEN F,1
10-3	ALL/GEN F	CC 12-9	ALL/GEN F
10-4	ALL/GEN F	CC 12-10	ALL/GEN F
10-5	ALL/GEN F		
10-6	ALL/GEN F		
10-7	ALL/GEN F		
10-8	ALL/GEN F		
10-9	ALL/GEN F		
10-10	ALL/GEN F		
10-11	ALL/GEN F		
10-12	ALL/GEN F		
10-13	ALL/GEN F		
10-14	ALL/GEN F		
10-15	ALL/GEN F		
10-16	ALL/GEN F		
10-17	ALL/GEN F		
10-18	ALL/GEN F		
10-19	ALL/GEN F		
10-20	ALL/GEN F		
10-21	ALL/GEN F		
10-22	ALL/GEN F		
10-23	ALL/GEN F		
10-24	ALL/GEN F		
10-25	ALL/GEN F		
10-26	ALL/GEN F		
10-27	ALL/GEN F		
10-28	ALL/GEN F		
10-29	ALL/GEN F		
10-30	ALL/GEN F		
10-31	ALL/GEN F		
10-32	ALL/GEN F		
10-33	ALL/GEN F		
10-34	ALL/GEN F		
10-35	ALL/GEN F		
10-36	ALL/GEN F		
10-37	ALL/GEN F		
10-38	ALL/GEN F		
10-39	ALL/GEN F		
10-40	ALL/GEN F		
10-41	ALL/GEN F		
10-42	ALL/GEN F		

PDRS OPS CUE CARDS

<u>Title</u>	<u>Ref. Page</u>	<u>Card No.</u>
GENERIC END EFFECTOR CUE CARD – SHUTTLE NOT DOCKED OPS		
(Front).....	CC 12-3	PDRS-3a/O/J
(Back).....	CC 12-3	PDRS-3b/O/G
GENERIC END EFFECTOR CUE CARD – ISS/SHUTTLE DOCKED OPS		
(Front)	CC 12-4	PDRS-6a/O/B
(Back).....	CC 12-4	PDRS-6b/O/A
GRID OVERLAY	CC 12-5	PDRS-4a/O/E
PDRS TARGET OVERLAY FOR CTVM.....	CC 12-6	PDRS-5a/O/E
OBSS SCAN PATTERN CUE CARD – STBD & PORT		
(Front)	CC 12-7	PDRS-7a/O/A
OBSS SCAN PATTERN CUE CARD – NOSE CAP		
(Back).....	CC 12-8	PDRS-7b/O/B
OBSS SCAN PATTERN CUE CARD – WING GLOVE & CREW CABIN		
(Front)	CC 12-9	PDRS-8a/O/A
(Back).....	CC 12-10	PDRS-8b/O/A

NOTE

The procedures in this book have been developed in accordance with the intent stated in the CIL Retention Rationale and the Hazards Control List, as documented in the following PDRS Flight Rules:

- A12-3 TEMPERATURE CONSTRAINTS [CIL]
- A12-5 ORBITER AVOIDANCE MANEUVERS CONSTRAINT [CIL]
- A12-9 RMS MCIU BITE OVERRIDES [CIL]
- A12-74 INADVERTENT MPM CYCLING PROTECTION [CIL]
- A12-112 FIELD OF VIEW CONSTRAINT [CIL]
- A12-113 AUTO MODE ENTRY CONSTRAINT [CIL]
- A12-114 ORBITER PROXIMITY CONSTRAINTS [CIL]
- A12-115 INOPERATIVE BRAKE CONSTRAINT [CIL]
- A12-116 AUTO BRAKES CONSTRAINT [CIL]
- A12-117 CONTINGENCY STOP [CIL]
- A12-162 EE MODE SWITCH CONSTRAINTS [CIL]
- A12-163 CAPTURE AND RELEASE PROXIMITY CONSTRAINT [CIL]

This Page Intentionally Blank

<u>CONTENTS*</u>	<u>PAGE</u>
ON-ORBIT INITIALIZATION	1-1
RMS PWRUP	2-1
RMS CHECKOUT	3-1
RMS PWRDN	4-1
RMS DEACTIVATION	5-1
CONTINGENCY OPERATIONS	6-i
EXTERIOR SURVEYS	6-1
OBSS OPERATIONS	7-1
NOMINAL	7-3
OFF-NOMINAL	7-50
BACKUP CRADLE.....	8-1
RMS JETTISON ASSUMPTIONS AND NOTES.....	9-1
RMS JETTISON.....	9-3
REFERENCE DATA	10-1
MISCELLANEOUS PROCEDURES	11-1
CUE CARD CONFIGURATION	12-1

*The procedures in this book have been developed in accordance with the intent stated in the CIL Retention Rationale and the Hazards Control List

This Page Intentionally Blank

ON-ORBIT INITIALIZATION

ON-ORBIT INITIALIZATION

MA73C:F 1. RMS AC POWER
cb AC1 RMS PRI Φ A – cl
AC2 RMS B/U Φ A – cl

2. RMS TEMP MODE
RMS PWR – PRI (MA)

NOTE

If calling SPEC 94 for the first time,
expect MA, GPC DATA It – on

SM 94 PDRS CONTROL

I/O ON – ITEM 5 EXEC (*)

√GPC DATA It – off

SAFING – CANCEL

√SAFING tb – bp

3. RMS SHOULDER BRACE RELEASE

NOTE

Expect MA, C/W REACH LIM It – on
(SP, EP), C/W SINGULAR It – on (EP)
SM ALERT

RMS SEL – PORT

√SAFING tb – gray

SHLDR BRACE REL – PORT (hold for 2 sec following tb-gray)

If motor drive time > 12 sec, √MCC

NOTE

Spurious fault msgs may occur
when PORT RMS deselected

RMS SEL – OFF

4. PNL TEST
Adjust pnl Itg as reqd

CAUTION

Selection of PARAM – TEST for > 30 sec
may cause pnl A8 to overheat

PARAM – TEST (MA) (< 30 sec)

√IND 1,2,3: + 8.8.8.8

√All A8 Its: on

PARAM – POS X/Y/Z

5. RMS HTR ACT

PARAM – PORT TEMP

JOINT – CRIT TEMP ($\sqrt{IND}$ (three) – blank)

If RMS ops not to be performed within 1 hr:

| PORT RMS HTR A(B) – AUTO

If RMS ops to be performed within 1 hr:

PORT RMS HTR (two) – AUTO

STBD RMS HTR (two) – AUTO

R13L

6. CONFIGURE POWER

PL BAY MECH PWR SYS (two) – ON

7. PORT MPM DEPLOY

SM 94 PDRS CONTROL

$\sqrt{RMS}$ PORT, ITEM 1 – (*)

$\sqrt{PORT}$ MPM DPLY (two) = 0

- * If either DPLY MSW shows '1', *
- * expect single motor time (68 sec max) *

PORT RMS – DPY (tb-DPY) (68 sec max)
– OFF

If motor drive time > 34 sec, $\sqrt{MCC}$

8. STBD MPM DEPLOY

If Starboard MPM installed:

SM 94 PDRS CONTROL

RMS STBD – ITEM 2 EXEC (*)

$\sqrt{STBD}$ MPM DPLY (two) = 0

- * If either DPLY MSW shows '1', *
- * expect single motor time (68 sec max) *

STBD RMS – DPY (tb-DPY) (68 sec max)
– OFF

If motor drive time > 34 sec, $\sqrt{MCC}$

SM 94 PDRS CONTROL

RMS PORT – ITEM 1 EXEC (*)

R13L

9. RECONFIGURE POWER

PL BAY MECH PWR SYS (two) – OFF

This Page Intentionally Blank

RMS PWRUP

RMS PWRUP

(Assumes RMS in TEMP MONTR MODE)

- A7U 1. PLB LTS, CCTV ACT
PL BAY FLOOD (six) – as reqd

Perform ACTIVATION, OPERATIONS (TV Cue Card) for desired camrs
Perform ILLUMINATOR OPS (TV Cue Card) as reqd

√Physical integrity of arm, EE, blankets

√PORT RMS HTR (two) – AUTO

2. RMS SEL (IDLE MODE)

√MODE – not DIRECT

√BRAKES – ON (tb-ON)

√RMS SEL – OFF

√PWR – PRI

SM 94 PDRS CONTROL

√I/O ON, ITEM 5 – (*)

√ENA, ITEM 9,11 – (*)

√ENA, ITEM 28 – (*)

NOTE

If RMS cradled, expect MA, C/W
REACH LIM It – on (SP, EP),
SINGULAR It – on (EP)

RMS SEL – PORT (MA, SM ALERT)

√SAFING tb – gray

	X	Y	Z	PITCH	YAW	ROLL	PL ID
√	-1282	-108	-445	0	0	0	0
	SY	SP	EP	WP	WY	WR	
√	0.0	0.0	0.0	0.0	0.0	0.0	

√MCC if out of tolerance ($\pm 0.5^\circ$)

SM 94 PDRS CONTROL

√WR R, ITEM 26: 3(4)

RMS
PWRUP

3. CONFIGURE POWER

MA73C:C √cb MCA PWR AC2 3Φ MID 2 – cl
:D √AC3 3Φ MID 4 – cl

If docked to ISS and OBSS berthed:

NOTE

With LOGIC switches OFF:

1. KU will mode to standby
2. Mid and Aft MRLs will drive in single motor time
3. On SPEC 94, all MID 2 and AFT 1 msw indications = 0
4. MPM and MRL tbs remain bp

MA73C:A MCA LOGIC MNC MID 2 – OFF
:B MNB MID 4 – OFF

R13L PL BAY MECH PWR SYS (two) – ON

4. PORT MPM DEPLOY

If MPM stowed:

SM 94 PDRS CONTROL

√RMS PORT, ITEM 1 – (*)

√PORT MPM DPLY (two) = 0

- * If either DPLY MSW shows '1', *
- * expect single motor time (68 sec max) *

PORT RMS – DPY (tb-DPY) (68 sec max)
– OFF

If motor drive time > 34 sec, √MCC

5. PORT MRL RELEASE

SM 94 PDRS CONTROL

√RMS PORT, ITEM 1 – (*)

√PORT AFT,MID,FWD REL (six) = 0

- * If any REL MSW shows '1', ignore tb and *
- * drive MRL for single motor time (18 sec) *

DAP: VERN(FREE)

PORT RMS RETEN LAT – REL (tb-REL) (18 sec max)
– OFF

If motor drive time > 8 sec, √MCC

R13L 6. RECONFIGURE POWER
PL BAY MECH PWR SYS (two) – OFF

MA73C:A If docked to ISS and OBSS berthed:
:B MCA LOGIC MNC MID 2 – ON
MNB MID 4 – ON

MA73C:C cb MCA PWR AC2 3Φ MID 2 – op
:D AC3 3Φ MID 4 – op

Record joint angles:

SY	SP	EP	WP	WY	WR

7. ARM UNCRADLE

<u>CAUTION</u> Arm temperatures must be within limits (no alarms) prior to uncradling
--

RATE – as reqd (VERN within 10 ft)
PARAM – JOINT ANGLE

BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

	SY	SP	EP	WP	WY	WR	
Cradle	0.0	0.0	0.0	0.0	0.0	0.0	
1: WP +				+5.0			
2: EP +			+1.0				
3: SP +		+25.0					
4: EP –			-25.0				
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
√	-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)
DAP: as reqd

RMS CHECKOUT

RMS C/O

RMS CHECKOUT

(Assumes arm in pre-cradle position)

- A7U
1. TV CAMERA CONFIGURATION
√ACTIVATION, OPERATIONS (TV Cue Card) performed for desired camrs
√ILLUMINATOR OPS (TV Cue Card) as desired

2. SINGLE DRIVE TEST
RATE – COARSE (RATE MIN tb-OFF)
– VERN (RATE MIN tb-ON)
PARAM – JOINT ANGLE
JOINT – WY

BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

√No arm motion

Drive WY, WR, and SY

√Correct joint responses

BRAKES – ON (tb-ON)

3. B/U DRIVE TEST
√B/U PL REL – OFF
B/U JOINT – WY

NOTE

Spurious fault msgs may occur
when PORT RMS deselected

RMS SEL – OFF
PWR – B/U (SM ALERT, BCE BYP MCIU)
SEL – PORT

√No arm motion

Drive each joint '+' and '-'

√Correct joint responses

4. RECONFIGURE TO PRIMARY POWER
RMS SEL – OFF
PWR – PRI (MA)

SM 94 PDRS CONTROL

I/O ON – ITEM 5 EXEC (*)

RMS SEL – PORT
SAFING – CANCEL (tb-gray)

√WR R, ITEM 26: 3(4)

5. DIRECT DRIVE TEST
BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

RMS C/O

SINGLE DR to PRE-CRADLE position (within 1°):

Pre-cradle	SY	SP	EP	WP	WY	WR	PL ID
	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	
	-1261	-146	-551	5	2	0	0

JOINT – WP

√BRAKES – OFF (tb-OFF)
MODE – DIRECT (lt off)

SINGLE/DIRECT DR – ‘+’

√Joint does not drive

DAP: VERN(FREE)

BRAKES – ON (tb-ON)

√DIRECT lt – on

√No arm motion, then

For each joint:

√No arm oscillations before each ‘+’ and ‘-’ drive test

√Correct joint responses and that only selected joint drives

Record starting angle A

Drive ‘+’ for 12 sec continuously, record angle B, check joint angle change greater than X, wait 3-5 sec

Drive ‘-’ for 12 sec continuously, record angle C, check joint angle change greater than X

If joint angle change not greater than X, √MCC before continuing to step 6

SY A = ____ B = ____ C = ____ X = 5.6

SP A = ____ B = ____ C = ____ X = 5.6

EP A = ____ B = ____ C = ____ X = 9.0

WP A = ____ B = ____ C = ____ X = 16.8

WY A = ____ B = ____ C = ____ X = 16.8

WR A = ____ B = ____ C = ____ X = 16.8

MODE – not DIRECT (lt off)

JOINT – WR

SINGLE/DIRECT DR – ‘+’

√Joint does not drive

DAP: as reqd

6. HAND CONTROLLER CHECK

SM 169 PDRS STATUS

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

SY	SP	EP	WP	WY	WR	
0.0	+35.0	-25.0	+5.0	0.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1233	-179	-645	14	5	359	0

BRAKES – ON (tb-ON)

DAP: VERN(FREE)

RATE – COARSE (RATE MIN tb-OFF)

BRAKES – OFF (tb-OFF)

MODE – TEST, ENTER

√No arm motion

THC, RHC – Each axis in turn, deflect hand controller gradually to hardstop

√No arm motion

√Actual rates zero

√Commanded rates at full deflection:

X, Y, Z – 2.0 ft/sec

P, Y, R – 4.7 deg/sec

BRAKES – ON (tb-ON)

DAP: as reqd

7. MANUAL AUGMENTED MODES CHECK

RATE – VERN (RATE MIN tb-ON)

PARAM – RATE P/Y/R

BRAKES – OFF (tb-OFF)

MODE – END EFF, ENTER

RHC – Command '+' then '-' for 2-3 sec in pitch, yaw, then roll

√Correct arm response, rates displayed on D&C LEDs

PARAM – VEL X/Y/Z

MODE – ORB UNL, ENTER

THC – Command '+' then '-' for 2-3 sec in X, Y, then Z

√Correct arm response, velocities displayed on D&C LEDs

THC – +X (OUT)

RATE HOLD – depress (mom)

Release THC

√Rate hold function, then

RATE HOLD – depress (mom)

√Arm motion stops

√Each mode light illuminates:

MODE – ORB LD, ENTER

– PL, ENTER

BRAKES – ON (tb-ON)

8. OPR CMD MODE (OCAS) CHECK

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

SY	SP	EP	WP	WY	WR	
0.0	+35.0	-25.0	+5.0	0.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1233	-179	-645	14	5	359	0

BRAKES – ON (tb-ON)

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 0

√INIT ID, ITEM 24: 0

Load OPR CMD for checkout (Items 18-23)

-1233, -119, -502, 317, 337, 355

CMD CK, ITEM 25 EXEC (GOOD)

√RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)

MODE – OPR CMD, ENTER

√AUTO SEQ READY It – on

* If error found in destination entries (Items 18-23):	*
* BRAKES – ON (tb-ON)	*
* Enter corrected destination (Items 18-23)	*
* CMD CK, ITEM 25 EXEC (GOOD)	*
* BRAKES – OFF (tb-OFF)	*
* MODE – OPR CMD, ENTER	*
* √AUTO SEQ READY It – on	*

AUTO SEQ – PRO

After ~3 sec of arm motion,

AUTO SEQ – STOP

√Arm stops, then

AUTO SEQ – PRO

When AUTO SEQ IN PROG It – off,

BRAKES – ON (tb-ON)

	X	Y	Z	PITCH	YAW	ROLL	PL ID
√	-1233	-119	-502	317	337	355	0
	SY	SP	EP	WP	WY	WR	
√	0.0	+27.6	-28.7	-45.7	-9.1	+0.2	

If no EE ops planned, >>

9. EE CHECKOUT

NOTE

1. Record Camera B during EE Checkout
2. In each step, look for the expected motion in the monitor view; a step is considered successful if expected motion is completed, regardless of talkback/MSW indications
3. Cross check the EE talkbacks by checking the microswitch status on SM 169 PDRS STATUS. Note any discrepancies and continue
4. Pause 2 sec each time when taking EE Mode switch out of OFF and monitor for uncommanded motion
5. Response to Off-Nominal situations:
 - a. Note step(s) where the function fails to start/complete and continue
 - b. If uncommanded motion occurs at the time the EE Mode switch is taken out of OFF, immediately take EE Mode switch to OFF, note the step, and check MCC
 - c. If EE C&W ('S96 PDRS CKCRT EE', or 'PDRS DERIG') messages occur, note the step where the message annunciated and continue
 - d. When EE Checkout is complete/exited, reference RMS EE C/O FAILURE MATRIX (REF DATA) for failure impacts

CAUTION

Monitor EE tb timing to prevent EE motor overtemp

A7U


VID OUT pb – MON 1(2)

IN pb – B

PAN, TILT, ZOOM – To view inside EE

V10	If recording view with V10: REC pb – Press simo √LCD displays red dot (10 min)
L10 (VTR)	If recording view with VTR: REC pb – Press, hold PLAY pb – Press, simo (√red dot displayed) (10 min)

a. EE MODE sw CAP/REL Check

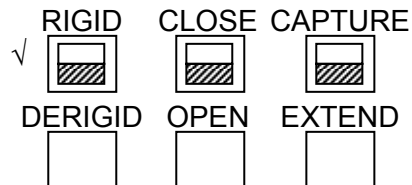

√EE MODE – OFF
 CAPTURE sw – depress (3 sec)
 √OPEN tb – gray, no motion

If motion occurs:


EE RELEASE sw – depress until OPEN tb – gray (3 sec max),
 go to step h (EE BACKUP RELEASE Checkout)

b. EE MAN CLOSE Checkout

EE MODE – MAN

EE CAPTURE sw – depress until snares closed or CLOSE tb – gray
(3 sec max)

EE MODE – OFF

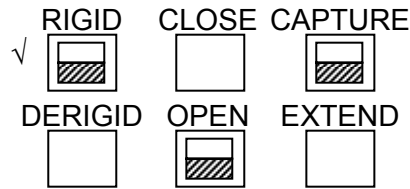

c. If snares not closed:

EE MODE – AUTO

CAPTURE sw – depress (mom)

After 3 sec max, EE MODE – OFF


If snares remain not closed, go to step i (EE MODE SW RIG/DERIG Check)

d. EE MAN OPEN Checkout

EE MODE – MAN

RELEASE sw – depress until snares open or OPEN tb – gray (3 sec max)

MODE – OFF

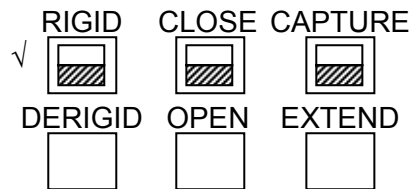


If snares not open, go to step g (EE AUTO OPEN Checkout)

e. EE AUTO CLOSE Checkout

EE MODE – AUTO

CAPTURE sw – depress (mom)

After 3 sec max, EE MODE – OFF

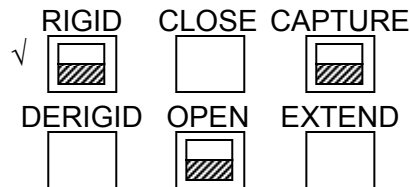


f. If snares not closed:

EE MODE – MAN

EE CAPTURE sw – depress until snares closed or CLOSE tb – gray
(3 sec max)

EE MODE – OFF

- g. EE AUTO OPEN Checkout
 EE MODE – AUTO
 RELEASE sw – depress (mom)
 After 3 sec max, EE MODE – OFF

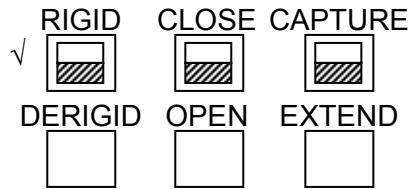

- h. EE BACKUP RELEASE Checkout
 If snares open (expected condition):
 EE MODE – AUTO
 CAPTURE sw – depress (mom)
 After 3 sec max, EE MODE – OFF
 If snares remain open:
 EE MODE – MAN
 EE CAPTURE sw – depress until snares closed or CLOSE tb – gray
 (3 sec max)
 EE MODE – OFF
 ✓B/U PL REL – OFF
 B/U JOINT – WY

NOTE

Spurious fault msgs may occur when PORT RMS deselected

RMS SEL – OFF
 PWR – B/U (SM ALERT, BCE BYP MCIU)
 SEL – PORT

✓Snares remain closed

Note duration of snare opening and inform MCC at next opportunity

Historical times: 8-34 sec

B/U PL REL – ON

✓Snares open smoothly, fully

✓Snares return to grooves

B/U release time: _____ sec

B/U PL REL – OFF
 RMS SEL – OFF
 PWR – PRI (MA)

SM 94 PDRS CONTROL

I/O ON – ITEM 5 EXEC (*)

RMS SEL – PORT

SAFING – CANCEL (tb-gray)

✓WR R, ITEM 26: 3(4)

If snares not open:

EE MODE – MAN

EE RELEASE sw – depress until snares open or OPEN tb – gray
 (3 sec max)


EE MODE – OFF

i. EE MODE SW RIG/DERIG Check

√EE MODE – OFF

MAN CONTR – RIGID (1 sec max)

√EXTEND tb – gray, no motion

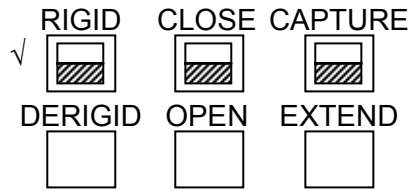

If motion occurs:


Go to step k

j. EE CARRIAGE DRIVE CHECKOUT – RETRACT

EE MODE – MAN

MAN CONTR – RIGID until EXTEND tb – bp (1 sec max)

MODE – OFF

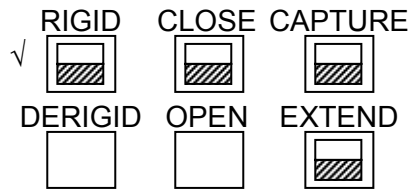


If no carriage motion, >>

k. EE CARRIAGE DRIVE CHECKOUT – EXTEND

EE MODE – MAN

MAN CONTR – DERIGID until EXTEND tb – gray (1 sec max)

MODE – OFF

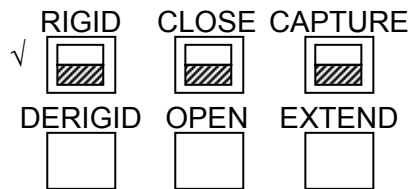

If motion in wrong direction, >>

l. If EXTEND tb – bp:

EE MODE – AUTO

RELEASE sw – depress (mom)

After EXTEND tb – gray, EE MODE – OFF (1 sec max)


If no carriage motion, >>

m. EE MAN RIGIDIZE Checkout

EE MODE – MAN

MAN CONTR – RIGID until RIGID tb – gray (25 sec max)

MODE – OFF

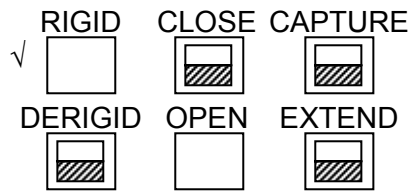


n. EE MAN DERIGIDIZE Checkout

EE MODE – MAN

MAN CONTR – DERIGID until DERIGID tb – gray (5 sec max)

MODE – OFF

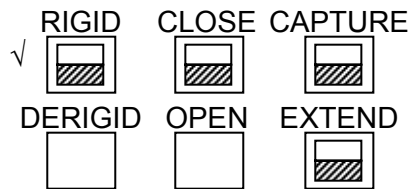


o. EE AUTO EXTEND Checkout

EE MODE – AUTO

RELEASE sw – depress (mom)

After EXTEND tb – gray, EE MODE – OFF (20 sec max, 25 if RIGID)

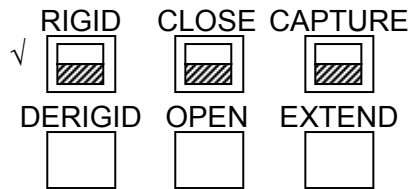

p. If DERIGID tb – gray and EXTEND tb – bp:

EE MODE – MAN

MAN CONTR – DERIGID until EXTEND tb – gray (25 sec max)

MODE – OFF

RMS PWRDN

RMS
PWRDN

RMS PWRDN

1. RMS PRECRADLE

RATE – as reqd (VERN within 10 ft)

MODE – as desired

Drive to PRE-CRADLE position (within 1"/1°):

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1261	-146	-551	5	2	0	0
SY	SP	EP	WP	WY	WR	
0.0	+25.0	-25.0	+5.0	0.0	0.0	

BRAKES – ON (tb-ON)

2. RMS CRADLE

DAP: VERN(FREE)

PARAM – JOINT ANGLE

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to CRADLE position:

SY	SP	EP	WP	WY	WR	NOTES
0.0	+25.0	-25.0	+5.0	0.0	0.0	√WR RANGE = 3(4)
		+1.0				MA, SING, REACH, S/W STOP
	0.0					MA
		0.0				
			0.0			
0.0	0.0	0.0	0.0	0.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1282	-108	-445	0	0	0	0

Pre-cradle √

1: EP +

2: SP –

3: EP –

4: WP –

Cradle

√PORT RMS R-F-L tb (three) – gray

NOTE

Refer to SJ table in RMS PWRUP, step 6,
if needed to obtain R-F-L indication

3. CONFIGURE POWER

MA73C:C cb MCA PWR AC2 3Φ MID 2 – cl
:D AC3 3Φ MID 4 – cl

RMS
PWRDN

If docked to ISS and OBSS berthed:

NOTE

With LOGIC switches OFF:

1. KU will mode to standby
2. Mid and Aft MRLs will drive in single motor time
3. On SPEC 94, all MID 2 and AFT 1 msw indications = 0
4. MPM and MRL tbs remain bp

MA73C:A MCA LOGIC MNC MID 2 – OFF
 :B MNB MID 4 – OFF

R13L PL BAY MECH PWR SYS (two) – ON

4. PORT MRL LATCH

√PORT RMS R-F-L tb (three) – gray

SM 94 PDRS CONTROL

√RMS PORT, ITEM 1 – (*)

√PORT AFT,MID,FWD LAT (six) = 0

- * If any LAT MSW shows '1', ignore tb and *
- * drive MRL for single motor time (18 sec) *

PORT RMS RETEN LAT – LAT (tb-LAT) (18 sec max)
 – OFF

If motor drive time > 8 sec, √MCC

BRAKES – ON (tb-ON)

DAP: as reqd

5. PORT MPM STOW

If Elbow Camr to payload interference problem exists with MPM stowed:

√Elbow Camr in aligned position

- Pan 90° from X-Axis
- Tilt per DECAL

CAUTION

Do not use Elbow Camr while any potential
PL/Elbow Camr interference exists

SM 94 PDRS CONTROL

√RMS PORT, ITEM 1 – (*)

√PORT MPM STO (two) = 0

- * If either STO MSW shows '1', expect *
- * single motor time (68 sec max) *

PORT RMS – STO (tb-STO) (68 sec max)
 – OFF

If motor drive time > 34 sec, √MCC

√BRAKES – ON (tb-ON)

6. STBD MPM STOW (If installed)

SM 94 PDRS CONTROL

RMS STBD – ITEM 2 EXEC (*)

√STBD MPM STO (two) = 0

- * If either STO MSW shows '1', expect *
- * single motor time (68 sec max) *

STBD RMS – STO (tb-STO) (68 sec max)
– OFF

If motor drive time > 34 sec, √MCC

SM 94 PDRS CONTROL

RMS PORT – ITEM 1 EXEC (*)

R13L 7. RECONFIGURE POWER
PL BAY MECH PWR SYS (two) – OFF

MA73C:A If docked to ISS and OBSS berthed:
:B MCA LOGIC MNC MID 2 – ON
MNB MID 4 – ON

A7U 8. CCTV, PLB LTS DEACT
Perform DEACTIVATION (TV Cue Card) as reqd
PORT RMS CAMR – ELBOW

9. RMS TEMP MON
√BRAKES – ON (tb-ON)

NOTE

Spurious fault msgs may occur
when PORT RMS deselected

RMS SEL – OFF
√PWR – PRI

SM 94 PDRS CONTROL

√I/O ON – ITEM 5 (*)

PARAM – PORT TEMP
JOINT – CRIT TEMP

√PORT RMS HTR A(B) – AUTO
B(A) – OFF

RMS DEACTIVATION

RMS
DEACT

RMS DEACTIVATION

1. RMS POWER OFF
RMS PWR – OFF (SM ALERT, BCE BYP MCIU)
PORT RMS HTR (two) – OFF
STBD RMS HTR (two) – OFF
2. ORBITER/PDRS AC PWRDN
MA73C:F cb AC1 RMS PRI Φ A – op
 AC2 RMS B/U Φ A – op


CONTINGENCY OPERATIONS

----- CONT OPS -----

This Page Intentionally Blank

EXTERIOR SURVEYS

RMS EXTERIOR SURVEY ASSUMPTIONS AND NOTES	6-3
EXTERIOR SURVEY SETUP	6-4
EXTERIOR SURVEY A – PORT SIDE, ORBITER NOSE	6-5
B – ORBITER UNDERBODY	6-7
C – NOSE AND MAIN LANDING GEAR DOORS	6-10
D – ORBITER MIDBODY AND VENT DOORS	6-13
E – STBD SIDE, WING LEADING EDGE TO NOSE	6-16
F – STBD SIDE, UNDERBODY WING TO NOSE WITH STOWED MPM	6-19
G – STBD SIDE, NOSE	6-22
H – TOP SIDE, NOSE AND OVHD WINDOWS	6-24
I – TOP VIEW, STBD WING	6-27
J – TOP VIEW, PORT WING	6-29
K – PORT, OMS POD AND VERT TAIL	6-31
L – PORT, LEAD EDGE VERT TAIL	6-33
M – STBD SIDE, LEAD EDGE VERT TAIL AND OMS POD	6-35
SUPPLY/WASTE H2O DUMP NOZZLE SURVEY ARM CONFIG	6-37
SURVEY	6-38

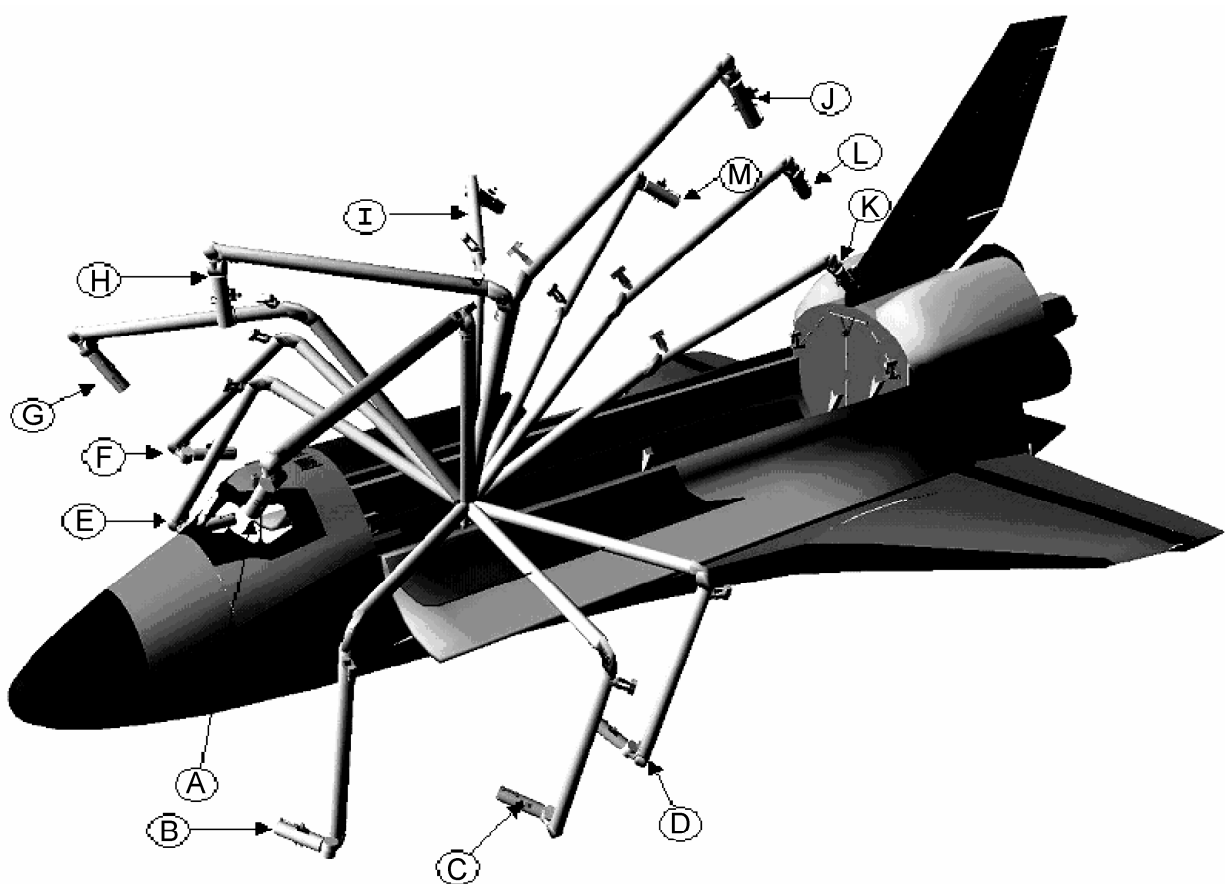

RMS EXTERIOR SURVEY ASSUMPTIONS AND NOTES

ASSUMPTIONS:

1. Procedures were developed assuming an empty payload bay. MCC will alter procedure if reqd for payload

NOTES:

1. Stated times in beginning of survey are minimum times reqd to perform setup and survey
2. Procedures were developed so that wrist joint movements will not create RMS/orbiter structure clearance problems

EXTERIOR SURVEY SETUP

WARNING

Orbiter/RMS collision avoidance
guaranteed only if surveys done
in alphabetical sequence
(e.g., B, D, E, G)

NOTE

MCC to complete for optimum
lighting (e.g., belly to space,
use RMS light, etc) and DAP

GNC UNIV PTG

For surveys:

	Att 1	Att 2	Att 3
TGT ID	_____	_____	_____
BODY VECT	_____	_____	_____
P	_____	_____	_____
Y	_____	_____	_____
OM	_____	_____	_____

DAP: ____/AUTO/VERN

Init TRK, ITEM 19 EXEC (*)

A7U


√PORT RMS CAMR – WRIST
VID OUT pb – MON 2
ZOOM – Full Zoom Out
FOCUS – FAR (against stop)
VID OUT pb – MON 1
IN pb – B
ZOOM – as reqd
FOCUS – as reqd

SM 94 PDRS CONTROL

√SOFT STOP, ITEM 7 – ENA (*)
√AUTO BRAKE, ITEM 9 – ENA (*)
√POS ENC CK, ITEM 11 – ENA (*)

PARAM – JOINT ANGLE

EXTERIOR SURVEY A – PORT SIDE, ORBITER NOSE (12 min reqd)

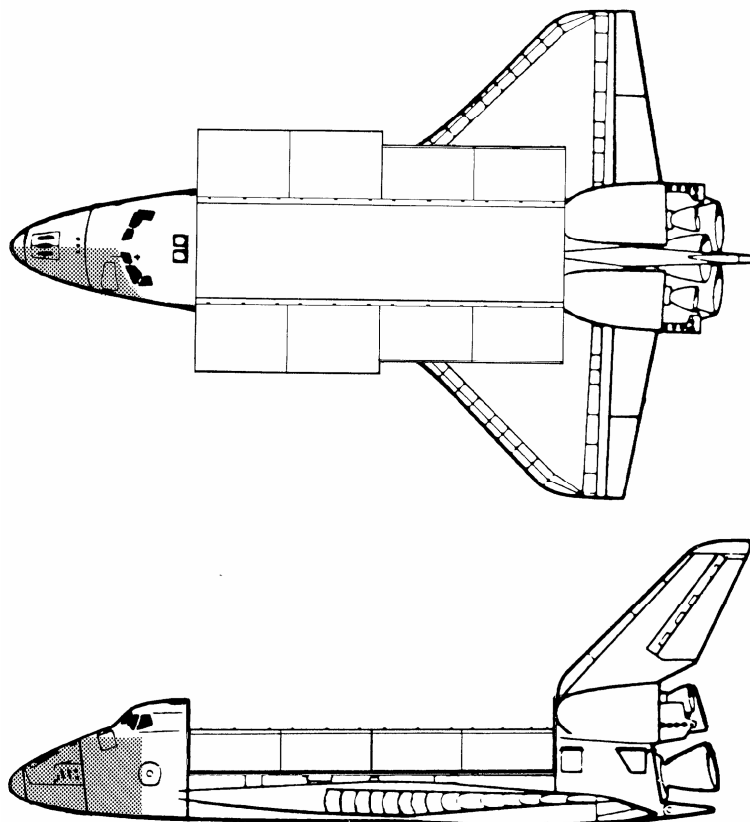

1. SETUP

√Attitude

V10 (L10
(VTR))

√Tape remaining, 4 min reqd

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

SY	SP	EP	WP	WY	WR	
+152.0	+81.0	-80.0	-100.0	+26.0	+140.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-392	-289	-583	263	314	267	0

BRAKES – ON (tb-ON)

2. SURVEY

A7U

PORT RMS LIGHT – ON, as reqd

ALC pb – as reqd

GAMMA pb – as reqd

V10

If recording views with V10:

REC pbs – Press simo

√LCD displays red dot

If recording views with VTR:

L10

REC pb – Press, hold

(VTR)

PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

SINGLE DR WP to -110°:

SY	SP	EP	WP	WY	WR	
+152.0	+81.0	-80.0	-110.0	+26.0	+140.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-402	-285	-587	275	309	271	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

If conducting survey B, C, or D:

Go to step 1 of that survey configuration

If conducting survey E, F, G, H, I, J, K, L, or M:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

Initial

√

1: SY –

2: WP +

3: WY –

4: WR +

Final

SY	SP	EP	WP	WY	WR	
+152.0	+81.0	-80.0	-110.0	+26.0	+140.0	
+90.0						
			-100.0			
				0.0		
					+180.0	
+90.0	+81.0	-80.0	-100.0	0.0	+180.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	-463	-512	270	332	250	0

BRAKES – ON (tb-ON)

Go to step 1, next survey configuration

If survey finished:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

Initial

√

1: SY –

2: WP +

3: WY –

4: WR –

5: EP +

6: SP –

Pre-cradle

SY	SP	EP	WP	WY	WR	
+152.0	+81.0	-80.0	-110.0	+26.0	+140.0	
0.0						
			+5.0			
				0.0		
					0.0	
		-25.0				
	+25.0					
0.0	+25.0	-25.0	+5.0	0.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)


A7U

PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY B – ORBITER UNDERBODY (25 min reqd)

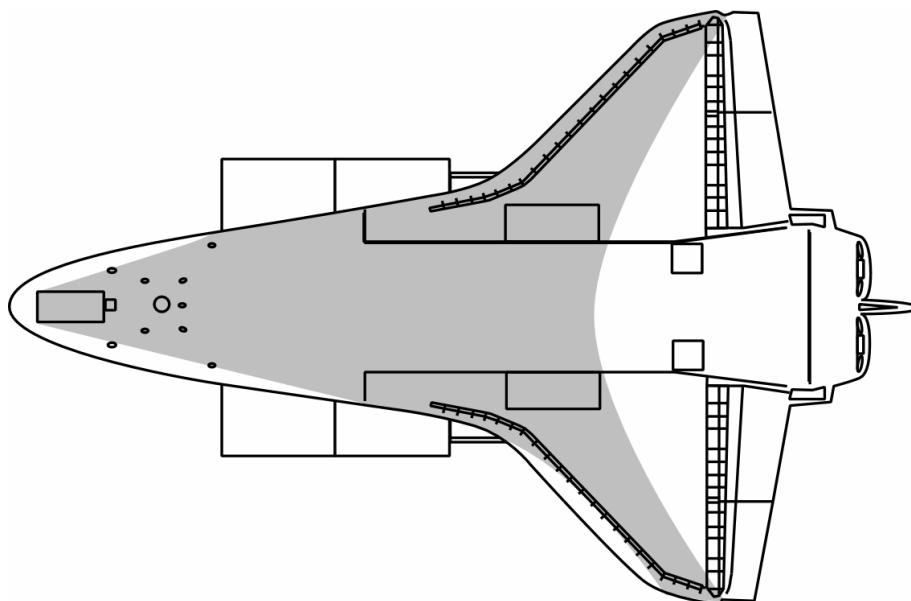

1. SETUP

√Attitude

V10 (L10
(VTR))

√Tape remaining, 15 min reqd

DAP: VERN(FREE)

CAUTION
DO NOT SELECT DAP LO Z in this jet config

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F1L – ITEM 9 EXEC (*)

F3L – ITEM 11 EXEC (*)

F1D – ITEM 23 EXEC (*)

F3D – ITEM 25 EXEC (*)

NOTE

RMS appears in -Y star tracker
Bright Object Sensor FOV

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

SY	SP	EP	WP	WY	WR	
+145.0	+10.0	-100.0	+110.0	+90.0 (MA)	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-425	-133	-188	155	309	149	0

BRAKES – ON (tb-ON)

2. SURVEY
- A7U PORT RMS LIGHT – ON, as reqd
ALC pb – as reqd
GAMMA pb – as reqd
- V10 If recording views with V10:
REC pbs – Press simo
√LCD displays red dot
- L10 If recording views with VTR:
REC pb – Press, hold
(VTR) PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	+145.0	+10.0	-100.0	+110.0	+90.0 (MA)	0.0	
1: WR +						+180.0	
2: WP –				-110.0			
3: WY –					+30.0		
4: WP +				-105.0			
5: WY +					+50.0		
6: WY –					-15.0		
7: WP +				-100.0			
8: WY +					0.0		
9: WY –					-45.0		
Final	+145.0	+10.0	-100.0	-100.0	-45.0	+180.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-540	-169	-179	3	12	6	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE
- If conducting survey C:
Go to step 1 of that survey configuration

When RMS clear of fwd RCS jets:

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F1L – ITEM 9 EXEC (no *)

F3L – ITEM 11 EXEC (no *)

F1D – ITEM 23 EXEC (no *)

F3D – ITEM 25 EXEC (no *)

If conducting survey D:

Go to step 1 of that survey configuration

If conducting survey E, F, G, H, I, J, K, L, or M:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to INTERMEDIATE position (within 1°):

Initial	√	SY	SP	EP	WP	WY	WR	
		+145.0	+10.0	-100.0	-100.0	-45.0	+180.0	
1: SP +			+80.0					
2: EP +				-80.0				
3: WY +						0.0		
4: SY –		+90.0						
Intermediate		+90.0	+80.0	-80.0	-100.0	0.0	+180.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-680	-464	-509	270	330	250	0

BRAKES – ON (tb-ON)

Go to step 1, next survey configuration

If survey finished:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

Intermediate	√	SY	SP	EP	WP	WY	WR	
		+145.0	+10.0	-100.0	-100.0	-45.0	+180.0	
1: EP +				-25.0				
2: WP +					+5.0			
3: WY +						0.0		
4: WR –							0.0	
5: SP +			+25.0					
6: SY –		0.0						
Pre-cradle		0.0	+25.0	-25.0	+5.0	0.0	0.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)


A7U

PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY C – NOSE AND MAIN LANDING GEAR DOORS
(15 min reqd – does not include RAD STOW)

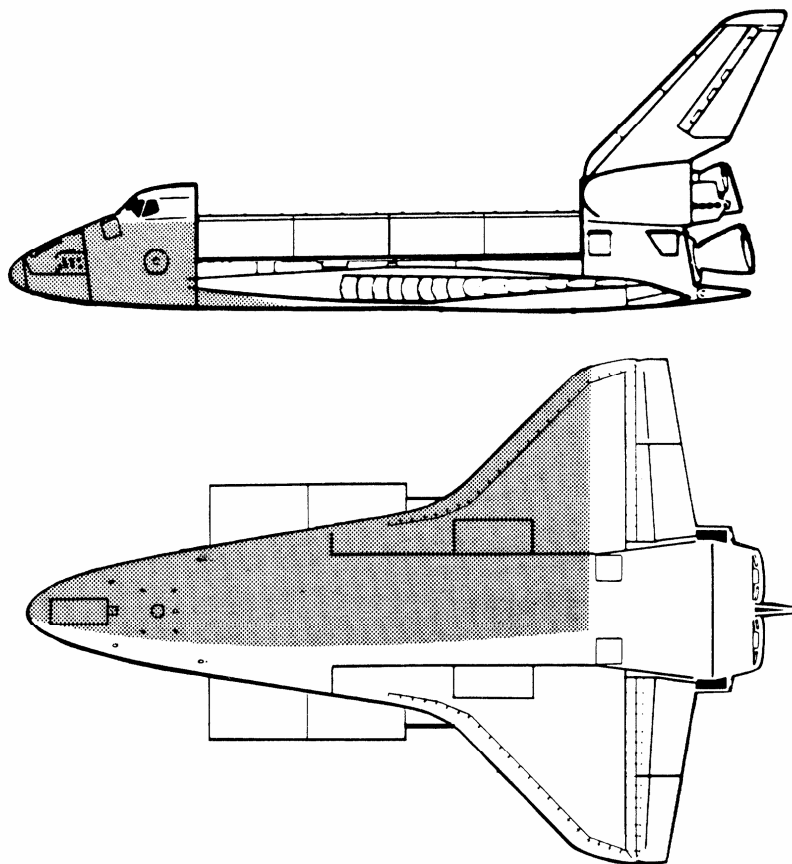

WARNING
PORT RADIATOR must be stowed

1. **SETUP**
If radiators deployed:
Perform RAD STOW (ORB OPS, ECLS)

√Attitude

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

CAUTION
Do not select DAP LO Z in this jet config

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)
JET DES F1L – ITEM 9 EXEC (*)
F3L – ITEM 11 EXEC (*)
F1D – ITEM 23 EXEC (*)
F3D – ITEM 25 EXEC (*)

BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

Initial 1: SY – Final	✓	SY	SP	EP	WP	WY	WR		
		+145.0	+4.0	-101.0	-110.0	+45.0	+180.0		
		+90.0							
		+90.0	+4.0	-101.0	-110.0	+45.0	+180.0		
		X	Y	Z	PITCH	YAW	ROLL	PL ID	
		-640	-190	-162	144	331	104	0	

BRAKES – ON (tb-ON)

2. SURVEY

A7U PORT RMS LIGHT – ON, as reqd
ALC pb – as reqd
GAMMA pb – as reqd

If recording views with V10:

V10 REC pbs – Press simo
✓LCD displays red dot

If recording views with VTR:

L10 REC pb – Press, hold
(VTR) PLAY pb – Press, simo (✓red dot displayed)

RATE – VERN (RATE MIN tb-ON)

DAP: VERN(FREE)

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR WY to -90° :

SY	SP	EP	WP	WY	WR		
+90.0	+4.0	-101.0	-110.0	-90.0 (MA)	+180.0		
X	Y	Z	PITCH	YAW	ROLL	PL ID	
-736	-217	-134	0	0	27	0	

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

When RMS clear of fwd RCS jets:

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F1L – ITEM 9 EXEC (no *)

F3L – ITEM 11 EXEC (no *)

F1D – ITEM 23 EXEC (no *)

F3D – ITEM 25 EXEC (no *)

If conducting survey D:

Go to step 1 of that survey configuration

If conducting survey E, F, G, H, I, J, K, L, or M:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to INTERMEDIATE position (within 1°):

Initial	√	SY	SP	EP	WP	WY	WR	
		+90.0	+4.0	-101.0	-110.0	-90.0 (MA)	+180.0	
1: EP +				-80.0				
2: WP +					-100.0			
3: WY +						0.0		
4: SP +			+80.0					
Intermediate		+90.0	+80.0	-80.0	-100.0	0.0	+180.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-680	-464	-509	270	330	250	0

BRAKES – ON (tb-ON)

If radiator deploy reqd:

Perform RAD DEPLOY (ORB OPS, ECLS)

Go to step 1, next survey configuration

If survey finished:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

Initial	√	SY	SP	EP	WP	WY	WR	
		+90.0	+4.0	-101.0	-110.0	-90.0 (MA)	+180.0	
1: EP +				-25.0				
2: WP +					+5.0			
3: WY +						0.0		
4: WR –							0.0	
5: SP +			+25.0					
6: SY –		0.0						
Pre-cradle		0.0	+25.0	-25.0	+5.0	0.0	0.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)

A7U


PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY D – ORBITER MIDBODY AND VENT DOORS

(20 min reqd – does not include RAD STOW)

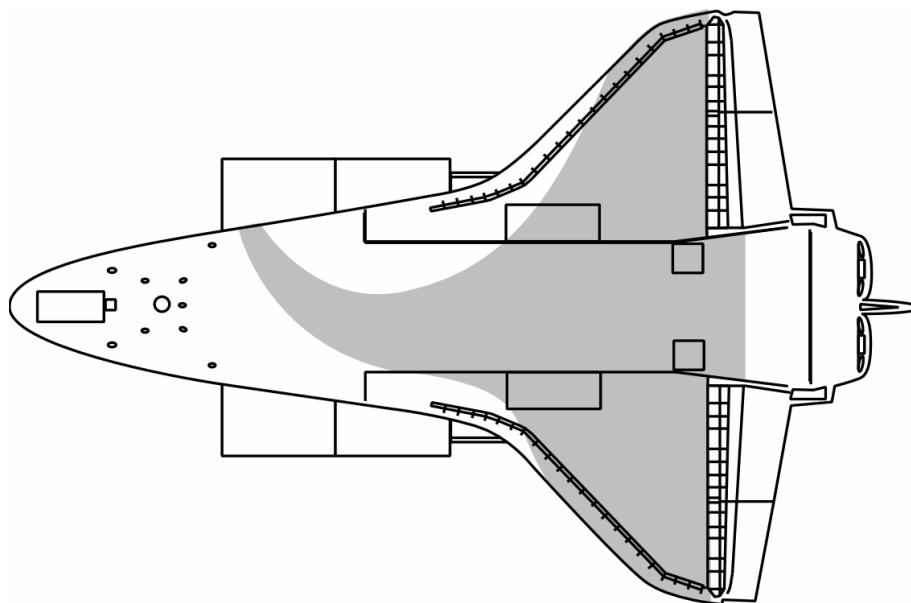

jsc48039_002.cnv

WARNING
PORT RADIATOR must be stowed

1. SETUP

If radiators deployed:

Perform RAD STOW (ORB OPS, ECLS)

√Attitude

V10 (L10
(VTR))

√Tape remaining, 10 min reqd

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

Initial √
1: SP –
Final

SY	SP	EP	WP	WY	WR	
+55.0	+30.0	-100.0	-112.0	0.0	+180.0	
	+5.0					
+55.0	+5.0	-100.0	-112.0	0.0	+180.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-775	-161	-184	127	328	110	0

BRAKES – ON (tb-ON)

A7U 2. SURVEY
 PORT RMS LIGHT – ON, as reqd
 ALC pb – as reqd
 GAMMA pb – as reqd

V10 If recording views with V10:
 REC pbs – Press simo
 √LCD displays red dot

L10 If recording views with VTR:
 REC pb – Press, hold
 (VTR) PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

DAP: VERN(FREE)

BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

Initial	√	SY	SP	EP	WP	WY	WR	
1: WY –		+55.0	+5.0	-100.0	-112.0	0.0	+180.0	
2: WR –						-105.0 (MA)		
3: WP +							+30.0	
4: WY +					+113.0			
5: WY +						-90.0 (MA)		
Final						-45.0		
		+55.0	+5.0	-100.0	+113.0	-45.0	+30.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-877	-227	-144	9	12	15	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

Initial	√	SY	SP	EP	WP	WY	WR	
1: SP +		+55.0	+5.0	-100.0	+113.0	-45.0	+30.0	
2: EP +			+80.0					
3: WP –				-80.0				
4: WY +					-100.0			
Final						0.0		
		+55.0	+80.0	-80.0	-100.0	0.0	+30.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-860	-411	-528	264	333	63	0

BRAKES – ON (tb-ON)

If radiator deploy reqd:

Perform RAD DEPLOY (ORB OPS, ECLS)

If conducting survey E, F, G, H, I, J, K, L, or M:

Go to step 1 of that survey configuration

If survey finished:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	+55.0	+80.0	-80.0	-100.0	0.0	+30.0	
1: SP –		+30.0					
2: EP +			-25.0				
3: WP +				+5.0			
4: WR –						0.0	
5: SY –	0.0						
6: SP –		+25.0					
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)


A7U

PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY E – STBD SIDE, WING LEADING EDGE TO NOSE
(15 min reqd – does not include KU-BD ANT STOW)

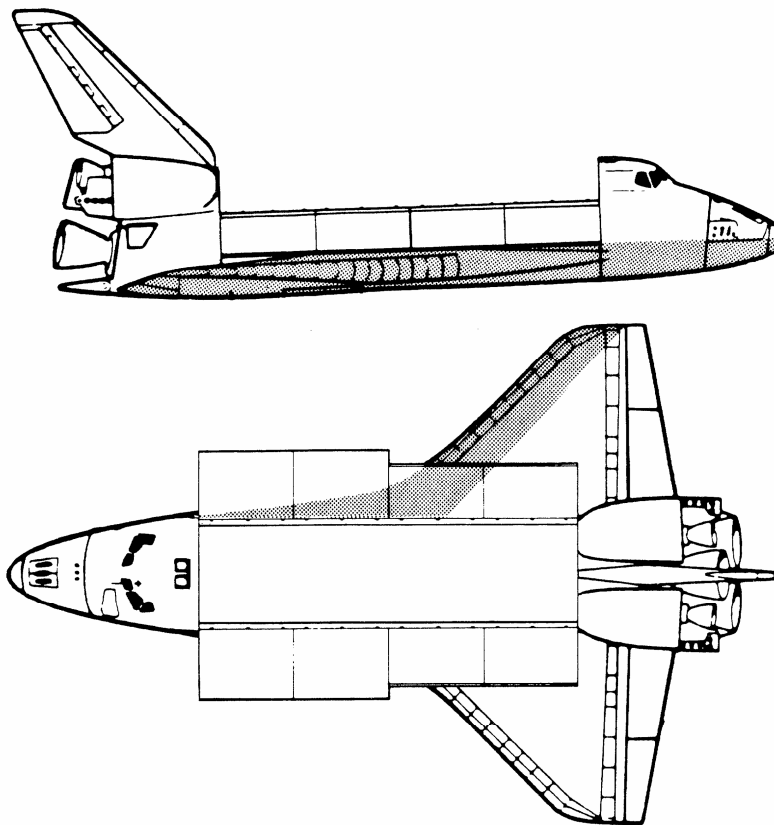

WARNING
KU-BD ANT must be stowed

1. SETUP
Perform KU-BD ANT STOW (ORB OPS, COMM/INST)

√Attitude

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

CAUTION
Do not select DAP LO Z in this jet config

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)
JET DES F2R – ITEM 13 EXEC (*)
F4R – ITEM 15 EXEC (*)
F2D – ITEM 27 EXEC (*)
F4D – ITEM 29 EXEC (*)

BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

Initial 1	SY	SP	EP	WP	WY	WR	PL ID
	-120.0		-78.0	-110.0	+60.0	+180.0	
Final		+12.0					
	-120.0	+12.0	-78.0	-110.0	+60.0	+180.0	
	X	Y	Z	PITCH	YAW	ROLL	
	-562	+245	-349	358	359	3	0

BRAKES – ON (tb-ON)

2. SURVEY

A7U PORT RMS LIGHT – ON, as reqd

ALC pb – as reqd

GAMMA pb – as reqd

If recording views with V10:

V10 REC pbs – Press simo

√LCD displays red dot

If recording views with VTR:

L10 REC pb – Press, hold

(VTR) PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

DAP: VERN(FREE)

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR WY to -75° :

SY	SP	EP	WP	WY	WR	PL ID
-120.0	+12.0	-78.0	-110.0	-75.0 (MA)	+180.0	
X	Y	Z	PITCH	YAW	ROLL	
-466	+208	-336	200	41	129	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

Initial 1: SP +	SY	SP	EP	WP	WY	WR	PL ID
	-120.0	+12.0	-78.0	-110.0	-75.0 (MA)	+180.0	
2: EP +		+30.0					
			-30.0				
3: WY +					0.0		
	-120.0	+30.0	-30.0	-110.0	0.0	+180.0	
Final	X	Y	Z	PITCH	YAW	ROLL	
	-443	+259	-635	280	358	42	0

BRAKES – ON (tb-ON)

Perform KU-BD ANT DEPLOY (ORB OPS, COMM/INST)

If conducting survey F:

Go to step 1 of that survey configuration

When RMS clear of fwd RCS jets:

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F2R – ITEM 13 EXEC (no *)

F4R – ITEM 15 EXEC (no *)

F2D – ITEM 27 EXEC (no *)

F4D – ITEM 29 EXEC (no *)

If conducting survey G, H, I, J, K, L, or M:

Go to step 1 of that survey configuration

If survey finished:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

	SY	SP	EP	WP	WY	WR	
√	-120.0	+30.0	-30.0	-110.0	0.0	+180.0	
1: SP –		+25.0					
2: EP +			-25.0				
3: WP +				+5.0			
4: WR –						0.0	
5: SY +	0.0						
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)


A7U

PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

**EXTERIOR SURVEY F – STBD SIDE, UNDERBODY WING TO NOSE WITH
STOWED MPM (12 min reqd – does not include KU-BD ANT or RAD STOW)**

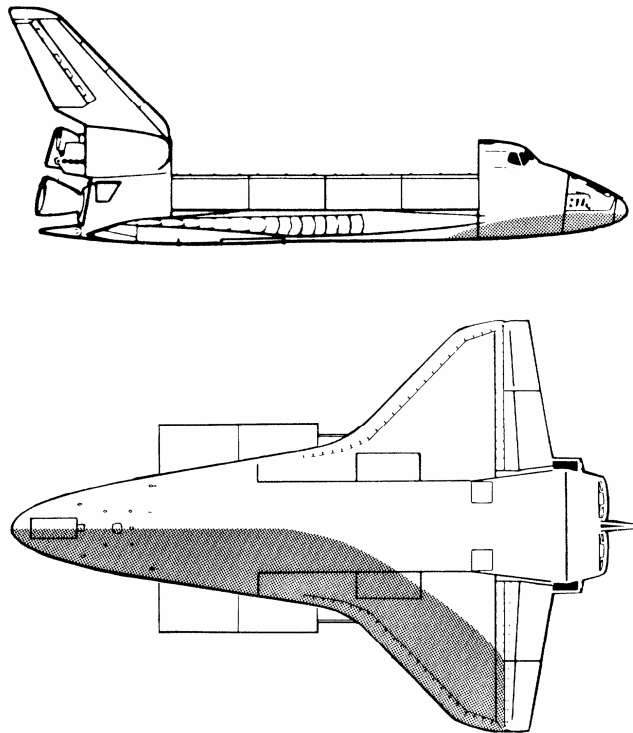

WARNING KU-BD ANT and STBD RAD must be stowed DAP must be in FREE or VERN

1. **SETUP**
Perform KU-BD ANT STOW (ORB OPS, COMM/INST)

If radiators deployed:
Perform RAD STOW (ORB OPS, ECLS)

Perform RMS PWRDN, steps 1, 2, 3, 4, 5
Perform RMS PWRUP, steps 5, 6, 7

√Attitude

DAP: VERN(FREE)

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

CAUTION Do not select DAP LO Z in this jet config

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F2R – ITEM 13 EXEC (*)

F4R – ITEM 15 EXEC (*)

F2D – ITEM 27 EXEC (*)

F4D – ITEM 29 EXEC (*)

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

SY	SP	EP	WP	WY	WR	
-114.0	+23.0	-78.0	-112.0	+55.0	+192.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-580	258	-423	350	7	24	0

BRAKES – ON (tb-ON)

- A7U 2. SURVEY
PORT RMS LIGHT – ON, as reqd
ALC pb – as reqd
GAMMA pb – as reqd

V10 If recording views with V10:

REC pbs – Press simo

√LCD displays red dot

L10 If recording views with VTR:

REC pb – Press, hold

(VTR) PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR WY to -70° :

SY	SP	EP	WP	WY	WR	
-114.0	+23.0	-78.0	-112.0	-70.0	+192.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-484	+230	-416	203	38	131	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE
BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	-114.0	+23.0	-78.0	-112.0	-70.0	+192.0	
1: SP +		+70.0					
2: WP +				+5.0			
3: WY +					0.0		
4: WR –						0.0	
Final	-114.0	+70.0	-78.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-500	+207	-765	148	299	124	0

BRAKES – ON (tb-ON)

When RMS clear of fwd RCS jets:

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F2R – ITEM 13 EXEC (no *)

F4R – ITEM 15 EXEC (no *)

F2D – ITEM 27 EXEC (no *)

F4D – ITEM 29 EXEC (no *)

Perform RMS PWRDN, steps 1, 2, 3, 4

If radiator deploy reqd:

Perform RAD DEPLOY (ORB OPS, ECLS)

Perform KU-BD ANT DEPLOY (ORB OPS, COMM/INST)

If conducting survey G, H, I, J, K, L, or M:

Perform RMS PWRUP, steps 4, 5, 6, 7

Go to step 1 of that survey configuration

If survey finished and MPM DPLY reqd:

Perform RMS PWRUP, steps 4, 6


A7U

PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY G – STBD SIDE, NOSE (12 min reqd)

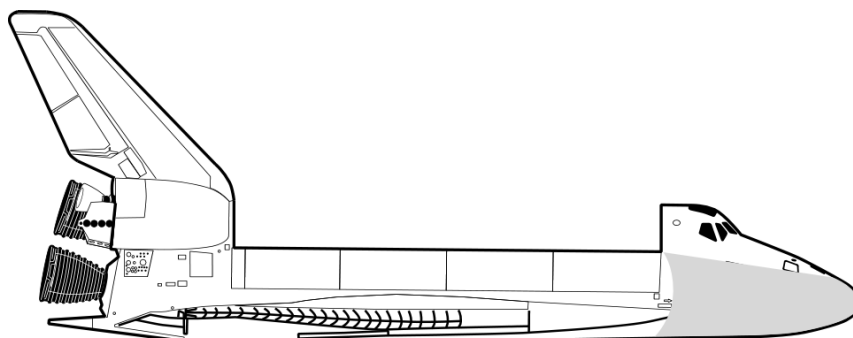

jsc48039_006.cnv

1. SETUP

√Attitude

VTR: √Tape remaining, 2 min reqd

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F1U – ITEM 17 EXEC (*)

F3U – ITEM 19 EXEC (*)

F2U – ITEM 21 EXEC (*)

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

SY	SP	EP	WP	WY	WR	
-127.0	+43.0	-68.0	-112.0	0.0	+220.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-446	+183	-552	298	19	74	0

BRAKES – ON (tb-ON)

2. SURVEY

A7U

PORT RMS LIGHT – ON, as reqd

ALC pb – as reqd

GAMMA pb – as reqd

V10

If recording views with V10:

REC pbs – Press simo

√LCD displays red dot

If recording views with VTR:

L10

REC pb – Press, hold

(VTR)

PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR WY to -45°:

SY	SP	EP	WP	WY	WR	
-127.0	+43.0	-68.0	-112.0	-45.0	+220.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-407	+166	-558	251	39	98	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

If conducting survey H:

Go to step 1 of that survey configuration

When RMS clear of fwd RCS jets:

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F1U – ITEM 17 EXEC (no *)

F3U – ITEM 19 EXEC (no *)

F2U – ITEM 21 EXEC (no *)

If conducting survey I, J, K, L, or M:

Go to step 1 of that survey configuration

If survey finished:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

Initial	SY	SP	EP	WP	WY	WR	
√	-127.0	+43.0	-68.0	-112.0	-45.0	+220.0	
1: EP +			-25.0				
2: WP +				+5.0			
3: WY +					0.0		
4: WR –						0.0	
5: SY +	0.0						
6: SP –		+25.0					
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID	
-1261	-146	-551	5	2	0	0	

BRAKES – ON (tb-ON)


A7U

PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY H – TOP SIDE, NOSE AND OVHD WINDOWS (12 min reqd)

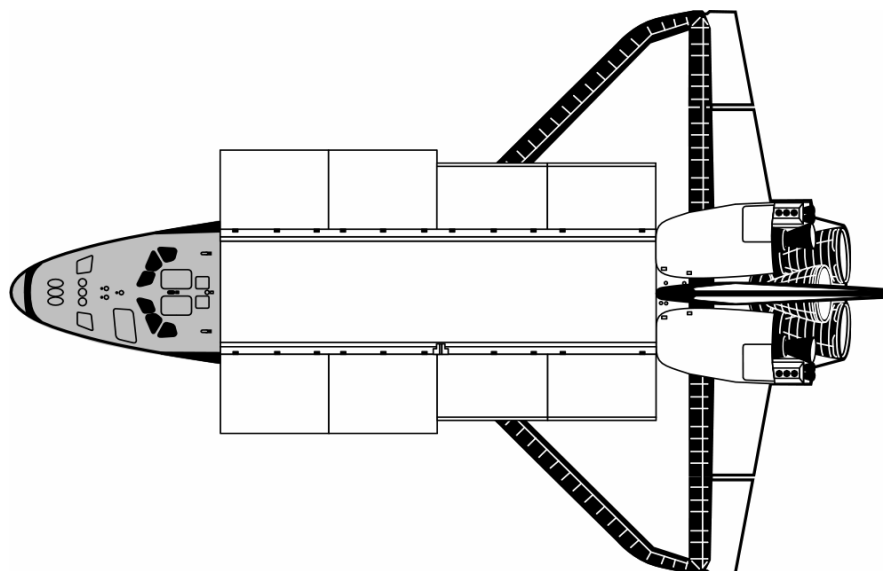

jsc48039_003.cnv

1. SETUP

√Attitude

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F1U – ITEM 17 EXEC (*)

F3U – ITEM 19 EXEC (*)

F2U – ITEM 21 EXEC (*)

NOTE

RMS appears in -Z star tracker

Bright Object Sensor FOV

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

SY	SP	EP	WP	WY	WR	
-134.0	+94.0	-100.0	-98.0	-13.0	-209.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-498	0	-650	270	0	0	0

BRAKES – ON (tb-ON)

2. SURVEY
- A7U PORT RMS LIGHT – ON, as reqd
ALC pb – as reqd
GAMMA pb – as reqd
- V10 If recording views with V10:
REC pbs – Press simo
√LCD displays red dot
- L10 If recording views with VTR:
REC pb – Press, hold
(VTR) PLAY pb – Press, simo (√red dot displayed)

BRAKES – OFF (tb-OFF)
MODE – ORB UNL, ENTER
THC – +X (OUT) to X = -275
RHC – -PITCH to PITCH = 262, then return to PITCH = 270
THC – -X (IN) to X = -498

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)
JET DES F1U – ITEM 17 EXEC (no *)
F3U – ITEM 19 EXEC (no *)
F2U – ITEM 21 EXEC (no *)

If conducting survey I, J, K, L, or M:
BRAKES – OFF
MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	-134.0	+94.0	-100.0	-98.0	-13.0	-209.0	
1: SY +	-60.0						
2: EP +			-60.0				
3: WR +						0.0	
Final	-60.0	+94.0	-60.0	-98.0	-13.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-792	-15	-845	272	312	278	0

If survey finished:							
Initial 1: SY + 2: EP + 3: WP + 4: WY + 5: WR + 6: SP – 7: EP + Pre-cradle	√	SY	SP	EP	WP	WY	WR
		-134.0	+94.0	-100.0	-98.0	-13.0	-209.0
		0.0					
				-40.0			
					+5.0		
						0.0	
							0.0
			+25.0				
				-25.0			
		0.0	+25.0	-25.0	+5.0	0.0	0.0
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1261	-146	-551	5	2	0	0


BRAKES – ON (tb-ON)

A7U PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY I – TOP VIEW, STBD WING (12 min reqd)

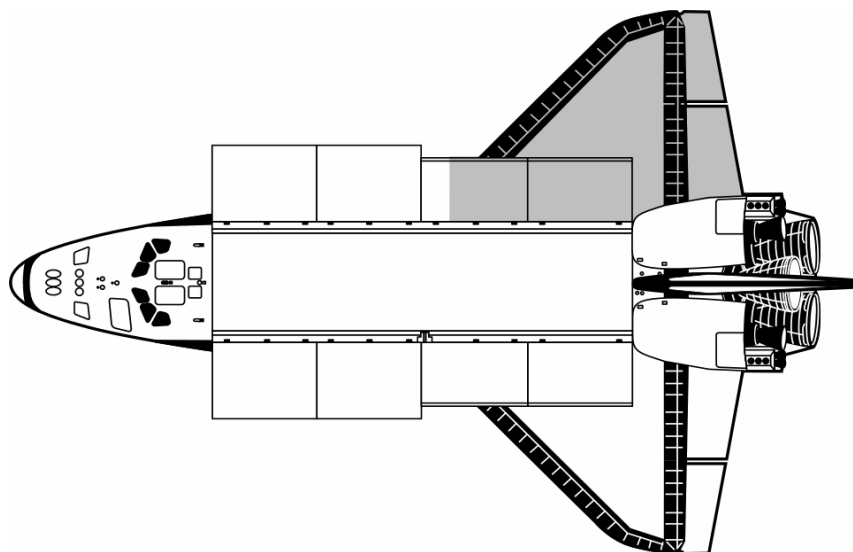

jsc48039_004.cnv

1. SETUP

√Attitude

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

SY	SP	EP	WP	WY	WR	
-60.0	+40.0	-50.0	-50.0	+45.0	+65.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-964	+260	-643	323	351	12	0

BRAKES – ON (tb-ON)

2. SURVEY

A7U

PORT RMS LIGHT – ON, as reqd
ALC pb – as reqd
GAMMA pb – as reqd

V10

If recording views with V10:

REC pbs – Press simo

√LCD displays red dot

If recording views with VTR:

L10

REC pb – Press, hold

(VTR)

PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	-60.0	+40.0	-50.0	-50.0	+45.0	+65.0	
1: WP –				-90.0			
2: WY –					+35.0		
3: WP +				-50.0			
Final	-60.0	+40.0	-50.0	-50.0	+35.0	+65.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-959	+268	-640	317	343	11	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

If conducting survey J, K, L, or M:

Go to step 1 of that survey configuration

If survey finished:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	-60.0	+40.0	-50.0	-50.0	+35.0	+65.0	
1: SY +	0.0						
2: EP +			-25.0				
3: WP +				+5.0			
4: WY –					0.0		
5: WR –						0.0	
6: SP –		+25.0					
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)


A7U

PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY J – TOP VIEW, PORT WING (12 min reqd)

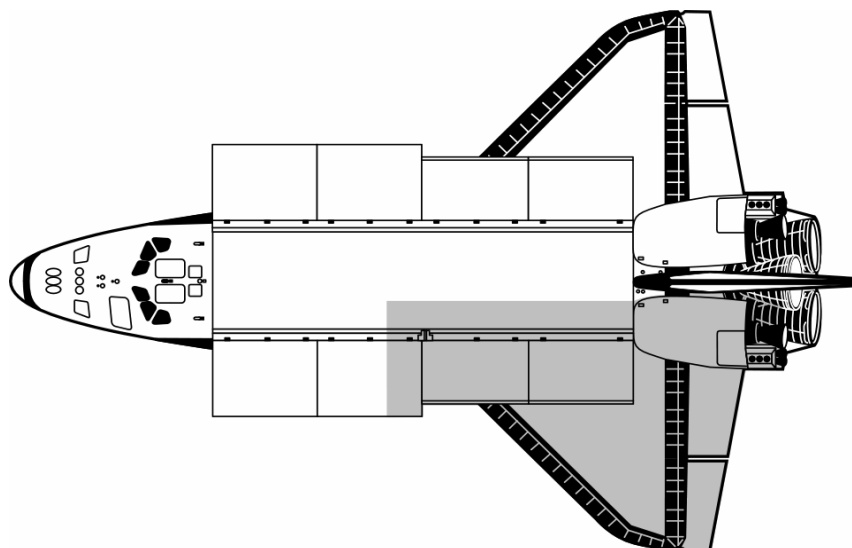

jsc48039_005.cnv

1. SETUP

√Attitude

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

SY	SP	EP	WP	WY	WR	
0.0	+84.0	-40.0	-102.0	+17.0	+10.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-945	-252	-803	300	0	0	0

BRAKES – ON (tb-ON)

2. SURVEY

A7U

PORT RMS LIGHT – ON, as reqd

ALC pb – as reqd

GAMMA pb – as reqd

V10

If recording views with V10:

REC pbs – Press simo

√LCD displays red dot

If recording views with VTR:

L10

REC pb – Press, hold

(VTR)

PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)
 MODE – ORB UNL, ENTER
 THC – +Z(DN) to Z = -600, then return to Z = -803

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

If conducting survey K, L, or M:

Go to step 1 of that survey configuration

If survey finished:

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	0.0	+84.0	-40.0	-102.0	+17.0	+10.0	
1: EP +			-25.0				
2: WP +				+5.0			
3: WY –					0.0		
4: WR –						0.0	
5: SP –		+25.0					
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)


A7U

PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY K – PORT, OMS POD AND VERT TAIL (12 min reqd)

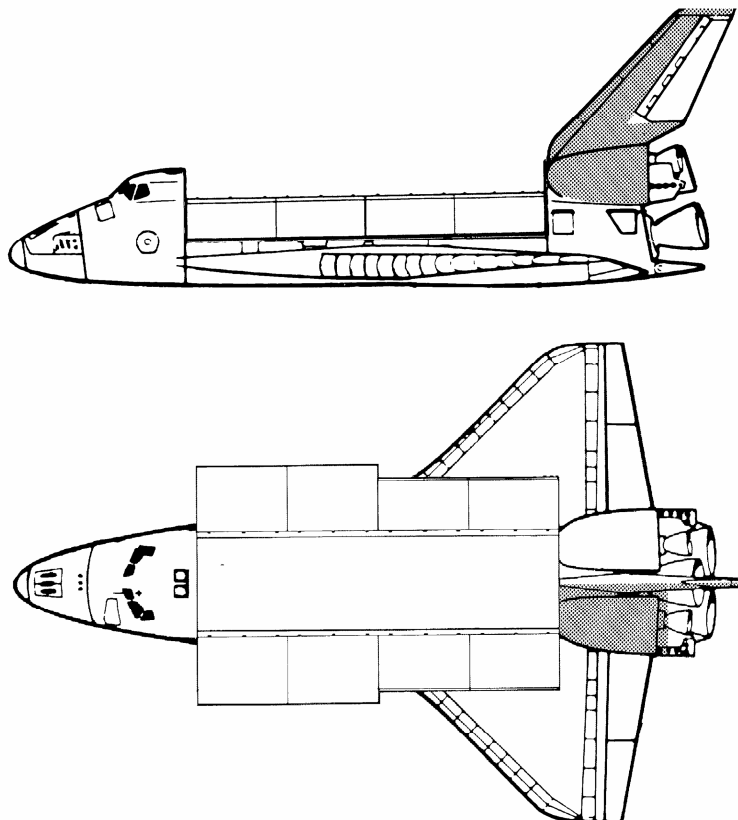

1. SETUP

√Attitude

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

Initial √
1: SP –
Final

SY	SP	EP	WP	WY	WR	
-7.0	+55.0	-10.0	-57.0	+10.0	+22.0	
	+21.0					
-7.0	+21.0	-10.0	-57.0	+10.0	+22.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1236	-83	-550	315	351	11	0

BRAKES – ON (tb-ON)

2. SURVEY

A7U

PORT RMS LIGHT – ON, as reqd

ALC pb – as reqd

GAMMA pb – as reqd

V10 If recording views with V10:
 REC pbs – Press simo
 ✓LCD displays red dot
 L10 If recording views with VTR:
 REC pb – Press, hold
 (VTR) PLAY pb – Press, simo (✓red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

Mnvr using WP, WY to perform survey

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

If conducting survey L or M:
 Go to step 1 of that survey configuration

If survey finished:
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	-7.0	+21.0	-10.0	-57.0	+10.0	+22.0	
1: SP +		+35.0					
2: WP +				+5.0			
3: WY –					0.0		
4: WR –						0.0	
5: EP –			-25.0				
6: SY +	0.0						
7: SP –		+25.0					
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1261	-146	-551	5	2	0	0


BRAKES – ON (tb-ON)

A7U PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY L – PORT, LEAD EDGE VERT TAIL (12 min reqd)

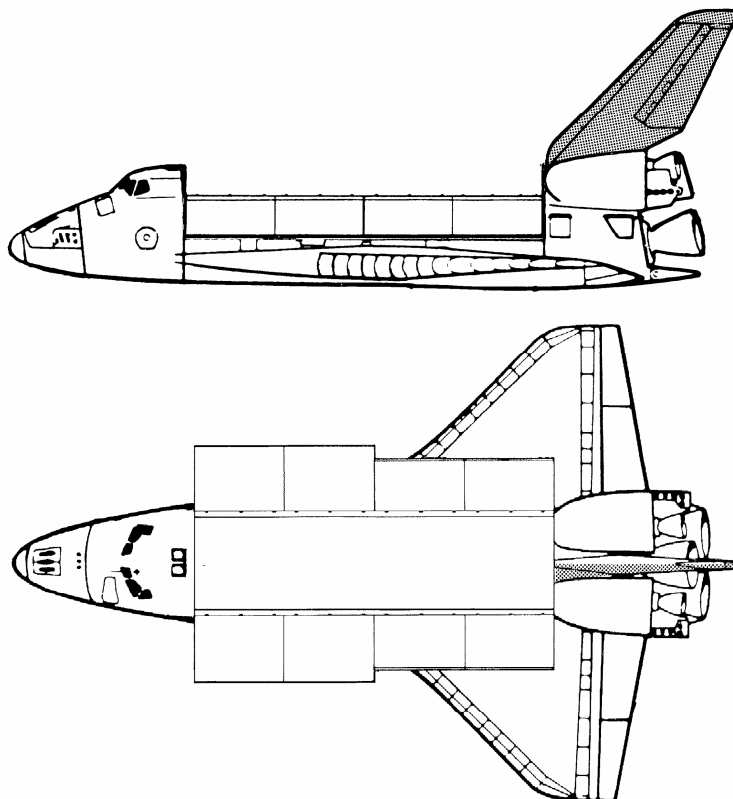

1. SETUP

√Attitude

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

SY	SP	EP	WP	WY	WR	PL ID
-13.0	+42.0	-23.0	-66.0	+4.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	
-1169	-74	-675	316	341	345	0

BRAKES – ON (tb-ON)

2. SURVEY

A7U

PORT RMS LIGHT – ON, as reqd

ALC pb – as reqd

GAMMA pb – as reqd

V10 If recording views with V10:
 REC pbs – Press simo
 √LCD displays red dot
 L10 If recording views with VTR:
 REC pb – Press, hold
 (VTR) PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

SINGLE DR WP to -20°:

SY	SP	EP	WP	WY	WR	
-13.0	+42.0	-23.0	-20.0	+4.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1192	-86	-727	2	351	0	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

If conducting survey M:
 Go to step 1 of that survey configuration

If survey finished:
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	-13.0	+42.0	-23.0	-20.0	+4.0	0.0	
1: SY +	0.0						
2: SP –		+25.0					
3: EP –			-25.0				
4: WP +				+5.0			
5: WY –					0.0		
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1261	-146	-551	5	2	0	0


BRAKES – ON (tb-ON)

A7U PORT RMS LIGHT – OFF

DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

EXTERIOR SURVEY M – STBD SIDE, LEAD EDGE VERT TAIL AND OMS POD
(12 min reqd)

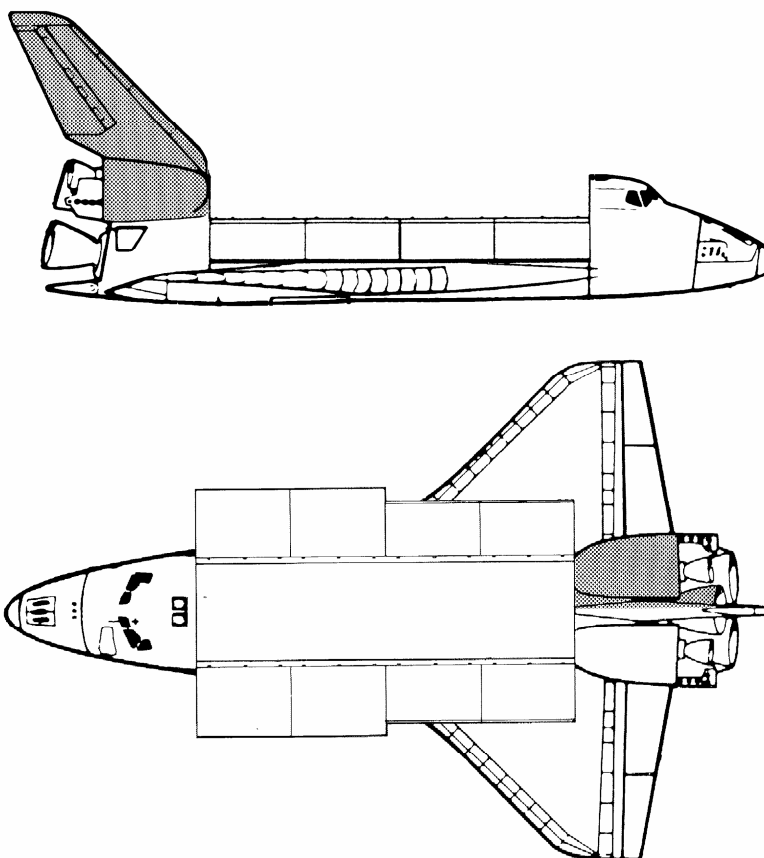

1. SETUP

√Attitude

V10 (L10
(VTR))

√Tape remaining, 5 min reqd

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to within $\pm 1^\circ$ of SY, SP, EP:

Initial 1: SP – Final	√	SY	SP	EP	WP	WY	WR	
		-37.0	+55.0	-10.0	-60.0	+56.0	+22.0	
			+21.0					
		-37.0	+21.0	-10.0	-60.0	+56.0	+22.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-1139	+128	-641	325	16	350	0

BRAKES – ON (tb-ON)

2. SURVEY

A7U

PORT RMS LIGHT – ON, as reqd

ALC pb – as reqd

GAMMA pb – as reqd

V10 If recording views with V10:
 REC pbs – Press simo
 √LCD displays red dot
 L10 If recording views with VTR:
 REC pb – Press, hold
 (VTR) PLAY pb – Press, simo (√red dot displayed)

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR WP to 0°:

SY	SP	EP	WP	WY	WR	
-37.0	+21.0	-10.0	0.0	+56.0	+22.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1152	+122	-688	0	20	30	0

BRAKES – ON (tb-ON)

Stop recording

3. RECONFIGURE

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to PRE-CRADLE position (within 1°):

	SY	SP	EP	WP	WY	WR	
Initial	-37.0	+21.0	-10.0	0.0	+56.0	+22.0	
1: SP +		+35.0					
2: WP +				+5.0			
3: WY –					0.0		
4: WR –						0.0	
5: EP –			-25.0				
6: SY +	0.0						
7: SP –		+25.0					
Pre-cradle	0.0	+25.0	-25.0	+5.0	0.0	0.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1261	-146	-551	5	2	0	0


BRAKES – ON (tb-ON)

A7U PORT RMS LIGHT – OFF


DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN


SUPPLY/WASTE H2O DUMP NOZZLE SURVEY ARM CONFIG

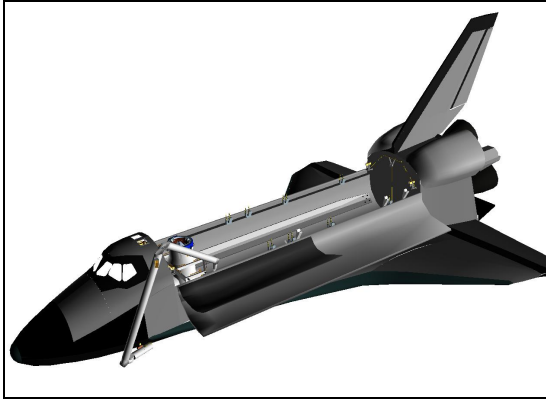


BIRD'S EYE PORT

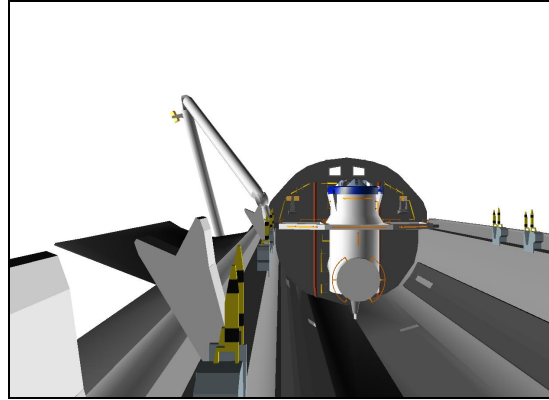

CCTV B (0,0)

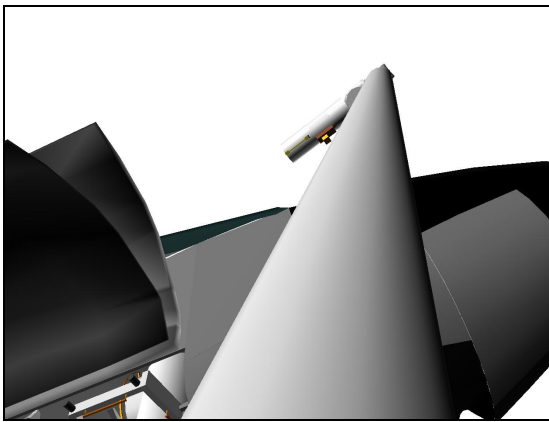

ELBOW (-15,-25)

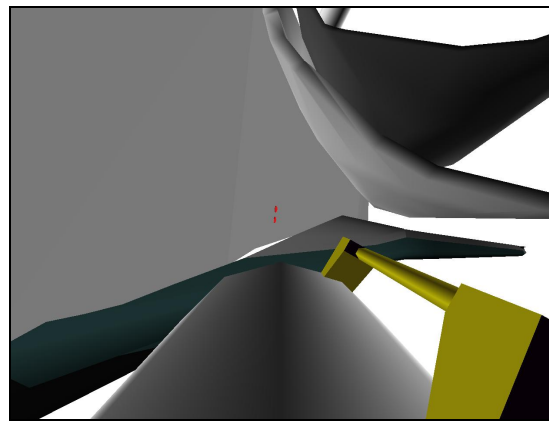

END EFFECTOR

SUPPLY/WASTE H2O DUMP NOZZLE SURVEY

1. ORBITER MNVR TO DUMP ATTITUDE (Skip if performed per FLIGHT PLAN callout)

NOTE

MCC to complete for optimum lighting, DAP, reqd tape time

GNC UNIV PTG

TGT ID _____
BODY VECT _____
P _____
Y _____
OM _____

A6U DAP: __/AUTO/VERN(ALT)
Init TRK, ITEM 19 EXEC (*)

2. SETUP

A7U VID OUT pb – MON 1
IN pb – B
VID OUT pb – MON 2
IN pb – RMS

SM 94 PDRS CONTROL

√SOFT STOP, ITEM 7 – ENA (*)
√AUTO BRAKE, ITEM 9 – ENA (*)
√POS ENC CK, ITEM 11 – ENA (*)

VTR: √Tape remaining, ____ min reqd

3. PRCS JET INHIBIT

CAUTION

Do not select DAP LO Z in this jet config

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)
JET DES F1L – ITEM 9 EXEC (*)
F3L – ITEM 11 EXEC (*)
F1U – ITEM 17 EXEC (*)
F1D – ITEM 23 EXEC (*)
F3D – ITEM 25 EXEC (*)

4. MNVR RMS TO SURVEY POSN

NOTE

RMS appears in -Y star tracker
Bright Object Sensor FOV

PARAM – JOINT ANGLE
BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

NOTE

Drive joints as specified in joint angle table below to ensure adequate clearance from structure. PAN and TILT Elbow Camr to monitor EE/orbiter clearance

SINGLE DR to (within 1°):

	SY	SP	EP	WP	WY	WR	
Pre-cradle ✓	0.0	+25.0	-25.0	+5.0	0.0	0.0	
1: SP +		+45.0					
2: WP –				-104.0			
3: WY –					-6.0		
4: WR +						+175.0	
5: SY +	+140.0						
6: EP –			-115.0				
7: SY +	+154.0						
Final	+154.0	+45.0	-115.0	-104.0	-6.0	+175.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-494	-168	-324	1.0	339	354	0

BRAKES – ON (tb-ON)

✓MODE – not DIRECT

JOINT – CRIT TEMP

5. SURVEY

NOTE

Lighting is critical to dump viewing. Optimal results achieved if EE Camr zoomed in and view is orthogonal to nozzle

A7U

PORT RMS LIGHT – ON

CAMERA – WRIST

ZOOM – IN (as reqd to view nozzle)

ALC pb – as reqd

GAMMA pb – as reqd

V10

If recording views with V10:

REC pbs – Press simo

✓LCD displays red dot

If recording views with VTR:

L10


REC pb – Press, hold

(VTR)

PLAY pb – Press, simo (✓red dot displayed)

When survey complete:

Stop recording

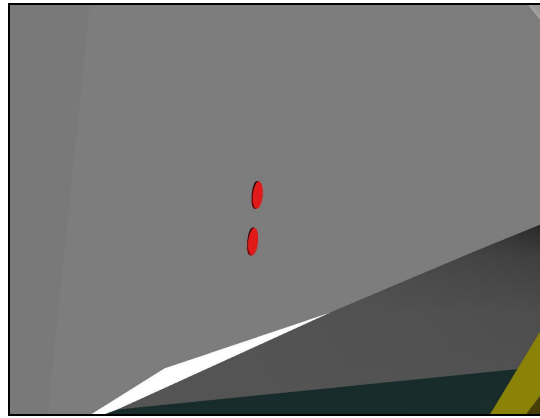

END EFFECTOR (zoomed)

6. MNVR RMS BACK TO PRE-CRADLE

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to (within 1°):

Initial	✓	SY	SP	EP	WP	WY	WR	
		+154.0	+45.0	-115.0	-104.0	-6.0	+175.0	
1: SY –		+140.0						
2: EP +				-25.0				
3: WP +					+5.0			
4: WY +						0.0		
5: WR –							0.0	
6: SY –		0.0						
7: SP –			+25.0					
Pre-cradle		0.0	+25.0	-25.0	+5.0	0.0	0.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)

✓MODE – not DIRECT

JOINT – CRIT TEMP

A7U PORT RMS LIGHT – OFF

7. PRCS JET ENABLE

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

JET DES F1L – ITEM 9 EXEC (no *)

F3L – ITEM 11 EXEC (no *)

F1U – ITEM 17 EXEC (no *)

F1D – ITEM 23 EXEC (no *)

F3D – ITEM 25 EXEC (no *)

8. DAP RECONFIGURATION

A6U DAP: as reqd

Mnvr back to attitude per FLIGHT PLAN

OBSS OPERATIONS

I

NOMINAL.....	7-3
OBSS UNBERTH.....	7-3
BERTH.....	7-9
LDRI/IDC RCC SURVEY – STBD.....	7-15
– NOSE CAP.....	7-29
– PORT.....	7-37
OFF-NOMINAL.....	7-50
OBSS SJ UNBERTH.....	7-50
BERTH.....	7-62
JETTISON.....	7-77
ITVC TILE ACREAGE SURVEY.....	7-83
RMS EE RCC WING SURVEY.....	7-103

OBSS
OPERATIONS

This Page Intentionally Blank

OBSS UNBERTH

WARNING
For UNDOCKED ops only

NOTE

Stbd MPMs assumed deployed

1. SETUP

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 0

√INIT ID, ITEM 24: 0

RHC

2. MNVR TO OBSS PRE-GRAPPLE

RATE – as reqd (VERN within 10 ft)

BRAKES – OFF (tb-OFF)

MODE – ORB UNL, ENTER

If first RMS ops for the mission:

Perform manual PLB survey, en route to OBSS PRE-GRAPPLE position

Mnvr to OBSS PRE-GRAPPLE posn:

X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+96	-513	270	350	1	0
SY	SP	EP	WP	WY	WR	
-90.0	+87.6	-129.5	-57.5	0.0	+110.4	

RATE – COARSE

MODE – SINGLE, ENTER

Adjust Wrist Roll:

Pre-Grapple
1: WR -
Pre-Grapple

SY	SP	EP	WP	WY	WR*	
-90.0	+87.6	-129.5	-57.5	0.0	+110.4	
					-249.6	
-90.0	+87.6	-129.5	-57.5	0.0	-249.6	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+96	-513	270	350	1	0

* WR RANGE = 2

BRAKES – ON (tb-ON)

CAUTION

SPEE power must be applied within 90 min
to prevent sensor package damage

STBD RMS HTR A,B (two) – OFF

A6U

EVENT TIMER MODE – UP

CNTL – START

R12(OBSS) √SPEE PWR – OFF

SSP1(OV-104) √APCU 1,2 CONV (two) – OFF

A15(OV-103,
OV-105)

NOMINAL

3. OBSS GRAPPLE

A7U

CCTV – config for grapple
 – install PDRS TARGET OVERLAY FOR CTVM
 – RMS WRIST, ZOOM: 34.0 HFOV
 FOCUS: 5 ft

Maintain eyepoint ~18 in when using grapple overlay

A6U

DAP: VERN(FREE)

RHC

RATE – VERN (RATE MIN tb-ON)
 BRAKES – OFF (tb-OFF)
 MODE – END EFF, ENTER

Mnvr to grapple envelope

CAUTION
 Monitor EE tb timing to prevent EE motor burnout

EE MODE – AUTO
 CAPTURE – depress (mom)

✓	RIGID 	CLOSE 	CAPTURE 
	DERIGID 	OPEN 	EXTEND 

CRITICAL TIMES (28 sec total):
 CAPTURE tb – gray, then
 CLOSE tb – gray, 3 sec max, then
 RIGID tb – gray, 25 sec max

EE MODE – OFF
 BRAKES – ON (tb-ON)

SM 94 PDRS CONTROL

PL ID – ITEM 3 +1 EXEC
 INIT ID – ITEM 24 +1 EXEC

Record POSN/ATT and Joint Angles:

	X	Y	Z	PITCH	YAW	ROLL	PL ID
							1
Expected	-680	+105	-436	0	0	341	1
	SY	SP	EP	WP	WY	WR	
Expected	-90.0	+76.5	-134.6	-40.9	0.0	-250.0	

Review GENERIC END EFFECTOR CUE CARD – SHUTTLE NOT DOCKED OPS

4. CONFIGURE POWER

MA73C:C

cb MCA PWR AC3 3Φ MID 2 – op
 ✓AC2 3Φ MID 2 – op

MA73C:D

✓AC3 3Φ MID 4 – op

R13L

PL BAY MECH PWR SYS (two) – ON

A7U 5. STBD MRL RELEASE
CCTV – config for unberth

A6U DAP: FREE

SM 94 PDRS CONTROL

RMS STBD – ITEM 2 EXEC (*)

√STBD AFT, MID, FWD REL (six) = 0

NOTE

Expect single motor drive time for MRL release

STBD RMS RETEN LAT – REL (tb-REL) (18 sec max)

– OFF

If motor drive time > 18 sec, √MCC

SM 94 PDRS CONTROL

RMS PORT – ITEM 1 EXEC (*)

R13L 6. RECONFIGURE POWER
PL BAY MECH PWR SYS (two) – OFF

MA73C:C cb MCA PWR AC3 3Φ MID 2 – cl

√AC2 3Φ MID 2 – op

MA73C:D √AC3 3Φ MID 4 – op

Record joint angles:

SY	SP	EP	WP	WY	WR


RHC 7. MNVR TO OBSS HOVER
√RATE – VERN (RATE MIN tb-ON)
BRAKES – OFF (tb-OFF)
MODE – PL, ENTER

Mnvr OBSS up (-Z) to OBSS HOVER, Z = -496


X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+126	-496	0	0	341	1
SY	SP	EP	WP	WY	WR	
-90.0	+79.8	-123.1	-55.7	0.0	-250.0	

BRAKES – ON (tb-ON)

MODE – not DIRECT

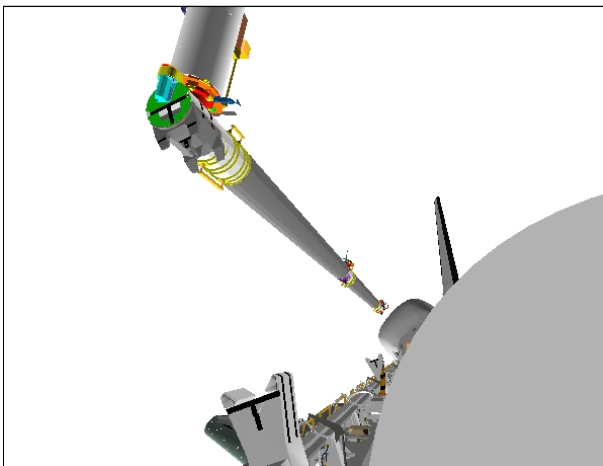

CCTV D (-15,15)

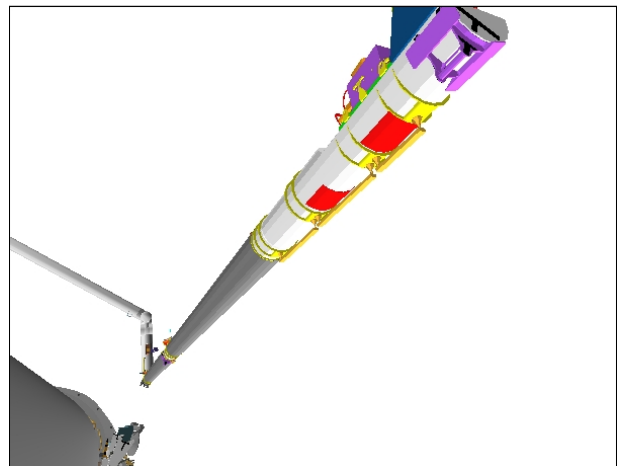

CCTV C (25,25)

DAP: A14/AUTO/VERN(FREE)

R12(OBSS) RSC PWR – OFF, ON

A6U If Verns failed, DAP: AUTO/ALT

In the following P/TV procedure, start 15-min timer upon applying SPEE power and inform MCC when timer is started:

Perform ACTIVATION (LDRI/ITVC Cue Card, PHOTO/TV)

Perform LCH ACTIVATION (LCS Cue Card, PHOTO/TV)

Perform LCC ACTIVATION (LCS Cue Card, PHOTO/TV)

A7U 8. RESET PTU
DTV ← PL2

CAMR CMD PAN/TILT – HI RATE


PAN – L (to hard stop)

TILT – UP (to hard stop)


PAN/TILT – RESET, HI RATE (LO within 10°)

PAN: +103 (right)

TILT: -260 (down)

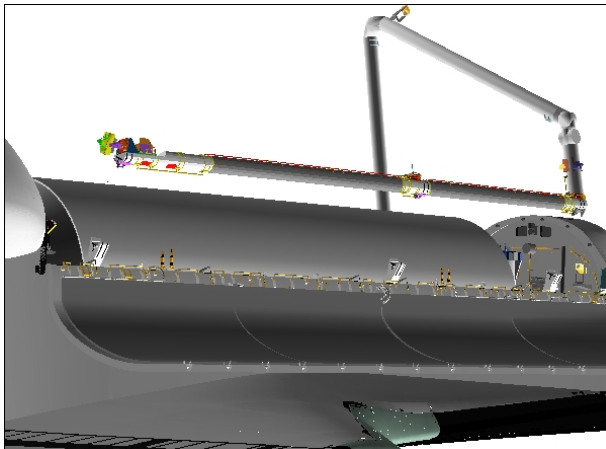

BIRD'S EYE

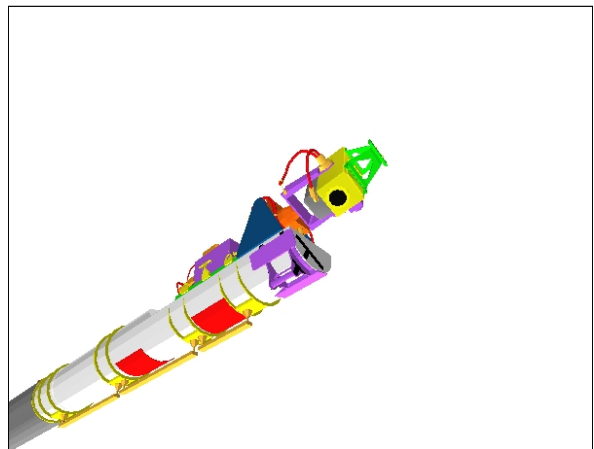

CCTV C (50,50)

If continuing OBSS ops for Late Inspection,
Go to OBSS LDRI/IDC RCC SURVEY – STBD >>

9. LDRI CALIBRATION

NOTE

Ensure GMT is set on DSR-25

Verify 15 min SPEE warmup power timer expired


MUX 1 L ← MIDDECK

LDRI MODE 3 pb – push (LDRI video)

DTV ← PL2

PAN/TILT to match LDRI view shown below


Note PAN/TILT: _____, _____

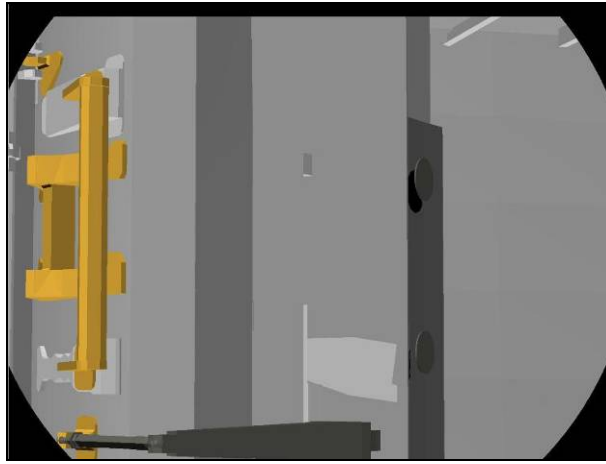

LDRI (103,-260)

If LDRI calibration view of STBD sill presents unacceptable specular reflections,

A7U PAN: +110 (right)
TILT: -220 (up)

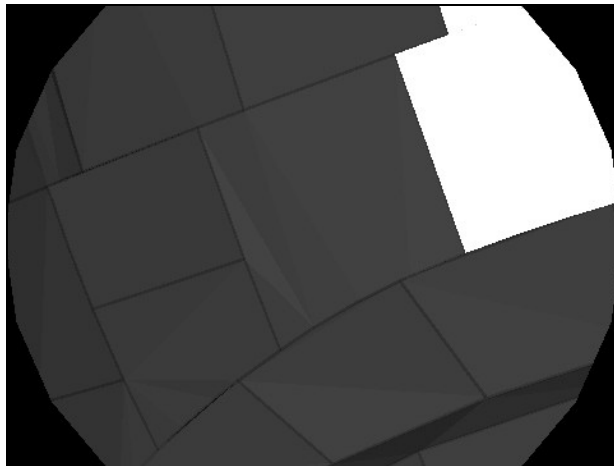

LDRI (110,-220)

L10(VTR) On MCC GO,
REC pb – push, hold
PLAY pb – push, simo (red ●)

Record for 30 sec

MUX 1 L ← MIDDECK

A7U LDRI MODE 4 pb – push (brighter LDRI video)

Record for 30 sec

LDRI MODE 5 pb – push (flickering LDRI video)

Record for 30 sec

LDRI MODE 6 pb – push (brighter flickering LDRI video)

Record for 30 sec

STOP pb – push (no red ●)

If continuing OBSS ops with Stbd RCC survey:

Mnvr to STBD SURVEY attitude per FLIGHT PLAN

Go to OBSS LDRI/IDC RCC SURVEY – STBD

OBSS BERTH

WARNING
For UNDOCKED ops only

NOTE

Stbd MPMs assumed deployed

- A7U 1. SETUP
CCTV – config for berth

SM 94 PDRS CONTROL

PL ID – ITEM 3 +1 EXEC


INIT ID – ITEM 24 +1 EXEC

2. OBSS HOVER


Verify mnvr to OBSS HOVER posn complete:

X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+126	-496	0	0	341	1
SY	SP	EP	WP	WY	WR	
-90.0	+79.8	-123.1	-55.7	0.0	+110.0	

√STBD RMS HTR A,B (two) – OFF

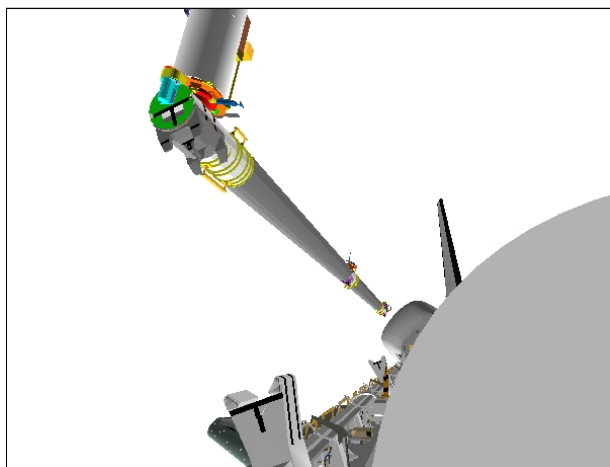

CCTV D (-15,15)

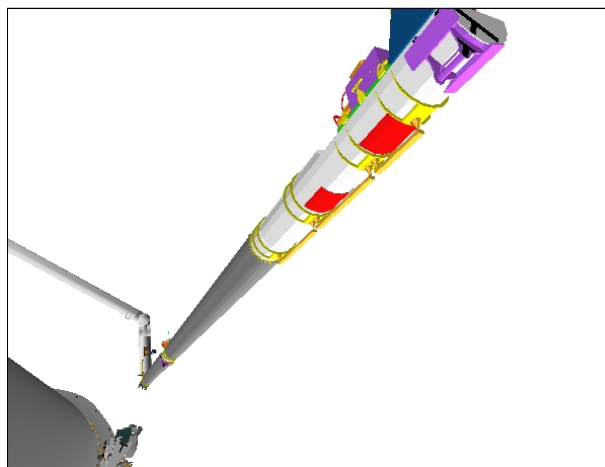

CCTV C (25,25)

- A7U 3. STOW PTU
√DTV ← PL2

CAMR CMD PAN/TILT – HI RATE


PAN – L (to hard stop)

TILT – UP (to hard stop)


PAN/TILT – RESET, HI RATE (LO within 10°)

PAN: +108 (right)


TILT: -175 (down)

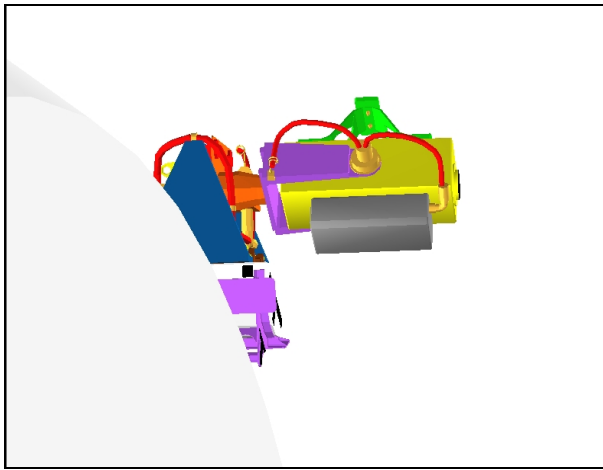


CCTV B (82,16) HFOV: 15.0

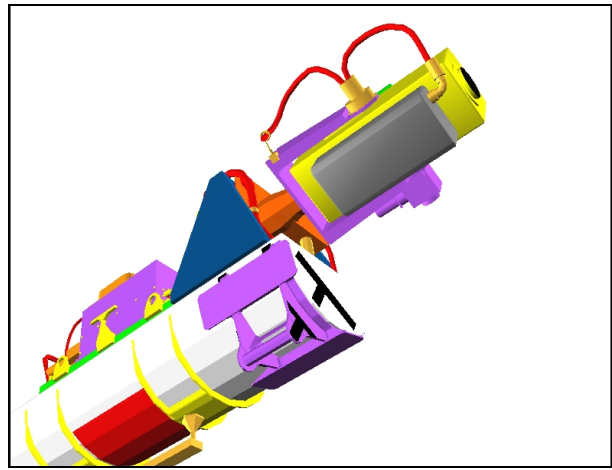

CCTV C (50,50) HFOV: 40.0

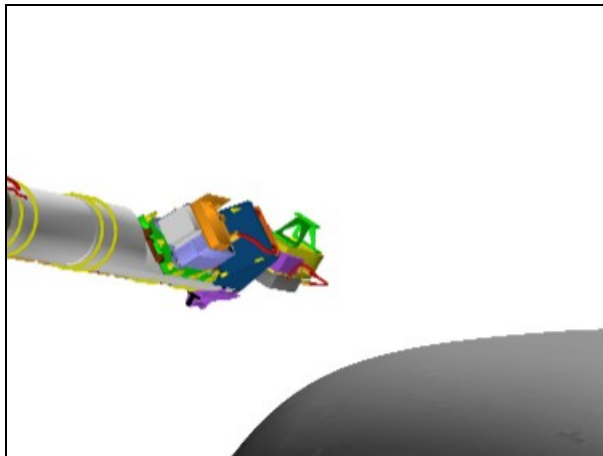

ELBOW (52,-45) HFOV: 9.8 (full-in)

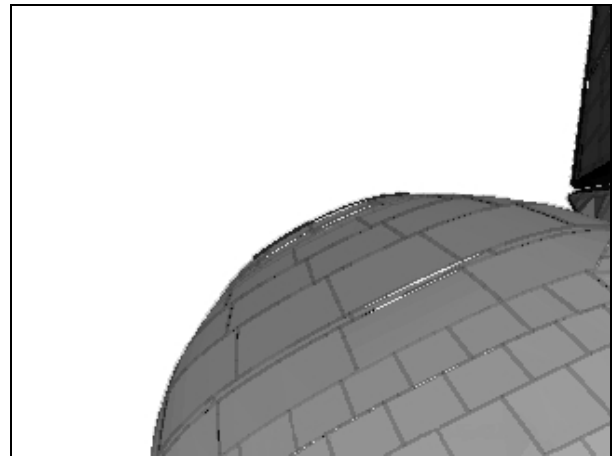

OBSS ITVC (108,-175) HFOV: 53.8 (full-out)

Perform LCC DEACTIVATION (LCS Cue Card, PHOTO/TV)
 Perform LCH DEACTIVATION (LCS Cue Card, PHOTO/TV)

CAUTION

STBD RMS HTR power must be applied within
 90 min to prevent sensor package damage

Perform DEACTIVATION (LDRI/ITVC Cue Card, PHOTO/TV)

4. OBSS BERTH

NOTE

If desired, REL values should be loaded prior
 to selecting the starboard arm (ITEM 2 EXEC)

SM 94 PDRS CONTROL

RMS STBD – ITEM 2 EXEC (*)

A6U

DAP: FREE

RHC

RATE – VERN (RATE MIN tb-ON)
 BRAKES – OFF (tb-OFF)
 MODE – PL, ENTER


NOTE

Refer to table in OBSS UNBERTH, step 3 for
POSN/ATT at GRAPPLE to fill in table below


Mnvr OBSS down (+Z) to OBSS BERTH:

	X	Y	Z	PITCH	YAW	ROLL	PL ID
							1
Expected	-680	+105	-436	0	0	341	1
	SY	SP	EP	WP	WY	WR	
Expected	-90.0	+76.5	-134.6	-40.9	0.0	+110.0	


√STBD R-F-L tb (three) – gray

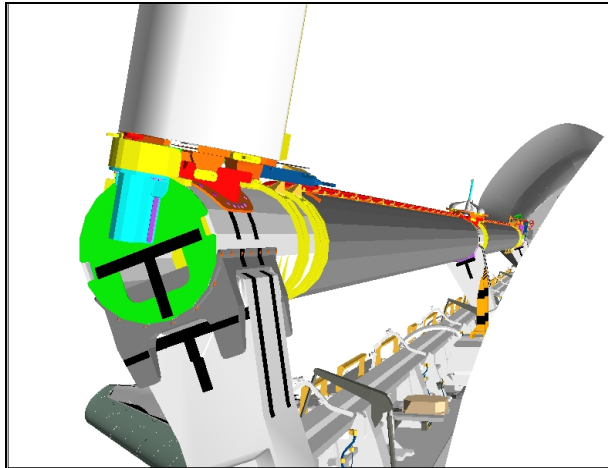

CCTV D (-15,0) HFOV: 35.0

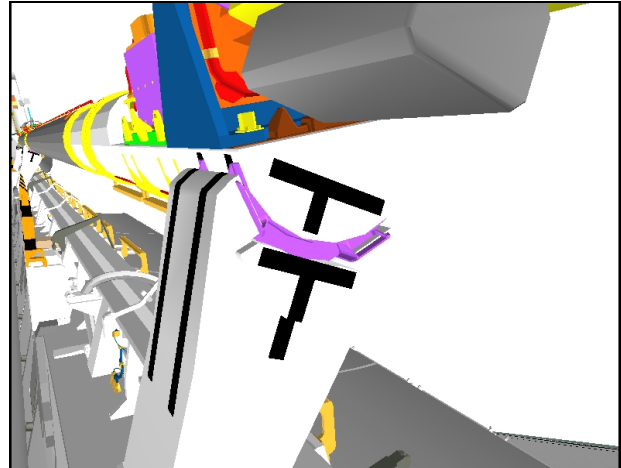

CCTV C (30,-10) HFOV: 60.0

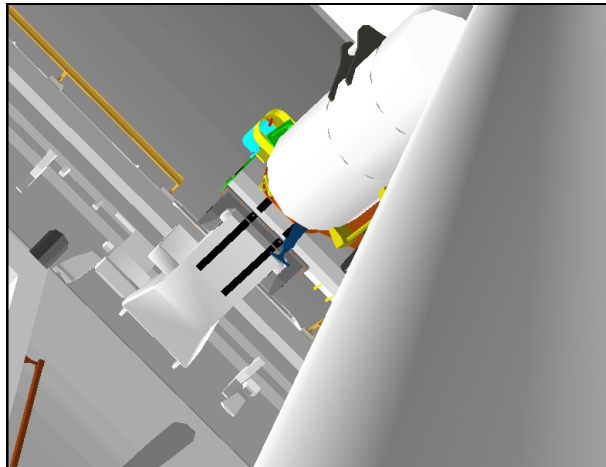

ELBOW (-7,-12) HFOV: 15.0

5. CONFIGURE POWER

MA73C:C cb MCA PWR AC3 3Φ MID 2 – op

 √AC2 3Φ MID 2 – op

MA73C:D √AC3 3Φ MID 4 – op

R13L PL BAY MECH PWR SYS (two) – ON

6. STBD MRL LATCH
RATE – COARSE (RATE MIN tb-OFF)

SM 94 PDRS CONTROL

√STBD AFT, MID, FWD LAT (six) = 0

AUTO BRAKE INH – ITEM 10 EXEC (*)

NOTE

Expect single motor drive time for MRL latching

STBD RMS RETEN LAT – LAT (tb-LAT) (18 sec max)
– OFF

If motor drive time > 18 sec, √MCC

MODE – TEST, ENTER
Wait 5 sec

BRAKES – ON (tb-ON)

SM 94 PDRS CONTROL

RMS PORT – ITEM 1 EXEC (*)
AUTO BRAKE ENA – ITEM 9 EXEC (*)

A6U DAP: A1/AUTO/VERN(ALT)

7. RECONFIGURE POWER

R13L PL BAY MECH PWR SYS (two) – OFF

MA73C:C cb MCA PWR AC3 3Φ MID 2 – cl
√AC2 3Φ MID 2 – op

MA73C:D √AC3 3Φ MID 4 – op

8. OBSS UNGRAPPLE

A7U CCTV – config for ungrapple
– RMS WRIST, ZOOM: 34.0 HFOV
FOCUS: 5 ft

SM 94 PDRS CONTROL

PL ID – ITEM 3 +0 EXEC
INIT ID – ITEM 24 +0 EXEC

RHC RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)
MODE – END EFF, ENTER

A6U DAP: VERN(FREE)

CAUTION Monitor EE tb timing to prevent EE motor burnout

EE MODE – AUTO
RELEASE sw – REL (mom)

When OPEN tb – gray, mnvr arm clear of grapple pin

✓	RIGID  DERIGID 	CLOSE  OPEN 	CAPTURE  EXTEND 	<u>CRITICAL TIMES (28 sec total):</u> DERIGID tb – gray, 5 sec max, then OPEN tb – gray, 3 sec max, then EXTEND tb – gray, 20 sec max
---	--	---	---	---

EE MODE – OFF

- * If manual release reqd: *
- * EE MODE – MAN *
- * MAN CONTR – DERIGID (hold until DERIGID tb-gray, 5 sec max) *
- * RELEASE sw – depress (hold until OPEN tb-gray, 3 sec max) *
- * Mnvr arm clear of grapple pin, then: *
- * EE MAN CONTR – DERIGID (hold until EXTEND tb-gray, 20 sec max) *
- * MODE – OFF *

STBD RMS HTR A,B (two) – AUTO

A6U EVENT TIMER CNTL – STOP
✓DAP A1/AUTO/VERN (ALT)

Mnvr to OBSS PRE-GRAPPLE posn:

X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+96	-513	270	350	1	0
SY	SP	EP	WP	WY	WR	
-90.0	+87.6	-129.5	-57.5	0.0	+110.4	

BRAKES – ON (tb-ON)

- | |
|------------|
| GNC 23 RCS |
|------------|
- ✓RCS FWD, ITEM 1: *
- ✓MANF VLVS OVRD 1 – ITEM 40 EXEC (OP)
2 – ITEM 41 EXEC (OP)
3 – ITEM 42 EXEC (OP)
4 – ITEM 43 EXEC (OP)
5 – ITEM 44 EXEC (OP)

9. ARM PRE-CRADLE

- | |
|--------------------|
| SM 94 PDRS CONTROL |
|--------------------|
- ✓PL ID, ITEM 3: 0
✓INIT ID, ITEM 24: 0

RATE – as reqd (VERN within 10 ft)
BRAKES – OFF (tb-OFF)
MODE – as desired

Mnvr to PRE-CRADLE posn:

OBSS
PRE-GRAPPLE

1: WP +

2: WR -

3: EP +

4: SY +

5: SP -

PRE-CRADLE

SY	SP	EP	WP	WY	WR	
-90.0	+87.6	-129.5	-57.5	0.0	+110.4	
			+5.0			
					0.0	
		-25.0				
0.0						
	+25.0					
0.0	+25.0	-25.0	+5.0	0.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)
MODE – not DIRECT
PARAM – PORT TEMP
JOINT – CRIT TEMP

OBSS LDRI/IDC RCC SURVEY – STBD (90 min)

WARNING
For UNDOCKED ops only
Stbd PLBD radiator must be stowed
APAS Docking Ring must be retracted

NOTE

Assumed starting posn is OBSS HOVER posn.

In case of SPEE pwr loss, reset RSC Illuminator, reset PTU, select correct LDRI mode.

Mnvr of SRMS/OBSS to STBD LDRI ACAS START posn may occur simo with Orbiter mnvr to STBD SURVEY attitude.

For PL ID 2, the rates have been set such that Coarse is allowed within 10 feet of structure for all maneuvers. Vern rates are only necessary for IDC scans

1. SETUP

SM 94 PDRS CONTROL

PL ID – ITEM 3 +2 EXEC

INIT ID – ITEM 24 +2 EXEC

AUTO MODES – ITEM 13 +1 +2 +3 +4 EXEC

For survey scan pattern, refer to OBSS SCAN PATTERN CUE CARDS – STBD & PORT, AND WING GLOVE & CREW CABIN

A7U

√DTV ← PL2

√LDRI MODE 6 pb – push (flickering LDRI video)

√PAN: +103

√TILT: -260

VIDEO OUT – as desired (not DTV)

2. MNVR TO FLAT FIELD POSN

NOTE

Assumed starting posn is OBSS Hover. Flat Field imagery is used to characterize sensor response. Daylight is NOT required

RHC

RATE – COARSE (RATE MIN tb-OFF)

BRAKES – OFF (tb-OFF)


MODE – ORB LD, ENTER

L10(VTR)

REC pb – push, hold

PLAY pb – push, simo (red ●)

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1270	+350	-445	0	0	11	2
SY	SP	EP	WP	WY	WR	
-90.1	+25.0	-65.8	-57.6	0.0	-249.9	



Mnvr to Stbd ACAS Clearance Views	Cameras
OBSS-to-Wing	RSC [1], C[2], ELBOW[3]
OBSS-to-PLBD	RSC, C, D[4]
RMS-to-Orbiter	ELBOW, A
[1] Wing enters FOV after X ~ -1106(pt 5)	[3] No good after X ~ -972(pt 5)
[2] No good at X ~ -1036(pt 5)	[4] No good after X ~ -920(pt 6)

MODE – AUTO 1, ENTER



SM 94 PDRS CONTROL

SM 169 PDRS STATUS

Monitor ACAS progress


AUTO SEQ – PROCEED (IN PROG It on)

ACAS, pause pts **shaded in bold**, ● col indicates data recording (black = VTR on) (03:49)

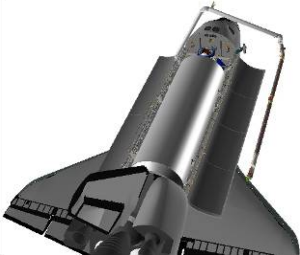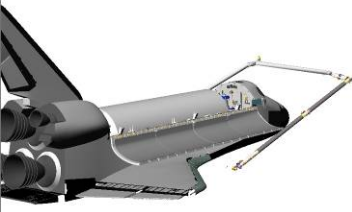Pt	X	Y	Z	PITCH	YAW	ROLL	●	
1P	-1270	+350	-445	0	0	11		
2	-1200	+265	-445	0	0	11		
3	-1290	+320	-445	0	0	11		
4	-1140	+265	-445	0	0	11		
5	-1155	+290	-490	0	0	11		
6	-926	+300	-270	322	0	89		
7P	-909	+255	-274	337	10	82		



BIRD'S EYE

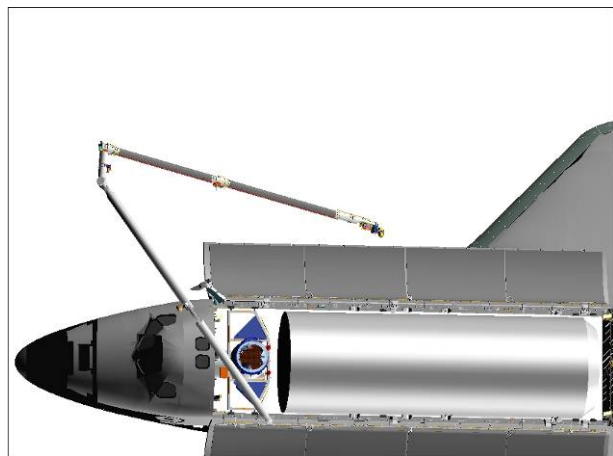

OVERHEAD

L10(VTR) When AUTO SEQ READY It – on:
STOP pb – push (no red ●)

4. STBD LDRI ACAS, SECTION 1

√DTV ← PL2

√LDRI MODE 6 pb – push (flickering LDRI displayed)


- | | |
|---|---|
| * If not MODE 6: | * |
| * MUX 1 L ← MIDDECK | * |
| * LDRI MODE 6 pb – push (flickering LDRI displayed) | * |
| * DTV ← PL2 | * |

PAN: +85 (left)

TILT: -93 (up)

PAN/TILT to match LDRI view shown below

Note PAN/TILT: _____, _____

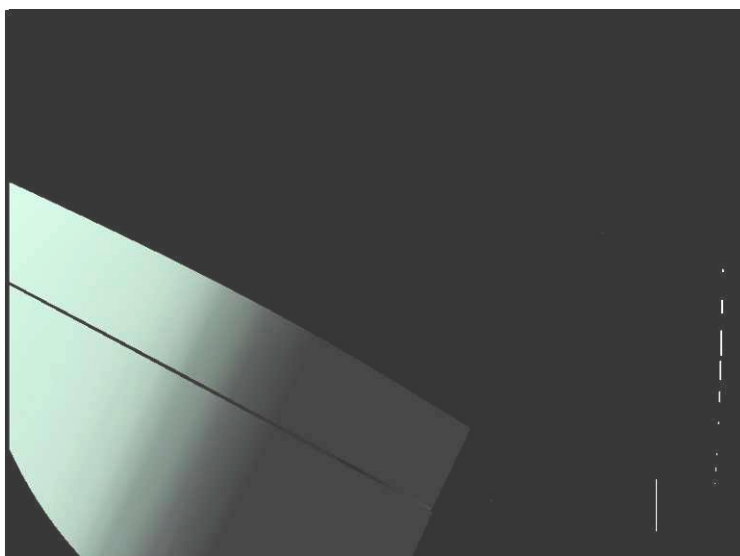

LDRI (85,-93)

VIDEO OUT – as desired (not DTV)

Section 1 Clearance Views	Cameras
OBSS-to-Wing	RSC, D, C
OBSS-to-PLBD	C, RSC, D[1]
RMS-to-Orbiter	A, ELBOW
[1] Good after X ~ -939(pt 7)	

LCC/PGSC On MCC GO,
Minimize, do not close LCC software
sel 'Shuttle Apps' > 'IDC'

NOTE

Expect 'iport probe failed' message at first pwr on attempt.
If message persists, see troubleshooting section

sel 'Power On'

- * If 'Power On' button not gray: *
- * Pause 3 sec, then sel 'Power On' *


√'AE' checked
sel 'Scan Hi-Res'

L10(VTR) REC pb – push, hold
PLAY pb – push, simo (red ●)

AUTO SEQ – PROCEED (IN PROG It on)

ACAS, pause pts **shaded in bold**, ● col indicates data recording (black = VTR on) and damage criteria (inches):

(06:49)

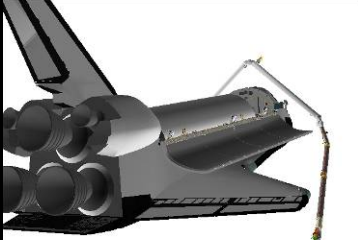
Pt	X	Y	Z	PITCH	YAW	ROLL	●
7P	-909	+255	-274	337	10	82	
8	-984	+260	-276	321	16	87	
9	-1025	+285	-273	304	6	62	
10	-1233	+508	-293	316	346	64	
11	-1300	+516	-272	326	349	55	
12	-1298	+482	-219	340	352	25	
13P	-1328	+464	-221	348	346	12	

LCC/PGSC When AUTO SEQ READY It – on:
 sel 'Stop Scan'
 √'Waiting for User Command' displayed

NOTE

LDRI recording during camera tilt

A7U DTV ← PL2
 CAM CMDS PAN/TILT – LOW RATE
 √PAN: +85
 TILT: -60 (up)
 PAN/TILT to match LDRI view shown below
 Note PAN/TILT: _____, _____

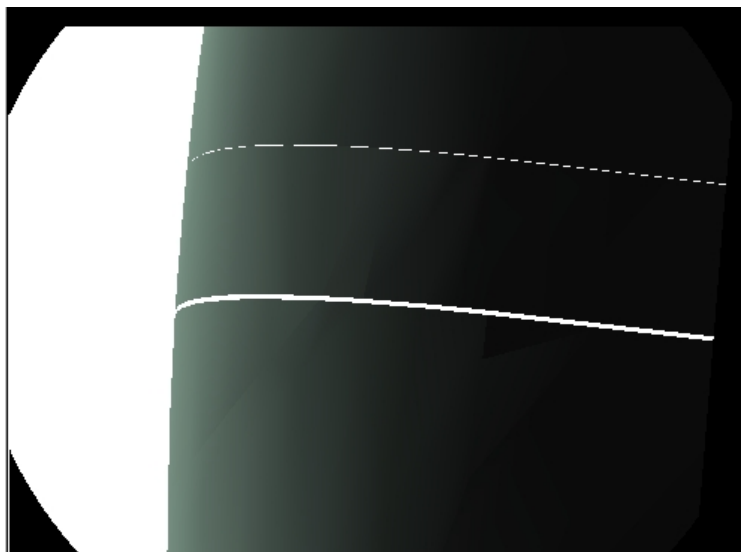

LDRI (85,-60)

VIDEO OUT – as desired (not DTV)

If Late Inspection,
Go to step 6

5. IDC/LCS CHARACTERIZATION

- L10(VTR) a. Setup
BRAKES – ON (tb-ON)
STOP pb – push (no red ●)

NOTE

LCS and IDC characterization images are obtained here to
assess LCS and IDC sensor performance while looking at RCC

- LCC/PGSC b. LCS Characterization
Allow arm motion to damp-out for 30 sec, then:
Minimize, do not close IDC software
Maximize LCC software
sel 'Scanning' 'Detailed Area Scan'
sel – Area Scan 11
cmd Start Area Scan (verify Scan Status: Complete)

sel – Area Scan 12
cmd Start Area Scan (verify Scan Status: Complete)

sel – Area Scan 13
cmd Start Area Scan (verify Scan Status: Complete)
- LCC/PGSC c. IDC Characterization
Minimize, do not close LCC software
Maximize IDC software
sel 'RCC-Day' or 'RCC-Night' from drop-down menu per real-time conditions
sel 'Acquire Set'
√'Acquiring Set' displayed
√'Waiting for User Command' displayed after set
- d. Reconfigure for Survey Activities

SM 94 PDRS CONTROL

START PT – ITEM 17 +1 3 EXEC

BRAKES – OFF (tb-OFF)
MODE – AUTO 1, ENTER (READY It on)

* If unable to enter AUTO mode (no AUTO READY It): *
* √POR coordinates and adjust as reqd *
- SM 169 PDRS STATUS



Monitor ACAS progress
- L10(VTR) REC pb – push, hold
PLAY pb – push, simo (red ●)

6. STBD LDRI ACAS, CONTINUE WITH SECTION 2 AND 3

Section 2 & 3 Clearance Views	Cameras
OBSS-to-PLBD	ELBOW[1], D[2], RSC, C[3]
OBSS-to-Wing	ELBOW[1], D[2], RSC, C[3]
RMS-to_Orbiter	C, A, ELBOW[4]
[1] No good after X ~ -1120(pt 14)	[3] Good after X ~ -1024(pt 15)
[2] No good between X ~ -962(pt 16) and X ~ -1014(pt 17)	[4] Good after X ~ -1041(pt 19)

On MCC GO,
LCC/PGSC sel 'Scan Hi-Res'
AUTO SEQ – PROCEED (IN PROG It on)

(08:21)

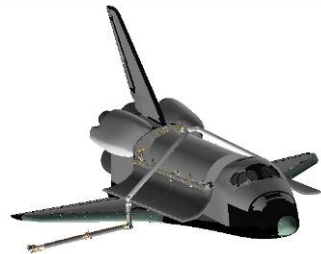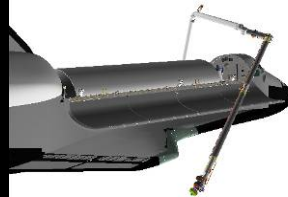Pt	X	Y	Z	PITCH	YAW	ROLL	●
13P	-1328	+464	-221	348	346	12	
14	-1310	+448	-220	348	344	7	
15	-1066	+233	-199	335	9	28	
16	-1021	+211	-206	341	12	33	
17	-919	+213	-222	335	15	49	
18	-1019	+227	-210	339	11	37	
19	-1038	+267	-229	315	9	67	
20	-1268	+483	-236	335	350	44	
21P	-1334	+531	-252	329	343	59	


When AUTO SEQ READY It – on:
LCC/PGSC sel 'Stop Scan'
L10(VTR) STOP pb – push (no red ●)

A7U DTV ← PL2

√PAN: +85
TILT: -75 (down)

PAN/TILT to match LDRI view shown below

Note PAN/TILT: _____, _____

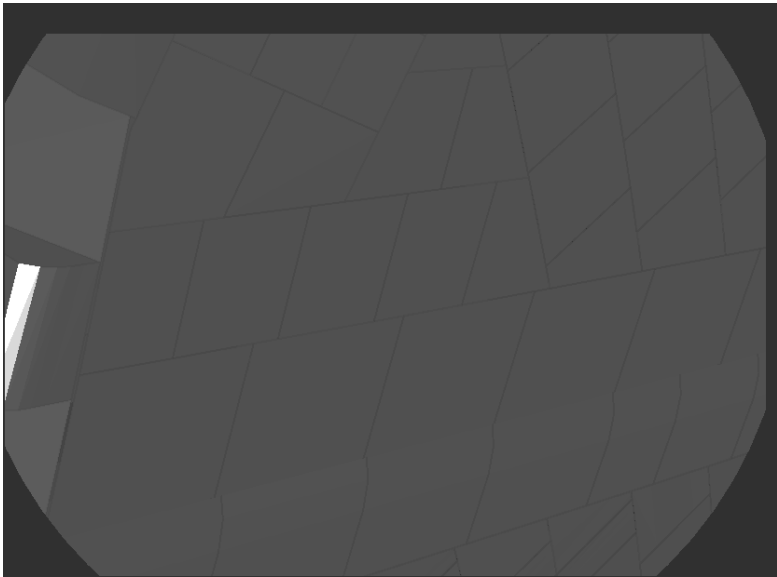

LDRI (85,-75)

VIDEO OUT – as desired (not DTV)

7. STBD LDRI ACAS, SECTION 4



Section 4 Clearance Views	Cameras
OBSS-to-PLBD	RSC[1], C, D
OBSS-to-Wing	RSC, D, C
RMS-to-Orbiter	A, ELBOW
[1] PLBD enters FOV after X ~ -1086(pt 24)	

LCC/PGSC
L10(VTR)

On MCC GO,
sel 'Scan Hi-Res'
REC pb – push, hold
PLAY pb – push, simo (red ●)

AUTO SEQ – PROCEED (IN PROG It on)

(08:15)

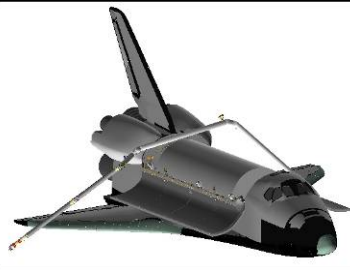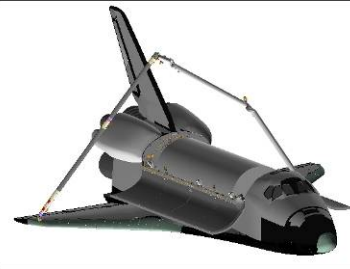Pt	X	Y	Z	PITCH	YAW	ROLL	●	
21P	-1334	+531	-252	329	343	59		
22	-1338	+538	-318	317	342	89		
23	-1274	+522	-317	308	339	90		
24	-1222	+479	-341	292	325	82		
25	-1029	+304	-315	275	340	71		
26	-1009	+284	-282	290	359	89		
27	-977	+263	-261	309	13	85		
28P	-923	+249	-253	323	16	77		

LCC/PGSC
L10(VTR)

When AUTO SEQ READY It – on:

sel 'Stop Scan'
STOP pb – push (no red ●)

If performing late inspection:

BRAKES – ON (tb-ON)

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 2

√INIT ID, ITEM 24: 2

Load OPR CMD for checkout (Items 18-23)

-922, +337, -290, 293, 358, 98

CMD CK, ITEM 25 EXEC (GOOD)

√RATE – COARSE (RATE MIN tb-OFF)

BRAKES – OFF (tb-OFF)

MODE – OPR CMD, ENTER

√AUTO SEQ READY It – on

* If error found in destination entries (Items 18-23): *
 * BRAKES – ON (tb-ON) *
 * * *
 * Enter corrected destination (Items 18-23) *
 * * *
 * CMD CK, ITEM 25 EXEC (GOOD) *
 * * *
 * BRAKES – OFF (tb-OFF) *
 * MODE – OPR CMD, ENTER *
 * * *
 * √AUTO SEQ READY It – on *

AUTO SEQ – PROCEED

When AUTO SEQ IN PROG It – off:

SM 94 PDRS CONTROL

START PT – ITEM 17 +4 1 EXEC

MODE – AUTO 1, ENTER

Go to step 11

8. INHIBIT NOSE JETS

O14:F, Pri RJDA LOGIC, DRIVER (eight) – ON
 O15:F, √Pri RJDF LOGIC, DRIVER (eight) – OFF
 O16:F
 A6U DAP: A14/AUTO/ALT (Tail Only)

NOTE

Expect DAP RECONFIG message after
FRCS manifold 5 status overridden to close

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)
 MANF VLVS OVRD 1 – ITEM 40 EXEC (CL)
 2 – ITEM 41 EXEC (CL)
 3 – ITEM 42 EXEC (CL)
 4 – ITEM 43 EXEC (CL)
 5 – ITEM 44 EXEC (CL)

9. STBD ITVC ACAS, WING GLOVE AND CREW CABIN (SECTION 5)


Wing Glove and Crew Cabin Clearance Views	Cameras
OBSS-to-PLBD	RSC[1], C, D
OBSS-to-Crew Cabin	C, D, RSC
RMS-to-Orbiter	A, ELBOW
[1] PLBD leaves FOV at X ~ - 396(pt 33) and re-enters at X ~ -378(pt 34)	

A7U MUX 1 L ← MIDDECK
 LDRI MODE 2 pb – push (ITVC video)

DTV ← PL2
 ZOOM: 19.0 HFOV
 FOCUS: 12 ft



PAN/TILT to match ITVC view shown below

Note PAN/TILT: _____, _____

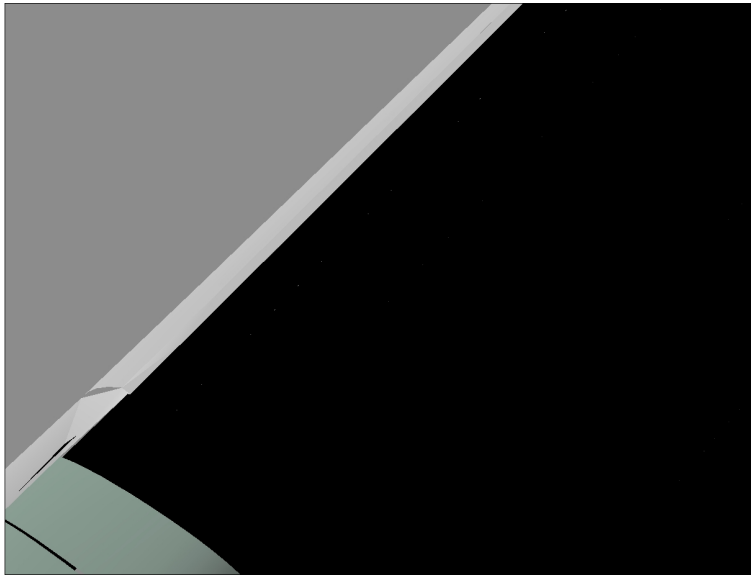

ITVC (85,-75)

L10(VTR)
On MCC GO,
REC pb – push, hold
PLAY pb – push, simo (red ●)

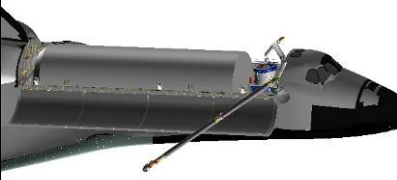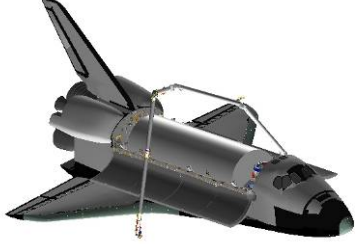Pt	X	Y	Z	PITCH	YAW	ROLL	●
28P	-923	+249	-253	323	16	77	
29	-862	+319	-242	284	0	73	
30	-817	+295	-265	288	2	85	
31	-740	+295	-279	286	358	88	
32	-589	+290	-294	267	357	88	
33	-550	+293	-310	268	353	89	
							3
34	-198	+177	-252	203	21	109	
35	-449	+270	-396	205	359	90	
36	-452	+272	-353	208	357	81	
37	-522	+272	-317	270	352	72	
38	-550	+293	-310	268	353	89	
39	-585	+291	-320	271	353	89	
40	-634	+291	-312	275	354	91	
							3
41P	-922	+337	-290	293	358	98	

L10(VTR) When AUTO SEQ READY It – on:
STOP pb – push (no red ●)

A7U MUX 1 L ← MIDDECK
LDRI MODE 6 pb – push (brighter flickering LDRI video)

VIDEO OUT – as desired (not DTV)

10. ENABLE VERN NOSE JETS

GNC 23 RCS

RCS FWD – ITEM 1 EXEC (*)

MANF VLVS OVRD 5 – ITEM 44 EXEC (OP)


A6U DAP: VERN(FREE)

11. STBD LDRI ACAS, SECTIONS 6 AND 7

Sections 6 & 7 Clearance Views	Cameras
OBSS-to-PLBD	RSC[1], C, D
OBSS-to-Wing	C, D, RSC
RMS-to-Orbiter	A, ELBOW, B[2]
[1] PLBD leaves FOV at X ~ -1122(pt 44) and re-enters at X ~ -1151(pt 49)	
[2] Good after X ~ -1380(pt 46)	

PAN/TILT to match LDRI view shown below




Note PAN/TILT: _____, _____

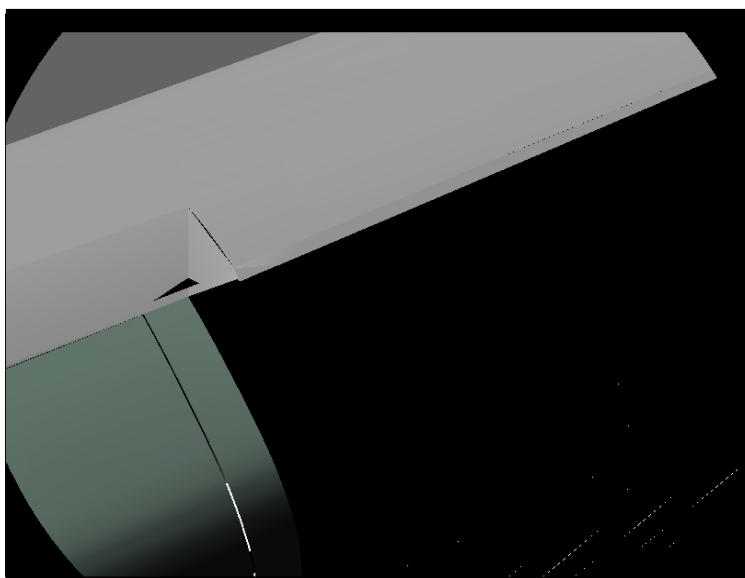

LDRI (85,-75)

LCC/PGSC
L10(VTR)

On MCC GO,
sel 'Scan Hi-Res'
REC pb – push, hold
PLAY pb – push, simo (red ●)

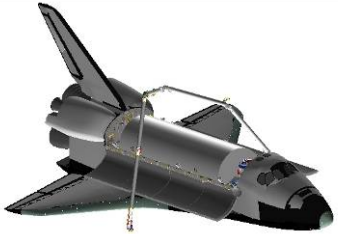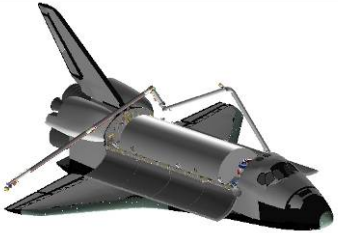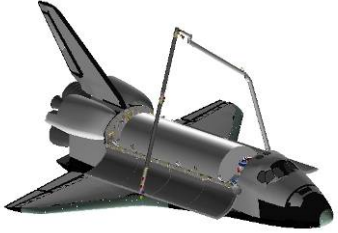Pt	X	Y	Z	PITCH	YAW	ROLL	●	
41P	-922	+337	-290	293	358	98	1	
42	-964	+297	-346	289	339	118		
43	-1029	+302	-330	271	335	75		
44	-1054	+304	-353	271	322	81		
45	-1276	+510	-364	305	310	100		
46	-1328	+529	-363	313	316	105		
47	-1391	+478	-395	320	306	166	1/4	
48	-1292	+476	-390	299	298	121		
49	-1167	+367	-385	277	299	94		
50	-1096	+300	-376	269	307	92		
51	-1060	+281	-389	263	313	87	1	
52	-978	+283	-384	262	320	77		
53P	-899	+284	-386	247	319	72	1	

When AUTO SEQ IN PROG It – off:
 LCC/PGSC sel 'Stop Scan'
 sel 'Power Off'
 L10(VTR) STOP pb – push (no red ●)

BRAKES – ON (tb-ON)

CAUTION LDRI mode change required to avoid safety concern due to laser pointing at crew cabin windows
--

A7U MUX 1 L ← MIDDECK
 LDRI MODE 1 pb – push (ITVC video displayed)
 DTV ← PL2

If continuing OBSS ops with Nose Cap survey:
 Mnv'r Nose Cap Survey attitude per FLIGHT PLAN
 Go to OBSS LDRI/IDC RCC SURVEY – NOSE CAP

OBSS LDRI/IDC RCC SURVEY – NOSE CAP (45 min)

WARNING
For UNDOCKED ops only
Port PLBD radiator must be stowed

1. SETUP

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 2

√INIT ID, ITEM 24: 2

√AUTO MODE 2, ITEM 14: 2

√3, ITEM 15: 3

2. INHIBIT NOSE JETS

O14:F, √Pri RJDA LOGIC, DRIVER (eight) – ON
O15:F, √Pri RJDF LOGIC, DRIVER (eight) – OFF
O16:F

A6U When MNVR NOSE CAP SURVEY attitude complt,
DAP: A14/AUTO/ALT (Tail Only)

NOTE

Expect DAP RECONFIG message after FRCS
manifold 5 status overridden to close

GNC 23 RCS

√RCS FWD, ITEM 1 (*)

√MANF VLVS OVRD 1 – ITEM 40 EXEC (CL)

√2 – ITEM 41 EXEC (CL)

√3 – ITEM 42 EXEC (CL)

√4 – ITEM 43 EXEC (CL)

5 – ITEM 44 EXEC (CL)

3. MNVR TO NOSE CAP LDRI ACAS START POSN

Mnvr to Nose Cap ACAS Clearance Views	Cameras
OBSS-to-PLBD	ELBOW, C
OBSS-to-Orbiter	C[1], ELBOW[2], A, B[3], RSC[4]
RMS-to-Orbiter	A
OBSS-to-SRMS	B[5], ELBOW, A[6]
[1] No good after X ~ -778(pt 54)	[4] Nose Cap enter FOV at X ~ -257(pt 55)
[2] No good after X ~ -182(pt 55)	[5] No good after X ~ -464(pt 55)
[3] Good after X ~ -342(pt 55)	[6] Good after X ~ -357(pt 55)


RHC √RATE – COARSE (RATE MIN tb-off)
BRAKES – OFF (tb-OFF)
MODE – AUTO 2, ENTER


SM 94 PDRS CONTROL

√START POINT, ITEM 17: 54

On MCC GO,
AUTO SEQ – PROCEED (IN PROG It on)

(09:03)

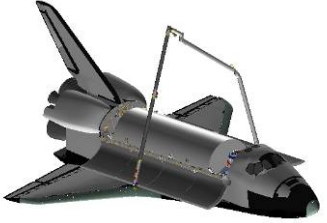
Pt	X	Y	Z	PITCH	YAW	ROLL	•
54P	-899	+284	-386	247	319	72	
55	-550	-50	-900	100	295	345	
56	-150	+20	-355	241	312	350	
57P	-164	+20	-355	241	312	350	

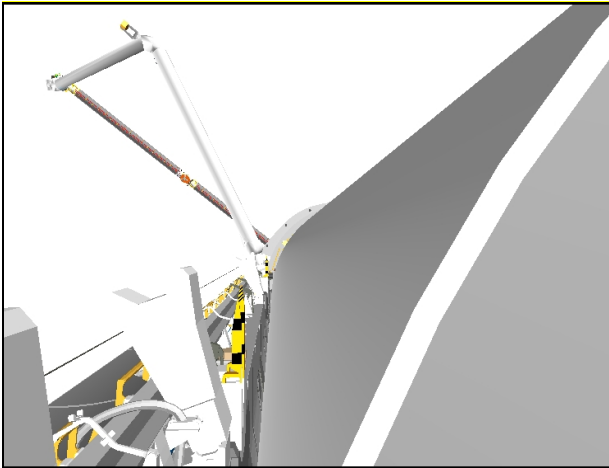


CCTV B (3,1)



CCTV A (90,42)

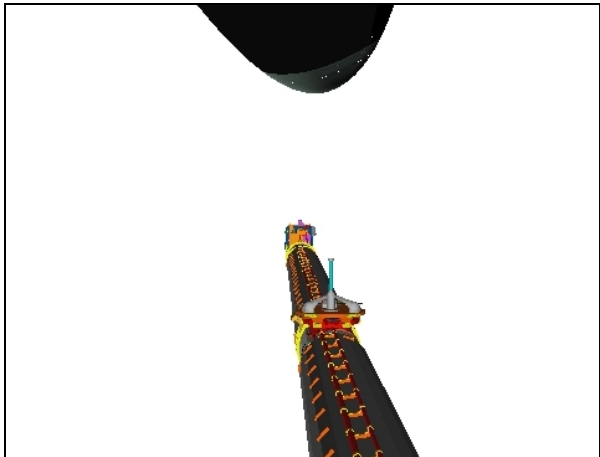

RSC

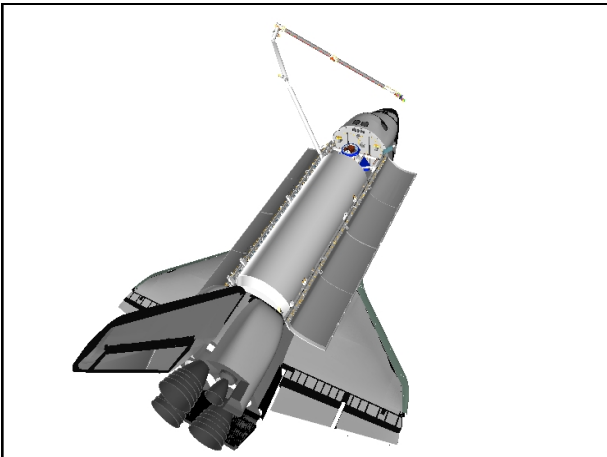

FLY CAM

A7U

4. NOSE CAP LDRI ACAS, SECTION 1

MUX 1 L ← MIDDECK

LDRI MODE 6 pb – push (flickering LDRI displayed)


DTV ← PL2

√PAN: +85

TILT: -60 (up)

PAN/TILT to match LDRI view shown below

Note PAN/TILT: _____, _____

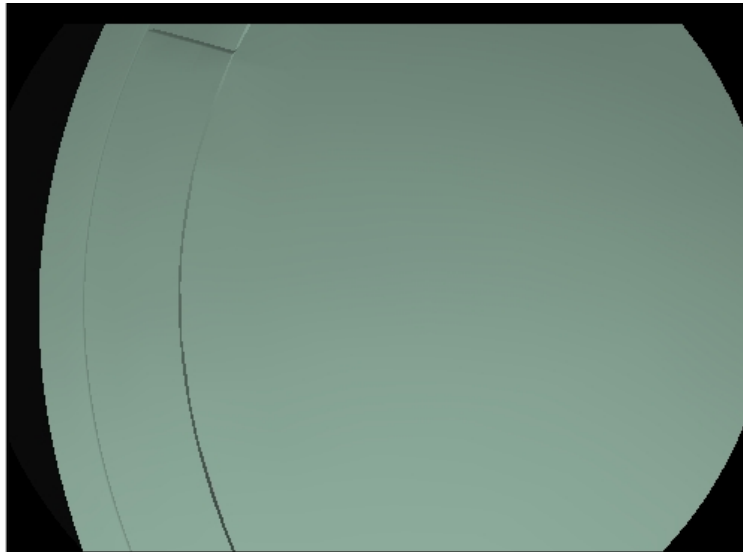

LDRI (+85,-60)

VIDEO OUT – as desired (not DTV)

For survey scan pattern, refer to OBSS SCAN PATTERN CUE CARD – NOSE CAP (CUE CARD CONFIG)

MODE – AUTO 3, ENTER (READY It on)

- * If unable to enter AUTO mode (no AUTO READY It): *
- * √POR coordinates and adjust as reqd *

SM 94 PDRS CONTROL


√START POINT, ITEM 17: 58

SM 169 PDRS STATUS

Monitor ACAS progress

ACAS, pause pts **shaded in bold**, ● col indicates data recording (black = VTR on)
and damage criteria (inches):

(23:30)

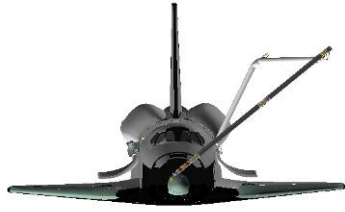Pt	X	Y	Z	PITCH	YAW	ROLL	●	
58P	-164	+20	-355	241	312	350		
59	-155	+50	-373	240	314	1		
60	-170	+63	-305	262	328	17		
61	-170	+45	-330	260	328	17		
62	-145	+15	-315	240	300	330		
63	-157	+36	-319	228	286	312		
64	-155	-8	-336	209	295	292		
65	-164	+10	-288	222	289	279		
66	-158	+5	-320	224	292	300		
67	-170	+15	-380	226	295	357		
68	-155	+30	-335	235	305	357		
69	-160	+70	-340	249	330	35		
70	-202	+92	-330	260	327	49		
71	-180	+70	-360	249	329	30	1/4	
72	-181	+60	-395	238	297	15		
73	-179	+33	-405	226	295	357		
74	-185	-35	-400	180	300	310		
75	-179	-70	-360	161	316	268		
76	-171	-25	-370	163	310	273		
77	-170	-50	-300	163	314	245		
78	-205	-5	-245	182	292	230		
79	-210	+20	-255	154	296	195		
80	-208	+61	-265	147	293	187		
81	-175	+35	-252	151	302	189		
82	-184	-28	-256	254	308	309		
83	-165	+60	-295	140	295	195		

Pt	X	Y	Z	PITCH	YAW	ROLL	●	
84	-165	-5	-305	186	295	258		
85	-165	-75	-340	186	295	258		
86P	-181	-75	-340	186	295	258	1/4	


When AUTO SEQ READY It – on:
LCC/PGSC sel 'Stop Scan'
 sel 'Power Off'
L10(VTR) STOP pb – push (no red ●)

A7U DTV ← PL2

PAN: +64 (left)
TILT: -93 (down)

PAN/TILT to match LDRI view shown below

Note PAN/TILT: _____, _____

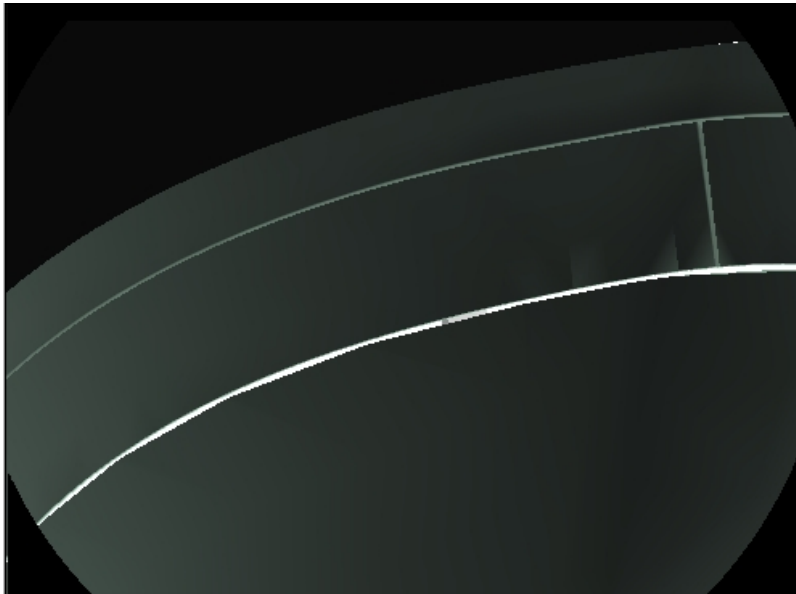

LDRI (64,-93)

VIDEO OUT – as desired (not DTV)

L10(VTR) On MCC GO,
 REC pb – push, hold
 PLAY pb – push, simo (red ●)

AUTO SEQ – PROCEED (IN PROG It on)

(02:50)

Pt	X	Y	Z	PITCH	YAW	ROLL	●	
86P	-181	-75	-340	186	295	258		
87	-216	-65	-273	162	300	213		
88	-215	-35	-247	155	305	190	1/4	
89P	-165	-45	-320	160	297	227		

L10(VTR) When AUTO SEQ IN PROG It – off:
 STOP pb – push (no red ●)

BRAKES – ON (tb-ON)

CAUTION

LDRI mode must be adjusted before transition in order to avoid safety concern due to laser pointing at crew cabin windows

A7U

MUX 1 L ← MIDDECK

LDRI MODE 1 pb – push (ITVC video displayed)

DTV ← PL2

If continuing OBSS ops with PORT RCC survey:

Go to OBSS LDRI/IDC RCC SURVEY – PORT

OBSS LDRI/IDC RCC SURVEY – PORT (90 min)

WARNING For UNDOCKED ops only Port PLBD radiator must be stowed
--

1. SETUP

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 2

√INIT ID, ITEM 24: 2

AUTO MODES – ITEM 13 +5 +6 EXEC

√AUTO MODE 4, ITEM 16: 4

2. MNVR TO PORT LDRI ACAS START POSN

RHC

√RATE – COARSE (RATE MIN tb-OFF)

BRAKES – OFF (tb-OFF)

MODE – AUTO 4, ENTER

SM 94 PDRS CONTROL


√START PT, ITEM 17: 90


Mnvr to Port ACAS Clearance Views	Cameras
OBSS-to-PLBD	ELBOW
OBSS-to-Nose Cap	ELBOW, RSC
RMS-to-Orbiter	B[1], A, ELBOW
OBSS-to-SRMS	B, ELBOW
[1] Good after X ~ -194(pt 90)	

On MCC GO,


AUTO SEQ – PROCEED (IN PROG It on)

(09:15)

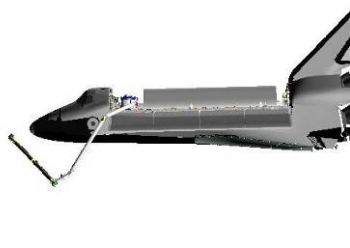
Pt	X	Y	Z	PITCH	YAW	ROLL	●
90P	-165	-45	-320	160	297	227	
91	-500	-280	-800	80	341	289	
92	-770	-290	-700	40	341	289	
93	-899	-290	-284	2	341	289	
94P	-899	-252	-284	2	341	289	

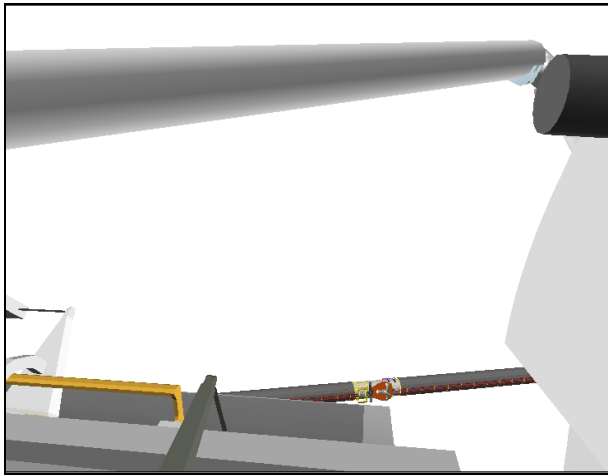


CCTV A (83,-11)

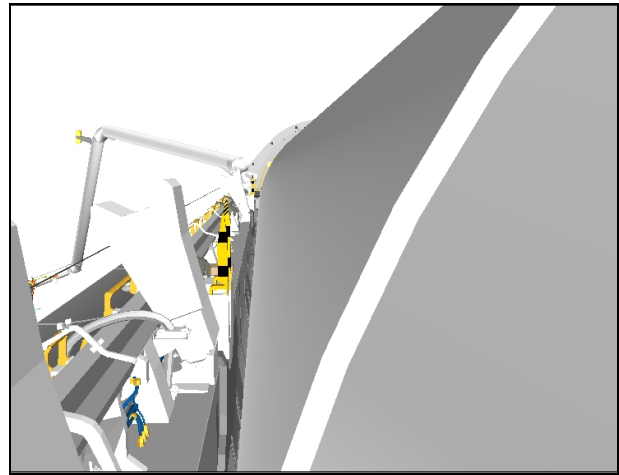

CCTV B (5,-7)

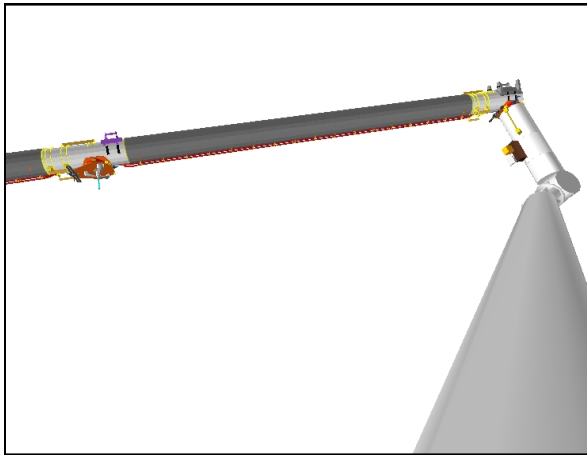

ELBOW (-32,-11)

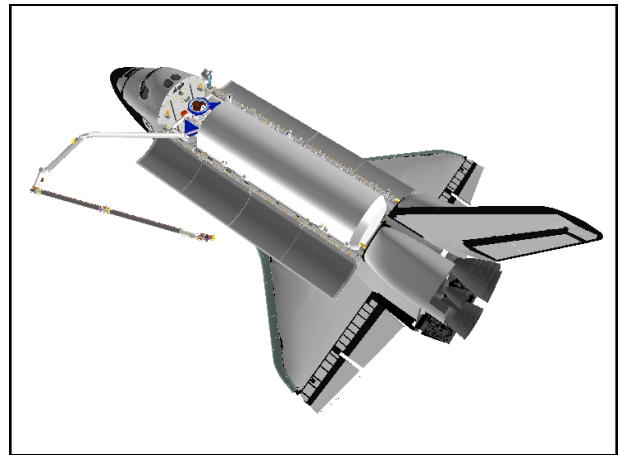

FLY CAM

3. ENABLE VERN NOSE JETS

GNC 23 RCS

√RCS FWD – ITEM 1 EXEC (*)

MANF VLVS OVRD 5 – ITEM 44 EXEC (OP)

A6U

DAP: VERN(FREE)

Mnvr Port Survey attitude per FLIGHT PLAN

4. PORT LDRI ACAS, SECTION 1

A7U

√DTV ← PL2

PAN: +100 (right)

TILT: -120 (down)

MUX 1 L ← MIDDECK

LDRI MODE 6 pb – push (flickering LDRI displayed)

DTV ← PL2

PAN/TILT to match LDRI view shown below

Note PAN/TILT: _____, _____



For survey scan pattern, refer to OBSS SCAN PATTERN CUE CARD – STBD & PORT, AND WING GLOVE & CREW CABIN

* If unable to enter AUTO mode (no AUTO READY lt): *

* √POR coordinates and adjust as reqd *

√START PT, ITEM 17: 95

Monitor ACAS progress

Section 1 Clearance Views	Cameras
RMS-to-Orbiter	B, ELBOW, A
OBSS-to-PLBD	ELBOW, A[1]
OBSS-to-Wing	ELBOW, A[1]
[1] Good after X ~ -1323(pt 101)	

- * If 'Power On' button not gray: *
- * Pause 3 sec, then sel 'Power On' *

L10(VTR) √'AE' checked
sel 'Scan Hi-Res'
REC pb – push, hold
PLAY pb – push, simo (red ●)

Pt	X	Y	Z	PITCH	YAW	ROLL	●	
95P	-899	-252	-284	2	341	289		
96	-964	-254	-281	10	343	297		
97	-1027	-281	-267	13	347	304		
98	-1073	-322	-262	16	355	308		
99	-1208	-450	-257	15	7	319	1/4	
100	-1255	-500	-266	14	3	316		
101	-1308	-518	-269	12	3	313		
102P	-1367	-500	-230	336	350	326		

When AUTO SEQ READY It – on:

LCC/PGSC
L10(VTR)

sel 'Stop Scan'
STOP pb – push (no red ●)

5. PORT LDRI ACAS, SECTIONS 2 and 3

Sections 2 & 3 Clearance Views	Cameras
OBSS-to-PLBD	A, B, ELBOW, RSC
OBSS-to-Wing	A, B, ELBOW, RSC
RMS-to-Orbiter	A, B


A7U

DTV ← PL2

PAN: +85 (left)
TILT: -60 (up)

PAN/TILT to match LDRI view shown below

Note PAN/TILT: _____, _____

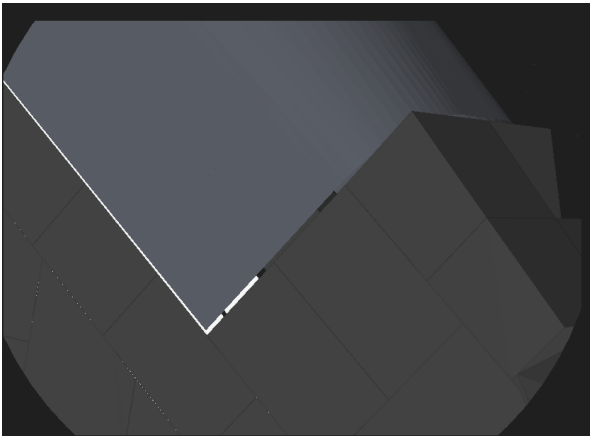

LDRI (85,-60)

VIDEO OUT – as desired (not DTV)

LCC/PGSC
L10(VTR)

On MCC GO,
sel 'Scan Hi-Res'
REC pb – push, hold
PLAY pb – push, simo (red ●)

AUTO SEQ – PROCEED (IN PROG It on)

(12:38)

Pt	X	Y	Z	PITCH	YAW	ROLL	●
102P	-1367	-500	-230	336	350	326	
103	-1303	-481	-229	329	349	320	
104	-1052	-212	-197	320	322	340	
105	-991	-186	-201	316	319	341	
106	-890	-188	-208	315	323	326	
107	-971	-215	-211	306	329	338	
108	-1018	-253	-218	294	332	313	
109	-1047	-253	-211	318	340	336	
110	-1172	-397	-230	305	345	311	
111	-1299	-484	-236	334	348	328	
112	-1317	-506	-252	327	352	316	
113	-1356	-546	-292	314	6	287	
114P	-1323	-537	-315	346	348	282	

LCC/PGSC
L10(VTR)

When AUTO SEQ READY It – on:
sel 'Stop Scan'
STOP pb – push (no red ●)

6. PORT LDRI ACAS, SECTION 4

Section 4 Clearance Views	Cameras
OBSS-to-PLBD	A[1], B[2], ELBOW, RSC
OBSS-to-Wing	A[1], B[2], ELBOW, RSC
RMS-to-Orbiter	A, B
[1] No good after X ~ -1028(pt 118)	[2] No good between X ~ -1028(pt 118) and X ~ -923(pt 121)


A7U

DTV ← PL2

PAN: +88 (right)
TILT: -120 (down)

PAN/TILT to match LDRI view shown below

Note PAN/TILT: _____, _____

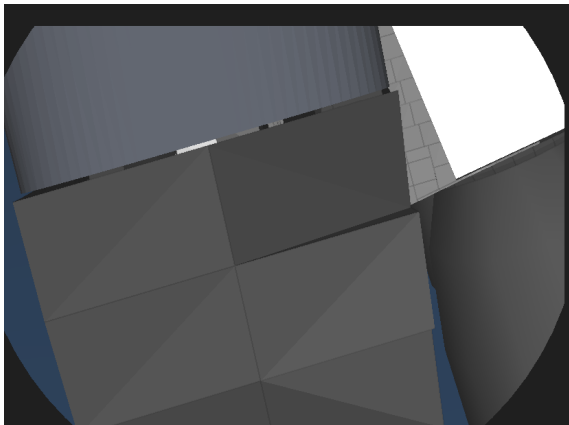

LDRI (88,-120)

VIDEO OUT – as desired (not DTV)

LCC/PGSC On MCC GO,
L10(VTR) sel ‘Scan Hi-Res’
REC pb – push, hold
PLAY pb – push, simo (red ●)

AUTO SEQ – PROCEED (IN PROG It on)

(6:48)

Pt	X	Y	Z	PITCH	YAW	ROLL	●	
114P	-1323	-537	-315	346	348	282		
115	-1244	-513	-305	353	357	287		
116	-1176	-450	-298	352	2	290		
117	-1106	-380	-295	352	4	291		
118	-1023	-300	-288	354	357	289		
119	-989	-275	-294	350	350	282	1/4	
120	-965	-267	-294	350	350	282		
121	-933	-261	-289	358	347	283		
122	-920	-256	-288	336	326	284		
123P	-891	-310	-249	333	349	319		

LCC/PGSC When AUTO SEQ READY It – on:
L10(VTR) sel ‘Stop Scan’
STOP pb – push (no red ●)

If performing late inspection:

BRAKES – ON (tb-ON)

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 2

√INIT ID, ITEM 24: 2

Load OPR CMD for checkout (Items 18-23)

-889, -294, -316, 317, 347, 288

CMD CK, ITEM 25 EXEC (GOOD)

√RATE – COARSE (RATE MIN tb-OFF)

BRAKES – OFF (tb-OFF)

MODE – OPR CMD, ENTER

√AUTO SEQ READY It – on

* If error found in destination entries (Items 18-23): *

* BRAKES – ON (tb-ON) *

* *

* Enter corrected destination (Items 18-23) *

* *

* CMD CK, ITEM 25 EXEC (GOOD) *

* *

* BRAKES – OFF (tb-OFF) *

* MODE – OPR CMD, ENTER *

* *

* √AUTO SEQ READY It – on *

AUTO SEQ – PROCEED

When AUTO SEQ IN PROG It – off:

SM 94 PDRS CONTROL

START PT – ITEM 17 +1 3 2 EXEC

MODE – AUTO 1, ENTER

Go to step 10

7. INHIBIT NOSE JETS

O14:F, √Pri RJDA LOGIC, DRIVER (eight) – ON
O15:F, √Pri RJDF LOGIC, DRIVER (eight) – OFF
O16:F
A6U DAP: A14/AUTO/ALT (Tail Only)

NOTE

Expect DAP RECONFIG message after
FRCS manifold 5 status overridden to close

GNC 23 RCS

- √RCS FWD – ITEM 1 EXEC (*)
- √MANF VLVS OVRD 1 – ITEM 40 EXEC (CL)
 - √2 – ITEM 41 EXEC (CL)
 - √3 – ITEM 42 EXEC (CL)
 - √4 – ITEM 43 EXEC (CL)
 - 5 – ITEM 44 EXEC (CL)

8. PORT LDRI ACAS, WING GLOVE AND CREW CABIN (SECTION 5)

Wing Glove & Crew Cabin Clearance Views	Cameras
OBSS-to-PLBD	ELBOW, RSC[1], B
OBSS-to-Crew Cabin	ELBOW[2], B, RSC[3]
RMS-to-Orbiter	B, A
[1] PLBD leaves FOV at X ~ -417(pt 124) and re-enters at X ~ -408(pt 125) [2] Only Cam B can resolve clearances between X ~ -356(pt 125) and X ~ -513 (pt 126), and between X ~ -556 (pt 128) and X ~ -740(pt 130) [3] Nose Cap enters FOV at X ~ -384(pt 125)	


A7U

MUX 1 L ← MIDDECK
LDRI MODE 2 pb – push (ITVC video)

DTV ← PL2
√ZOOM: 19.0 HFOV
√FOCUS: 12 ft
PAN: +100 (right)
TILT: -100 (up)

PAN/TILT to match ITVC view shown below

Note PAN/TILT: _____, _____

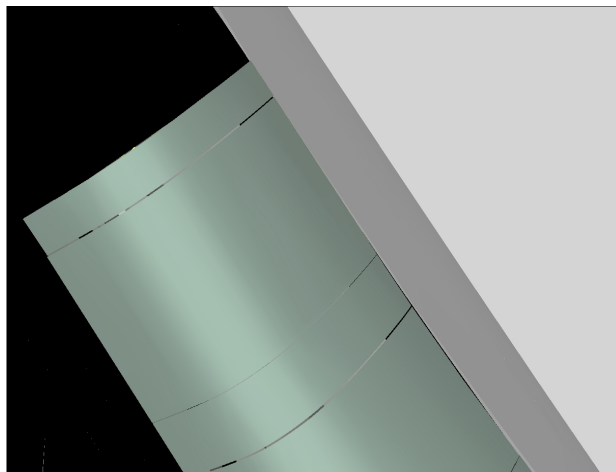

ITVC (100,-100)

VIDEO OUT – as desired (not DTV)

CAUTION

Side Hatch Window Cover must be closed before start of the Wing Glove and Crew Cabin section due to safety concerns with the LDRI illuminator shining into the window

Remove UV filter, temp stow
Close Side Hatch Window Cover

L10(VTR) On MCC GO,
REC pb – push, hold
PLAY pb – push, simo (red ●)

AUTO SEQ – PROCEED (IN PROG It on)

(14:11)

Pt	X	Y	Z	PITCH	YAW	ROLL	●	
123P	-891	-310	-249	333	349	319		
124	-575	-287	-320	271	352	294		
125	-255	-205	-335	249	344	289		
126	-525	-283	-346	223	337	286		
127	-459	-275	-307	221	331	292		
128	-556	-283	-327	241	339	303	3	
129	-573	-288	-320	264	348	301		
130	-702	-288	-320	270	348	301		
131	-904	-318	-332	319	350	290		
132P	-889	-294	-316	317	347	288		

L10(VTR) When AUTO SEQ READY It – on:
STOP pb – push (no red ●)

Open Side Hatch Window Cover
Install UV filter

9. ENABLE NOSE JETS

GNC 23 RCS

√RCS FWD – ITEM 1 EXEC (*)
MANF VLVS OVRD 1 – ITEM 40 EXEC (OP)
2 – ITEM 41 EXEC (OP)
3 – ITEM 42 EXEC (OP)
4 – ITEM 43 EXEC (OP)
5 – ITEM 44 EXEC (OP)

A6U

DAP: VERN(FREE)

O14:F, Pri RJDA LOGIC,DRIVER (eight) – OFF
 O15:F, RJDA 1A L2/R2 DRIVER – ON
 O16:F

10. PORT LDRI ACAS, SECTIONS 6 AND 7

Sections 6 & 7 Clearance Views	Cameras
OBSS-to-PLBD	B[1], A[2], ELBOW [3], RSC
OBSS-to-Wing	B[1], A[2], ELBOW, RSC
RMS-to-Orbiter	A, B
[1] No good between X ~ -1047(pt 133) and X ~ -1129(pt 134)	[2] Good between X ~ -1068(pt 134) and X ~ -903(pt 143) [3] No good after X ~ -1198(pt 139)


A7U

MUX 1 L ← MIDDECK
 LDRI MODE 6 pb – push (brighter flickering LDRI video)

DTV ← PL2
 PAN: +89 (left)
 TILT: -112 (down)

PAN/TILT to match LDRI view shown below


Note PAN/TILT: _____, _____

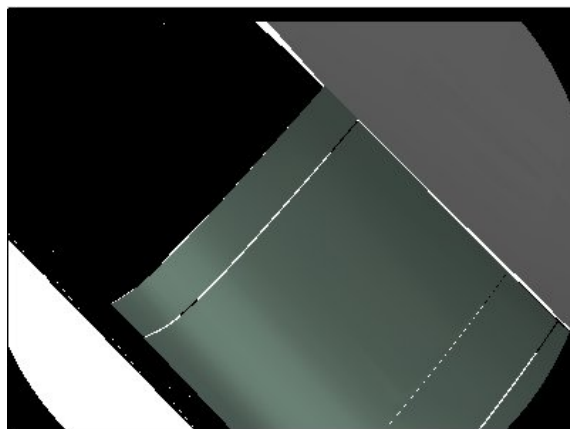

LDRI (89,-112)

VIDEO OUT – as desired (not DTV)

LCC/PGSC
 L10(VTR) On MCC GO,
 sel 'Scan Hi-Res'
 REC pb – push, hold
 PLAY pb – push, simo (red ●)

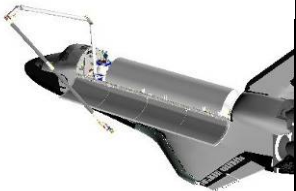Pt	X	Y	Z	PITCH	YAW	ROLL	●	
132P	-889	-294	-316	317	347	288	1	
133	-990	-272	-303	318	345	282		
134	-1081	-318	-360	344	352	241		
135	-1258	-491	-368	334	357	243		
136	-1345	-525	-369	339	359	245	1/4	
137	-1342	-480	-396	333	359	216		
138	-1290	-463	-396	329	358	215		
139	-1236	-427	-390	333	355	218		
140	-1120	-319	-390	339	351	222		
141	-1074	-305	-390	349	338	230		
142	-1040	-289	-390	352	347	237		
143	-1008	-287	-367	305	356	261		
144P	-892	-294	-364	342	353	255	1	

NOTE

LDRI recording during camera pan/tilt reconfiguration.
Pan must be performed prior to tilt


LCC/PGSC When AUTO SEQ IN PROG It – off:
 sel 'Stop Scan'
 sel 'Power Off'

A7U DTV ← PL2

CAM CMDS PAN/TILT – LOW RATE
PAN: +74 (left)
TILT: -151 (down)

PAN/TILT to match LDRI view shown below

Note PAN/TILT: _____, _____

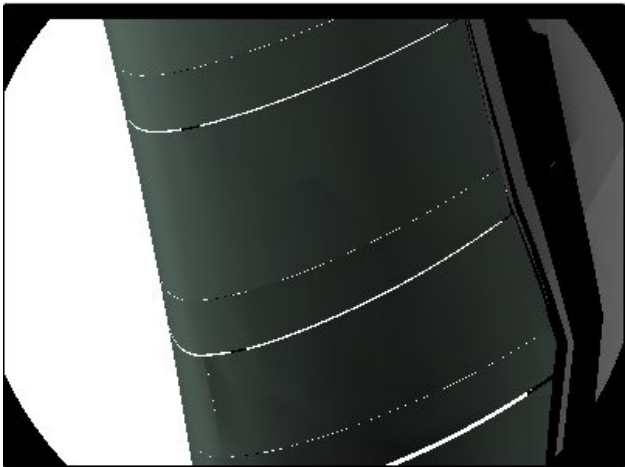

LDRI (74,-151)

- L10(VTR)

On MCC GO,
STOP pb – push (no red ●)
- A7U

MUX 1 L ← MIDDECK
LDRI MODE 2 pb – push (ITVC video displayed)
DTV ← PL2

11. MNVR TO OBSS HIGH HOVER

Mnvr to OBSS High Hover Clearance Views	Cameras
OBSS-to-PLBD	ELBOW, B, A[1]
OBSS-to-Tail	A, ELBOW, RSC[2], B
RMS-to-Orbiter	C, B, A
OBSS-to-RMS	B, ELBOW
[1] Good after X` -1014(pt 145)	[2] Tail leaves FOV at X ~ -1505(pt 145) and re-enters at X ~ -1541(pt 146)

- RHC

√RATE – COARSE (RATE MIN tb-OFF)
MODE – AUTO 2, ENTER (READY lt on)
- SM 94 PDRS CONTROL

√START PT, ITEM 17: 145

On MCC GO,
 AUTO SEQ – PROCEED (IN PROG It on)


(10:05)

Pt	X	Y	Z	PITCH	YAW	ROLL	●
145P	-892	-294	-364	342	353	255	
146	-1600	+25	-985	40	0	11	
147P	-1271	+134	-532	0	0	11	


12. MNVR TO OBSS HOVER
 RHC √RATE – COARSE (RATE MIN tb-OFF)
 MODE – ORB LD, ENTER

Mnvr to OBSS HOVER posn:

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1271	+127	-511	0	0	11	2
SY	SP	EP	WP	WY	WR	
-90.0	+79.8	-123.1	-55.7	0.0	+110.0	

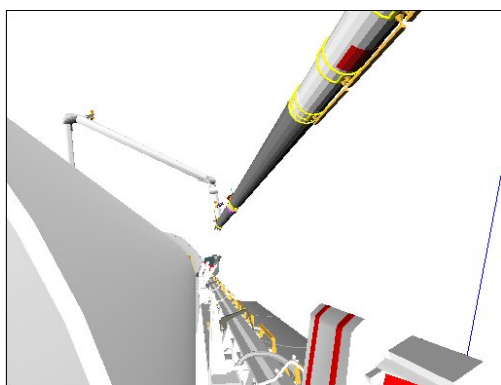

CCTV C (10,10)

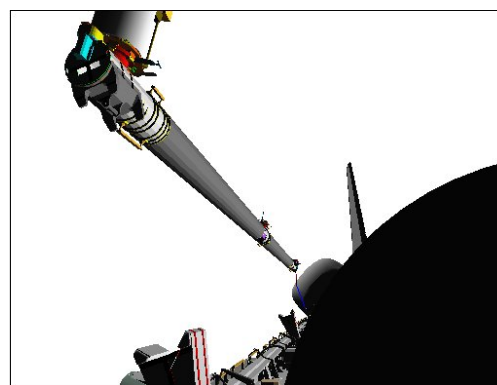

CCTV D (-10,15)

BRAKES – ON (tb-ON)

Go to OBSS BERTH

OFF-NOMINAL

OBSS SJ UNBERTH

WARNING
For UNDOCKED ops only

NOTE

Stbd MPMs assumed deployed

1. SETUP

CCTV – config as required
– perform PAN/TILT RESET for PLB cameras
ZOOM – full OUT

If SINGLE MODE available:

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 0

√INIT ID, ITEM 24: 0

2. MNVR TO OBSS SJ PRE-GRAPPLE

If SINGLE MODE available:

RHC RATE – as reqd (VERN within 10 ft)
 BRAKES – OFF (tb-OFF)

MODE – best available

Mnvr to OBSS SJ PRE-GRAPPLE posn:

	SY	SP	EP	WP	WY	WR	
PRE-CRADLE	0.0	+25.0	-25.0	+5.0	0.0	0.0	
1: SP +		+87.9					
2: SY –	-90.0						
3: WP –				-57.0			
4: WR -						-250.0	
5: EP –			-129.8				
OBSS SJ PRE-GRAPPLE	-90.0	+87.9	-129.8	-57.0	0.0	-250.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-680	+96	-513	270	350	1	0

BRAKES – ON (tb-ON)

MODE – not DIRECT


JOINT – CRIT TEMP

OFF-NOMINAL


Start:

Step 1:


Drive SP (+) from +25.0° to +87.9°

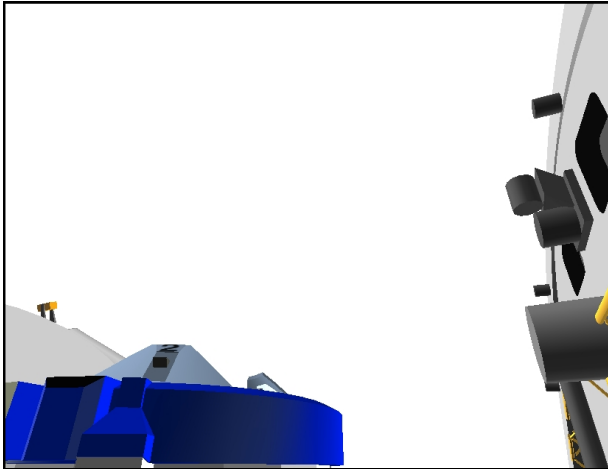


CCTV D (65,30)

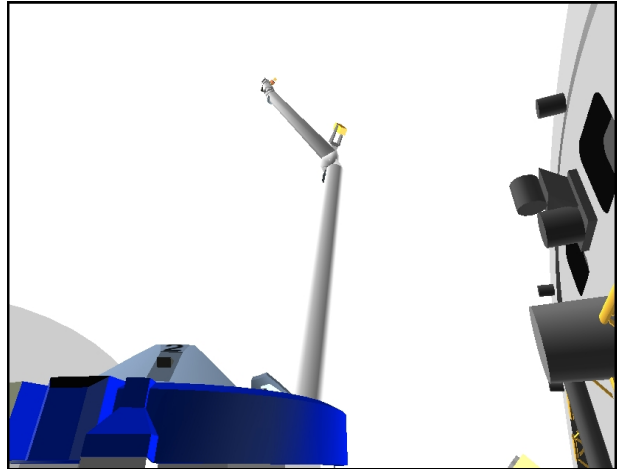


CCTV D (65,30)

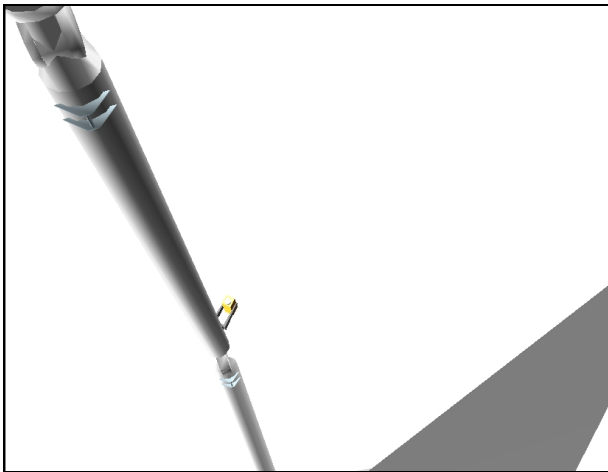


CCTV B (0,25)

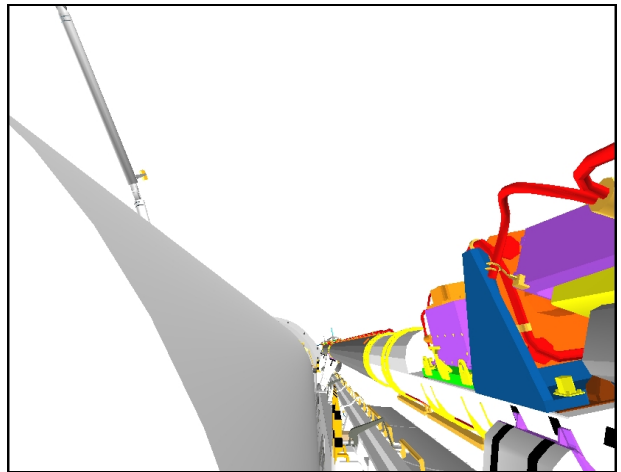

CCTV C (0,15)

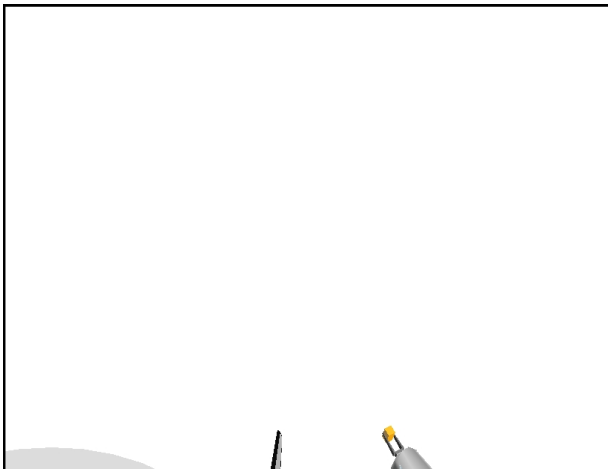


CCTV A (0,45)

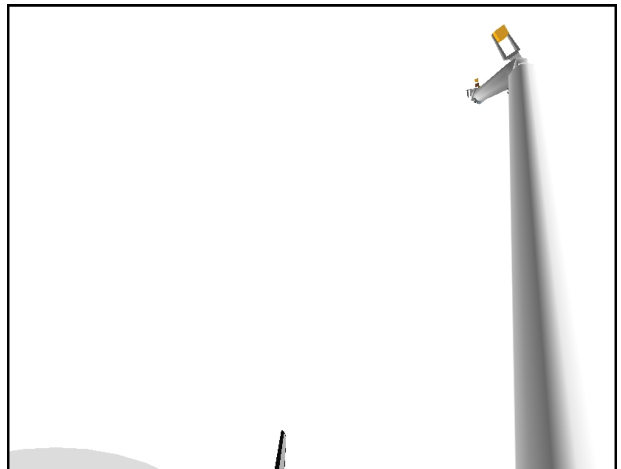

CCTV A (0,45)

Step 2:
Drive SY (-) from 0.0° to -90.0°


Step 3:
Drive WP (-) from +5.0° to -57.0°

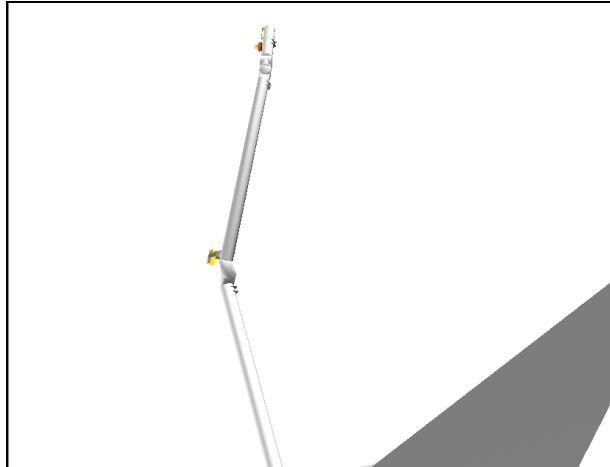


CCTV B (0,25)



CCTV B (0,25)

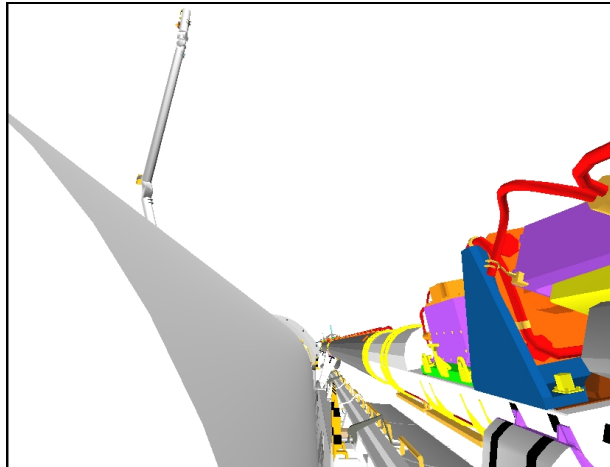


CCTV C (0,15)

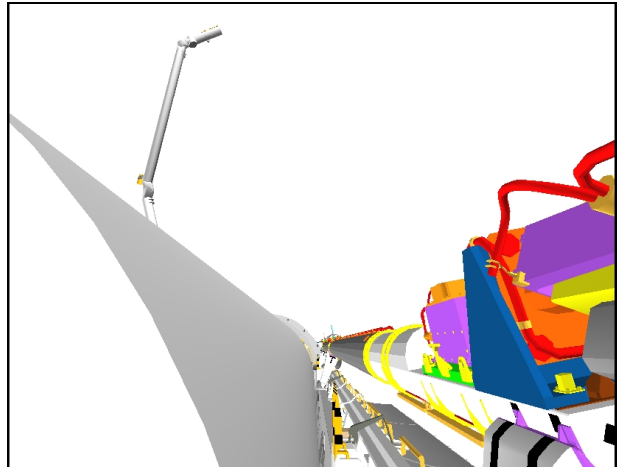

CCTV C (0,15)




CCTV A (0,45)

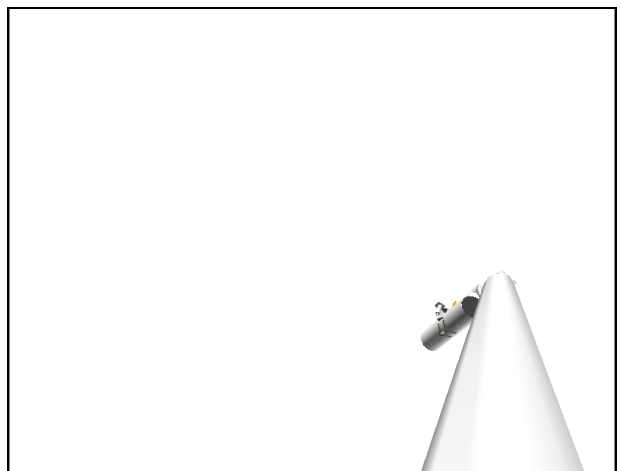

ELBOW (-25,0)

Step 4:


Drive WR (-) from 0.0° to -250.0°

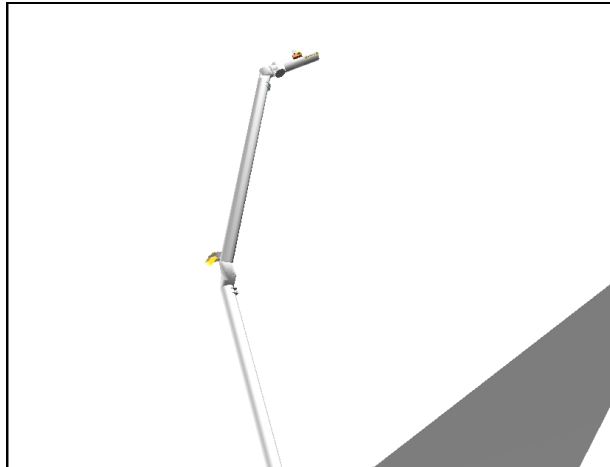


CCTV B (0,25)

Step 5:


Drive EP (-) from -25.0° to -129.8°

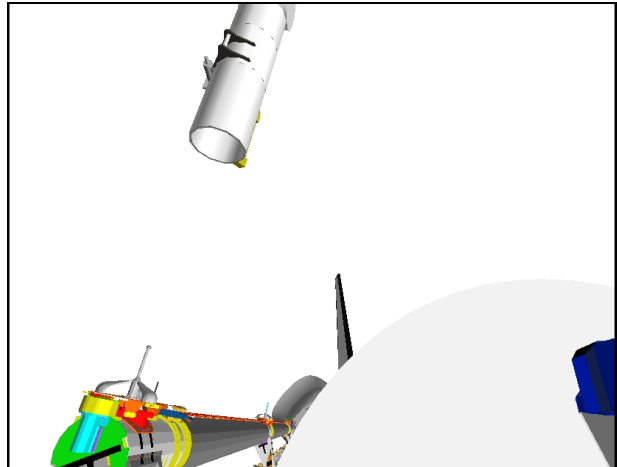


CCTV D (0,25)

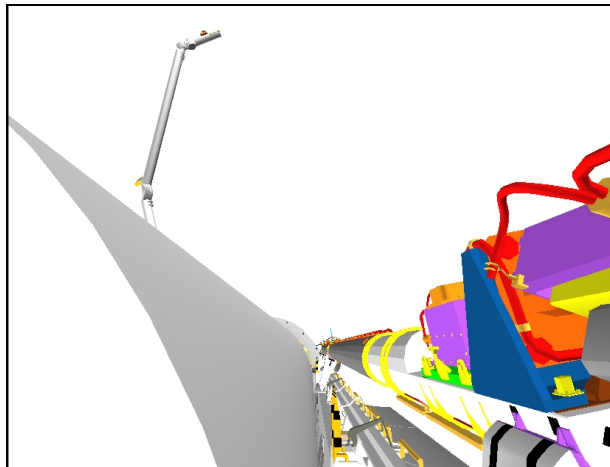


CCTV C (0,15)

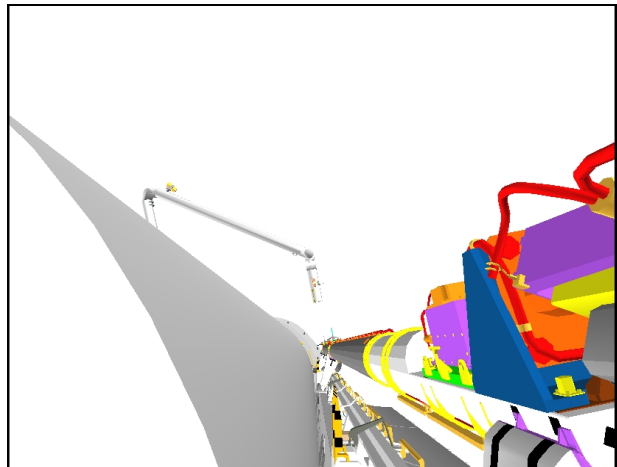

CCTV C (0,15)

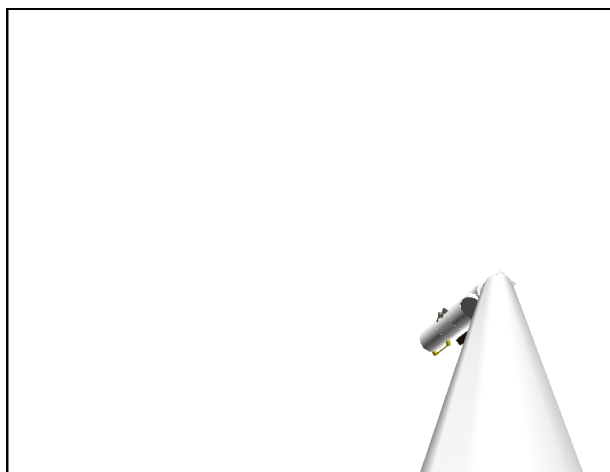

ELBOW (-25,0)

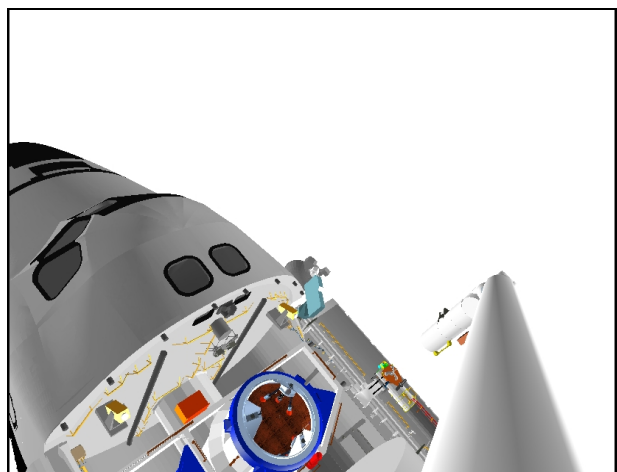

ELBOW (-25,0)

CAUTION SPEE power must be applied within 90 min to prevent sensor package damage

STBD RMS HTR A,B (two) – OFF

A6U EVENT TIMER MODE – UP
 CNTL – START

R12(OBSS) √SPEE PWR – OFF
SSP1(OV-104) √APCU 1,2 CONV (two) – OFF
A15(OV-103,
 (OV-105)

3. OBSS GRAPPLE

A7U CCTV – config for grapple
 – install PDRS TARGET OVERLAY FOR CTVM
 – RMS WRIST, ZOOM: 34.0 HFOV
 FOCUS: 5 ft

Maintain eyepoint ~18 in when using grapple overlay

RHC If SINGLE MODE available:
 RATE – VERN (RATE MIN tb-ON)
 BRAKES – OFF (tb-OFF)

A6U DAP: VERN(FREE)

 MODE – best available


Mnvr to OBSS GRAPPLE posn:

	SY	SP	EP	WP	WY	WR
OBSS SJ	-90.0	+87.9	-129.8	-57.0	0.0	-250.0
PRE-GRAPPLE				-40.9		
1: WP +			-134.6			
2: EP –		Until in grapple envelope				
3: SP –						
Expected OBSS GRAPPLE	-90.0	+76.5	-134.6	-40.9	0.0	-250.0

Continue driving SP (-) until EE close to, but not over CAMs

Step 1:


Drive WP (+) from -57.0° to -40.9°

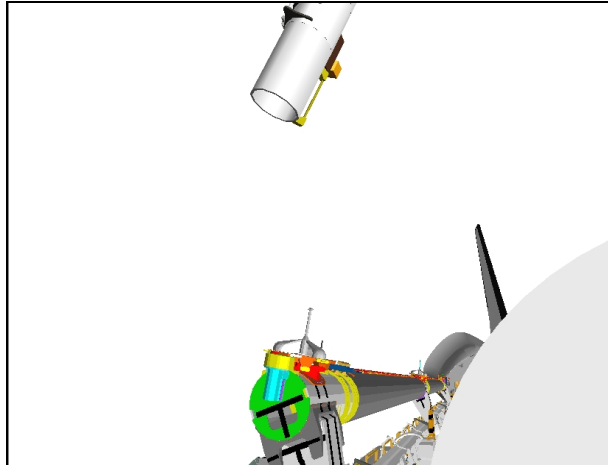


CCTV D (-20,20)

Step 2:


Drive EP (-) from -129.8° to -134.6°

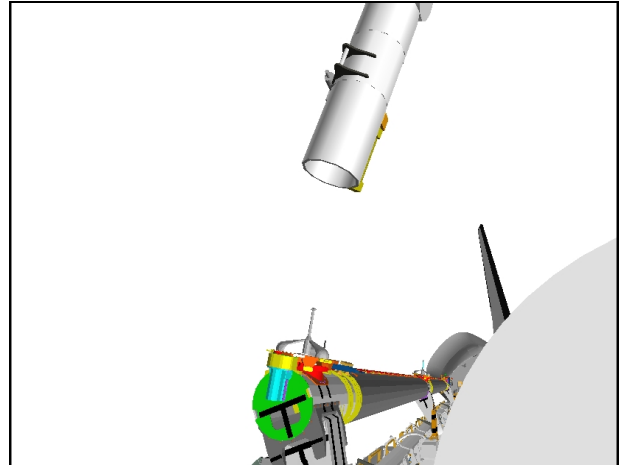


CCTV D (-20,20)

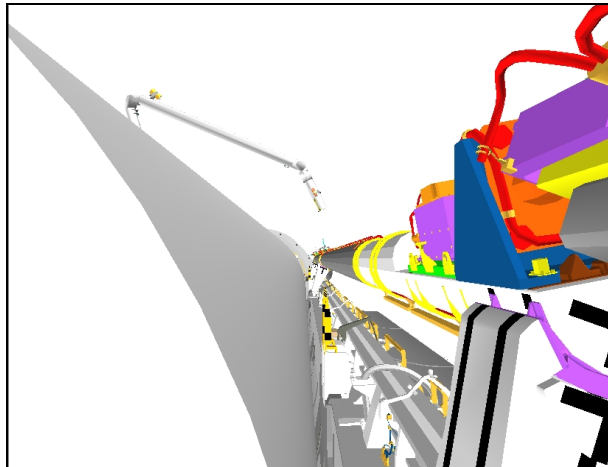


CCTV C (1,3)

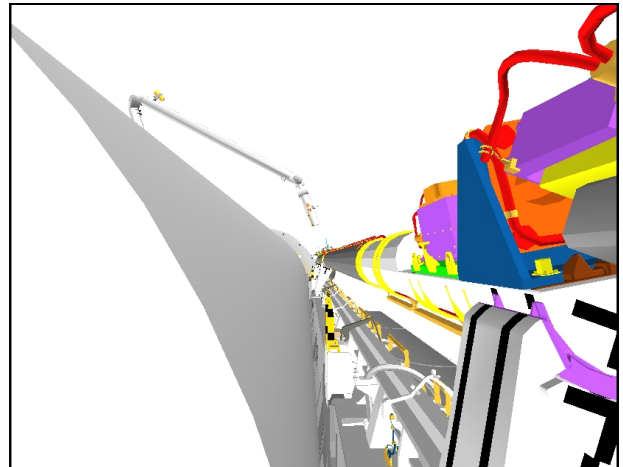

CCTV C (1,3)

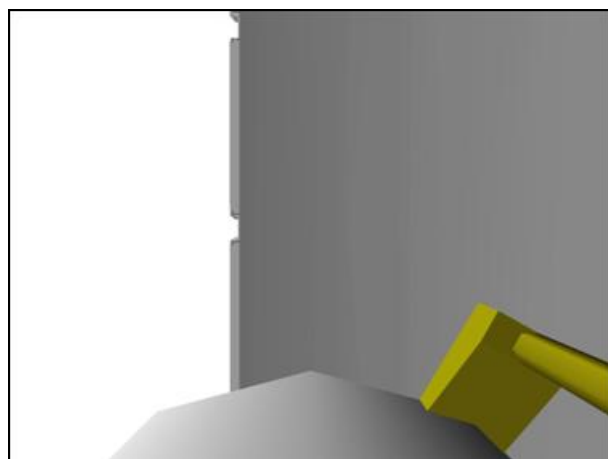


WRIST

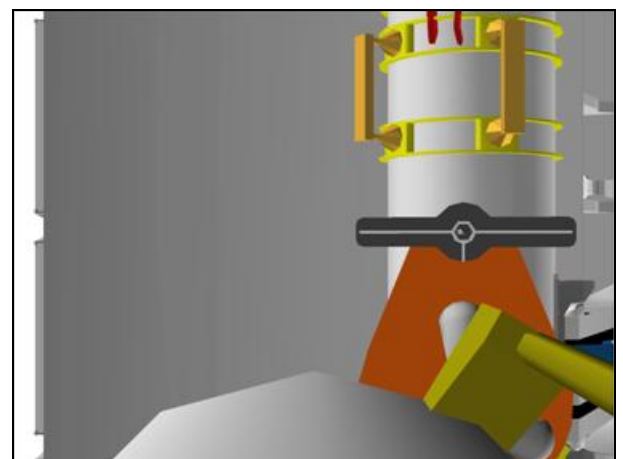

WRIST

CAUTION Monitor EE tb timing to prevent EE motor burnout
--

EE MODE – AUTO
 CAPTURE – depress (mom)

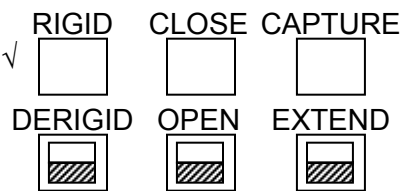

CRITICAL TIMES (28 sec total):
 CAPTURE tb – gray, then
 CLOSE tb – gray, 3 sec max, then
 RIGID tb – gray, 25 sec max

EE MODE – OFF

- | | | |
|---|--|---|
| * | If manual capture reqd: | * |
| * | EE MODE – MAN | * |
| * | CAPTURE sw – depress (hold until CLOSE tb-gray, 3 sec max) | * |
| * | MAN CONTR – RIGID (hold until RIGID tb-gray, 25 sec max) | * |
| * | MODE – OFF | * |

BRAKES – ON (tb-ON)
 MODE – not DIRECT
 JOINT – CRIT TEMP

If SINGLE MODE available:

SM 94 PDRS CONTROL

 PL ID – ITEM 3 +1 EXEC
 INIT ID – ITEM 24 +1 EXEC

If digitals available, record POSN/ATT and Joint Angles:

	X	Y	Z	PITCH	YAW	ROLL	PL ID
							1
Expected	-680	+105	-436	0	0	341	1
	SY	SP	EP	WP	WY	WR	
Expected	-90.0	+76.5	-134.6	-40.9	0.0	-250.0	

Review GENERIC END EFFECTOR CUE CARD – SHUTTLE NOT DOCKED OPS

4. CONFIGURE POWER
- | | |
|---------|------------------------------|
| MA73C:C | cb MCA PWR AC3 3Φ MID 2 – op |
| | √AC2 3Φ MID 2 – op |
| :D | √AC3 3Φ MID 4 – op |
- R13L PL BAY MECH PWR SYS (two) – ON

5. STBD MRL RELEASE
- A6U DAP: FREE

SM 94 PDRS CONTROL

 RMS STBD – ITEM 2 EXEC (*)
 √STBD AFT, MID, FWD REL (six) = 0

NOTE

Expect single motor drive time for MRL release

STBD RMS RETEN LAT – REL (tb-REL) (18 sec max)
– OFF

If motor drive time > 18 sec, √MCC

SM 94 PDRS CONTROL

RMS PORT – ITEM 1 EXEC (*)

6. RECONFIGURE POWER
R13L PL BAY MECH PWR SYS (two) – OFF

MA73C:C cb MCA PWR AC3 3Φ MID 2 – cl
√AC2 3Φ MID 2 – op
:D √AC3 3Φ MID 4 – op

If digitals available, record joint angles:

SY	SP	EP	WP	WY	WR

7. MNVR TO OBSS HOVER
A7U CCTV – config for unberth

If SINGLE MODE available:
RHC RATE – VERN (RATE MIN tb-ON)
BRAKES – OFF (tb-OFF)

MODE – best available

Mnvr to OBSS HOVER posn:

		SY	SP	EP	WP	WY	WR	
OBSS GRAPPLE		-90.0	+76.5	-134.6	-40.9	0.0	-250.0	
1: SP +			+79.8					
2: EP +				-123.1				
3: WP -					-55.7			
OBSS HOVER		-90.0	+79.8	-123.1	-55.7	0.0	-250.0	
		X	Y	Z	PITCH	YAW	ROLL	PL ID
		-680	+126	-496	0	0	341	1


BRAKES – ON (tb-ON)

MODE – not DIRECT


JOINT – CRIT TEMP

Start:
OBSS Grapple


Step 1:
Drive SP (+) from +76.5° to +79.8°

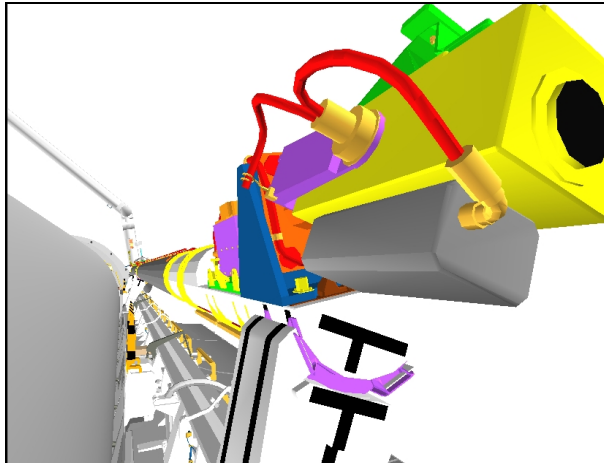


CCTV C (25,5)

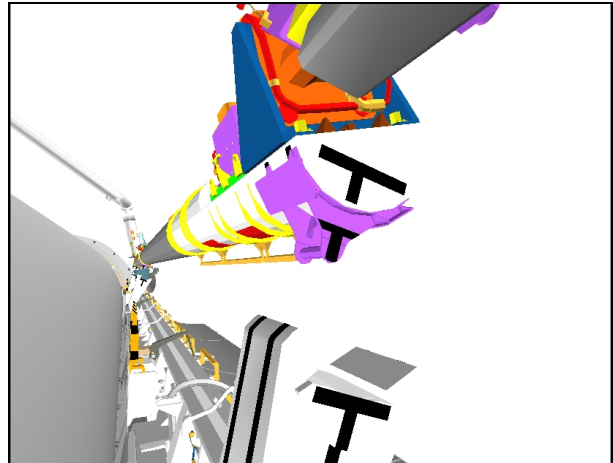


CCTV C (25,5)

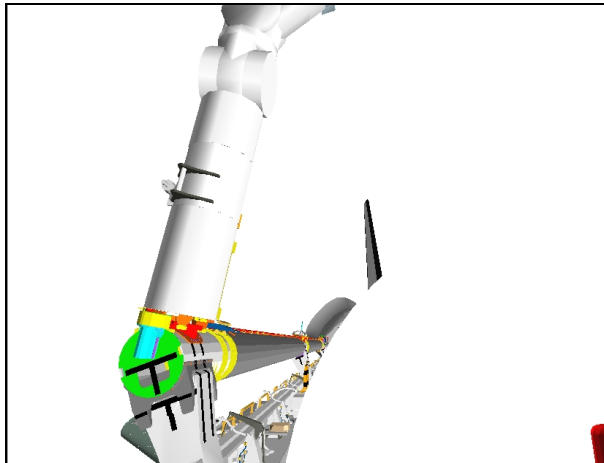


CCTV D (-5,15)

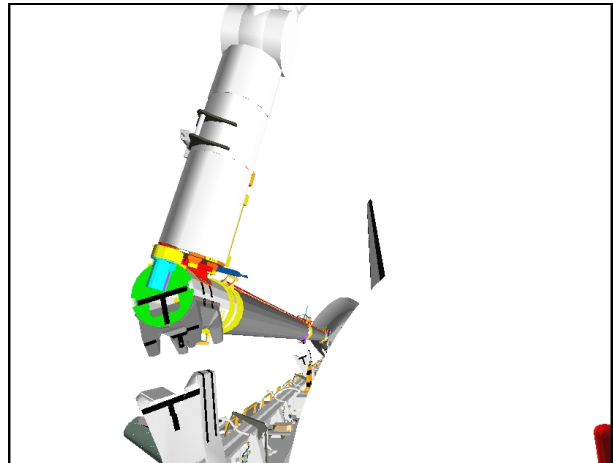

CCTV D (-5,15)

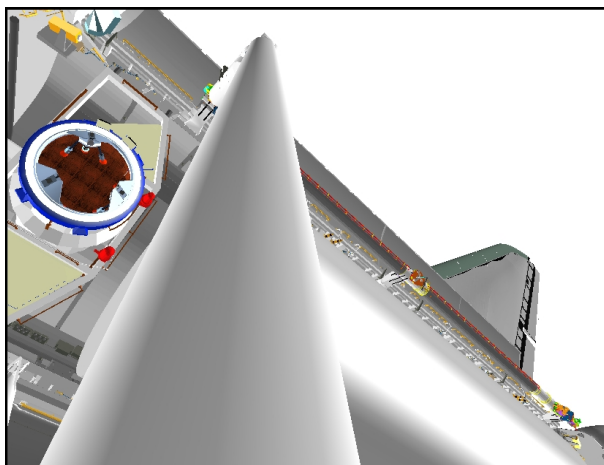

ELBOW (5,-30)

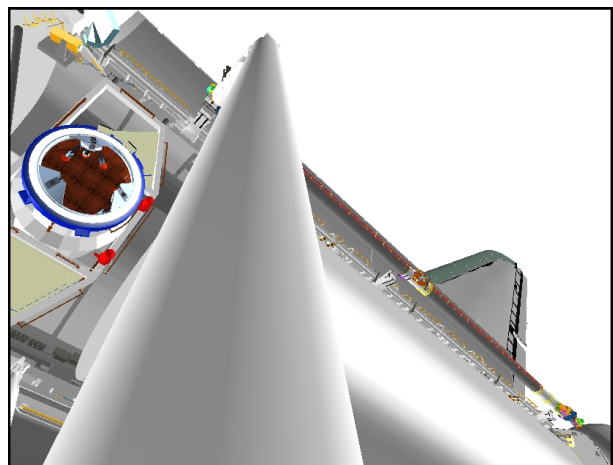


ELBOW (5,-30)

Step 2:


Drive EP (+) from -134.6° to -123.1°

Step 3:


Drive WP (-) from -40.9° to -55.7°

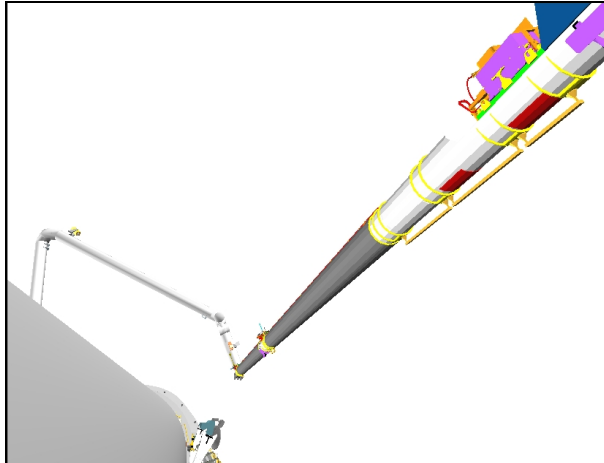


CCTV C (15,25)

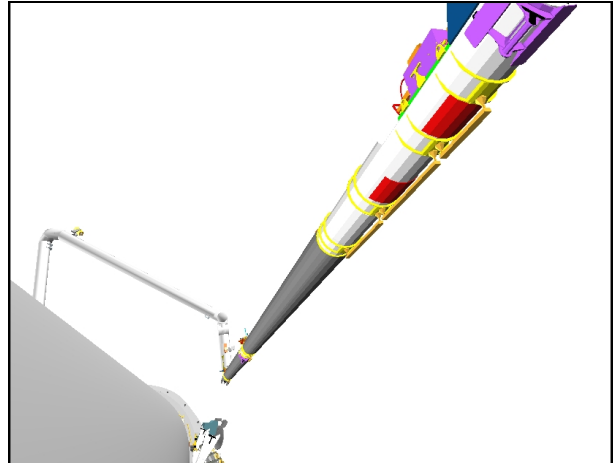


CCTV C (15,25)

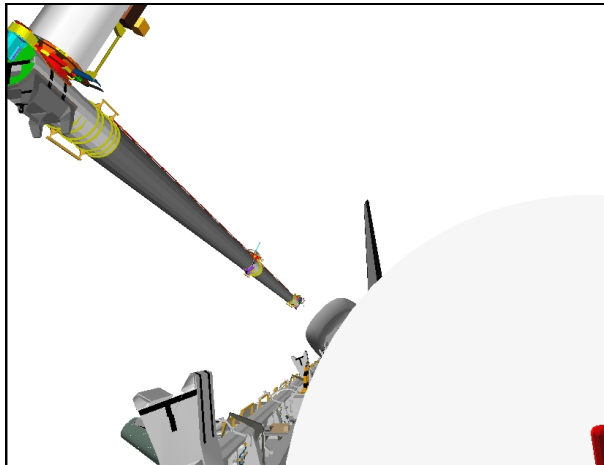


CCTV D (-5,15)

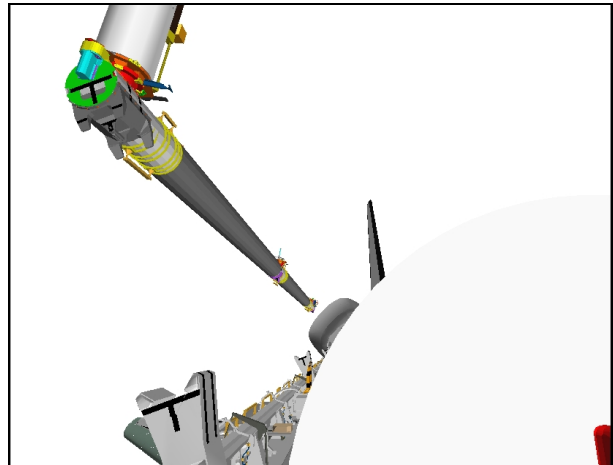

CCTV D (-5,15)

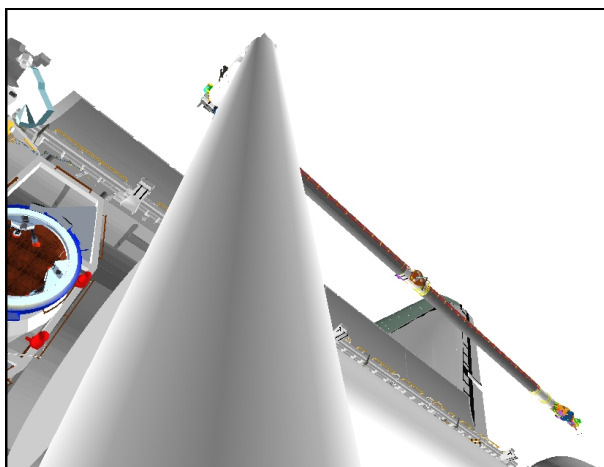

ELBOW (5,-30)

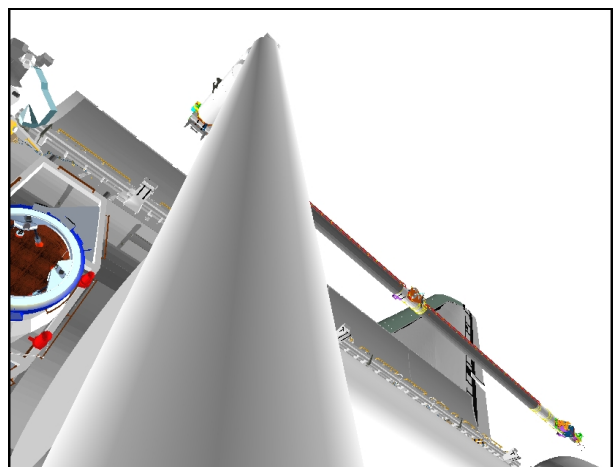

ELBOW (5,-30)

DAP: A14/AUTO/VERN(FREE)

A6U

If Verns failed, DAP: AUTO/ALT

In the following P/TV procedure, start 15-min timer upon applying SPEE power and inform MCC when timer is started:

Perform ACTIVATION (LDRI/ITVC Cue Card, PHOTO/TV)

Perform LCH ACTIVATION (LCS Cue Card, PHOTO/TV)

Perform LCC ACTIVATION (LCS Cue Card, PHOTO/TV)

Go to OBSS UNBERTH, steps 8 and 9

OBSS SJ BERTH

WARNING For UNDOCKED ops only

NOTE

Stbd MPMs assumed deployed

- A7U
1. SETUP
CCTV – config for berth
– perform PAN/TILT RESET for PLB cameras

If SINGLE MODE available:

SM 94 PDRS CONTROL

PL ID – ITEM 3 +1 EXEC

INIT ID – ITEM 24 +1 EXEC

2. OBSS HOVER

Verify mnvr to OBSS HOVER posn complete:


X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+126	-496	0	0	341	1
SY	SP	EP	WP	WY	WR	
-90.0	+79.8	-123.1	-55.7	0.0	+110.0	

√BRAKES – ON (tb-ON)


√MODE – not DIRECT

√JOINT – CRIT TEMP


√STBD RMS HTR A,B (two) – OFF

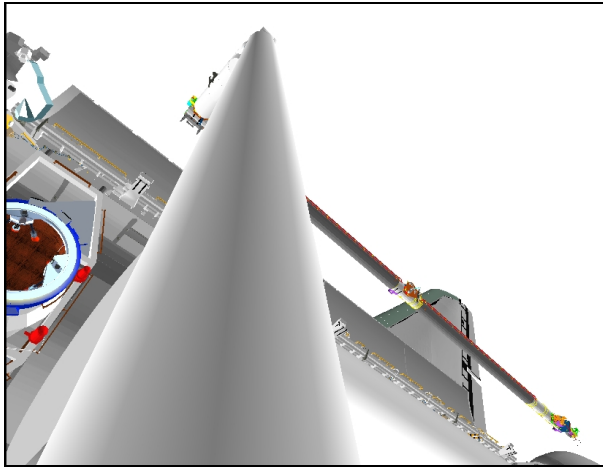

ELBOW (5,-30)

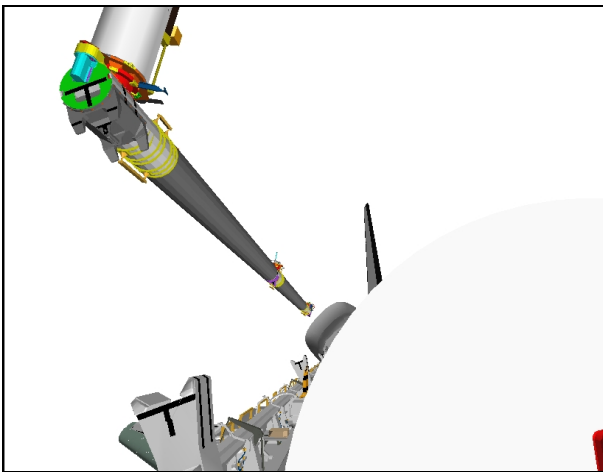

CCTV D (-5,15)

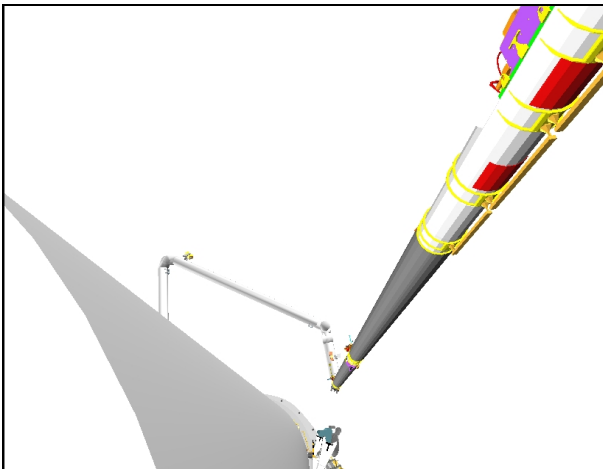

CCTV C (0,25)

A7U

3. STOW PTU
√DTV ← PL2

CAMR CMD PAN/TILT – HI RATE


PAN – L (to hard stop)

TILT – UP (to hard stop)


PAN/TILT – RESET, HI RATE (LO within 10°)

PAN: +108 (right)


TILT: -175 (down)

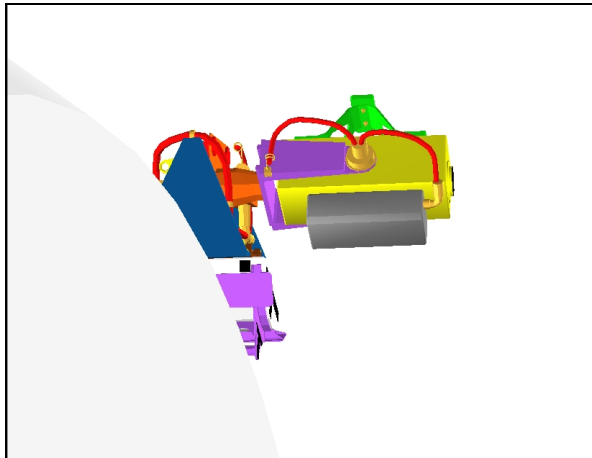


CCTV B (82,16) HFOV: 15.0

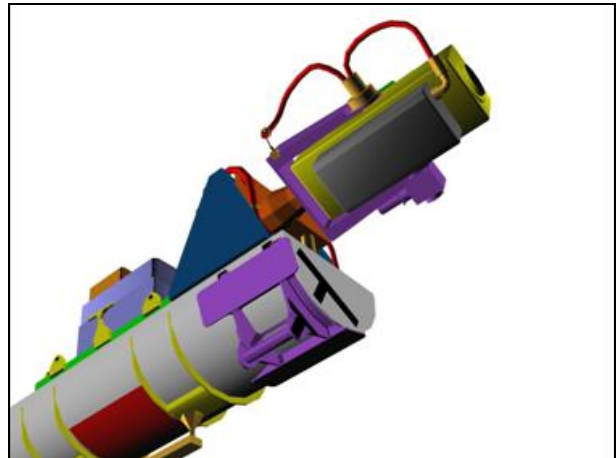

CCTV C (50,50) HFOV: 40.0

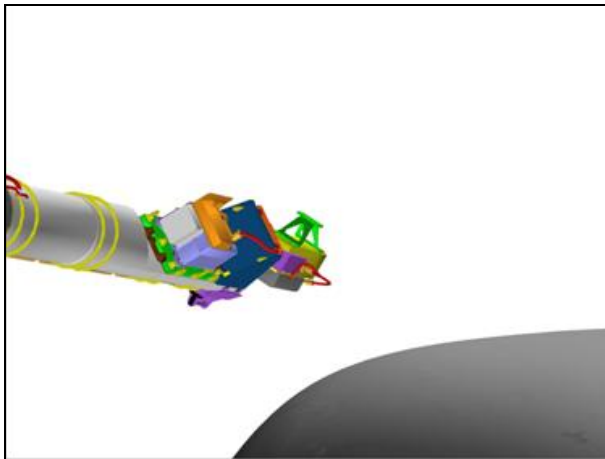

ELBOW (52,-45) HFOV: 9.8 (full-in)

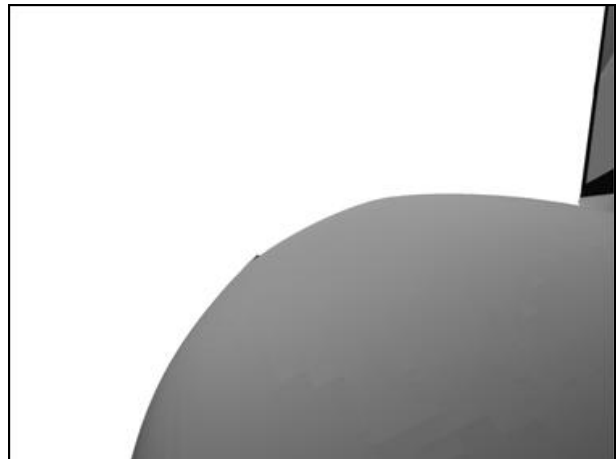

OBSS ITVC (108,-175) HFOV: 53.8 (full-out)

Perform LCC DEACTIVATION (LCS Cue Card, PHOTO/TV)

Perform LCH DEACTIVATION (LCS Cue Card, PHOTO/TV)

CAUTION

STBD RMS HTR power must be applied within
90 min to prevent sensor package damage

Perform DEACTIVATION (LDRI/ITVC Cue Card, PHOTO/TV)

A7U 4. OBSS BERTH
CCTV – configure as required
ZOOM – full OUT

SM 94 PDRS CONTROL
RMS STBD – ITEM 2 EXEC (*)

A6U DAP: FREE

RHC If SINGLE MODE available:
RATE – VERN (RATE MIN tb-ON)
BRAKES – OFF (tb-OFF)

MODE – best available


Mnvr to OBSS BERTH posn:

	SY	SP	EP	WP	WY	WR	
OBSS HOVER	-90.0	+79.8	-123.1	-55.7	0.0	+110.0	
1: WP +				-40.9			
2: EP –			-134.6				
3: SP –		+76.5					
Expected	-90.0	+76.5	-134.6	-40.9	0.0	+110.0	
OBSS BERTH	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-680	+105	-436	0	0	341	1


√STBD RMS R-F-L tb (three) – gray
MODE – not DIRECT

Start:
OBSS Hover


Step 1:
Drive WP (+) from -55.7° to -40.9°

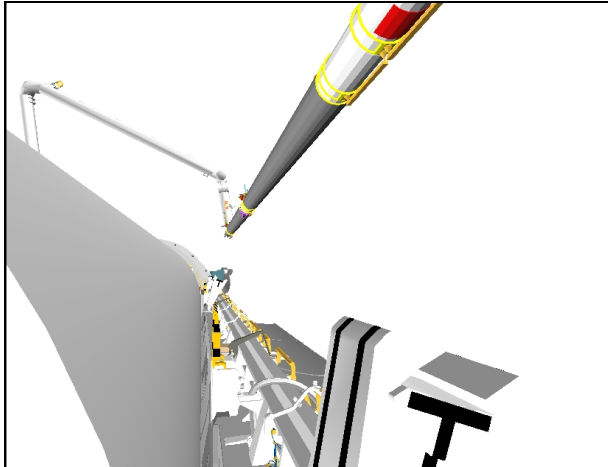


CCTV C (15,5)

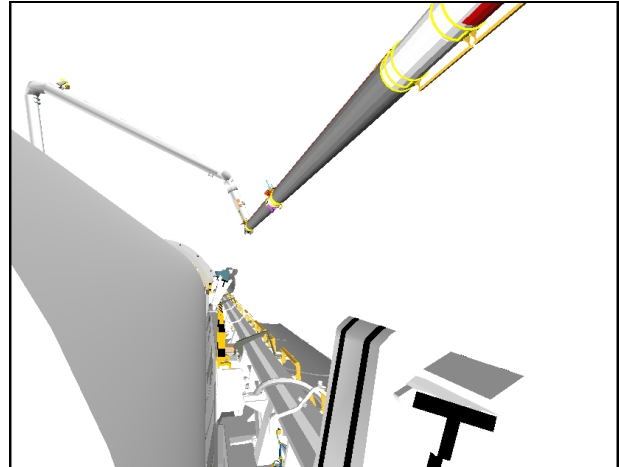


CCTV C (15,5)

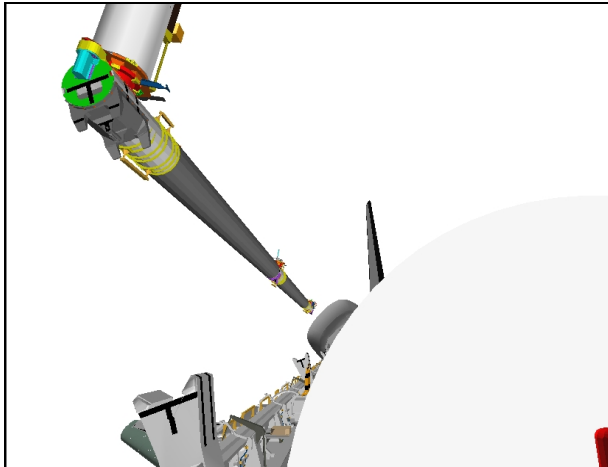


CCTV D (-5,15)

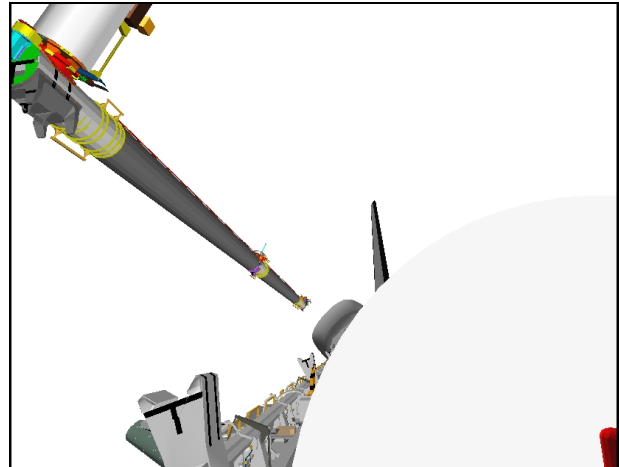

CCTV D (-5,15)

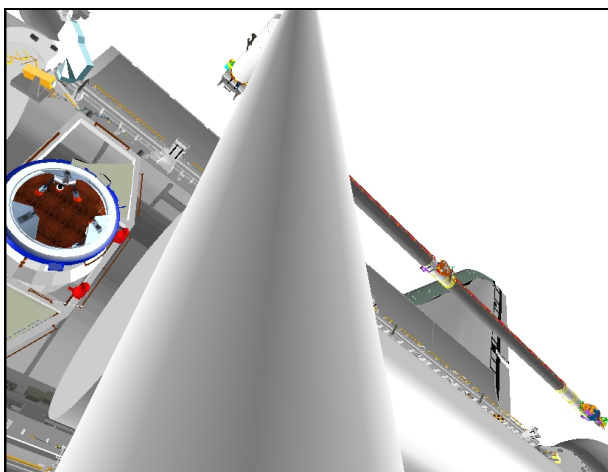


ELBOW (0,-35)

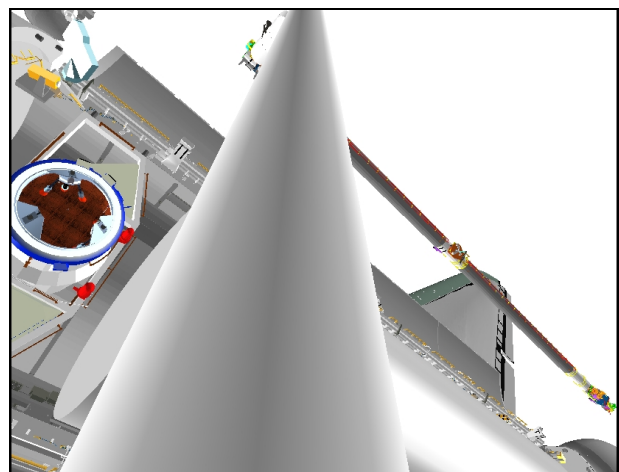

ELBOW (0,-35)

Step 2:


Drive EP (-) from -123.1° to -134.6°

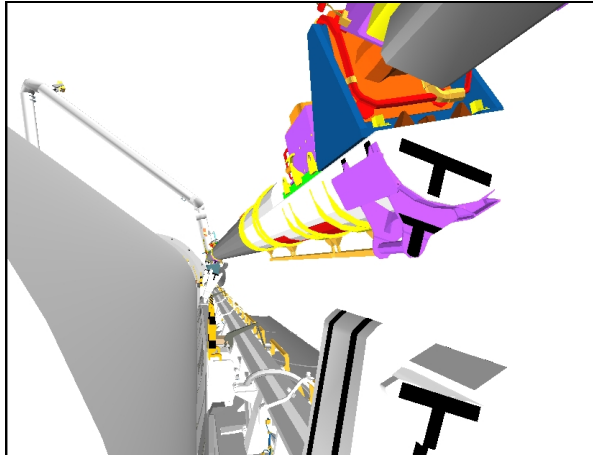


CCTV C (15,5)

Step 3:


Drive SP (-) from $+79.8^{\circ}$ to $+76.5^{\circ}$

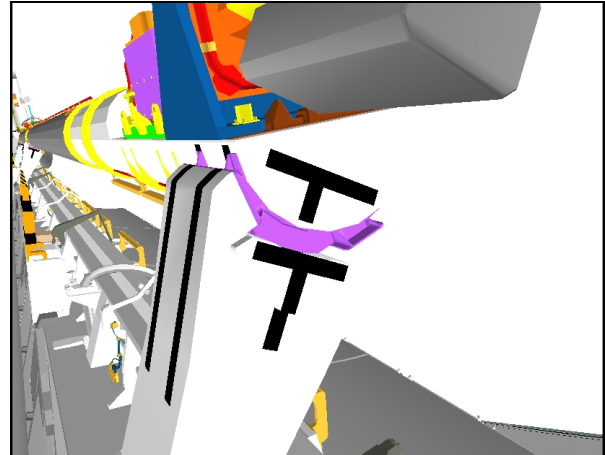


CCTV C (30,-10) HFOV 60.0

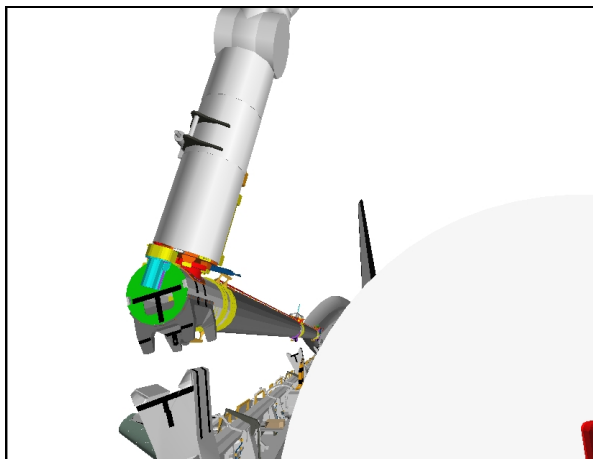


CCTV D (-5,15)

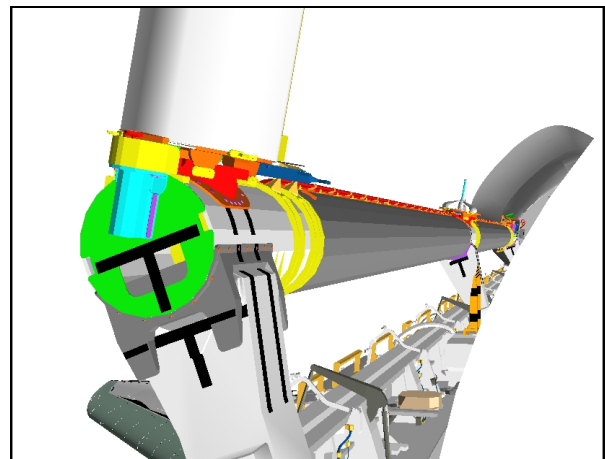

CCTV D (-15,0) HFOV 35.0

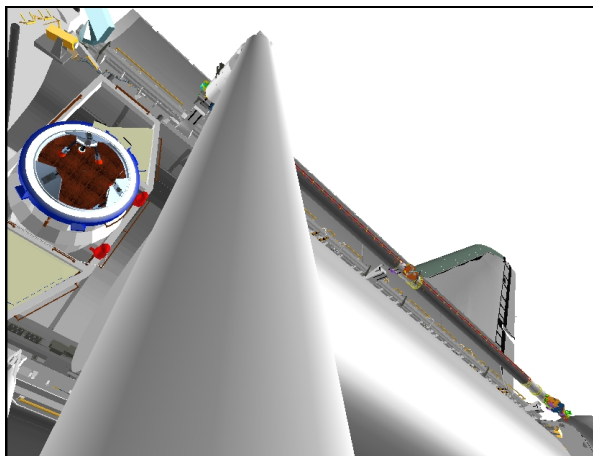

ELBOW (5,-30)

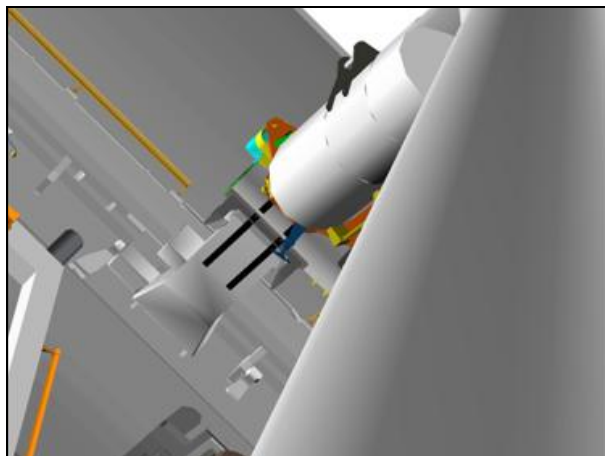

ELBOW (-7,-12) HFOV 15.0

5. CONFIGURE POWER
 MA73C:C cb MCA PWR AC3 3Φ MID 2 – op
 √AC2 3Φ MID 2 – op
 :D √AC3 3Φ MID 4 – op

 R13L PL BAY MECH PWR SYS (two) – ON

6. STBD MRL LATCH
 RATE – COARSE (RATE MIN tb-OFF)

SM 94 PDRS CONTROL
 √STBD AFT, MID, FWD LAT (six) = 0

If SINGLE MODE available:
 AUTO BRAKE INH – ITEM 10 EXEC (*)

NOTE
 Expect single motor drive time for MRL latching

 STBD RMS RETEN LAT – LAT (tb-LAT) (18 sec max)
 – OFF

If motor drive time > 18 sec, √MCC

SM 94 PDRS CONTROL
 RMS PORT – ITEM 1 EXEC (*)

If TEST MODE available,
 MODE – TEST, ENTER
 Wait 5 sec

√BRAKES – ON (tb-ON)
 JOINT – CRIT TEMP

If SINGLE MODE available:
SM 94 PDRS CONTROL
 AUTO BRAKE ENA – ITEM 9 EXEC (*)

A6U DAP: A1/AUTO/VERN(ALT)

7. RECONFIGURE POWER
 R13L PL BAY MECH PWR SYS (two) – OFF

MA73C:C cb MCA PWR AC3 3Φ MID 2 – cl
 √AC2 3Φ MID 2 – op
 :D √AC3 3Φ MID 4 – op

8. OBSS UNGRAPPLE
 A7U CCTV – configure for ungrapple
 – attach overlays as needed
 – RMS WRIST, ZOOM: 34.0 HFOV
 FOCUS: 5 ft

If SINGLE MODE available:

SM 94 PDRS CONTROL

PL ID – ITEM 3 +0 EXEC

INIT ID – ITEM 24 +0 EXEC

RHC

RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)

MODE – best available

A6U

DAP: VERN(FREE)


CAUTION

Monitor EE tb timing to prevent EE motor burnout

EE MODE – MAN

MAN CONTR – DERIGID (hold until DERIGID tb-gray, 5 sec max)

RELEASE sw – depress (hold until OPEN tb-gray, 3 sec max)

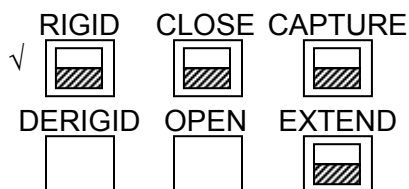

Drive SP (+) until arm clear of grapple pin

EE MAN CONTR – DERIGID (hold until EXTEND tb-gray, 20 sec max)

MODE – OFF

STBD RMS HTR A,B (two) – AUTO

A6U

EVENT TIMER CNTL – STOP

DAP: A1/AUTO/VERN(ALT)

Mnvr to OBSS SJ PRE-GRAPPLE posn:

	SY	SP	EP	WP	WY	WR
OBSS BERTH	-90.0	+76.5	-134.6	-40.9	0.0	+110.0
1: SP +		+87.9				
2: EP +			-129.8			
3: WP –				-57.0		
OBSS SJ	-90.0	+87.9	-129.8	-57.0	0.0	+110.0
PRE-GRAPPLE	X	Y	Z	PITCH	YAW	ROLL
	-680	+96	-513	270	350	1
						PL ID
						0


BRAKES – ON (tb-ON)

MODE – not DIRECT


JOINT – CRIT TEMP

Start:
OBSS Berth


Step 1:
Drive SP (+) from +76.5° to +87.9°

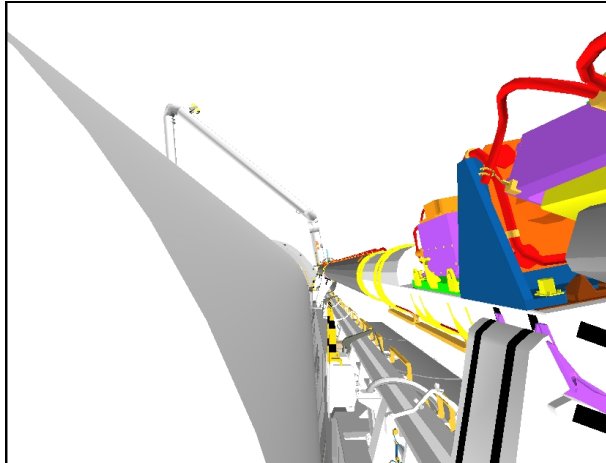


CCTV C (0,5)

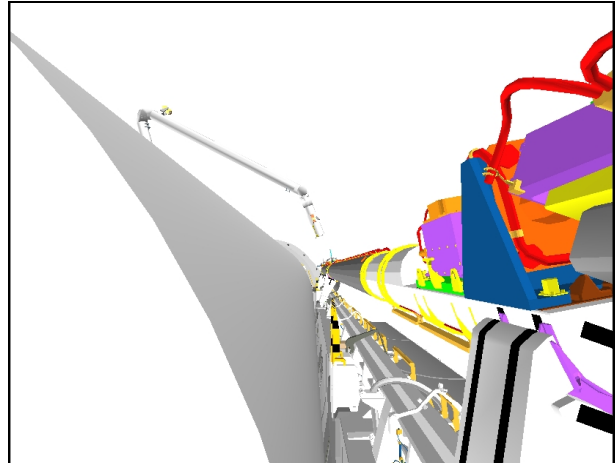


CCTV C (0,5)

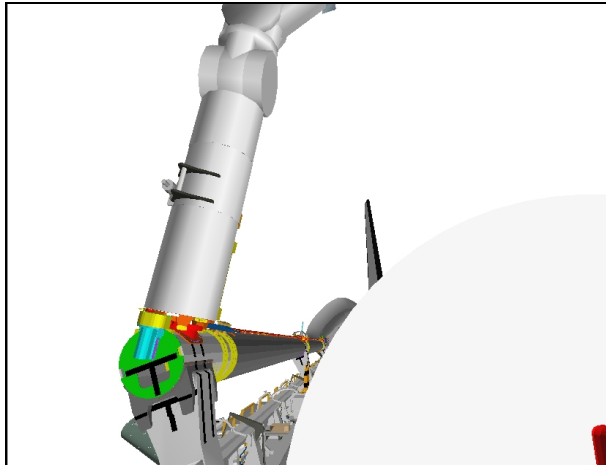


CCTV D (-5,15)

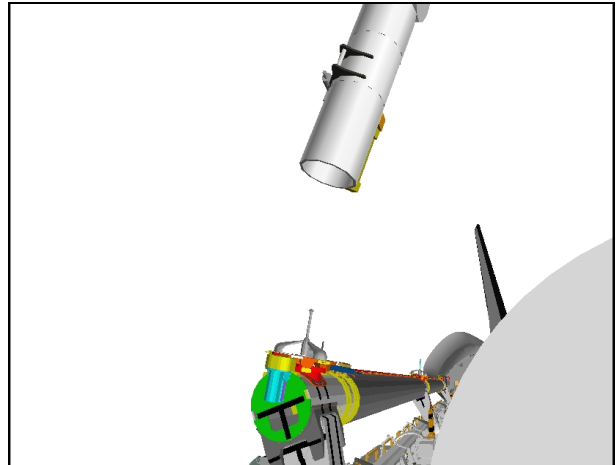

CCTV D (-20,20)

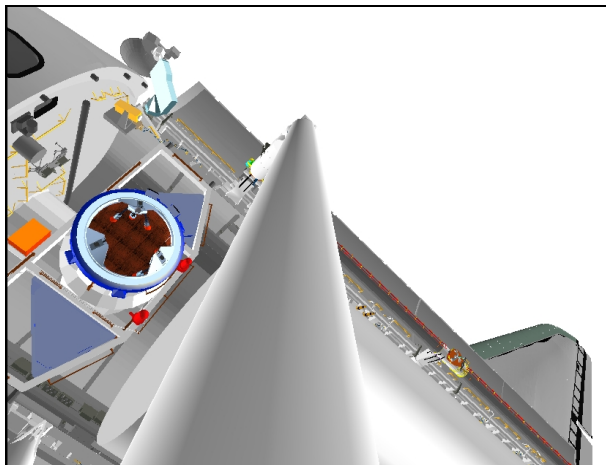


ELBOW (0,-20)

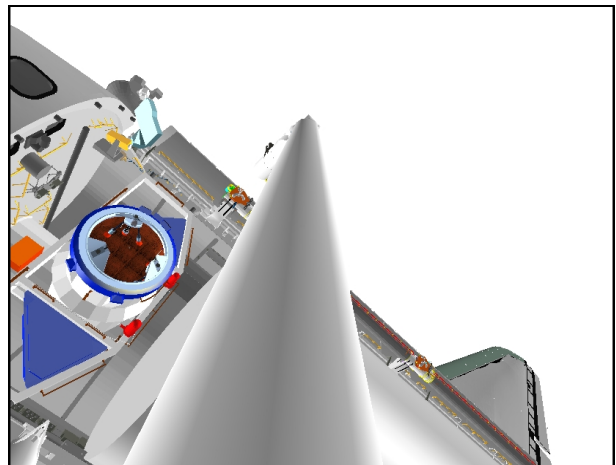

ELBOW (0,-20)

Step 2:


Drive EP (+) from -134.6° to -129.8°

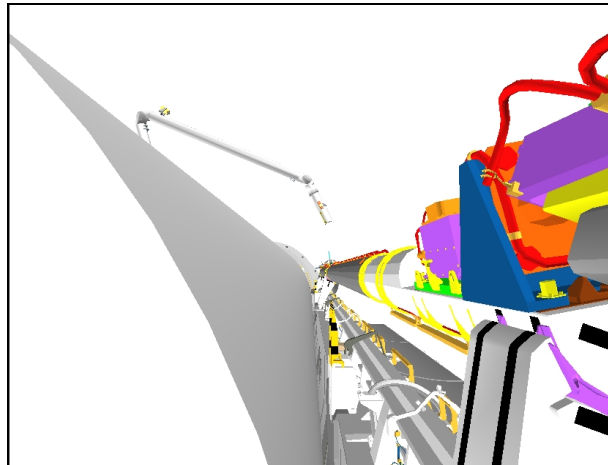


CCTV C (0,5)

Step 3:


Drive WP (-) from -40.9° to -57.0°

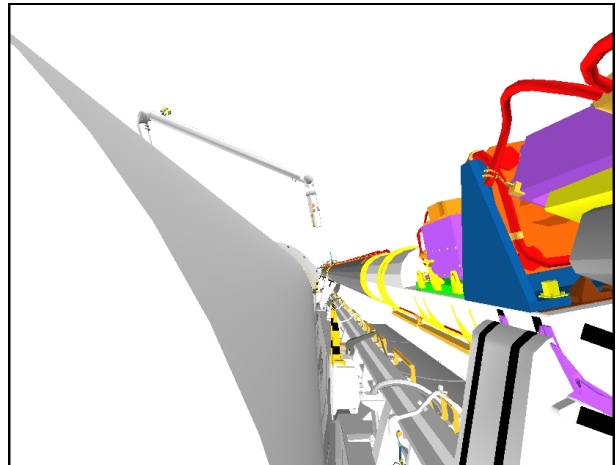

CCTV C (0,5)

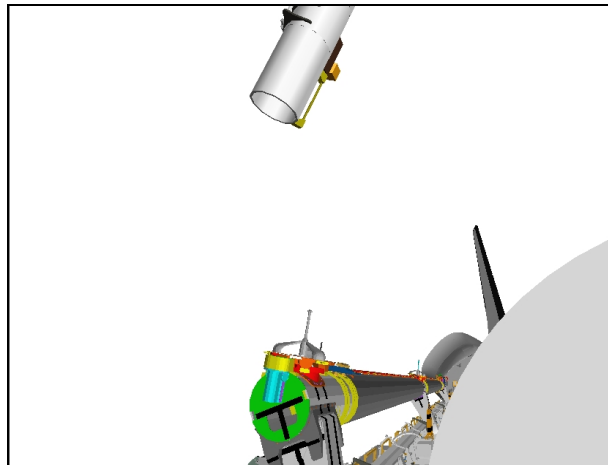


CCTV D (-20,20)

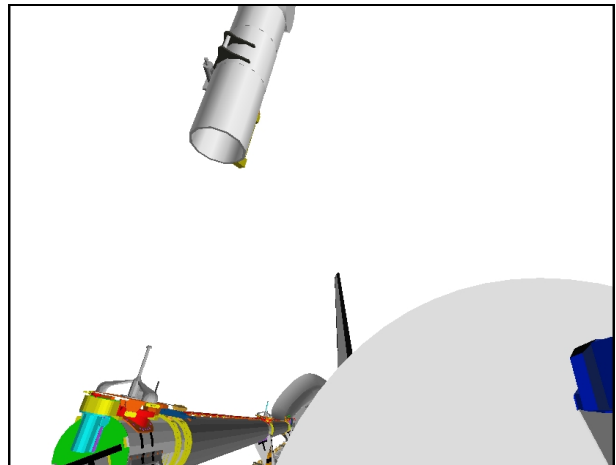

CCTV D (0,25)



ELBOW (0,-20)

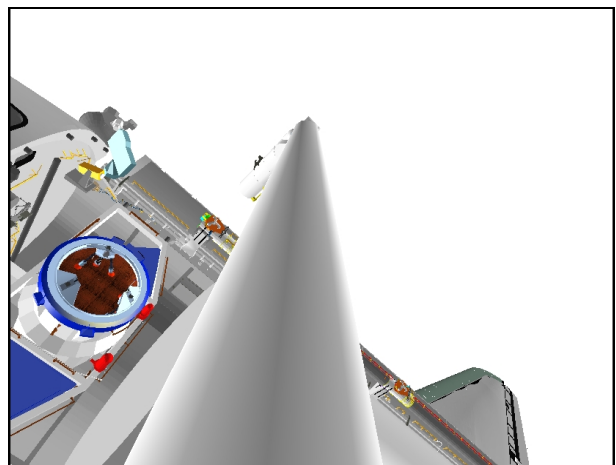

ELBOW (0,-20)

A7U 9. ARM PRE-CRADLE
CCTV – configure as required
ZOOM – full OUT

RHC If SINGLE MODE available:
RATE – as reqd (VERN within 10 ft)
BRAKES – OFF (tb-OFF)

MODE – best available


Mnvr to PRE-CRADLE posn:

		SY	SP	EP	WP	WY	WR		
OBSS SJ		-90.0	+87.9	-129.8	-57.0	0.0	+110.0		
PRE-GRAPPLE					+5.0				
1: WP +									
2: WR –							0.0		
3: EP +				-25.0					
4: SY +		0.0							
5: SP –			+25.0						
PRE-CRADLE		0.0	+25.0	-25.0	+5.0	0.0	0.0		
		X	Y	Z	PITCH	YAW	ROLL	PL ID	
		-1261	-146	-551	5	2	0	0	


BRAKES – ON (tb-ON)
MODE – not DIRECT
PARAM – PORT TEMP
JOINT – CRIT TEMP

Start:
OBSS Pre-Grapple


Step 1:
Drive WP (+) from -57.0° to $+5.0^{\circ}$

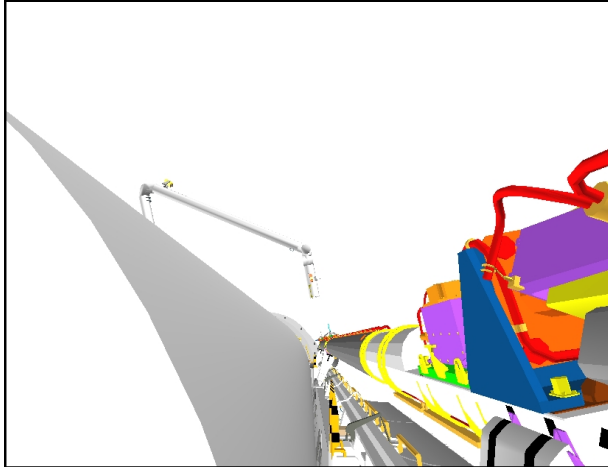


CCTV C (0,15)

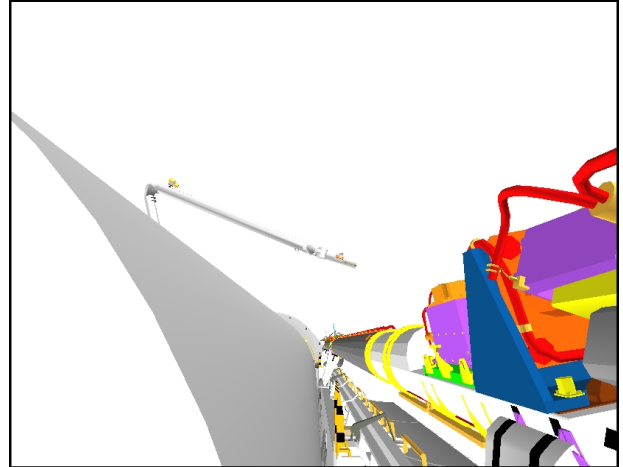


CCTV C (0,15)

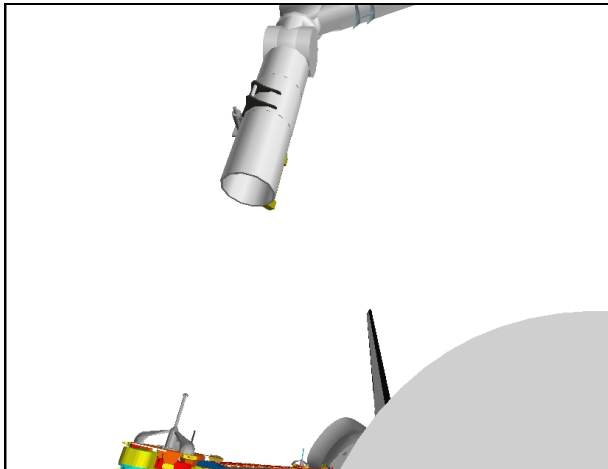


CCTV D (-5,30)

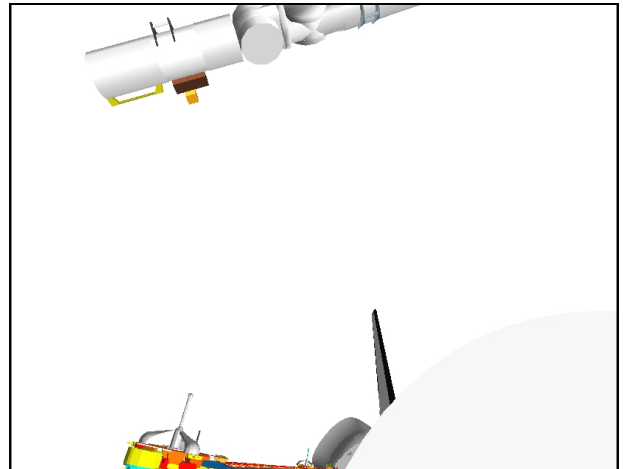

CCTV D (-5,30)

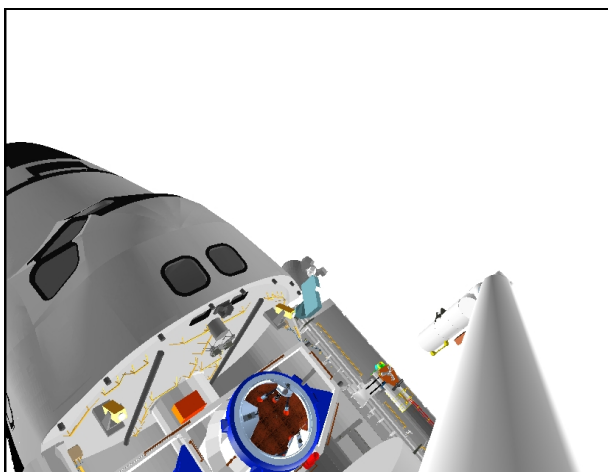


ELBOW (-25,0)

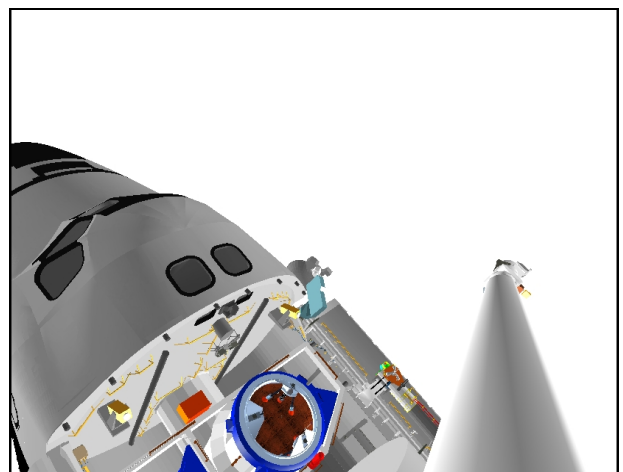


ELBOW (-25,0)

Step 2:
Drive WR (-) from $+110.0^\circ$ to 0.0°

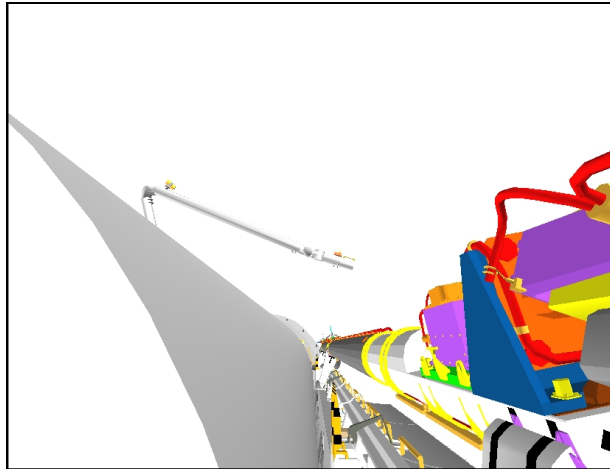


CCTV C (0,15)


Step 3:
Drive EP (+) from -129.8° to -25.0°

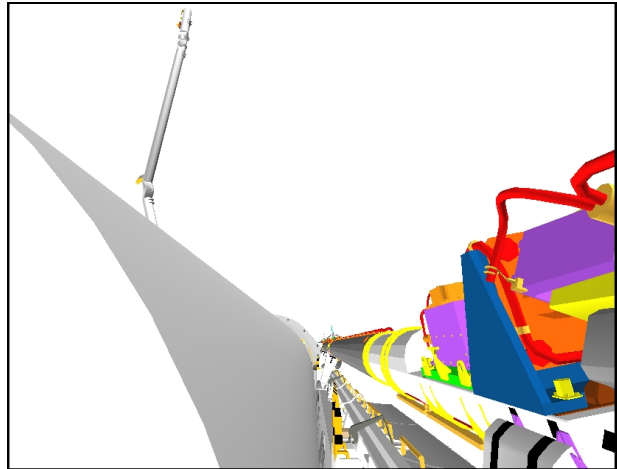


CCTV C (0,15)

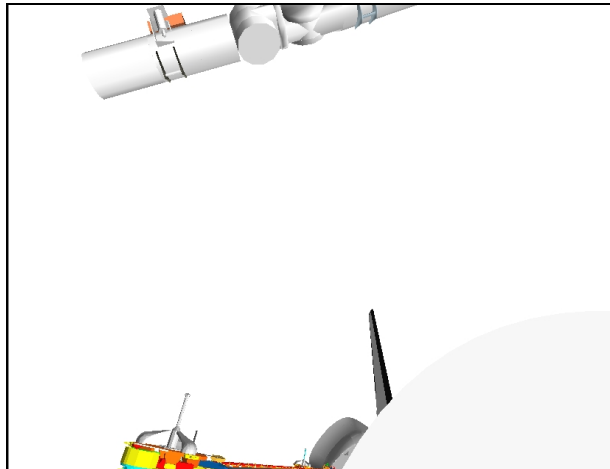

CCTV D (-5,30)

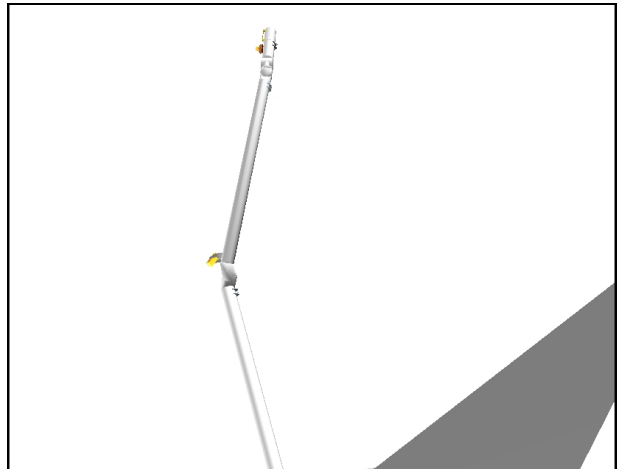

CCTV B (0,25)

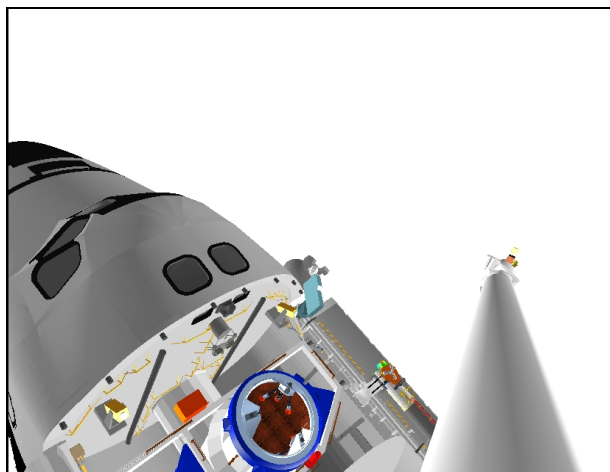


ELBOW (-25,0)



CCTV A (0,45)

Step 4:


Drive SY (+) from -90.0° to 0.0°

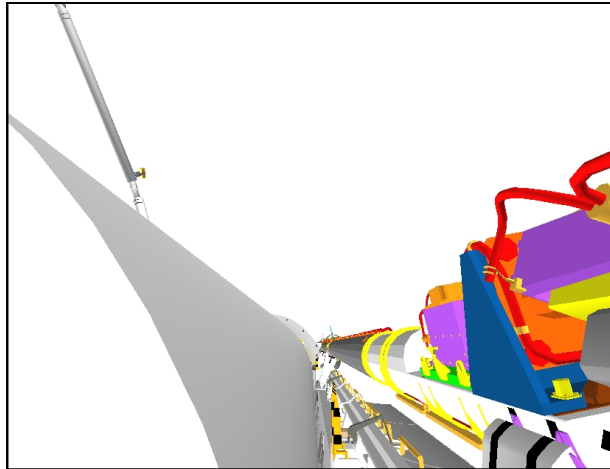


CCTV C (0,15)

Step 5:


Drive SP (-) from $+87.9^{\circ}$ to $+25.0^{\circ}$

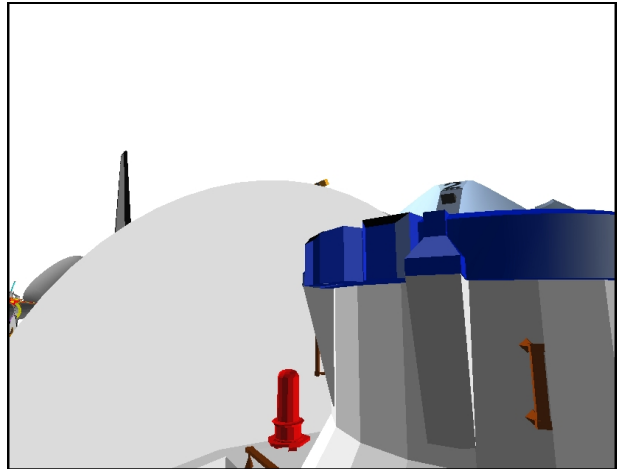


CCTV D (30,10)

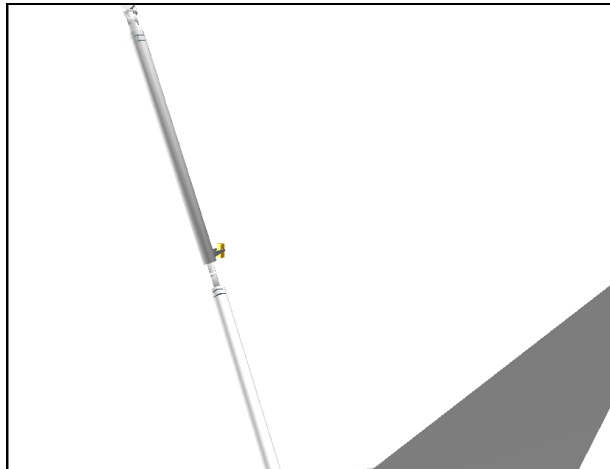


CCTV B (0,25)

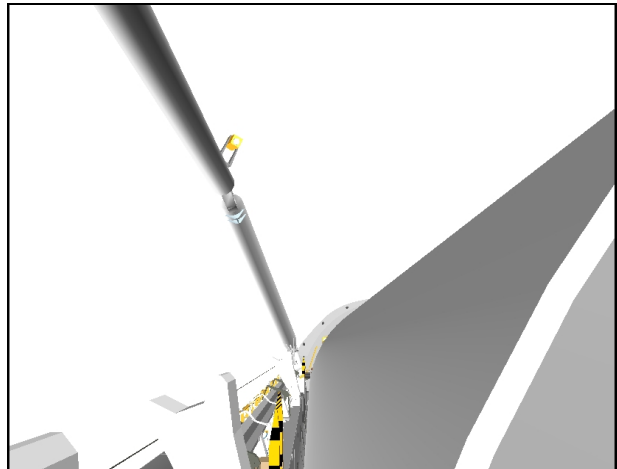

CCTV B (0,10)

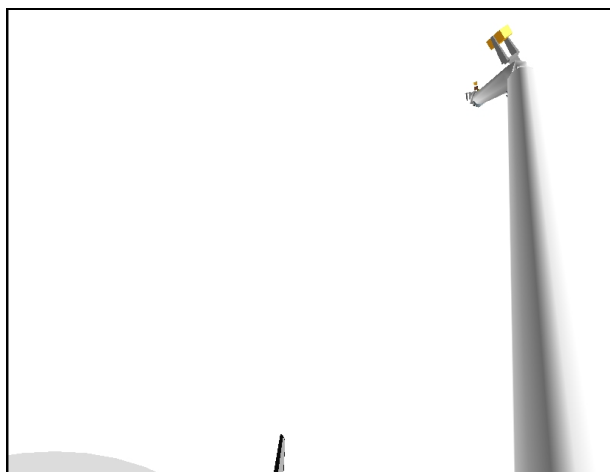

CCTV A (0,45)

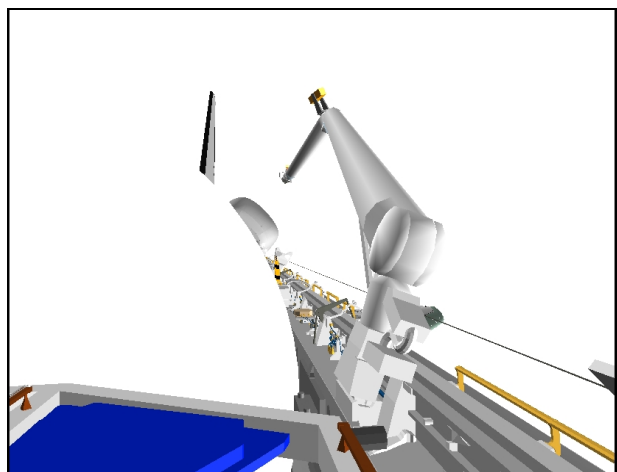

CCTV A (10,0)

OBSS JETTISON

ASSUMPTIONS:

1. DAP and RMS have been configured to provide stable position for OBSS prior to entering this procedure
2. For undocked ops only

NOTES:

1. Jettison to be performed between sunrise and noon, if practical, to provide good visibility
2. DAP A used post-jettison for sep mnvr. DAP B (with mod in step 1) used while OBSS attached to RMS to keep loads down and ensure stable orbiter/payload/DAP
3. Jettison must occur greater than 1500 ft from ISS to avoid plume impingement damage
4. For emergency undock scenario, perform Shuttle Emergency Sep (RNDZ C/L) with 3 fps posigrade +X burn in step 3 prior to executing this procedure

OBSS JETTISON

OBSS JETTISON

1. SETUP

If Stbd MPMs expected to stow, go to step 4

If OBSS not latched:

Perform OBSS BERTH (NOMINAL), steps 1-7

If OBSS Berthed and SRMS not grappled:

Perform OBSS UNBERTH (NOMINAL), steps 1-3,
sensor package timer not required

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 1

√INIT ID, ITEM 24: 1

A14

√PYRO STARBOARD RMS (five) – SAFE

√RMS LAT – SAFE

ML86B:D

cb MNA PYRO JETT SYS A STBD RMS – cl

MNC PYRO JETT SYS B STBD RMS – cl

√cb MNB PYRO JETT SYS A PORT RMS – op

√MNC PYRO JETT SYS B PORT RMS – op

2. STARBOARD MPM JETTISON

a. Deadface Latches

R13L

√PL BAY MECH PWR SYS (two) – OFF

A8L

√STBD RMS RETEN LAT tb – LAT

A14

RMS LAT – DEADFACE

A8L

√STBD RMS RETEN LAT tb – bp

b. Guillotine Wires at Latches

A14

PYRO STBD RMS ARM – GUILLOTINE

Wait at least 1 sec, then

PYRO STBD RMS LAT (three) – GUILLOTINE

– SAFE

CDR

MS

- c. Jettison Latches
 PYRO STBD RMS ARM – JETT
 Wait at least 1 sec, then
 PYRO STBD RMS LAT (three) – JETT
 – SAFE

PYRO STBD RMS ARM – SAFE
 RMS LAT – SAFE

3. OBSS UNBERTH
 Perform OBSS UNBERTH (NOMINAL), step 7, up to
 and including MODE – not DIRECT

1. SETUP

O14:F, √Pri RJD DRIVER, LOGIC (sixteen) – ON
 O15:F,
 O16:F

O14:E √cb DDU AFT (two) – cl

A6U √SENSE: -Z
 √DAP: INRTL

A7U √Lighting – as reqd

GNC 20 DAP CONFIG

CRT Config DAP A to A7, B to B7
 PRI ROT RATE (B7) – ITEM 30 +0.2 EXEC
 ALT RATE DB (B7) – ITEM 38 +0.2 EXEC
 VERN RATE DB (B7) – ITEM 45 +0.2 EXEC
 CNTL ACC (B7) – ITEM 48 +9 EXEC

4. MNVR TO JETTISON POSN

MON 1	A
MON 2	C

SM 94 PDRS CONTROL

PL ID – ITEM 3 +2 EXEC
 INIT ID – ITEM 24 +2 EXEC

RHC

RATE – as reqd (VERN within 10 ft)
 BRAKES – OFF (tb-OFF)
 MODE – as desired

Mnvr to JETTISON posn (within 1°/1°)

X	Y	Z	PITCH	YAW	ROLL	PL ID
-830	-2	-1290	115	0	0	2
SY	SP	EP	WP	WY	WR	
-29.5	+66.7	-68.5	+26.8	+18.9	-9.9	

BRAKES – ON (tb-ON)

CDR**MS**

3. AUTO MNVR TO -XLV, +ZVV

GNC UNIV PTG

√TGT ID: +2

BODY VECT: +5

P: +180


Y: +0

OM: +0


TRK – ITEM 19 EXEC (CUR – *)

A6U


DAP: B/AUTO/VERN(ALT)

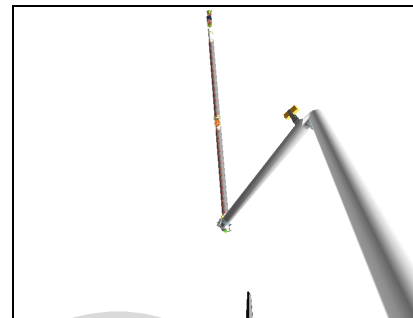

CCTV A (-10,45)

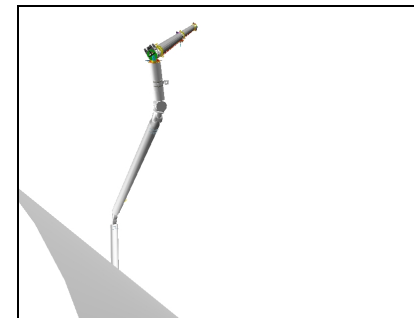

CCTV C (0,35)

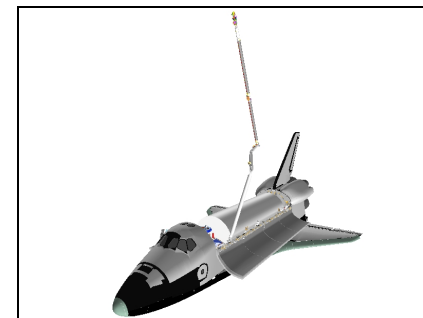

BIRD'S EYE

CDR**MS**

On MS call, "OBSS at jettison position" — — — — —

If attitude mnvr not complete:

DAP: ALT

GNC 20 DAP CONFIGPRI ROT RATE (B7) – ITEM 30 +0.5 EXEC3. CONFIGURE ORBITER FOR SEP MNVR

When mnvr to attitude complete:

√DAP: VERN(ALT)

When rates damped:

DAP: FREE

FLT CNTLR PWR – ON

√DAP TRANS: PULSE/PULSE/PULSE, NO LO Z

Report to MS, "GO to release OBSS" — — — — —

Report to CDR "OBSS at jettison position"

5. OBSS RELEASE

MON 1	WRIST
MON 2	C(B)

R12
(OBSS)

√SPEE PWR – OFF

SSP1(OV-104) √APCU 1,2 CONV (two) – OFF

A15(OV-103,
OV-105)SM 94 PDRS CONTROLPL ID – ITEM 3 +0 EXECINIT ID – ITEM 24 +0 EXEC

X	Y	Z	PITCH	YAW	ROLL	PL ID
√ -1078	0	-754	25	0	1	0
SY	SP	EP	WP	WY	WR	
√ -29.5	+66.7	-68.5	+26.8	+18.9	-9.9	

On CDR call, "GO to release OBSS"

RHC

√RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)

MODE – END EFF, ENTER

CDR		MS	
		CAUTION Monitor EE tb timing to prevent EE motor burnout	
		EE MODE – AUTO RELEASE sw – REL (mom)	
		When OPEN tb – gray, mnvr arm clear of grapple pin	
		RIGID DERIGID CLOSE OPEN CAPTURE EXTEND CRITICAL TIMES (28 sec total): DERIGID tb – gray, 5 sec max, then OPEN tb – gray, 3 sec max, then EXTEND tb – gray, 20 sec max	
		EE MODE – OFF	
		BRAKES – ON (tb-ON)	
On MS call, “GO to perform SEP mnvr”		Report to CDR, “GO to perform SEP mnvr”	
A6U	4. <u>SEP MNVR</u> DAP: A/FREE/VERN(ALT) THC: +Z (out) 2 pulses (0.2 ft/sec) When opening rate confirmed: DAP TRANS: PULSE/PULSE/NORM DAP: LVLH THC: +Z (out) 5 sec (1.7 ft/sec) FLT CNTLR PWR – OFF DAP TRANS: PULSE/PULSE/PULSE Report to MS, “SEP mnvr complete”	On CDR call, “SEP mnvr complete”	
CRT	GNC 20 DAP CONFIG Config DAP B to B7	6. <u>RMS TO PRE-CRADLE</u> Go to RMS PWRDN, step 1	

OBSS ITVC TILE ACREAGE SURVEY

1. SETUP

SM 94 PDRS CONTROL

√ PL ID, ITEM 3: 2

√ INIT ID, ITEM 24: 2

Verify SSRMS at SURVEY SUPPORT VIEWING posn:

SR	SY	SP	EP	WP	WY	WR
+41.6	+61.1	+46.3	-61.3	-121.8	-39.1	-245.0

Verify MT at WS3, SSRMS on PDGF 3

A7U

CCTV – config as reqd

MON 1	SSRMS BASE ELBOW (LAB)
MON 2	RSC

2. MNVR TO STBD SCAN POSN


Mnvr to be uplinked realtime

STBD SCAN posn:


X	Y	Z	PITCH	YAW	ROLL	PL ID
√ -1433	+465	-128	338	344	23	2
SY	SP	EP	WP	WY	WR	
√ -53.4	+11.7	-60.6	-53.9	-24.6	+63.5	

NOTE

At Stbd Scan posn, OBSS-to-Orbiter = 57 in

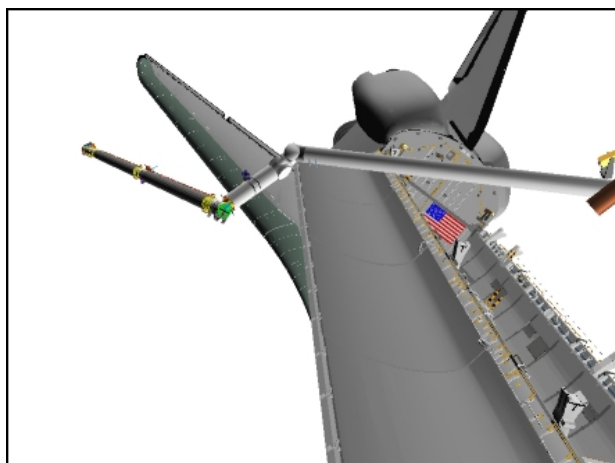

SSRMS BASE ELBOW (-75,0)

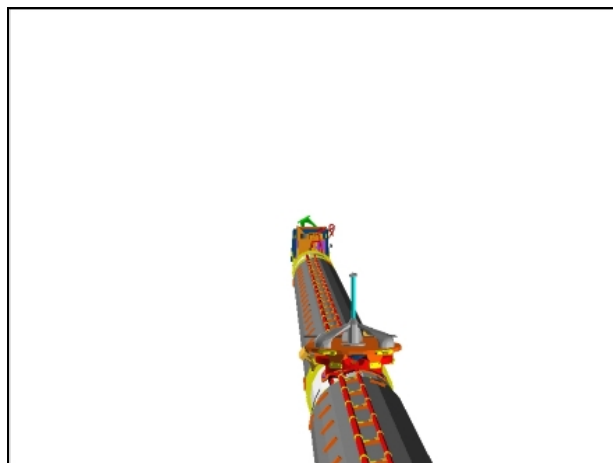

RSC

3. CONFIGURE OBSS ITVC FOR STBD SCAN

A7U

√ DTV ← PL2

If PTU reset reqd:

CAMR CMD PAN/TILT – HI RATE

PAN – L (to hard stop)

TILT – UP (to hard stop)


PAN/TILT – RESET, HI RATE (LO within 10°)

PAN: +105

TILT: -59

A7U

√CAMR CMD PAN/TILT – LO RATE
 ZOOM: 20.0 HFOV
 MUX 1 L ← MIDDECK
 LDRI MODE 2 pb – push (ITVC video)
 DTV ← PL2

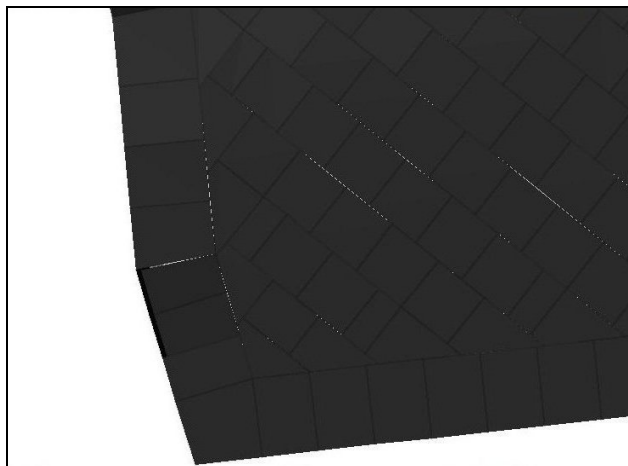

OBSS ITVC (105,-59)

√MCC to verify correct sensor view

4. PERFORM STBD SCAN

On MCC GO:


L10(VTR)

REC pb – push, hold

PLAY pb – push, simo (red ●)

Drive PTU to sweep out the survey area:

	PAN	TILT
Start Config	+105	-59
1: Tilt (up)		-23
2: Pan (left)	+90	
3: Tilt (down)		-59
4: Pan (left)	+75	
5: Tilt (up)		-30
6: Pan (left)	+62	
7: Tilt (down)		-59
Final Config	+62	-59

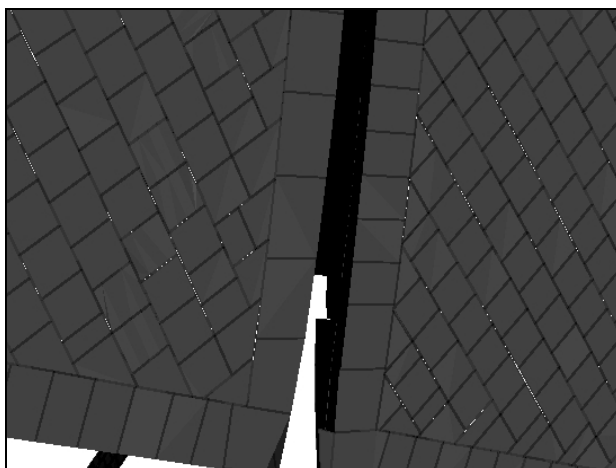

OBSS ITVC (62,-59)

5. MNVR TO PORT CONFIG 1

On MCC GO:

L10(VTR) STOP pb – push (no red ●)

NOTE

Min clearance during Port Config 1 mnvr (SJ step 4),
OBSS-to-Orbiter = 29 in. At Port Config 1 posn,
OBSS-to-Orbiter clearance = 164 in

Port Config 1 Clearance Views	Cameras
SJ step 1	C, D, RSC, SSRMS BASE ELBOW
SJ step 2	D, ELBOW
SJ step 3	C, D, SSRMS BASE ELBOW
SJ step 4	A, B, C, ELBOW, RSC
SJ step 5	A, B
SJ step 6	A, B, ELBOW
SJ step 7	A, B, ELBOW, P1 LOOB
SJ step 8	ELBOW, P1 LOOB, SSRMS TIP, RSC


RHC RATE – as reqd (VERN within 10 ft)
BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

Mnvr to PORT CONFIG 1 posn:

	SY	SP	EP	WP	WY	WR	
STBD SCAN	-53.4	+11.7	-60.6	-53.9	-24.6	+63.5	
1: WR –						+25.0	
2: WP +				-18.0			
3: SP +		+44.0					
4: SY +	+35.0						
5: WY +					+17.0		
6: SP –		+12.0					
7: EP –			-68.0				
8: WR –						-185.0	
PORT CONFIG 1	+35.0	+12.0	-68.0	-18.0	+17.0	-185.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-445	-137	-85	184	347	184	2

BRAKES – ON (tb-ON)


PORT CONFIG 1

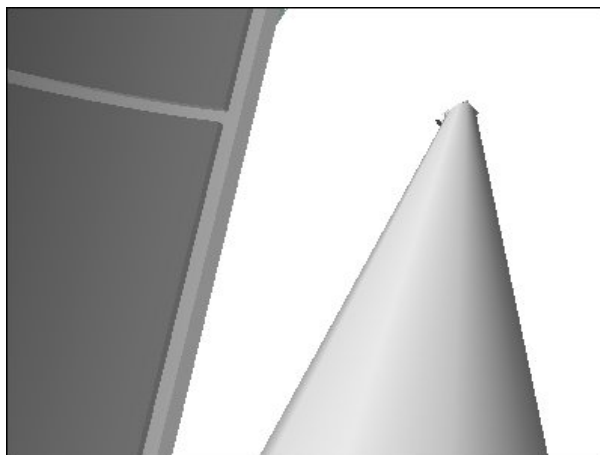

ELBOW (-21,-22)



TIP ELBOW (-95,41)

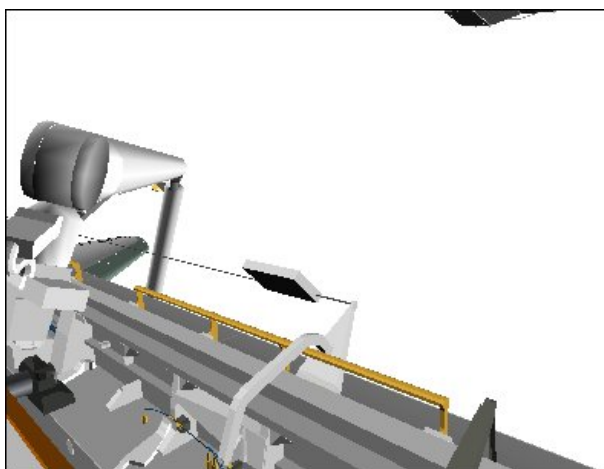

CCTV A (50,-10)

6. PERFORM PORT 1 SCAN
 - a. Port 1 Scan 1

NOTE

During Port 1 scan, OBSS-to-Orbiter = 131 in

A7U

CCTV – config as reqd


MON 1	SSRMS TIP ELBOW (SSRMS TIP LEE)
MON 2	ELBOW (RSC)

A7U

√DTV ← PL2

PAN: +75 (right)
TILT: -110 (down)

√CAMR CMD PAN/TILT – LO RATE

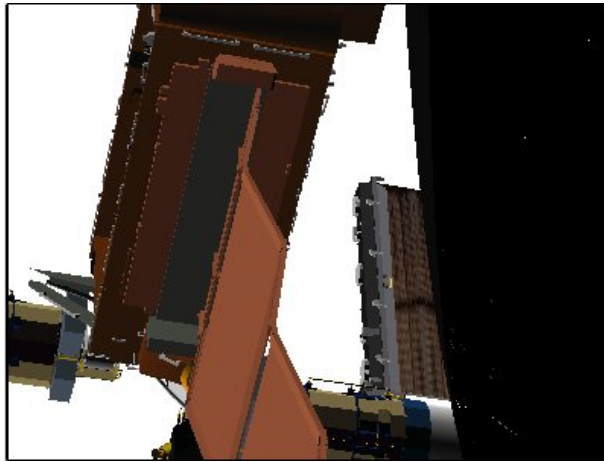

OBSS ITVC (75,-110)


√MCC to verify correct sensor view

L10(VTR) On MCC GO:
 REC pb – push, hold
 PLAY pb – push, simo (red ●)


RHC RATE – VERN (RATE MIN tb-ON)
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

Drive WR (+) to -34.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1588	-105	-138	2	344	356	2
SY	SP	EP	WP	WY	WR	
+35.0	+12.0	-68.0	-18.0	+17.0	-34.0	

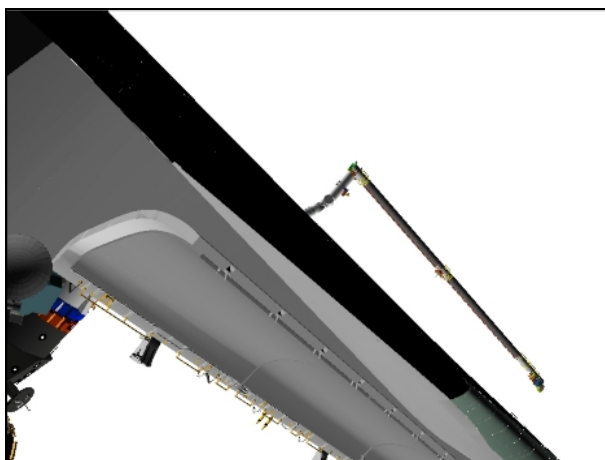

TIP ELBOW (-75,15)

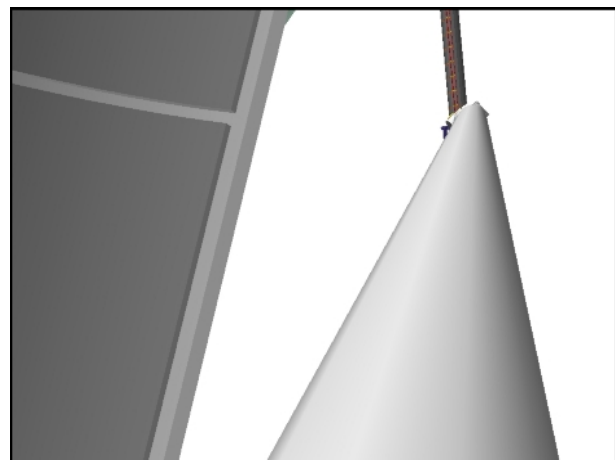

ELBOW (-21,-22)

b. Port 1 Scan 2

NOTE

The following and subsequent TILT cmds
 in step 6 are for the OBSS ITVC


A7U TILT: -97 (up)

Drive WR (-) to -185.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-445	-137	-85	184	347	184	2
SY	SP	EP	WP	WY	WR	
+35.0	+12.0	-68.0	-18.0	+17.0	-185.0	



TIP ELBOW (-95,35)

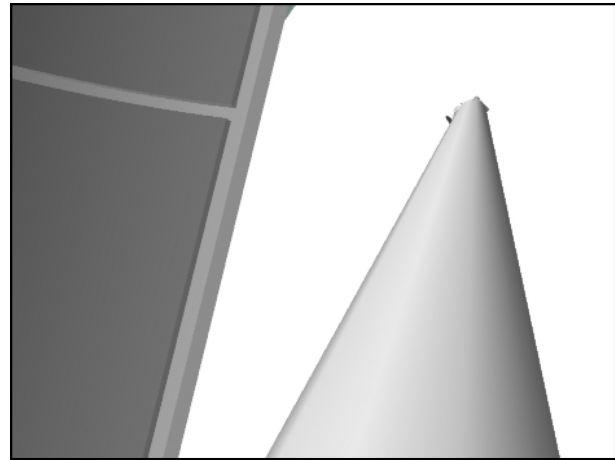


ELBOW (-21,-22)

A7U


- c. Port 1 Scan 3
TILT: -84 (up)

Drive WR (+) to -34.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1588	-105	-138	2	344	356	2
SY	SP	EP	WP	WY	WR	
+35.0	+12.0	-68.0	-18.0	+17.0	-34.0	

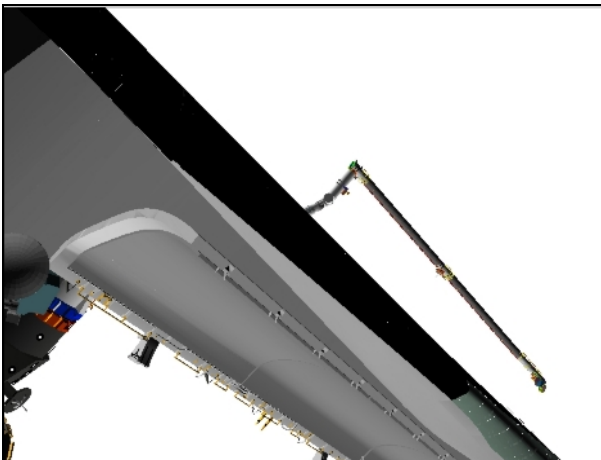

TIP ELBOW (-75,15)

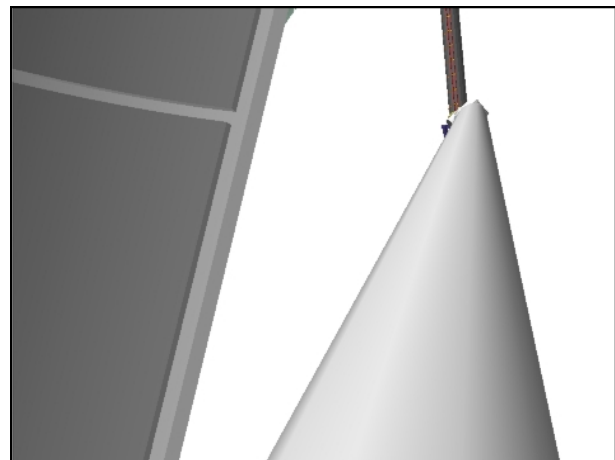


ELBOW (-21,-22)

A7U


- d. Port 1 Scan 4
TILT: -71 (up)

Drive WR (-) to -180.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-459	-87	-82	184	342	184	2
SY	SP	EP	WP	WY	WR	
+35.0	+12.0	-68.0	-18.0	+17.0	-180.0	

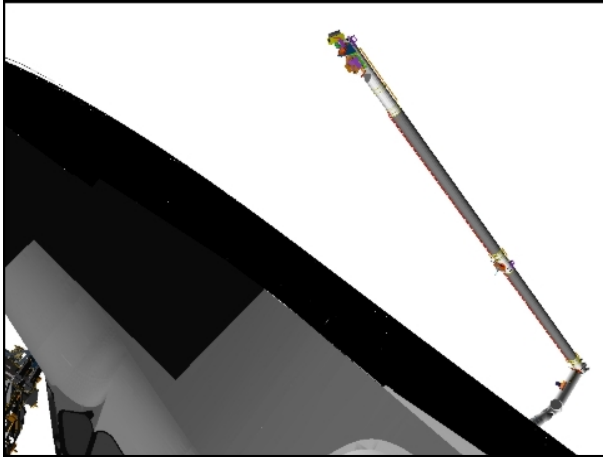

TIP ELBOW (-95,35)

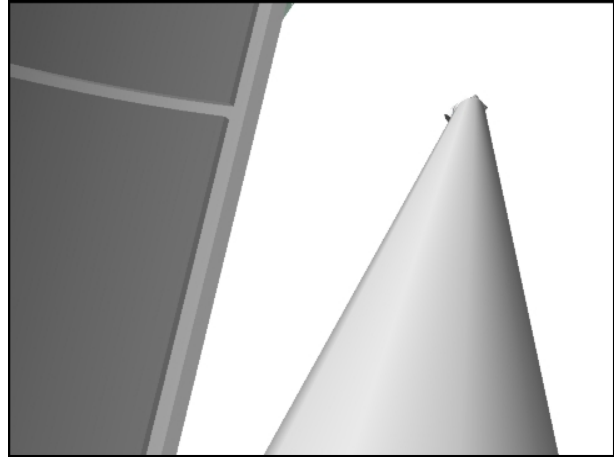

ELBOW (-21,-22)

A7U


- e. Port 1 Scan 5
TILT: -58 (up)

Drive WR (+) to +7.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1555	-517	-162	4	25	356	2
SY	SP	EP	WP	WY	WR	
+35.0	+12.0	-68.0	-18.0	+17.0	+7.0	



RSC

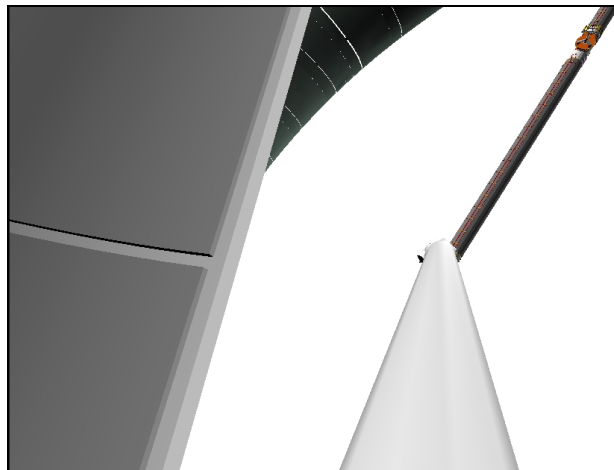

ELBOW (-18,-4)


A7U

- f. Port 1 Scan 6
TILT: -45 (up)


Drive WR (-) to -178.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-466	-68	-81	184	340	184	2
SY	SP	EP	WP	WY	WR	
+35.0	+12.0	-68.0	-18.0	+17.0	-178.0	

BRAKES – ON (tb-ON)

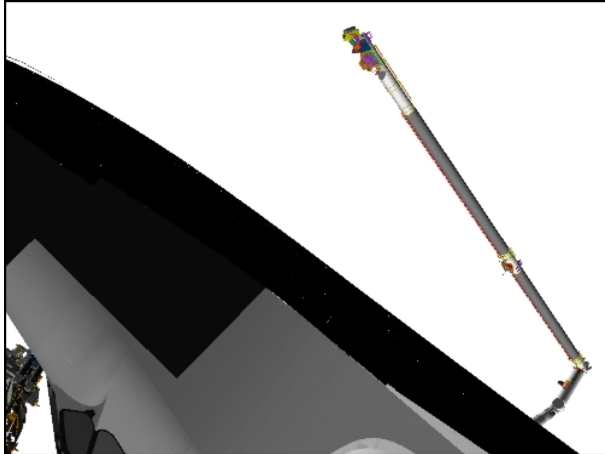

TIP ELBOW (-95,35)

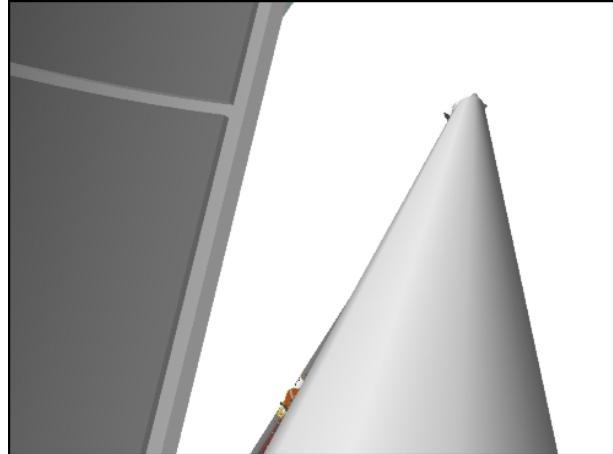

ELBOW (-21,-22)

7. MNVR TO NOSE CONFIG

On MCC GO:

L10(VTR) STOP pb – push (no red ●)

NOTE

At Nose Config final posn, OBSS-to-Orbiter = 143 in


Port Config 2 Clearance Views	Cameras
SJ steps 1 thru 4	A, ELBOW, SSRMS TIP ELBOW, SSRMS TIP LEE, RSC

RHC RATE – as reqd (VERN within 10 ft)
BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER


Mnvr to NOSE CONFIG posn:

	SY	SP	EP	WP	WY	WR	
PORT CONFIG 1	+35.0	+12.0	-68.0	-18.0	+17.0	-178.0	
1: SY +	+74.0						
2: SP +		+26.0					
3: WY −					+15.0		
4: WP −				-23.0			
NOSE CONFIG	+74.0	+26.0	-68.0	-23.0	+15.0	-178.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-480	+9	-126	185	302	196	2

BRAKES – ON (tb-ON)

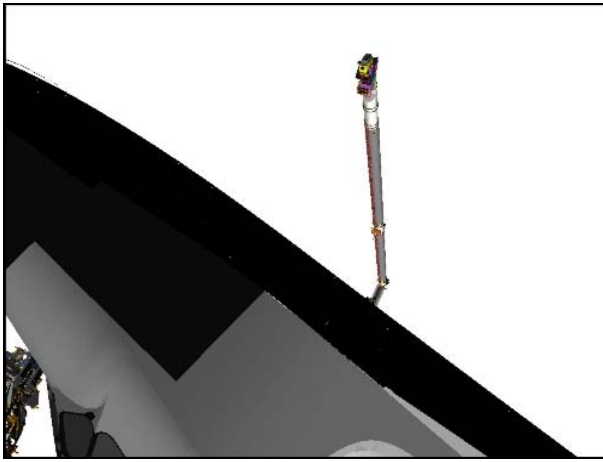

TIP ELBOW (-95,35)

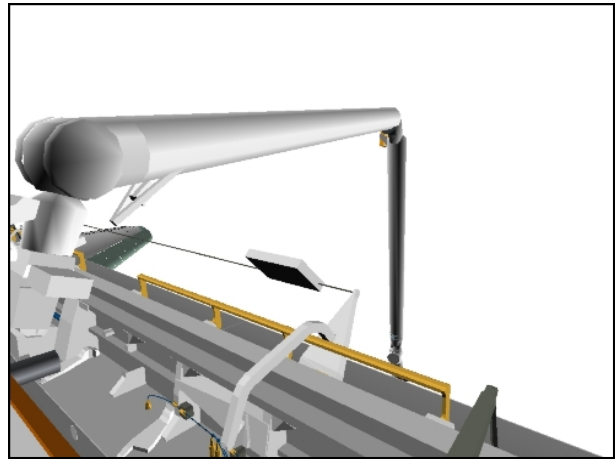

CCTV A (50,-10)

8. PERFORM NOSE SCAN

NOTE

During nose scan, OBSS-to-Orbiter = 132 in


A7U CCTV – config as reqd

MON 1	SSRMS TIP LEE (SSRMS TIP ELBOW)
MON 2	ELBOW (RSC)

A7U √DTV ← PL2

√PAN: +75
TILT: -120 (down)

√CAMR CMD PAN/TILT – LO RATE

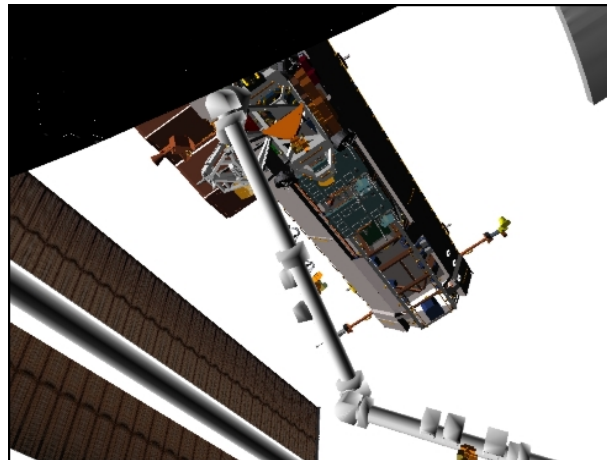

OBSS ITVC (75,-120)

√MCC to verify correct sensor view


L10(VTR) On MCC GO:
REC pb – push, hold
PLAY pb – push, simo (red ●)

RHC RATE – VERN (RATE MIN tb-ON)
BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER


Drive WR (-) to -200.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-318	-141	-171	178	324	190	2
SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-23.0	+15.0	-200.0	

BRAKES – ON (tb-ON)

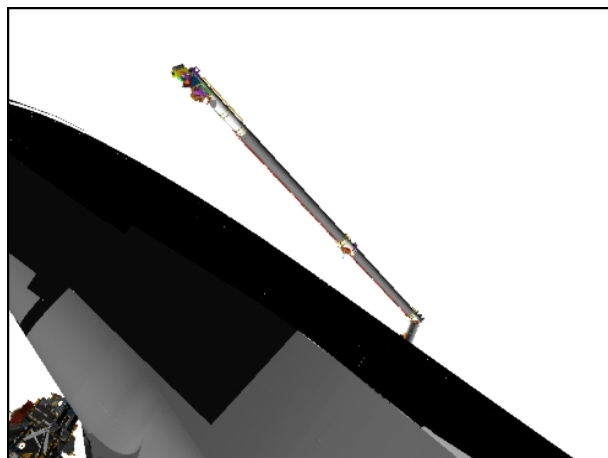

TIP ELBOW (-98,+38)

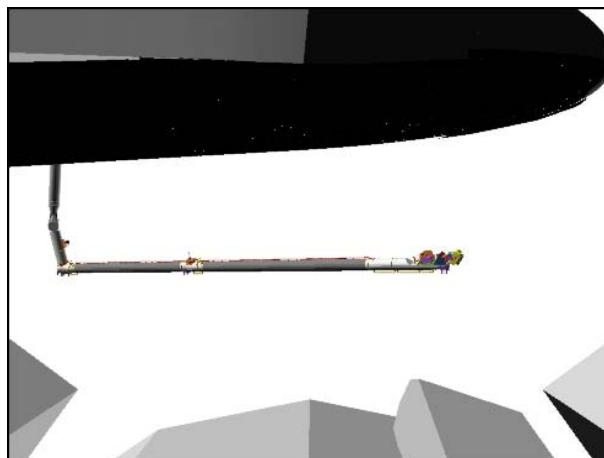

TIP LEE

9. MNVR TO PORT CONFIG 2

On MCC GO:

L10(VTR) STOP pb – push (no red ●)

NOTE

At Port Config 2 posn, OBSS-to-Orbiter = 120 in

Port Config 2 Clearance Views	Cameras
SJ steps 1 thru 2	ELBOW, SSRMS TIP LEE, SSRMS TIP ELBOW

RHC RATE – as reqd (VERN within 10 ft)
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

Mnvr to PORT CONFIG 2 posn:


NOSE CONFIG
 1: WR +
 2: WP –
 PORT CONFIG 2

SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-23.0	+15.0	-200.0	
					-126.0	
			-34.0			
+74.0	+26.0	-68.0	-34.0	+15.0	-126.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-973	+86	-141	355	288	6	2

BRAKES – ON (tb-ON)



TIP LEE

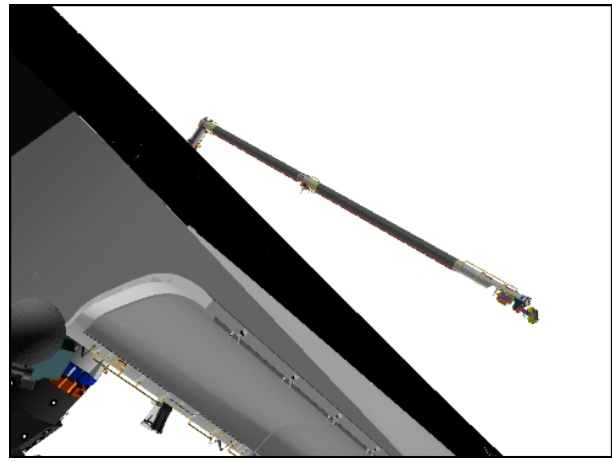

TIP ELBOW (-76,21)

10. PERFORM PORT 2 SCAN

a. Port 2 Scan 1

NOTE

During Port 2 scan, OBSS-to-Orbiter = 81 in


A7U CCTV – config as reqd

MON 1	SSRMS TIP LEE (SSRMS TIP ELBOW)
MON 2	ELBOW (RSC)

A7U √DTV ← PL2

√PAN: +75
TILT: -115 (up)

√CAMR CMD PAN/TILT – LO RATE

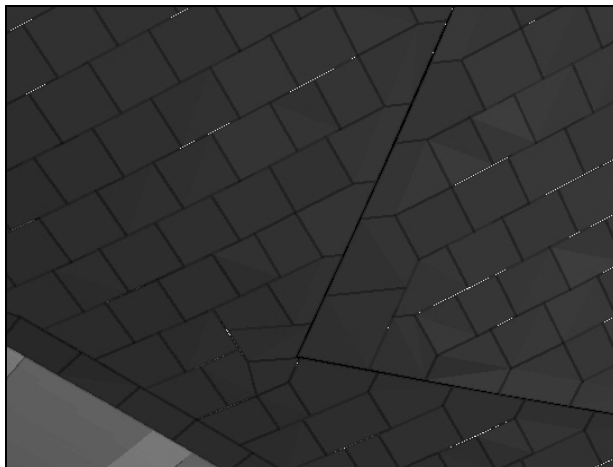

OBSS ITVC (75,-115)

√MCC to verify correct sensor view

L10(VTR) On MCC GO:
REC pb – push, hold
PLAY pb – push, simo (red ●)

RHC


RATE – VERN (RATE MIN tb-ON)

BRAKES – OFF (tb-OFF)


MODE – SINGLE, ENTER

Drive WR (+) to -73.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1341	-284	-59	350	341	2	2
SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-34.0	+15.0	-73.0	

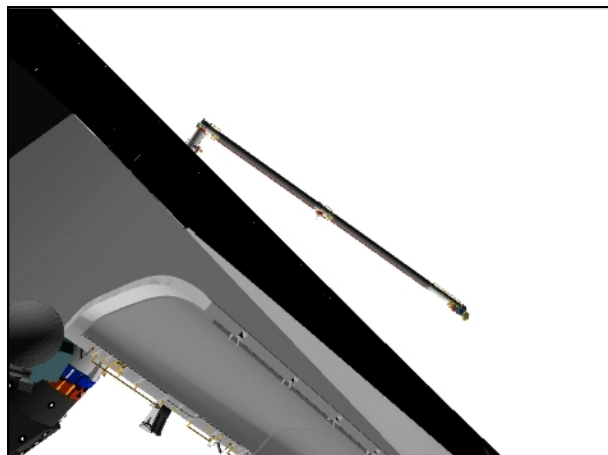

TIP ELBOW (-76,21)

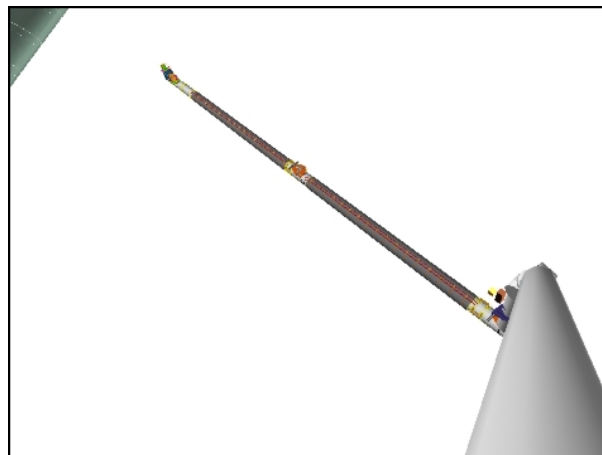

ELBOW (-30,0)

b. Port 2 Scan 2

NOTE


The following and subsequent TILT cmds in step 10 are for the OBSS ITVC

A7U


TILT: -102 (up)

Drive WR (-) to -139.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-845	+112	-166	11	275	22	2
SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-34.0	+15.0	-139.0	

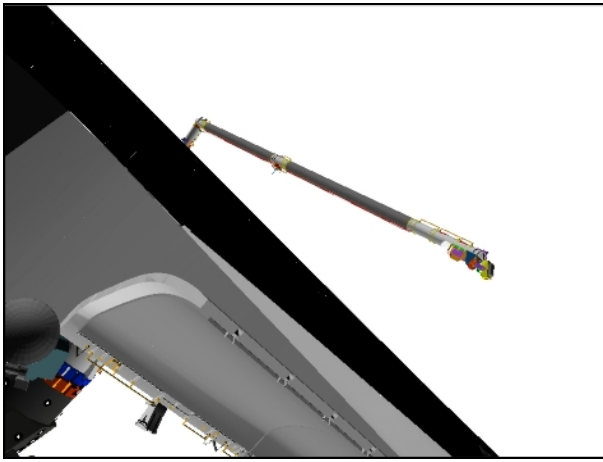

TIP ELBOW (-76,21)

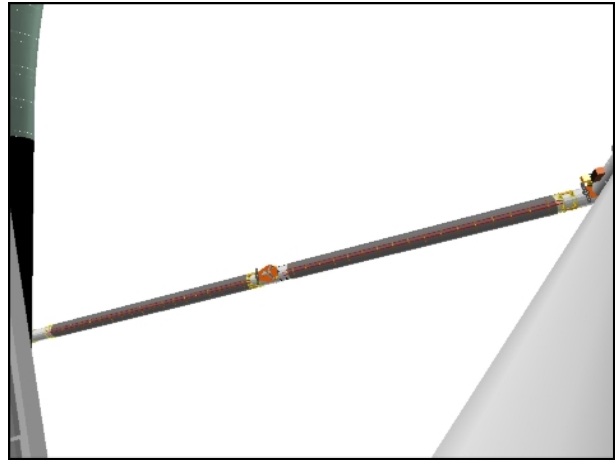


ELBOW (-40,-20)

A7U

- c. Port 2 Scan 3
TILT: -89 (up)

Drive WR (+) to -60.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1369	-414	-50	350	354	2	2
SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-34.0	+15.0	-60.0	

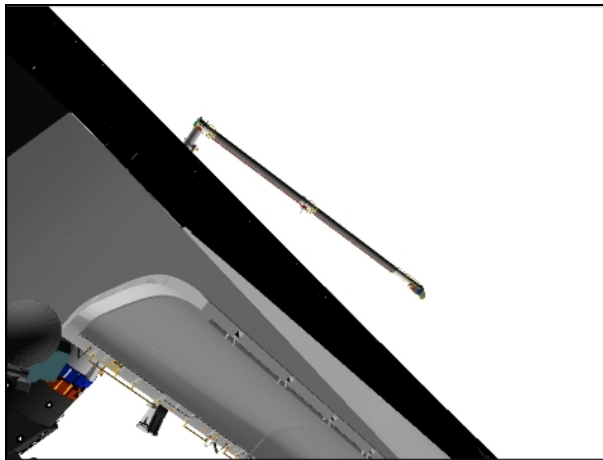

TIP ELBOW (-76,21)




ELBOW (-30,0)

A7U

- d. Port 2 Scan 4
TILT: -76 (up)

Drive WR (-) to -147.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-764	+114	-181	138	274	149	2
SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-34.0	+15.0	-147.0	

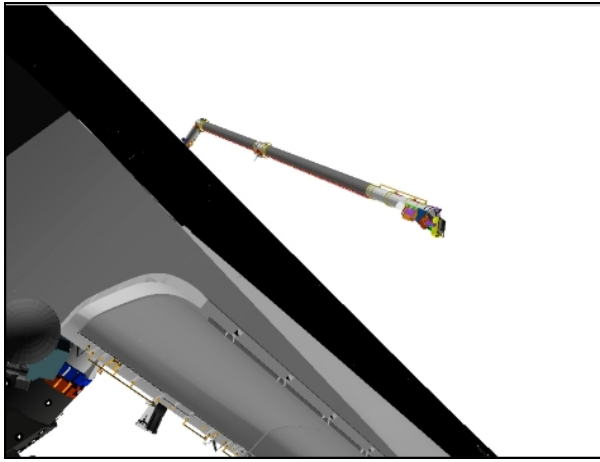

TIP ELBOW (-76,21)




ELBOW (-40,-20)

A7U

e. Port 2 Scan 5
TILT: -63 (up)

Drive WR (+) to -62.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1366	-394	-51	350	352	2	2
SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-34.0	+15.0	-62.0	

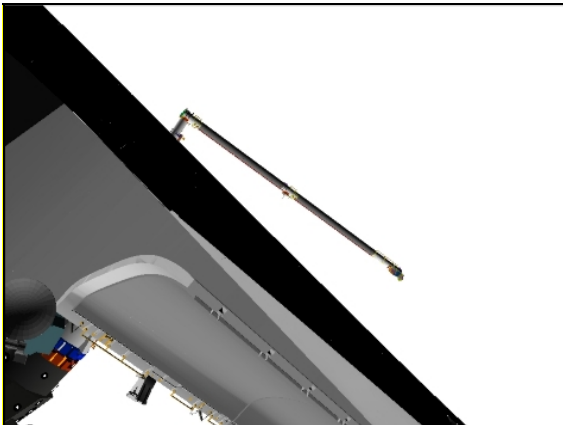

TIP ELBOW (-76,21)




ELBOW (-30,0)

A7U

f. Port 2 Scan 6
TILT: -50 (up)

Drive WR (-) to -152.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-713	+109	-191	156	278	167	2
SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-34.0	+15.0	-152.0	

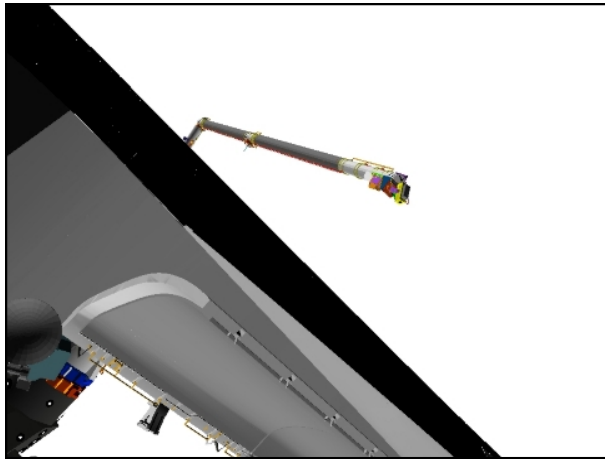

TIP ELBOW (-76,21)



ELBOW (-40,-20)


A7U

- g. Port 2 Scan 7
TILT: -40 (up)


Drive WR (+) to -74.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1338	-274	-60	350	340	2	2
SY	SP	EP	WP	WY	WR	
+74.0	+26.0	-68.0	-34.0	+15.0	-74.0	

BRAKES – ON (tb-ON)

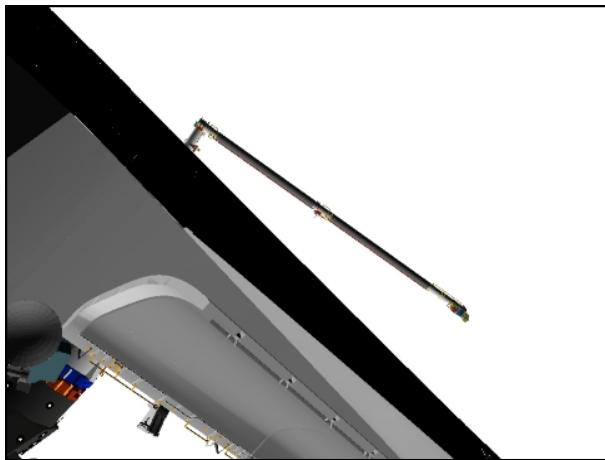

TIP ELBOW (-76,21)

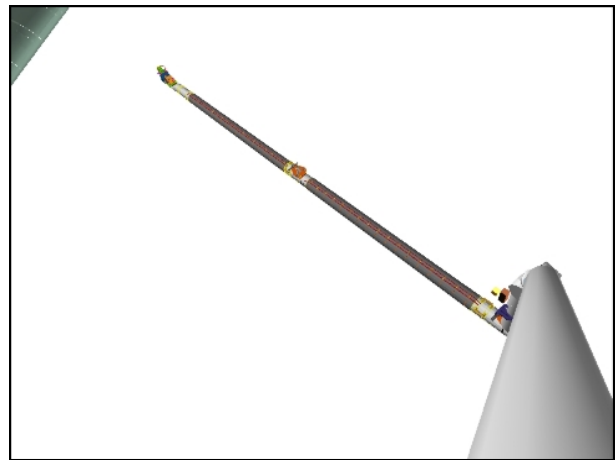

ELBOW (-30,0)

11. MNVR TO PORT CONFIG 3

On MCC GO:

L10(VTR) STOP pb – push (no red ●)

NOTE

At Port Config 3, OBSS-to-Orbiter = 240 in

Port Config 2 Clearance Views	Cameras
SJ step 1	A, ELBOW, SSRMS TIP LEE
SJ steps 2 thru 5	A, B, ELBOW
SJ step 6	A, B, ELBOW, SSRMS TIP LEE

RHC

RATE – as reqd (VERN within 10 ft)


BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER


Mnvr to PORT CONFIG 3 posn:

	SY	SP	EP	WP	WY	WR	
PORT CONFIG 2	+74.0	+26.0	-68.0	-34.0	+15.0	-74.0	
1: SY +	+99.5						
2: SP +		+82.5					
3: EP -			-86.0				
4: WP +				-32.0			
5: WY +					+25.0		
6: WR -						-98.0	
PORT CONFIG 3	+99.5	+82.5	-86.0	-32.0	+25.0	-98.0	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1057	-491	-142	322	357	334	2

BRAKES – ON (tb-ON)

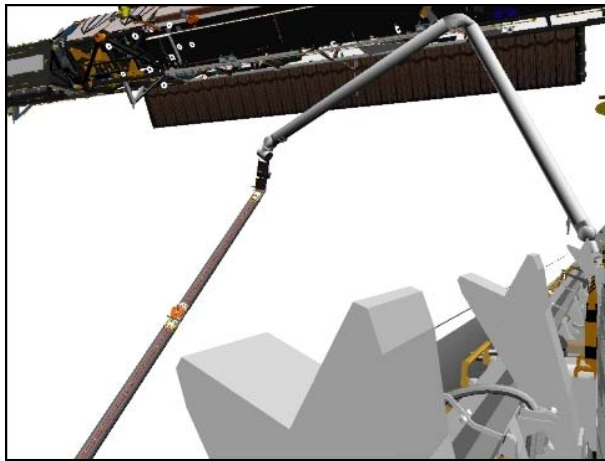

CCTV B (-27,0)

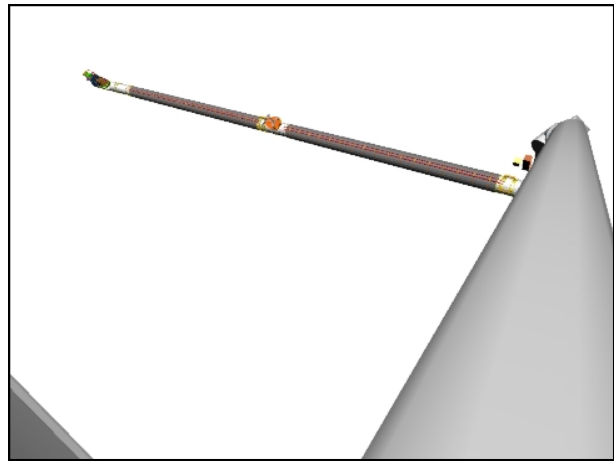

ELBOW (-32,-20)

12. PERFORM PORT 3 SCAN
 - a. Port 3 Scan 1

NOTE

During Port 3 scan, OBSS-to-Orbiter = 29 in

A7U CCTVB – config as reqd

MON 1	B (SSRMS TIP LEE)
MON 2	ELBOW (RSC)

A7U √DTV ← PL2

√PAN: +75
TILT: -85 (down)

√CAMR CMD PAN/TILT – LO RATE



OBSS ITVC (75,-85)


√MCC to verify correct sensor view

L10(VTR) On MCC GO:
 REC pb – push, hold
 PLAY pb – push, simo (red ●)


RHC RATE – VERN (RATE MIN tb-ON)
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

Drive WR (-) to -161.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-642	-35	-170	278	305	309	2
SY	SP	EP	WP	WY	WR	
+99.5	+82.5	-86.0	-32.0	+25.0	-161.0	

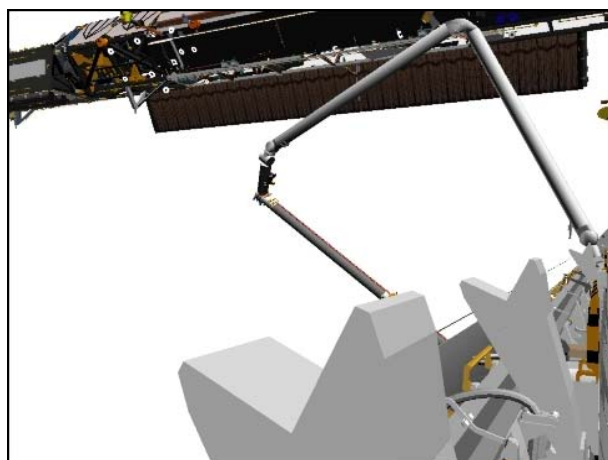

CCTV B (-27,0)

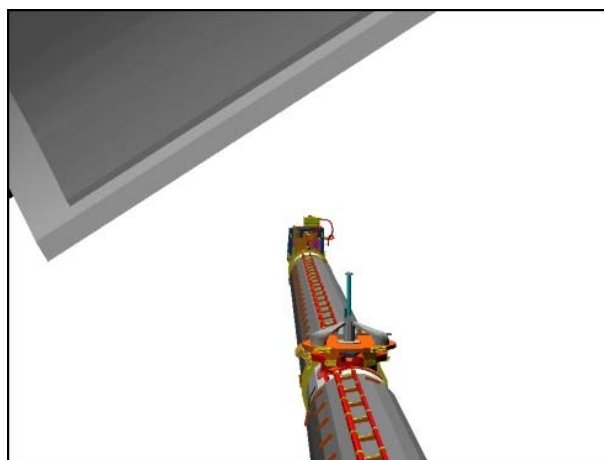

RSC

b. Port 3 Scan 2

NOTE


The following and subsequent TILT cmds in step 12 are for the OBSS ITVC

A7U


TILT: -72 (up)

Drive WR (+) to -108.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-1018	-400	-114	317	348	333	2
SY	SP	EP	WP	WY	WR	
+99.5	+82.5	-86.0	-32.0	+25.0	-108.0	

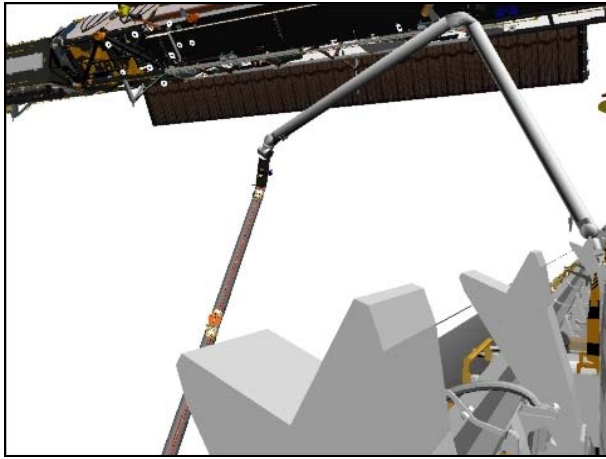

CCTV B (-27,0)

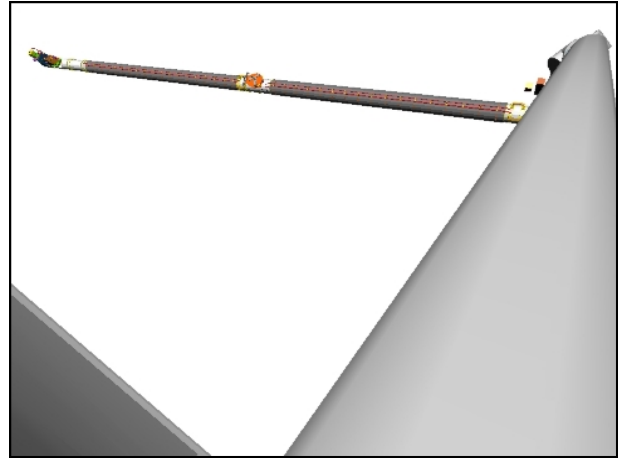

ELBOW (-32,-30)


c. Port 3 Scan 3

A7U

TILT: -59 (up)

Drive WR (-) to -162.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-633	-31	-175	277	305	308	2
SY	SP	EP	WP	WY	WR	
+99.5	+82.5	-86.0	-32.0	+25.0	-162.0	

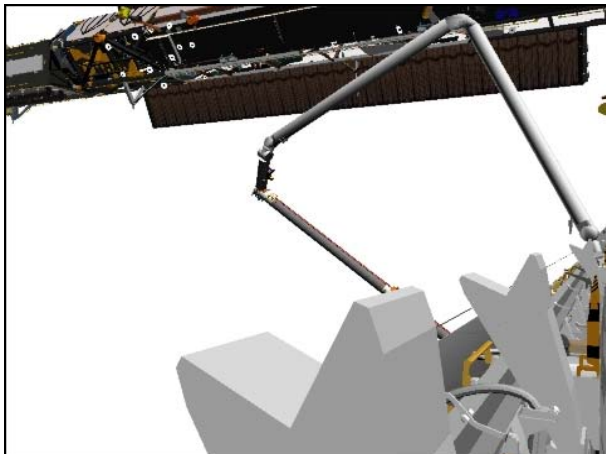

CCTV B (-27,0)




RSC

A7U


d. Port 3 Scan 4
TILT: -46 (up)

Drive WR (+) to -134.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-862	-186	-99	303	326	327	2
SY	SP	EP	WP	WY	WR	
+99.5	+82.5	-86.0	-32.0	+25.0	-134.0	

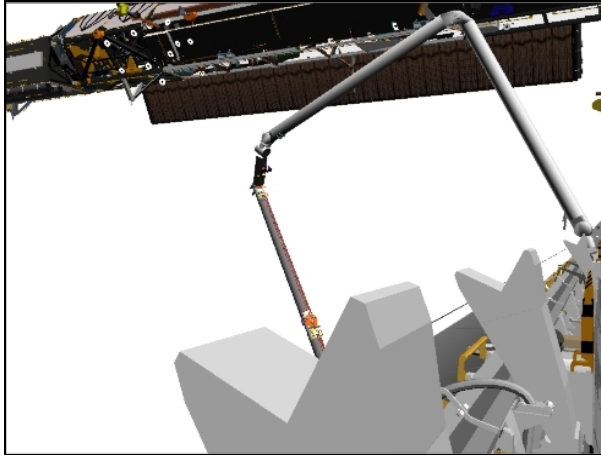

CCTV B (-27,0)

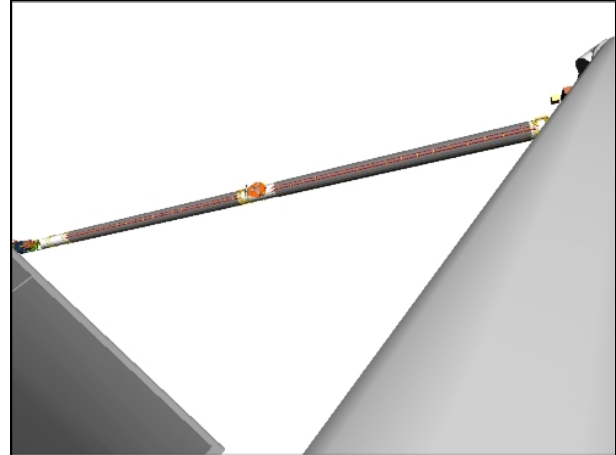


ELBOW (-35,-30)

A7U


e. Port 3 Scan 5
TILT: -33 (up)

Drive WR (-) to -162.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-633	-31	-175	277	305	308	2
SY	SP	EP	WP	WY	WR	
+99.5	+82.5	-86.0	-32.0	+25.0	-162.0	

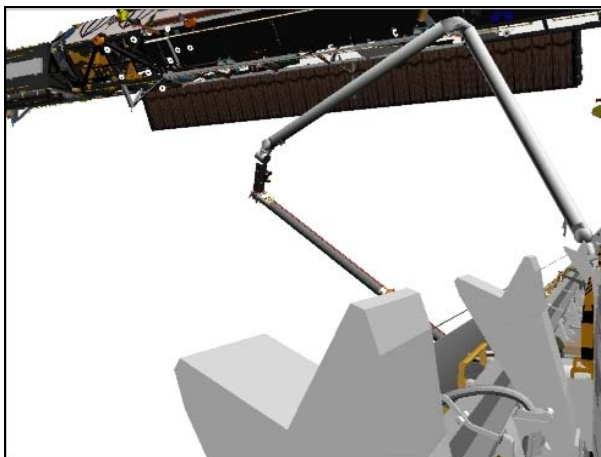

CCTV B (-27,0)

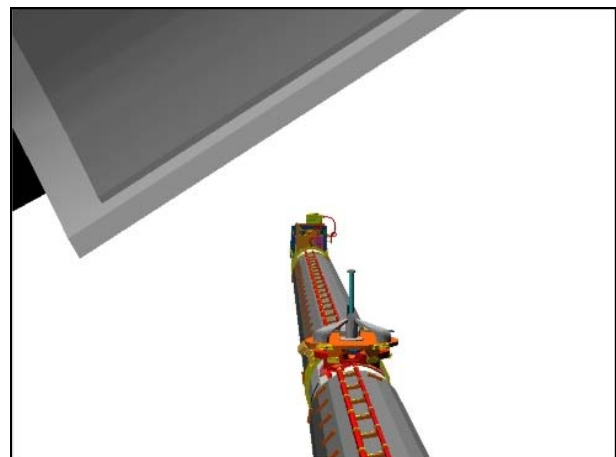

RSC


A7U

- f. Port 3 Scan 6
TILT: -23 (up)


Drive WR (+) to -146.0

X	Y	Z	PITCH	YAW	ROLL	PL ID
-769	-107	-120	294	316	322	2
SY	SP	EP	WP	WY	WR	
+99.5	+82.5	-86.0	-32.0	+25.0	-146.0	

BRAKES – ON (tb-ON)

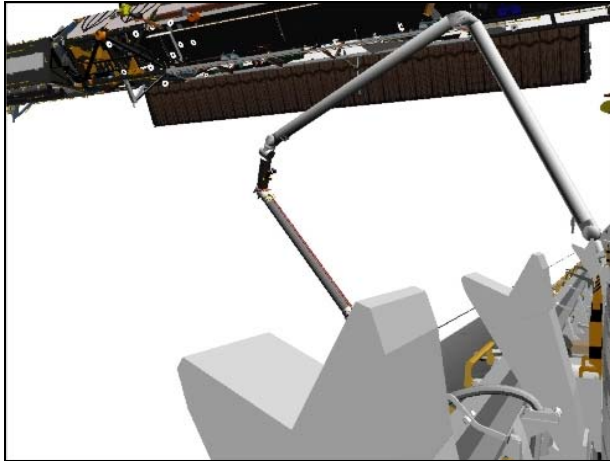

CCTV B (-27,0)

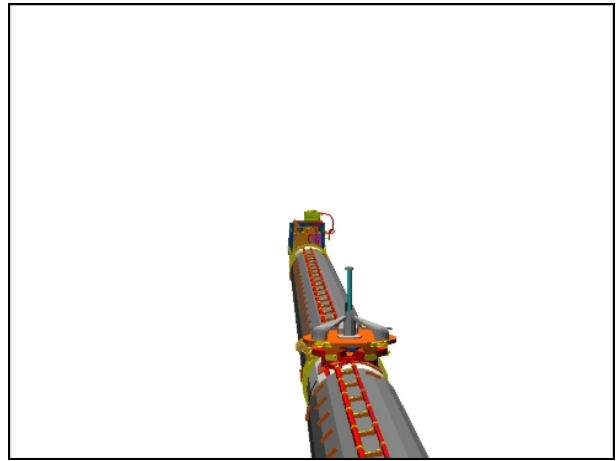

RSC

RMS EE RCC WING SURVEY

WARNING

Port and stbd PLBD radiators must be stowed. Payload bay must be empty

NOTE

This survey may be performed while docked or undocked. Assumed starting posn is Pre-Cradle

1. SETUP

A7U

√DTV ← RMS

CCTV – RMS WRIST, ZOOM: 20.0 HFOV

SM 94 PDRS CONTROL

PL ID – ITEM 3 +5 EXEC

INIT ID – ITEM 24 +5 EXEC

	X	Y	Z	PITCH	YAW	ROLL	PL ID
√	-1261	-146	-551	5	2	0	5
	SY	SP	EP	WP	WY	WR	
√	0.0	+25.0	-25.0	+5.0	0.0	0.0	

SM 94 PDRS CONTROL

AUTO MODES – ITEM 13 +1 +2 +3 +4 EXEC

If docked,

√MCC, SSRMS is clear for survey

2. MNVR TO STBD ACAS START

RHC

RATE – as reqd (VERN within 10 ft)

BRAKES – OFF (tb-OFF)


MODE – SINGLE, ENTER

Mnvr to STBD ACAS START posn:


	SY	SP	EP	WP	WY	WR	
PRE-CRADLE	0.0	+25.0	-25.0	+5.0	0.0	0.0	
1: SY –	-40.0						
2: WP –				-114.0			[1]
3: WY +					+29.5		
4: WR +						+118.8	
5: SP –		+15.0					
6: SY –	-59.4						
7: SP –		+3.0					[1]
8: EP –			-41.5				
STBD ACAS START posn	-59.4	+3.0	-41.5	-114.0	+29.5	+118.8	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-914	+278	-378	273	47	21	5

[1] Approaching REACH LIMIT


BRAKES – ON (tb-ON)

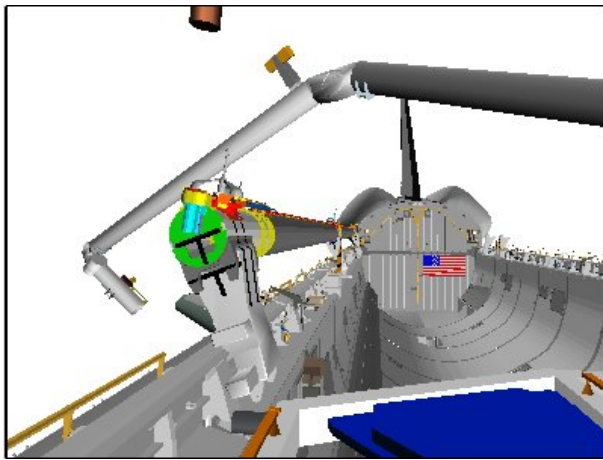

CCTV D (-10,0)

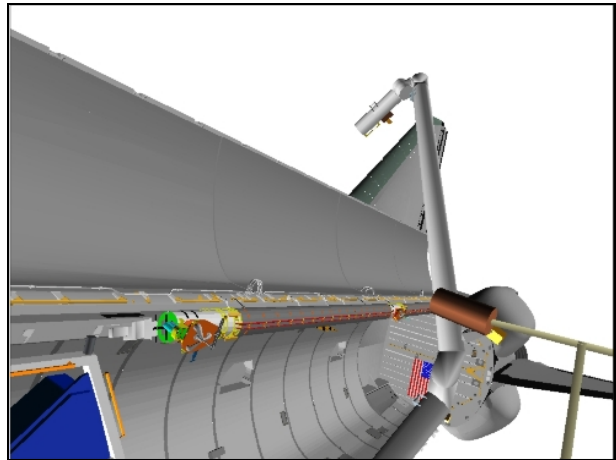

IF DOCKED: LAB (-35,-15)

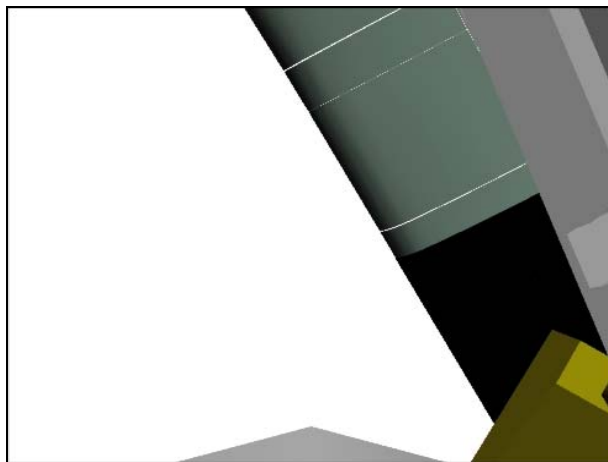

WRIST HFOV: 20.0

3. STBD ACAS
 - RHC RATE – VERN (RATE MIN tb-ON)
 - L10(VTR) REC pb – push, hold
PLAY pb – push, simo (red ●)
 - BRAKES – OFF (tb-OFF)
 - MODE – AUTO 1, ENTER (READY lt on)
 - * If unable to enter AUTO mode (no AUTO READY lt): *
 - * √Joint angles and adjust as reqd *
- SM 94 PDRS CONTROL
- √START PT, ITEM 17: 1
- SM 169 PDRS STATUS
- Monitor ACAS progress

NOTE



The STBD ACAS scans the upper surface of Panels 1→18

STBD ACAS Clearance Views	Cameras
EE-to-RCC	ELBOW, LAB
RMS-to-PLBD	LAB
RMS-to-OBSS	D

If elbow camera reqd for clearance monitoring, auto sequence must be paused


AUTO SEQ – PROCEED (IN PROG It on)

ACAS, pause pts **shaded in bold**, ● col indicates data recording (black = VTR on):
(7:15)

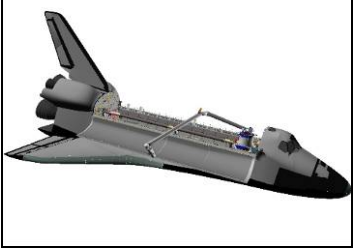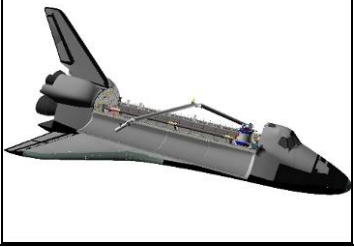Pt	X	Y	Z	PITCH	YAW	ROLL	●	
130P	-914	+278	-378	273	47	21		
131	-919	+278	-377	281	47	21		
132	-931	+279	-380	299	46	9		
133	-955	+280	-379	310	39	32		
134	-990	+280	-381	312	28	38		
135	-1020	+284	-375	314	16	34		
136	-1037	+298	-385	319	2	34		
137	-1055	+300	-421	313	349	40		
138P	-1061	+308	-430	320	342	47		

When AUTO SEQ IN PROG It – off:
BRAKES – ON (tb-ON)

L10(VTR) STOP pb – push (no red ●)

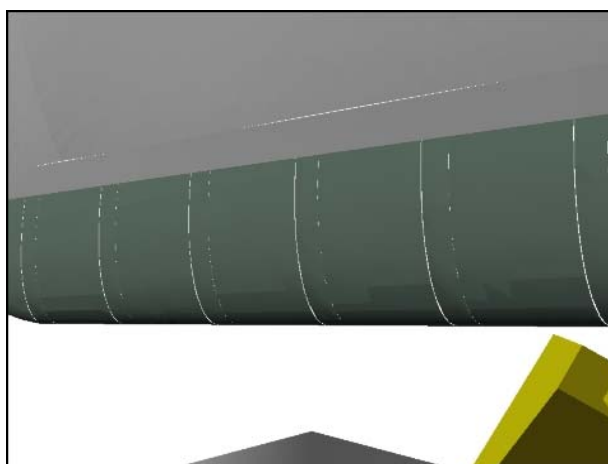

WRIST HFOV: 20.0

4. MNVR TO PORT UPPER ACAS START

SM 94 PDRS CONTROL

PL ID – ITEM 3 +0 EXEC

INIT ID – ITEM 24 +0 EXEC

√	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1061	+308	-430	320	342	47	5
√	SY	SP	EP	WP	WY	WR	
	-48.3	+6.0	-32.9	-24.4	+29.2	+87.2	

RHC

RATE – as reqd (VERN within 10 ft)

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER


If performing immediately after STBD ACAS:

		Mnvr to PORT UPPER ACAS START posn:					
		SY	SP	EP	WP	WY	WR
STBD ACAS end		-48.3	+6.0	-32.9	-24.4	+29.2	+87.2
1:	SP +		+27.6				
2:	EP +			-25.0			
3:	SY +	+29.2					
4:	WP –				-39.9		
5:	WY –					-4.7	
6:	WR –						+37.2
7:	EP –			-35.5			
PORT UPPER ACAS START		+29.2	+27.6	-35.5	-39.9	-4.7	+37.2
		X	Y	Z	PITCH	YAW	ROLL
		-1163	-366	-379	309	0	52
		PL ID					
		5					


If performing from PRE-CRADLE:

		Mnvr to PORT UPPER ACAS START posn:					
		SY	SP	EP	WP	WY	WR
PRE-CRADLE		0.0	+25.0	-25.0	+5.0	0.0	0.0
1:	SY +	+29.2					
2:	SP +		+27.6				
3:	WP –				-39.9		
4:	WY –					-4.7	
5:	WR +						+37.2
6:	EP –			-35.5			
PORT UPPER ACAS START		+29.2	+27.6	-35.5	-39.9	-4.7	+37.2
		X	Y	Z	PITCH	YAW	ROLL
		-1163	-366	-379	309	0	52
		PL ID					
		5					


BRAKES – ON (tb-ON)

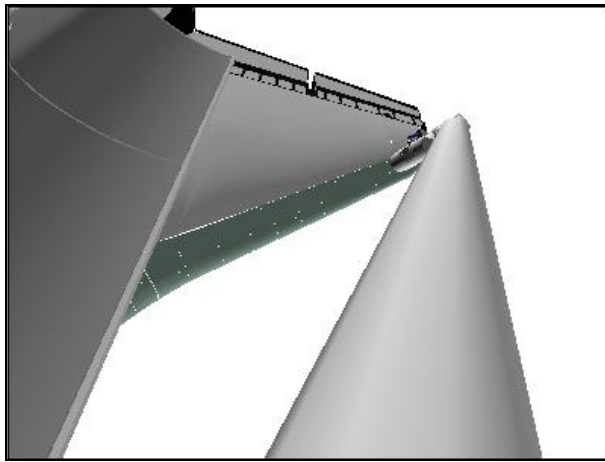

ELBOW (-20,-22)

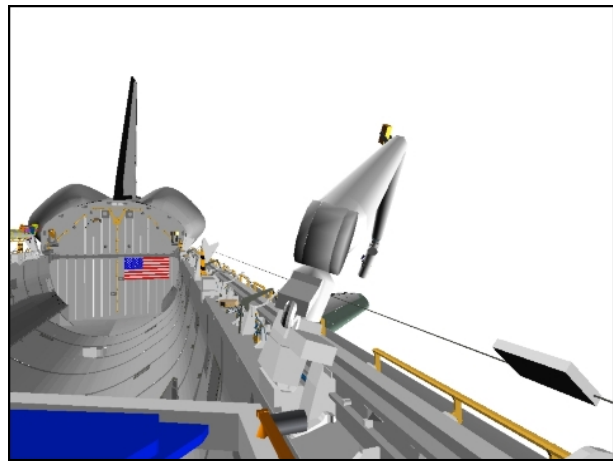

CCTV A (20,0)

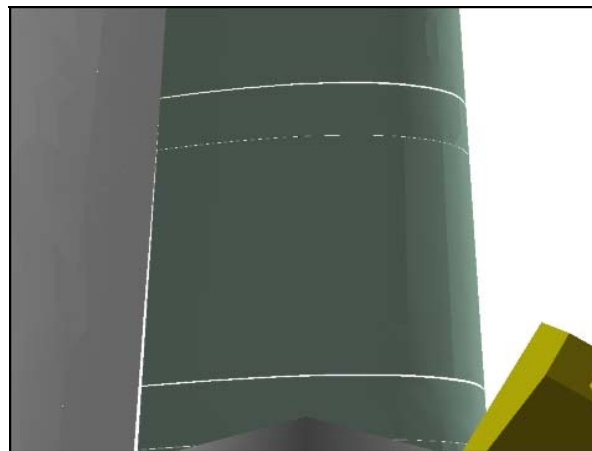

WRIST HFOV: 20.0

5. PORT UPPER ACAS

SM 94 PDRS CONTROL

√PL ID, ITEM 3: 5

√INIT ID, ITEM 24: 5

	X	Y	Z	PITCH	YAW	ROLL	PL ID
√	-1163	-366	-379	309	0	52	5
	SY	SP	EP	WP	WY	WR	
√	+29.2	+27.6	-35.5	-39.9	-4.7	+37.2	

RHC RATE – VERN (RATE MIN tb-ON)

L10(VTR) REC pb – push, hold
PLAY pb – push, simo (red ●)

BRAKES – OFF (tb-OFF)

MODE – AUTO 2, ENTER (READY lt on)

* If unable to enter AUTO mode (no AUTO READY lt): *

* √Joint angles and adjust as reqd *

SM 94 PDRS CONTROL

√START PT, ITEM 17: 10

SM 169 PDRS STATUS

Monitor ACAS progress



NOTE

The Port Upper ACAS scans upper surface of Panels 16→ 1

Port Upper ACAS Clearance Views	Cameras
RMS-to-PLBD	ELBOW, B
RMS overview	A
EE-to-RCC	B

AUTO SEQ – PROCEED (IN PROG It on)


(11:00)

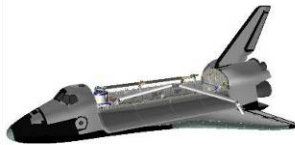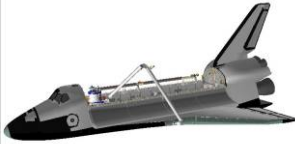Pt	X	Y	Z	PITCH	YAW	ROLL	●
139P	-1163	-366	-379	309	0	52	
140	-1148	-359	-374	307	352	54	
141	-1133	-334	-369	306	353	52	
142	-1111	-323	-371	307	349	51	
143	-1090	-327	-370	308	335	53	
144	-1073	-313	-369	305	330	53	
145	-1058	-300	-370	304	327	54	
146	-1041	-288	-369	303	325	53	
147	-1015	-292	-375	296	310	34	
148	-997	-285	-363	297	305	33	
149	-957	-284	-336	309	291	39	
150	-952	-286	-340	292	288	25	
151	-936	-284	-339	280	288	12	
152P	-908	-285	-333	292	285	25	

When AUTO SEQ IN PROG It – off:

L10(VTR)

STOP pb – push (no red ●)

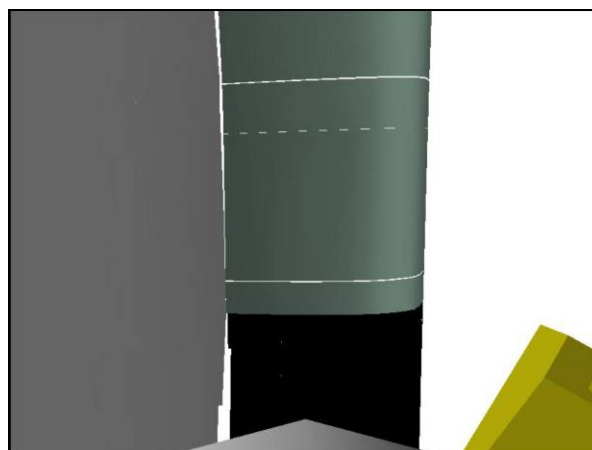

WRIST HFOV: 20.0

6. MNVR TO PORT UPPER APEX START



NOTE

RMS is approaching a display singularity at point 153. Between Pts 152 and 153, arm adjusts for Port Upper Apex scan

Clearance Views	Cameras
EE-to-RCC	A, ELBOW
Upper Arm	A, B
RMS-to-PLBD	B, ELBOW

AUTO SEQ – PROCEED (IN PROG It on)


(2:35)

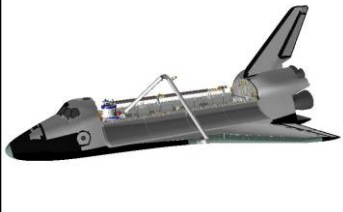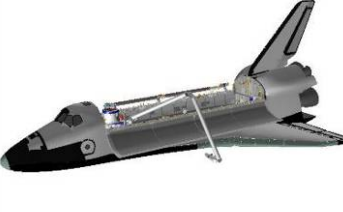Pt	X	Y	Z	PITCH	YAW	ROLL	●
152P	-908	-285	-333	292	285	25	
153P	-911	-243	-294	53	275	146	

7. PORT UPPER APEX

A7U

CCTV – RMS WRIST, ZOOM: 10.0 HFOV

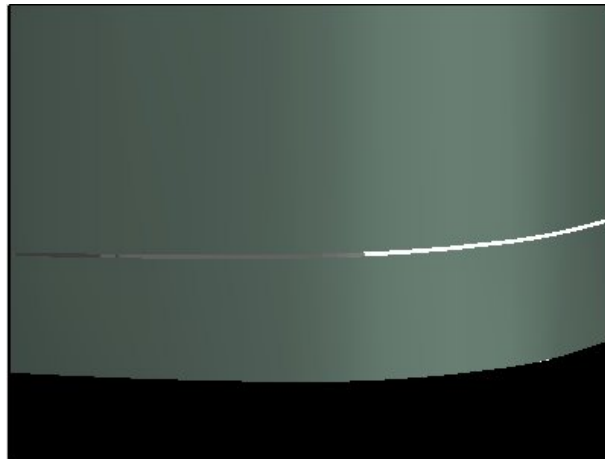

WRIST HFOV: 10.0

L10(VTR)

REC pb – push, hold

PLAY pb – push, simo (red ●)

NOTE

The RMS is at a display singularity for points 153 through 155. The Port Upper Apex pass scans Panels 1→17

Port Upper Apex Clearance Views	Cameras
EE-to-RCC	A, ELBOW
RMS-to-PLBD	B, ELBOW

AUTO SEQ – PROCEED (IN PROG It on)


(12:00)

Pt	X	Y	Z	PITCH	YAW	ROLL	●
153P	-911	-243	-294	53	275	146	
154	-945	-263	-296	12	270	102	
155	-962	-263	-300	340	274	72	
156	-978	-258	-292	19	278	110	
157	-991	-268	-294	7	281	97	
158	-1000	-273	-295	0	287	89	
159	-1002	-290	-296	1	296	90	
160	-1017	-282	-302	352	303	84	
161	-1028	-293	-306	350	319	82	
162	-1061	-320	-305	354	321	84	
163	-1102	-354	-307	353	324	85	
164	-1139	-397	-306	358	326	87	
165P	-1149	-420	-316	353	342	82	

When AUTO SEQ IN PROG It – off:

L10(VTR)

STOP pb – push (no red ●)

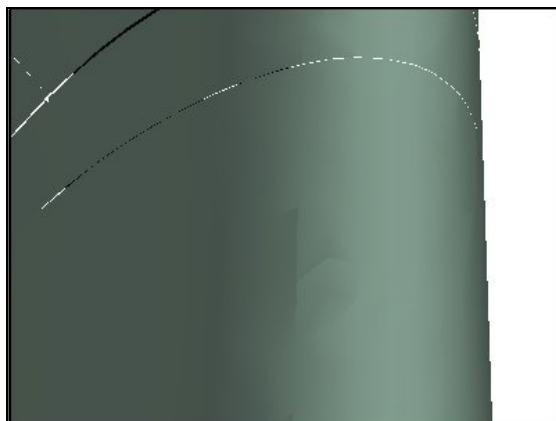

WRIST HFOV: 10.0

8. MNVR TO PORT LOWER APEX 1 START

NOTE


Between Pts 165 and 166, arm adjusts for first Port Lower Apex scan

Clearance Views	Cameras
EE-to-RCC	ELBOW
RMS-to-PLBD	A, B

AUTO SEQ – PROCEED (IN PROG It on)

(1:00)

Pt	X	Y	Z	PITCH	YAW	ROLL	•
165P	-1149	-420	-316	353	342	82	
166P	-1151	-415	-304	359	344	89	

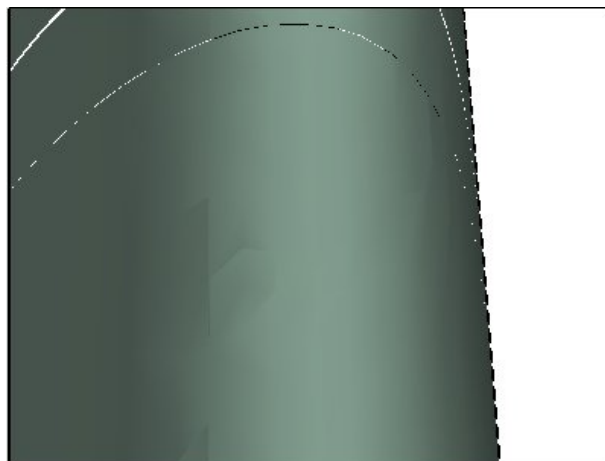

WRIST HFOV: 10.0

9. PORT LOWER APEX 1

NOTE


Port Lower Apex 1 pass scans Panels 17→12

Port Lower Apex 1 Clearance Views	Cameras
EE-to-RCC	ELBOW
RMS-to-PLBD	A, B

L10(VTR) REC pb – push, hold
PLAY pb – push, simo (red ●)

AUTO SEQ – PROCEED (IN PROG It on)

(5:25)

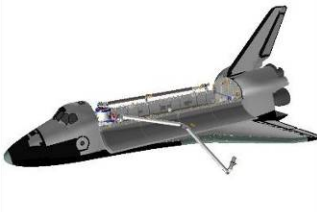Pt	X	Y	Z	PITCH	YAW	ROLL	●
166P	-1151	-415	-304	359	344	89	
167	-1146	-404	-301	0	333	87	
168	-1138	-392	-297	2	324	90	
169	-1115	-354	-258	34	344	113	
170	-1107	-336	-253	40	344	121	
171P	-1090	-314	-247	46	343	122	

When AUTO SEQ IN PROG It – off:
BRAKES – ON (tb-ON)

L10(VTR) STOP pb – push (no red ●)



WRIST HFOV: 10.0

RHC 10. RECONFIG TO PORT LOWER APEX 2 START
 RATE – as reqd (VERN within 10 ft)
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

Mnvr to PORT LOWER APEX 2 START posn:


PORT LOWER
 APEX 1 End
 1: WP –
 2: WY –
 3: WR –
 4: SY +
 5: EP +
 6: SP +
 PORT LOWER
 APEX 2 START

SY	SP	EP	WP	WY	WR	
+37.7	+4.0	-44.8	+109.1	-53.7	+167.0	
			-47.6			
				-114.0		
					+13.5	
+39.0						
		-36.6				
	+6.1					
+39.0	+6.1	-36.6	-47.6	-114.0	+13.5	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1094	-326	-251	51	324	121	5

[1]

[1] Expect SINGULAR It, Near REACH LIMIT

BRAKES – ON (tb-ON)

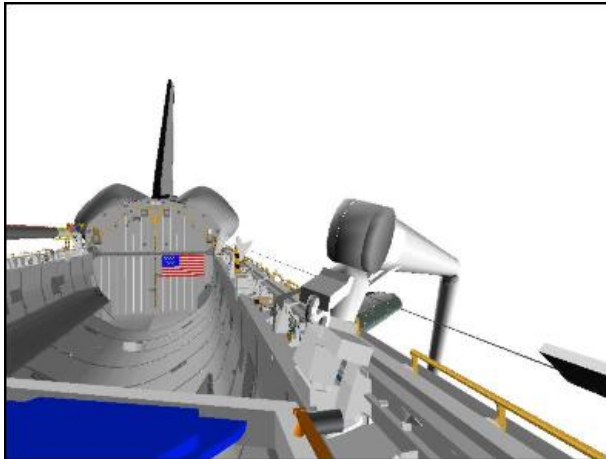

CCTV A (15,0)



FRONT



WRIST HFOV: 10.0

11. PORT LOWER APEX 2
 RHC √RATE – VERN (RATE MIN tb-ON)

L10(VTR) REC pb – push, hold
 PLAY pb – push, simo (red ●)

BRAKES – OFF (tb-OFF)
 MODE – AUTO 3, ENTER (READY It on)

* If unable to enter AUTO mode (no AUTO READY It): *
 * √Joint angles and adjust as reqd *

SM 94 PDRS CONTROL
 √START PT, ITEM 17: 43


SM 169 PDRS STATUS
 Monitor ACAS progress

NOTE
 Port Lower Apex 2 pass scans Panels 12→1


Port Lower Apex 2 Clearance Views	Cameras
EE-to-RCC	ELBOW
RMS-to-PLBD	A, B, ELBOW

AUTO SEQ – PROCEED (IN PROG It on)

(9:00)

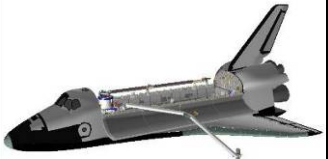Pt	X	Y	Z	PITCH	YAW	ROLL	●	
172P	-1094	-326	-251	51	324	121		
173	-1011	-254	-253	49	319	130		
174	-983	-250	-255	43	315	127		
175	-974	-246	-250	49	309	170		
176	-975	-252	-259	43	308	250		
177	-967	-251	-269	43	298	314		
178	-939	-243	-268	40	299	314		
179P	-904	-236	-268	38	304	312		

When AUTO SEQ IN PROG It – off:
 L10(VTR) STOP pb – push (no red ●)

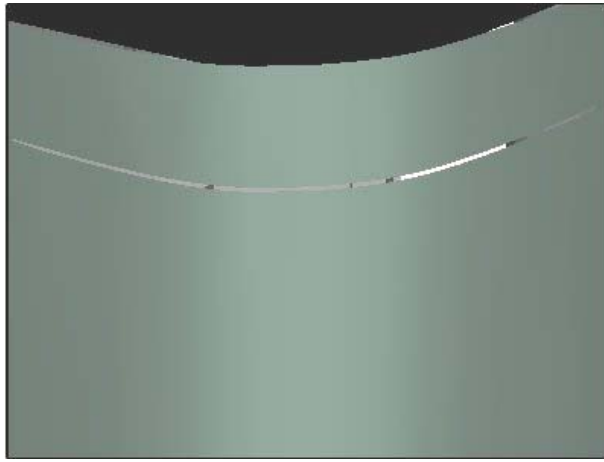

WRIST HFOV: 10.0

12. MNVR TO PORT LOWER 1 START



NOTE

Between Pts 179 and 180, arm adjusts for first Port Lower scan


Clearance Views	Cameras
EE-to-RCC	ELBOW
RMS-to-PLBD	A, B

AUTO SEQ – PROCEED (IN PROG It on)

(2:00)

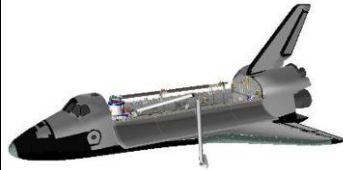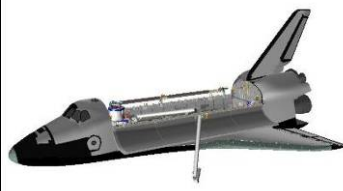Pt	X	Y	Z	PITCH	YAW	ROLL	•
179P	-904	-236	-268	38	304	312	
180P	-890	-222	-235	41	324	324	

13. PORT LOWER 1
A7U CCTV – RMS WRIST, ZOOM: 20.0 HFOV

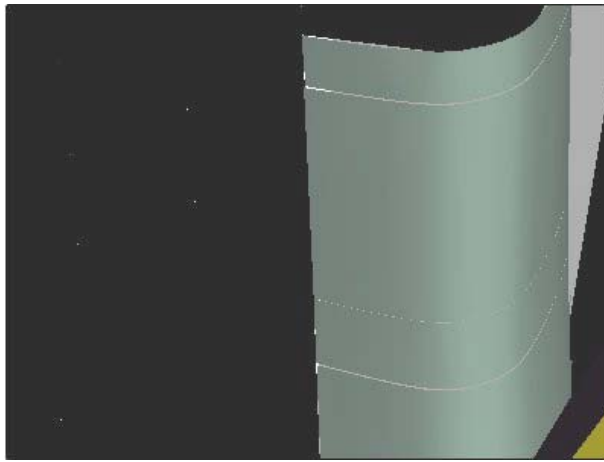

WRIST HFOV: 20.0

L10(VTR) REC pb – push, hold
PLAY pb – push, simo (red ●)



NOTE

Port Lower 1 pass scans the underside of Panels 1→11

Port Lower 1 Clearance Views	Cameras
EE-to-RCC	ELBOW
RMS-to-PLBD	A, B


AUTO SEQ – PROCEED (IN PROG It on)

(4:00)

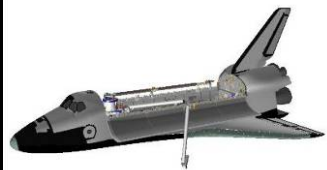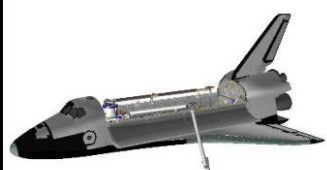Pt	X	Y	Z	PITCH	YAW	ROLL	●
180P	-890	-222	-235	41	324	324	
181	-917	-227	-237	41	323	328	
182	-932	-232	-237	38	323	329	
183P	-977	-241	-241	53	315	340	

When AUTO SEQ IN PROG It – off:



A7U CCTV – RMS WRIST, ZOOM: 10.0 HFOV

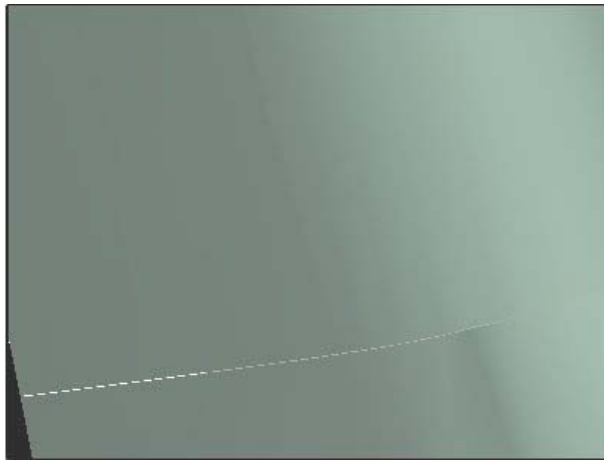

WRIST HFOV: 10.0


AUTO SEQ – PROCEED (IN PROG It on)

(6:00)

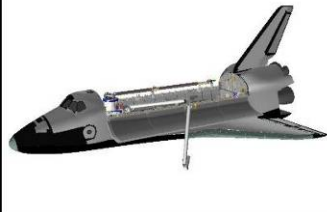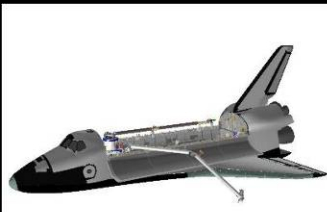Pt	X	Y	Z	PITCH	YAW	ROLL	●
183P	-977	-241	-241	53	315	340	
184	-1001	-244	-246	55	313	325	
185	-1019	-257	-248	51	311	323	
186	-1021	-255	-240	44	323	320	
187	-1043	-272	-242	47	323	299	
188	-1064	-288	-244	48	324	301	
189	-1083	-314	-254	45	314	297	
190P	-1091	-322	-252	40	324	295	

When AUTO SEQ IN PROG It – off:
BRAKES – ON (tb-ON)

L10(VTR) STOP pb – push (no red ●)

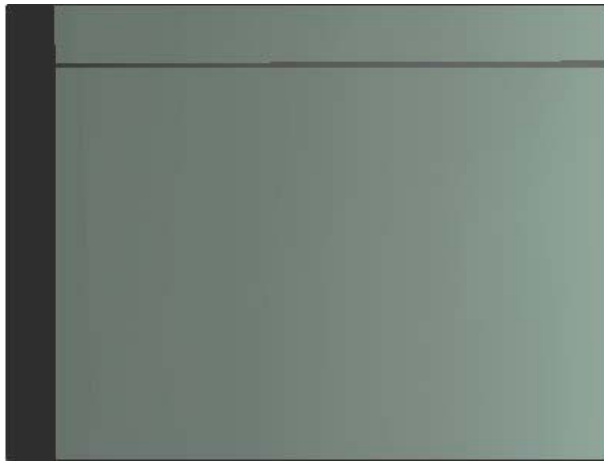

WRIST HFOV: 10.0

14. RECONFIG TO PORT LOWER 2 START
 RHC RATE – as reqd (VERN within 10 ft)
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER


Mnvr to PORT LOWER 2 START posn:

	SY	SP	EP	WP	WY	WR	
PORT LOWER 1 End	+39.1	+9.3	-41.7	-61.2	-107.1	+179.8	
1: SP –		+6.5					
2: EP –			-47.5				
3: SY –	+39.0						
4: WY +					-63.0		[1]
5: WP +				+114.0			[2]
6: WR –						-102.8	
PORT LOWER 2 START	+39.0	+6.5	-47.5	+114.0	-63.0	-102.8	
	X	Y	Z	PITCH	YAW	ROLL	PL ID
	-1081	-316	-250	43	335	206	5


[1] Expect SINGULAR It

[2] Near REACH LIMIT

BRAKES – ON (tb-ON)

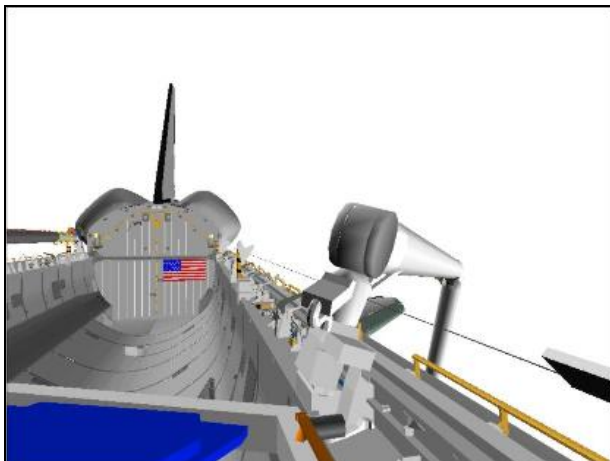

CCTV A (15,0)

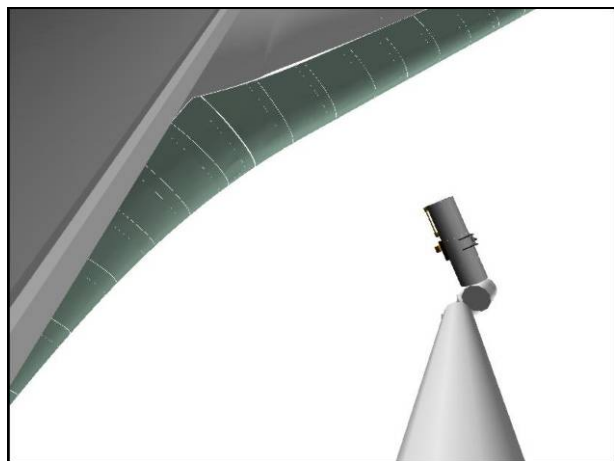

ELBOW (-20,5)



WRIST HFOV: 10.0

15. PORT LOWER 2

RHC √RATE – VERN (RATE MIN tb-ON)

L10(VTR) REC pb – push, hold
 PLAY pb – push, simo (red ●)

BRAKES – OFF (tb-OFF)
 MODE – AUTO 4, ENTER (READY lt on)

- * If unable to enter AUTO mode (no AUTO READY lt): *
- * √Joint angles and adjust as reqd *

SM 94 PDRS CONTROL

√START PT, ITEM 17: 62

SM 169 PDRS STATUS

Monitor ACAS progress



NOTE

Port Lower 2 pass scans underside of Panels 11→18


Port Lower 2 Clearance Views	Cameras
EE-to-RCC	ELBOW
RMS-to-PLBD	A, B, ELBOW

AUTO SEQ – PROCEED (IN PROG It on)

(2:00)

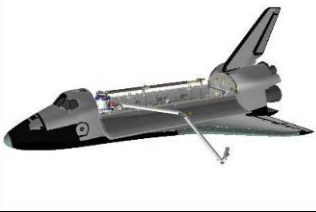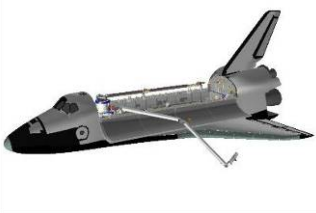Pt	X	Y	Z	PITCH	YAW	ROLL	●	
191P	-1081	-316	-250	43	335	206		
192	-1095	-327	-251	43	336	206		
193	-1106	-335	-250	39	347	207		
194P	-1110	-343	-246	37	355	205		



A7U When AUTO SEQ IN PROG It – off:
 CCTV – RMS WRIST, ZOOM: 20.0 HFOV

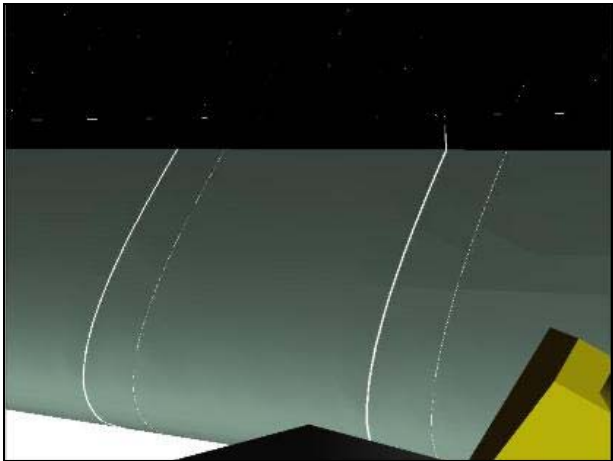

WRIST HFOV: 20.0


AUTO SEQ – PROCEED (IN PROG It on)

(1:45)

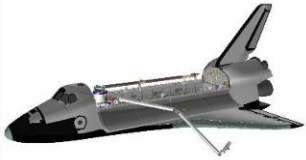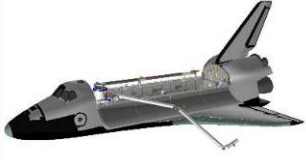Pt	X	Y	Z	PITCH	YAW	ROLL	●
194P	-1110	-343	-246	37	355	205	
195	-1118	-364	-254	31	354	201	
196	-1126	-367	-253	29	4	202	
197P	-1127	-373	-250	27	10	204	

When AUTO SEQ IN PROG It – off:
BRAKES – ON (tb-ON)

L10(VTR) STOP pb – push (no red ●)

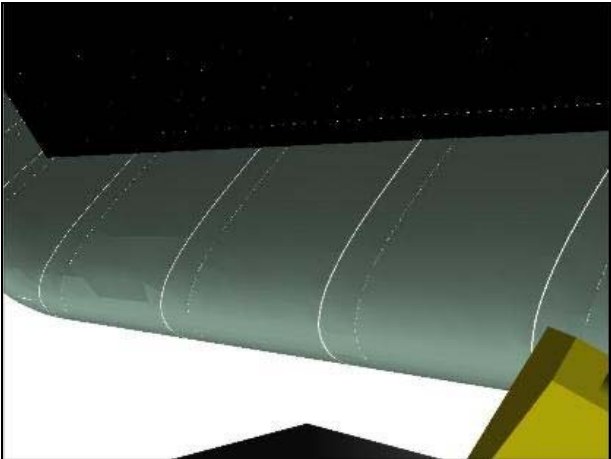

WRIST HFOV: 20.0

16. RETURN TO PRE-CRADLE

SM 94 PDRS CONTROL

PL ID – ITEM 3 +0 EXEC

INIT ID – ITEM 24 +0 EXEC

	X	Y	Z	PITCH	YAW	ROLL	PL ID
√	-1127	-373	-250	27	10	204	0
	SY	SP	EP	WP	WY	WR	
√	+38.3	+2.7	-33.8	+65.8	-32.5	-133.2	


RHC RATE – as reqd (VERN within 10 ft)
BRAKES – OFF (tb-OFF)
MODE – SINGLE, ENTER

Mnvr to PRE-CRADLE posn:


PORT
LOWER 2 End
1: WR +
2: WY +
3: WP -
4: EP +
5: SP +
6: SY -
PRE-CRADLE

SY	SP	EP	WP	WY	WR	
+38.3	+2.7	-33.8	+65.8	-32.5	-133.2	
					0.0	
				0.0		
			+5.0			
		-25.0				
	+25.0					
0.0						
0.0	+25.0	-25.0	+5.0	0.0	0.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1261	-146	-551	5	2	0	0

BRAKES – ON (tb-ON)
MODE – not DIRECT
PARAM – PORT TEMP
JOINT – CRIT TEMP

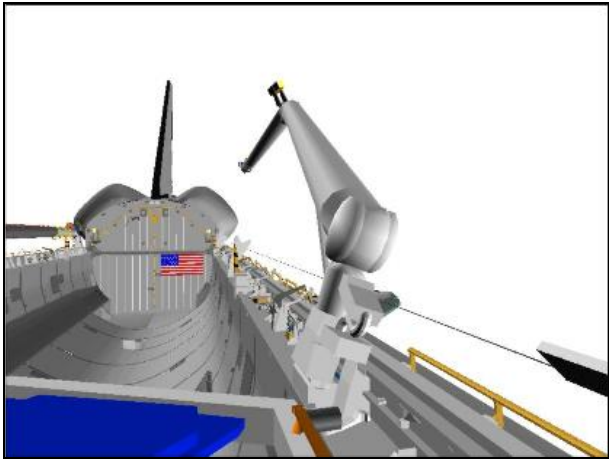

CCTV A (0,0)

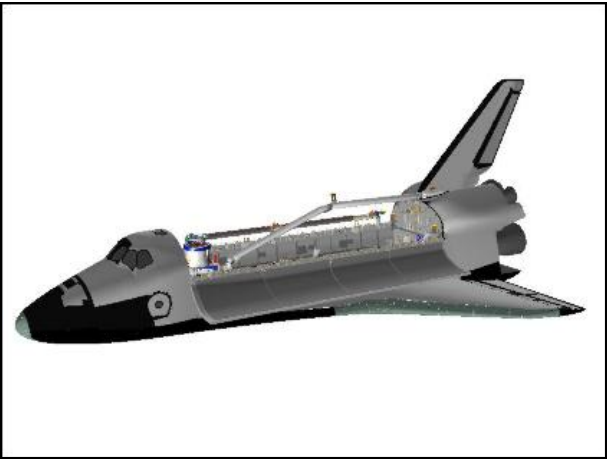

BIRD'S EYE

BACKUP CRADLE

BACKUP
CRADLE

BACKUP CRADLE

1. ARM CRADLE
√BRAKES – ON (tb-ON)

DAP: VERN(FREE)

NOTE

Spurious fault msgs may occur when PORT RMS deselected.

Use views from Camrs A, B, and/or Elbow to align WP and WY. WR = 0 when Wrist Camr aligned w/orbiter Z axis

RMS SEL – OFF
PWR – B/U
SEL – PORT

B/U DRIVE to approx:

SY	SP	EP	WP	WY	WR
0.0	+25.0	+1.0	+5.0	0.0	0.0

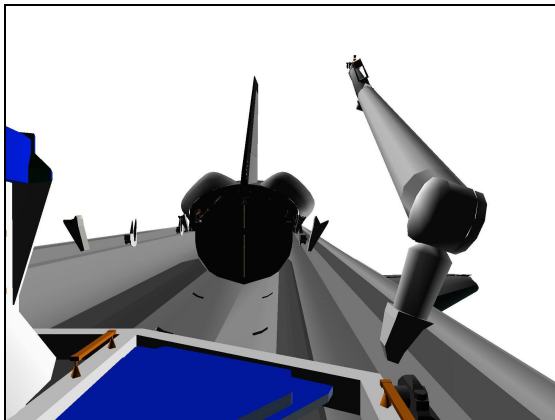


Figure 1.- Backup-cradle
(Camera A: 0,0)

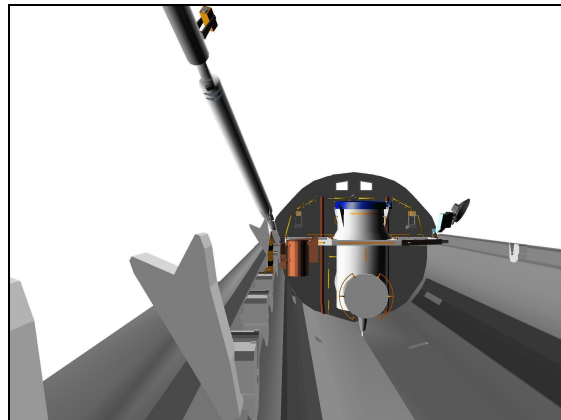


Figure 2.- Backup-cradle
(Camera B: 0,0)

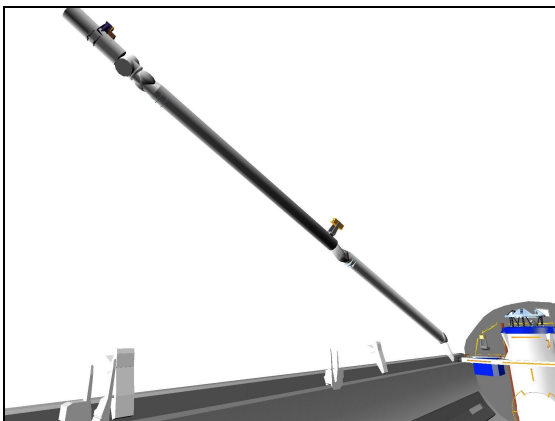


Figure 3.- Backup-cradle
(Camera C: -40,18)

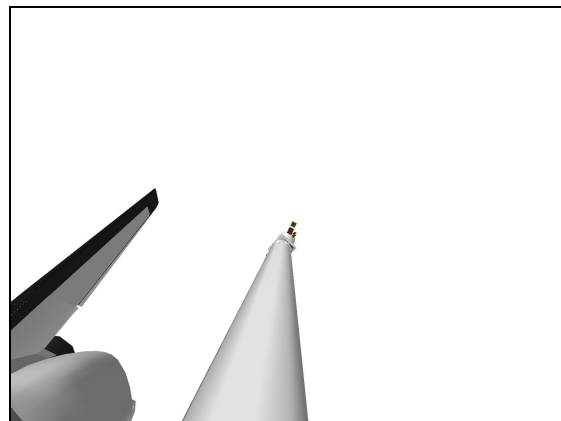


Figure 4.- Backup-cradle
(RMS Elbow: 0,0)

BACKUP
CRADLE

Drive SP to get FWD R-F-L, then
EP to get MID R-F-L, then
WP to get AFT R-F-L

2. LATCH/STOW ARM
Go to RMS PWRDN, step 3

This Page Intentionally Blank

RMS JETTISON ASSUMPTIONS AND NOTES

JETT
NOTES

RMS JETTISON ASSUMPTIONS AND NOTES

ASSUMPTIONS:

1. DAP and RMS have been configured to provide stable payload position (if attached) prior to entering this procedure
2. Jettison occurs greater than 1000 ft from ISS to avoid plume impingement damage

NOTES:

1. Jettison to be performed between sunrise and noon, if possible, to provide good visibility
2. DAP callouts are shown for unloaded arm case
3. If payload attached, correct VRCS/ALT DAP parameters must be loaded into DAP B in CDR steps 1, 2. Parameters will come from PDRS FS or MCC. MCC will complete pad in MS step 2b
4. DAP A used post-jettison for sep mnvr. DAP B used while RMS attached to keep RMS loads down and ensure stable orbiter/payload/DAP

RMS JETTISON

RMS
JETT

CDR

RMS JETTISON (may include PL)

1. SETUP
 O14:F, √Pri RJD DRIVER, LOGIC (sixteen) – ON
 O15:F,
 O16:F
 O14:E √cb DDU AFT (two) – cl

 A6U SENSE: -Z

 A7U √Lighting – as reqd

 If no payload attached:
 Config DAP A,B to A7,B7

 If payload attached:
 Config DAP A to A7, B per MCC

 Unstow HHL

 2. AUTO MNVR TO -XLV, +ZVV
 GNC UNIV PTG
 √TGT ID: +2
 BODY VECT: +2
 OM: +0

 On MCC GO:
 DAP: B/AUTO/VERN(ALT)

 ITEM 19 EXEC (CUR – *)

MS

RMS JETTISON (may include PL)

1. PWRUP RMS PYROS
 √BRAKES – ON (tb-ON)

 A14 √PYRO PORT RMS (five) – SAFE
 √RMS LAT – SAFE

 ML86B:D cb MNB PYRO JETT SYS A PORT RMS – cl
 MNC PYRO JETT SYS B PORT RMS – cl
 √cb MNA PYRO JETT SYS A STBD RMS – op
 √cb MNC PYRO JETT SYS B STBD RMS – op

 2. CONFIGURE SRMS IN PREPARATION FOR JETTISON
 2a. If MPMs expected to stow, no joint failed, and jettisoning unloaded RMS:
 If RMS latched, perform RMS PWRUP, steps 3, 5 thru 7

 PARAM – JOINT ANGLE
 BRAKES – OFF (tb-OFF)
 MODE – SINGLE, ENTER

 SINGLE DR to RMS JETTISON position ($\pm 1^\circ$):

	SY	SP	EP	WP	WY	WR
1: SP		+45				
2: EP			-45			
3: SY	-45					
Final	-45	+45	-45	ANY	ANY	ANY

 BRAKES – ON (tb-ON)

CDR	MS																					
3. <u>CONFIGURE DAP FOR SRMS JETTISON</u> If RMS joint failed or jettisoning loaded RMS: NOTE Free drift during attitude maneuver acceptable to facilitate arm maneuvering If reqd per MCC or no VERNs: DAP: FREE	2b. If MPMs expected to stow and either joint failed or jettisoning loaded RMS: √MCC for RMS mode and joint config for jettison PARAM – JOINT ANGLE Configure for MODE Entry MODE – _____ Drive to JETTISON position (± 1°):<table><tr><td></td><td>SY</td><td>SP</td><td>EP</td><td>WP</td><td>WY</td><td>WR</td></tr><tr><td>1</td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>2</td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table> √BRAKES – ON (tb-ON) √MODE – not DIRECT (lt off) Inform CDR RMS at Jettison position When RMS at Jettison position: DAP: B/AUTO/VERN(ALT)		SY	SP	EP	WP	WY	WR	1							2						
	SY	SP	EP	WP	WY	WR																
1																						
2																						
	2c. If MPMs won't stow (top part of MPMs being jettisoned): If RMS not cradled and latched, perform <u>RMS PWRDN</u>, steps 1-4 <u>Deadface Latches</u> √PL BAY MECH PWR SYS (two) – OFF √PORT RMS RETEN LAT tb – LAT RMS LAT – DEADFACE √PORT RMS RETEN LAT tb – bp																					

CDR

MS

A14

Guillotine Wires at Latches

PYRO PORT RMS ARM – GUILLLOTINE

Wait 1 sec, then

PYRO PORT RMS LAT (three) – GUILLLOTINE
– SAFE

Jettison Latches

PYRO PORT RMS ARM – JETT

Wait 1 sec, then

PYRO PORT RMS LAT (three) – JETT
– SAFE

ARM – SAFE
RMS LAT – SAFE

Configure RMS for Jettison

PARAM – JOINT ANGLE

BRAKES – OFF (tb-OFF)

MODE – SINGLE, ENTER

SINGLE DR to RMS JETTISON position ($\pm 1^\circ$):

	SY	SP	EP	WP	WY	WR
Initial ✓	0	0	0	0	0	0
1: WP +				+5		
2: EP +			+1			
3: SP +		+45				
4: EP -			-45			
5: SY -	-45					
Final	-45	+45	-45	+5	0	0

L BRAKES – ON (tb-ON)

3. PWRDN RMS FOR JETTISON

PORT RMS HTR A,B (two) – OFF

NOTE

Spurious fault msgs may occur
when port RMS deselected

RMS SEL – OFF

PWR – OFF (SM ALERT, BCE BYP MCIU)

CDR

MS

	A7U	TV CAMR PWR RMS – OFF (tb-OFF) √PORT RMS LIGHT – OFF
	R14:E	cb RMS CAMR CAMR/PTU – op WRIST/ILLUM CAMR HTR – op ELB/ILLUM PTU HTR – op If PL using RMS PWR, √PL pwr thru SPEE Connector off (<u>PL PWRDN</u>)
	A14	4. <u>GUILLOTINE WIRES AT SHOULDER</u> PYRO PORT RMS ARM – GUILLOTINE Wait at least 1 sec, then PYRO PORT RMS SHLDR – GUILLOTINE – SAFE ARM – SAFE
	A7U	5. <u>CONFIGURE CCTVs TO MONITOR JETTISON</u> VID OUT pb – MON 1 IN pb – A PAN, TILT, ZOOM – as reqd VID OUT pb – MON 2 IN pb – B PAN, TILT, ZOOM – as reqd to view and record RMS shoulder joint If recording view with V10: REC pbs – Press simo √LCD displays red dot (20 min) If recording view with VTR: L10 REC pb – Press, hold (VTR) PLAY pb – Press, simo (√red dot displayed) (20 min)
	A6U	Start timer counting down to Jettison RMS

CDR

MS

4. CONFIGURE ORBITER FOR SEP MNVR

Approximately 2 min prior to jettison,
√Mnvr to Jettison attitude complete, then

DAP: FREE

√SENSE: -Z

FLT CNTLR PWR – ON

If recording views with V10:

REC pbs – Press simo

√LCD displays red dot

If recording views with VTR:

REC pb – Press, hold

PLAY pb – Press, simo (√red dot displayed)

V10

L10

(VTR)

Give MS GO to perform Jettison RMS

6. JETTISON RMS

PYRO PORT RMS ARM – JETT

Wait 1 sec, then

PYRO PORT RMS SHLDR – JETT

Give CDR GO to perform sep mnvr

Track RMS/PL with camr of choice and HHL

A14

5. SEP MNVR

√DAP TRANS: PULSE/PULSE/PULSE, NO LO Z

DAP: A/FREE/VERN(ALT)

THC: +Z (out) 2 pulses (0.2 ft/sec)

When jettisoned RMS confirmed moving out of payload bay:

DAP: TRANS: PULSE/PULSE/NORM

DAP: LVLH

THC: +Z (out) 5 sec (1.6 ft/sec)

FLT CNTLR PWR – OFF

Report HHL marks to MCC

CDR**6. POST JETTISON ATTITUDE CLEANUP**

Stop recording

GNC 20 DAP CONFIG

√CNTL ACCEL, ITEM 28: 0

√CNTL ACCEL, ITEM 48: 0

SEP +10 min:

√MCC for post-jettison attitude

Stow HHL

MS**7. POST JETTISON RMS CLEANUP**

PYRO PORT RMS SHLDR – SAFE

ARM – SAFE

ML86B:D

cb MNB PYRO JETT SYS A PORT RMS – op

MNC PYRO JETT SYS B PORT RMS – op

If reqd to stow MPM,

Go to RMS PWRDN, steps 3, 5 thru 7

This Page Intentionally Blank

REFERENCE DATA

TEMPERATURE DATA	10-2
C&W LIMITS	10-2
JOINT TRAVEL LIMIT LOCATIONS	10-3
WRIST ROLL RANGE	10-4
RMS SINGULARITIES	10-5
SHOULDER YAW SINGULARITY	10-6
PORT MPM/MRL MOTOR AND CONTROL REQUIREMENTS	10-7
STBD MPM/MRL MOTOR AND CONTROL REQUIREMENTS	10-8
PORT MPM TALKBACKS AND MICROSWITCHES	10-9
STBD MPM TALKBACKS AND MICROSWITCHES	10-10
PORT/STBD MRL TALKBACKS AND MICROSWITCHES	10-11
PL ID 1 – OBSS UNBERTH/BERTH, FWD STRIKER BAR	10-12
2 – OBSS LDRI – POR @ PTU PIVOT	10-13
OBSS JOINT ANGLES VS POR COORDINATES	10-14
AUTO SEQUENCES	10-15
RMS GO/NO-GO CRITERIA (FLIGHT RULE A12-1001)	10-21
FLIGHT RULE REFERENCES	10-22
SPEC 95 ABE OVERRIDES	10-23
RMS MODE RESPONSE MATRIX	10-24
HAND CONTROLLER AXIS SWAP	10-25
RMS/EVA VOICE PROTOCOL (GCA)	10-26
ALL STOP PROTOCOL	10-27
ORBITER LOCATION CHART	10-28
END EFFECTOR CAPTURE/RELEASE SEQUENCE INFO	10-29
RMS EE C/O FAILURE MATRIX	10-30
PDRS EPS IMPACT TABLE	10-34
OI MDM/DSC IMPACT TABLE	10-40
MISCELLANEOUS RMS MOTION NOTES	10-41

TEMPERATURE DATA

RMS Temperatures:

NOTE

To read RMS temperatures:

PARAM – PORT TEMP

JOINT – as desired (see below)

'LED' temps measured at joints

'ABE' temps measured at electronics

JOINT SW SEL	IND #1 TEMP °F	IND #2 TEMP °F	IND #3 JOINT ID
SY	SY LED	SY,SP ABE	101
SP	SP LED	SY,SP ABE	102
EP	EP LED	EP ABE	103
WP	WP LED	WP,WY ABE	104
WY	WY LED	WP,WY ABE	105
WR	WR LED	WR ABE	106
EE	EE LED	EE ABE	107

OBSS Temperatures:

NOTE

To read OBSS sensor temperatures:

PARAM – STBD TEMP

JOINT – as desired (see below)


JOINT SW SEL	IND #1 TEMP °F	IND #2 TEMP °F	IND #3 JOINT ID
SY	LDRI		201
SP	ITVC		202
EP	PTU		203
WP	LCS		204
WY			205
WR	Avionics Box 1	Avionics Box 2	206
EE			207

C&W LIMITS

	LOWER LIMIT °F	UPPER LIMIT °F
LED/OPTICAL SCANNER	0	172
ABE EE	0	144
ABE SY,SP,EP,WP,WY,WR	0	106
LDRI	39	156
ITVC	21	119
PTU	8	138
LCS	39	119
AVIONICS BOX 1 & 2	8	128


JOINT TRAVEL LIMIT LOCATIONS

JOINT	REACH LIMIT LOCATION	SOFT STOP LOCATION	MECHANICAL STOP LOCATION	SINGULARITY LOCATION
SY	+175.4° -175.4°	+177.4° -177.4°	+180° -180°	
SP	+2.6° +140.4°	+0.6° +142.4°	-2° +145°	
EP	-2.4° -155.6°	-0.4° -157.6°	+2.4° -161°	-7.6
WP	-114.4° +114.4°	-116.4° +116.4°	-121.4° +121.4°	
WY	-114.6° +114.6°	-116.6° +116.6°	-121.3° +121.3°	-75/-105 +75/+105
WR	-440° +440°	-442° +442°	-447° +447°	

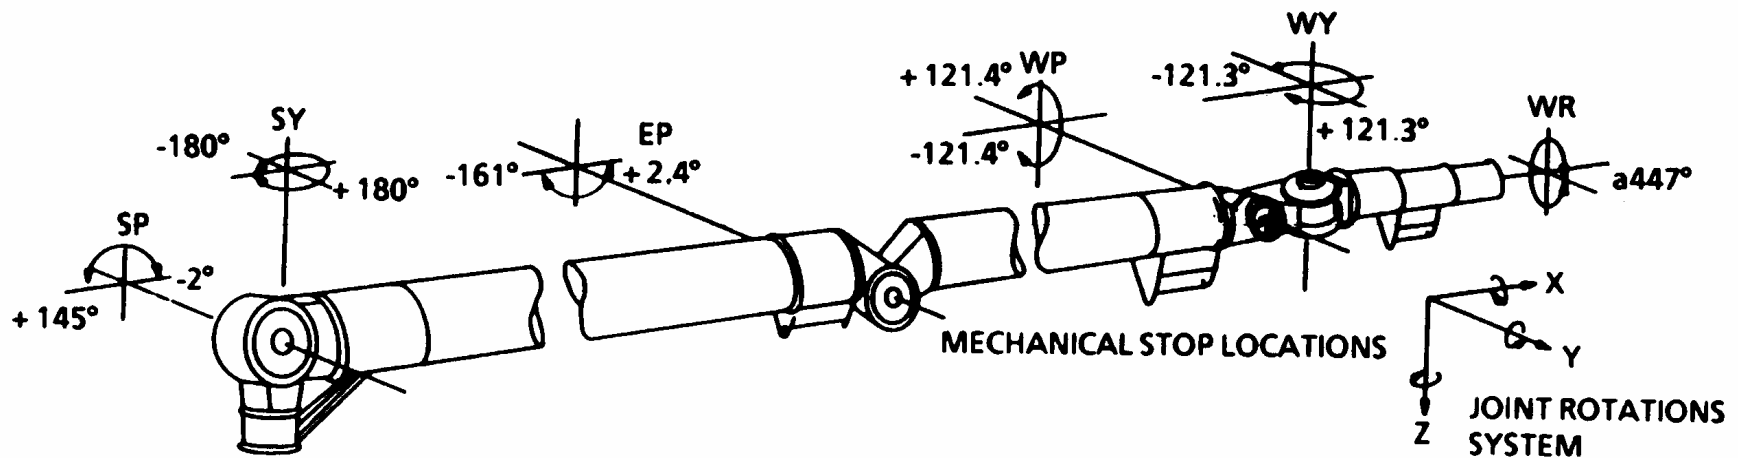


WRIST ROLL RANGE

SPEC 94 WR RANGE X ITEM 26	WR JOINT ANGLE
1	$-450 \leq \Phi < -360$
2	$-360 \leq \Phi < -180$
3	$-180 \leq \Phi < 0$
4	$0 \leq \Phi < 180$
5	$180 \leq \Phi < 360$
6	$360 \leq \Phi < 450$

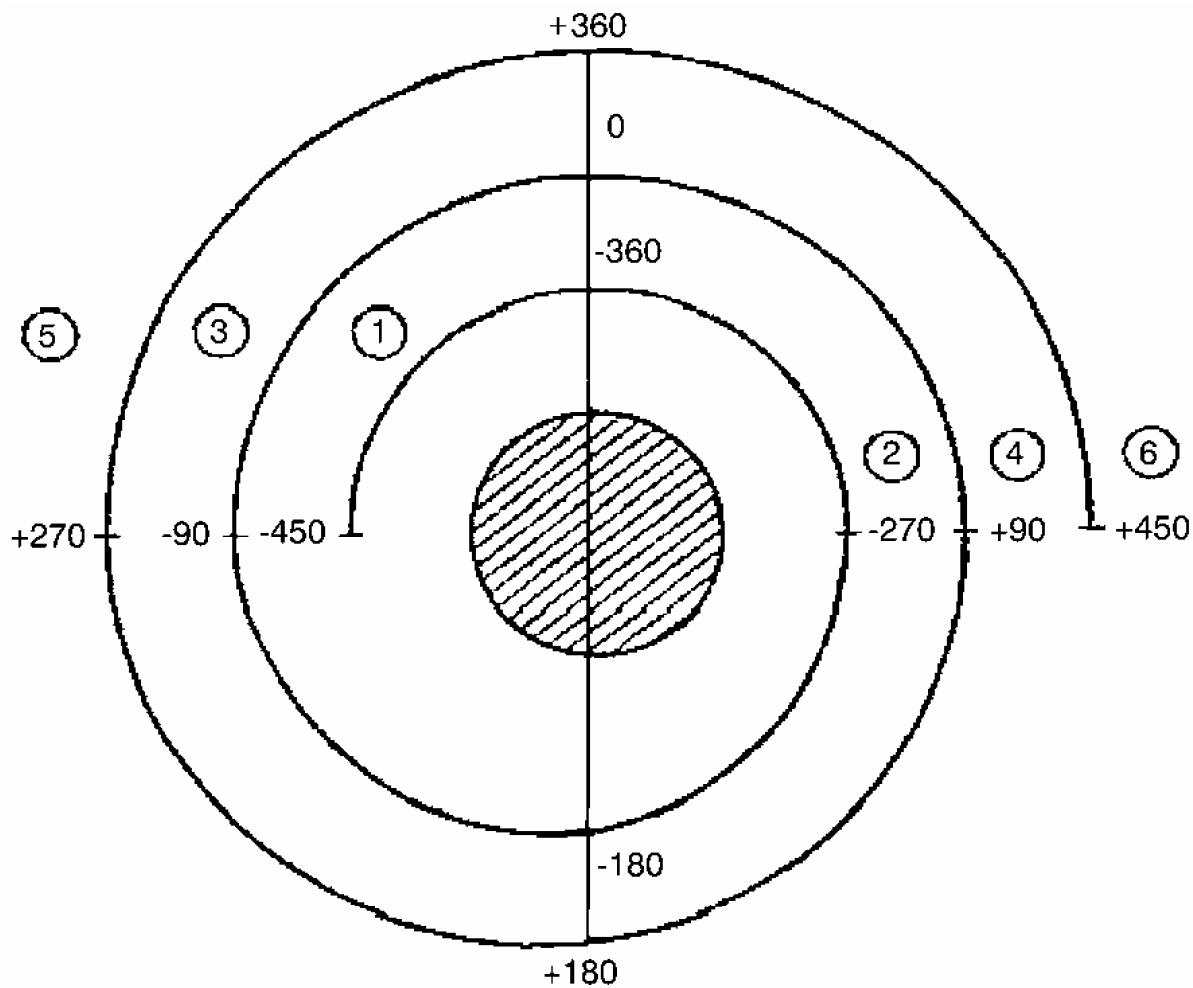


RMS SINGULARITIES


1. Wrist Yaw Singularity → Occurs when the WY joint is at $+75.0^\circ$ to $+105.0^\circ$ or -75.0° to -105.0° . The DOF lost is the ability to rotate about the EP to WP arm boom.
2. Elbow Pitch Singularity → Occurs when the EP joint is -7.6° or greater. The DOF lost is the ability to translate away from the shoulder joint.
3. Shoulder Yaw Singularity → Occurs when the WY joint is within a 3-ft cylinder around the SY axis. The DOF lost is the ability to translate perpendicular to the plane containing the booms of the arm.

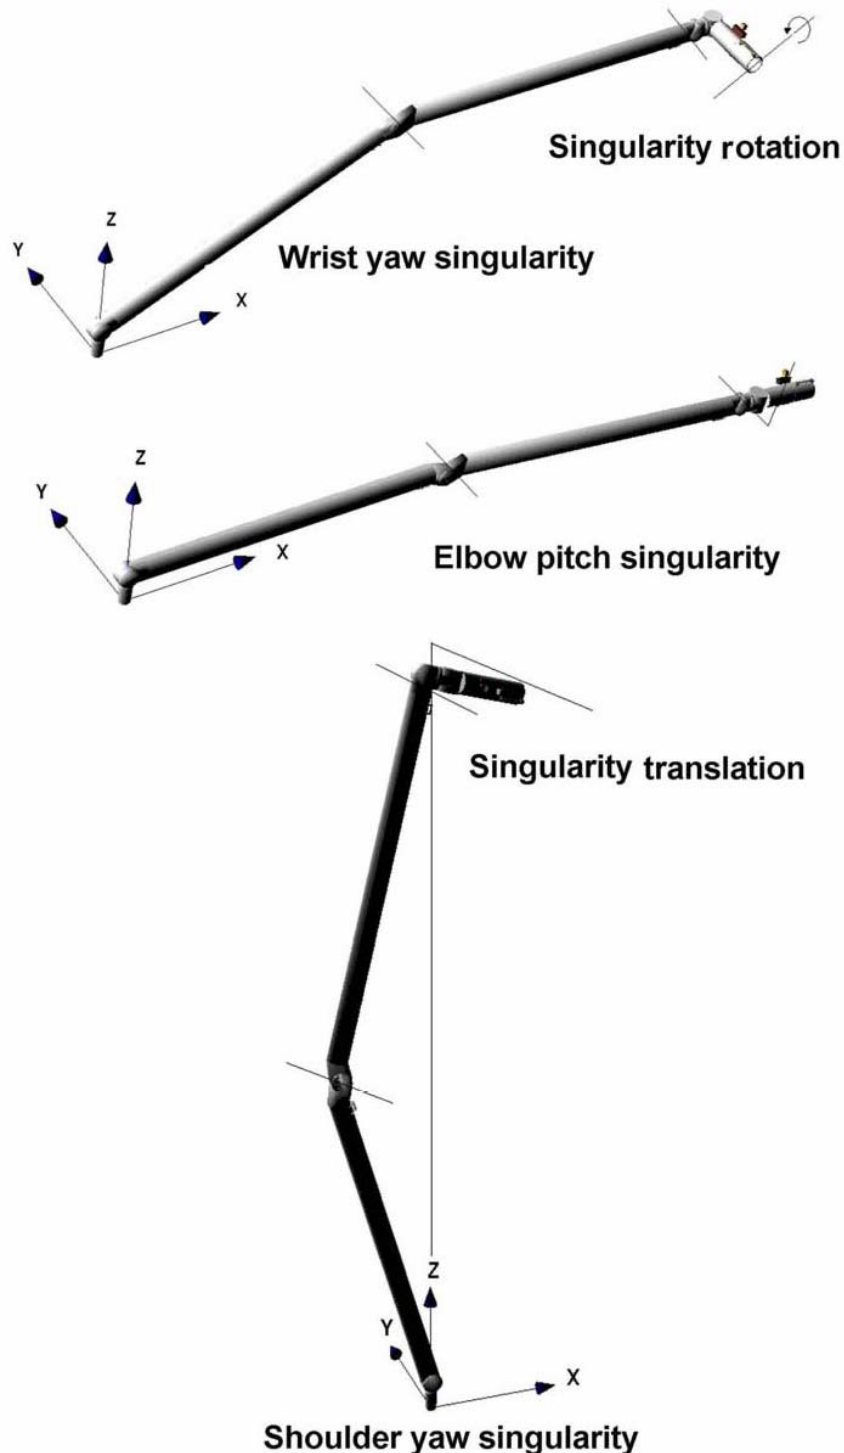

SHOULDER YAW SINGULARITY

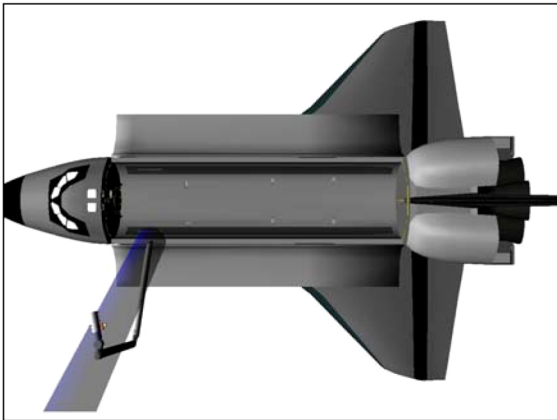


Overhead View

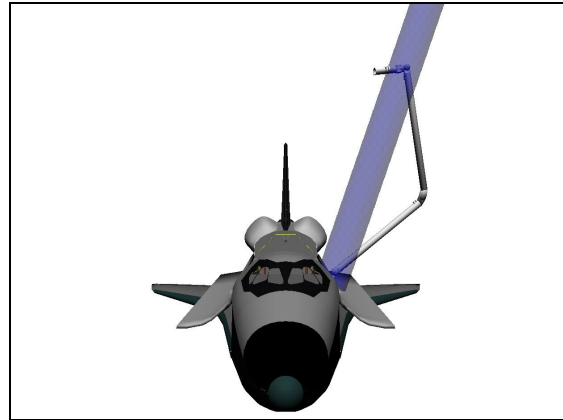

Front View



Port View

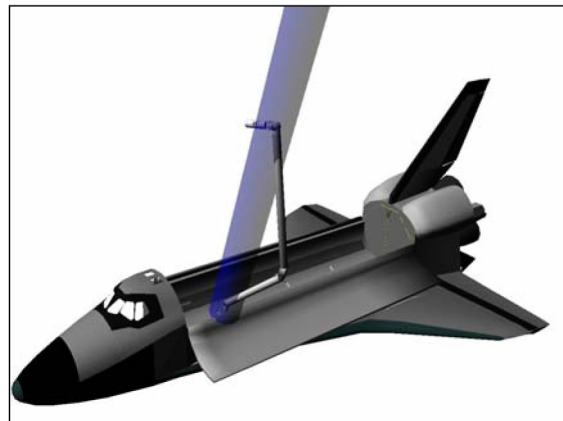

Bird's Eye Port View

NOTE: Shaded Region depicts area where SY Singularity appears

PORT MPM/MRL MOTOR AND CONTROL REQUIREMENTS^a

MRL		LOGIC POWER			MOTOR POWER					CMD PWR	DATA MDM
		RPC	CNTL	SW LOGIC	AC BUS PWR		PLB MECH	AC BUS ENA 1	AC BUS ENA 2		
FWD	SYS 1	MNB MPC2	BC3	MNB MMC2	AC2	AC2 PBM MMC2	SYS 1	BC1	BC2	AB1	OA2
	SYS 2	MNC MPC3	CA3	MNC MMC4	AC3	AC3 PBM MMC4	SYS 2	AB1 + CA1	AB2 + CA2	CA1	OA2
MID	SYS 1	MNA MPC1	AB3	MNA MMC1	AC1	AC1 PBM MMC1	SYS 1	AB1 + CA1	AB2 + CA2	AB1	OF4
	SYS 2	MNB MPC2	BC3	MNB MMC4	AC2	AC2 PBMMMC4	SYS 2	BC2	BC1	CA1	OA1
AFT	SYS 1	MNC MPC3	CA3	MNC MMC2	AC3	AC3 PBM MMC2	SYS 1	AB1 + CA1	AB2 + CA2	CA1	OA3
	SYS 2	MNA MPC1	AB3	MNA MMC3	AC1	AC1 PBM MMC3	SYS 2	AB1 + CA1	AB2 + CA2	AB1	OF1

^aLoss of any one bus (some dual) will cause loss of motor drive capability

MPM	LOGIC POWER			MOTOR POWER					CMD PWR	DATA MDM			
	RPC	CNTL	SW LOGIC	AC BUS PWR		PLB MECH	AC BUS ENA 1	AC BUS ENA 2		SHLD	FWD	MID	AFT
SYS 1	MNC MPC3	CA3	MNC MMC4	AC3	AC3 PBM MMC4	SYS 2	AB1 + CA1	AB2 + CA2	CA2	OA2	OF1	OA1	OF1
SYS 2	MNB MPC2	BC3	MNB MMC2	AC2	AC2 PBM MMC2	SYS 1	BC1	BC2	BC1	OA2	OA3	OF4	OA3

^aLoss of any one bus (some dual) will cause loss of motor drive capability

STBD MPM/MRL MOTOR AND CONTROL REQUIREMENTS^a


MRL		LOGIC POWER			MOTOR POWER					CMD PWR	DATA MDM
		RPC	CNTL	SW LOGIC	AC BUS PWR		PLB MECH	AC BUS ENA 1	AC BUS ENA 2		
FWD	SYS 1	MNB MPC2	BC3	MNB MMC4	AC3	AC3 PBM MMC4	SYS 2	AB1 + CA1	AB2 + CA2	CA1	OA2
	SYS 2	MNA MPC1	AB3	MNA MMC1	AC1	AC1 PBM MMC1	SYS 1	AB1 + CA1	AB2 + CA2	AB1	OF4
MID	SYS 1	MNB MPC2	BC3	MNB MMC4	AC2	AC2 PBM MMC4	SYS 2	BC2	BC1	AB1	OA1
	SYS 2	MNC MPC3	CA3	MNC MMC2	AC3	AC3 PBM MMC2	SYS 1	AB1 + CA1	AB2 + CA2	CA1	OA3
AFT	SYS 1	MNA MPC1	AB3	MNA MMC3	AC1	AC1 PBM MMC3	SYS 2	AB1 + CA1	AB2 + CA2	AB1	OF1
	SYS 2	MNB MPC2	BC3	MNB MMC2	AC2	AC2 PBM MMC2	SYS 1	BC1	BC2	CA1	OA2

^aLoss of any one bus (some dual) will cause loss of motor drive capability


MPM	LOGIC POWER			MOTOR POWER					CMD PWR	DATA MDM		
	RPC	CNTL	SW LOGIC	AC BUS PWR		PLB MECH	AC BUS ENA 1	AC BUS ENA 2		FWD	MID	AFT
SYS 1	MNB MPC2	BC3	MNB MMC2	AC2	AC2 PBM MMC2	SYS 1	BC1	BC2	BC1	OA2	OA3	OF4
SYS 2	MNC MPC3	CA3	MNC MMC4	AC3	AC3 PBM MMC4	SYS 2	AB1 + CA1	AB2 + CA2	CA2	OA2	OF1	OA2

^aLoss of any one bus (some dual) will cause loss of motor drive capability


PORT MPM TALKBACKS AND MICROSWITCHES

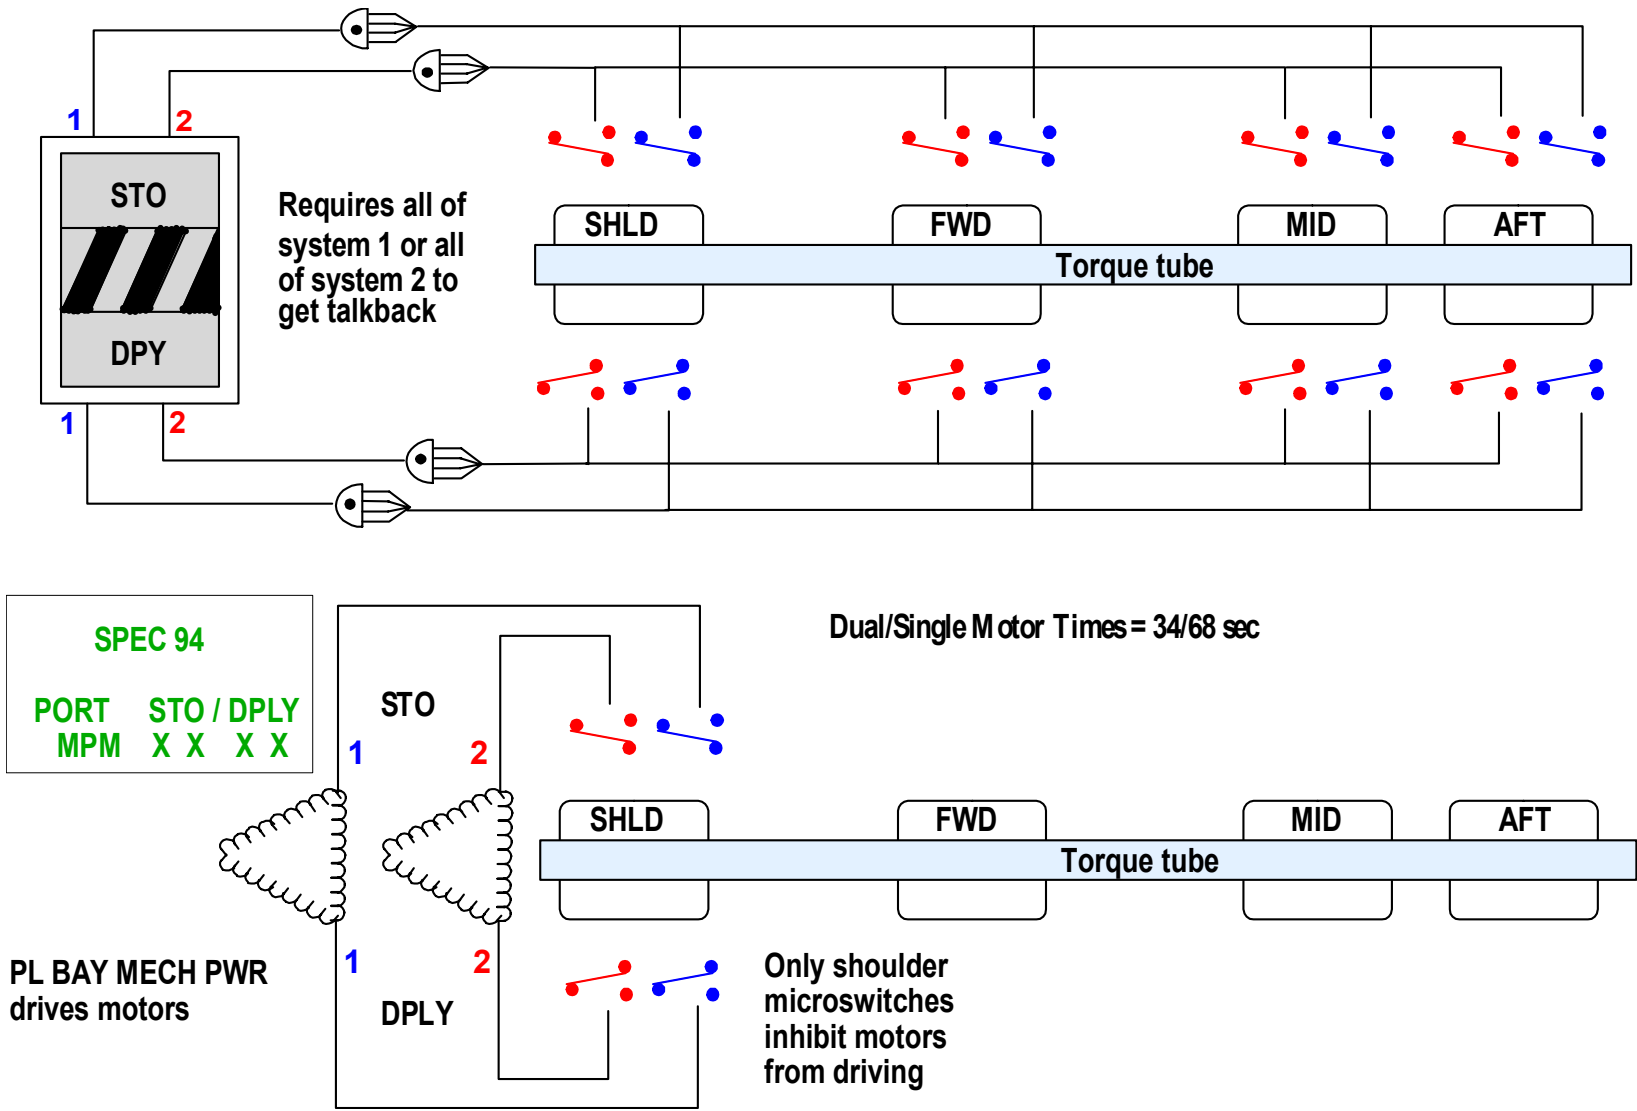



STBD MPM TALKBACKS AND MICROSWITCHES

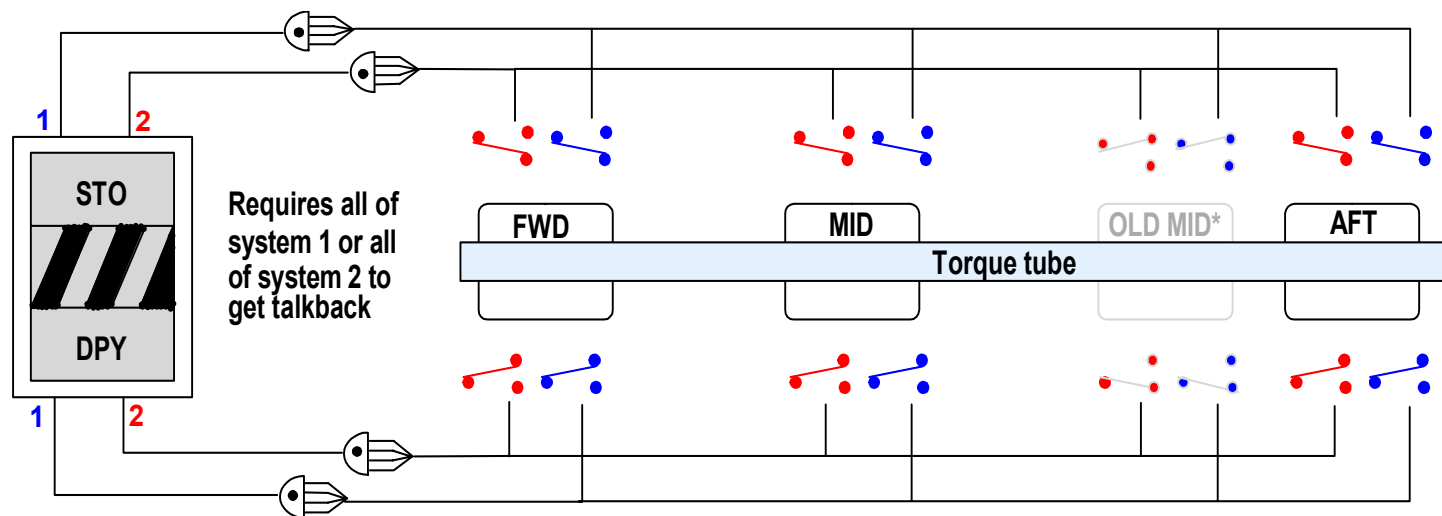


*Pins have been shorted together to simulate inputs from unused "Old Mid" MPM location to maintain accuracy of Stbd MPM tb

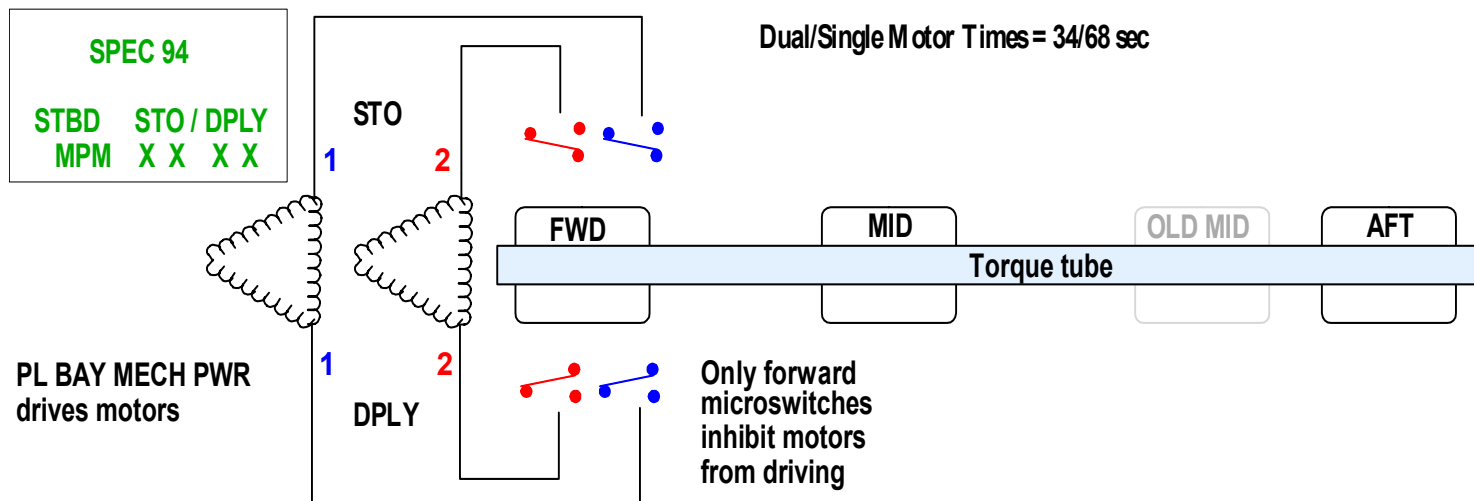

PORT/STBD MRL TALKBACKS AND MICROSWITCHES

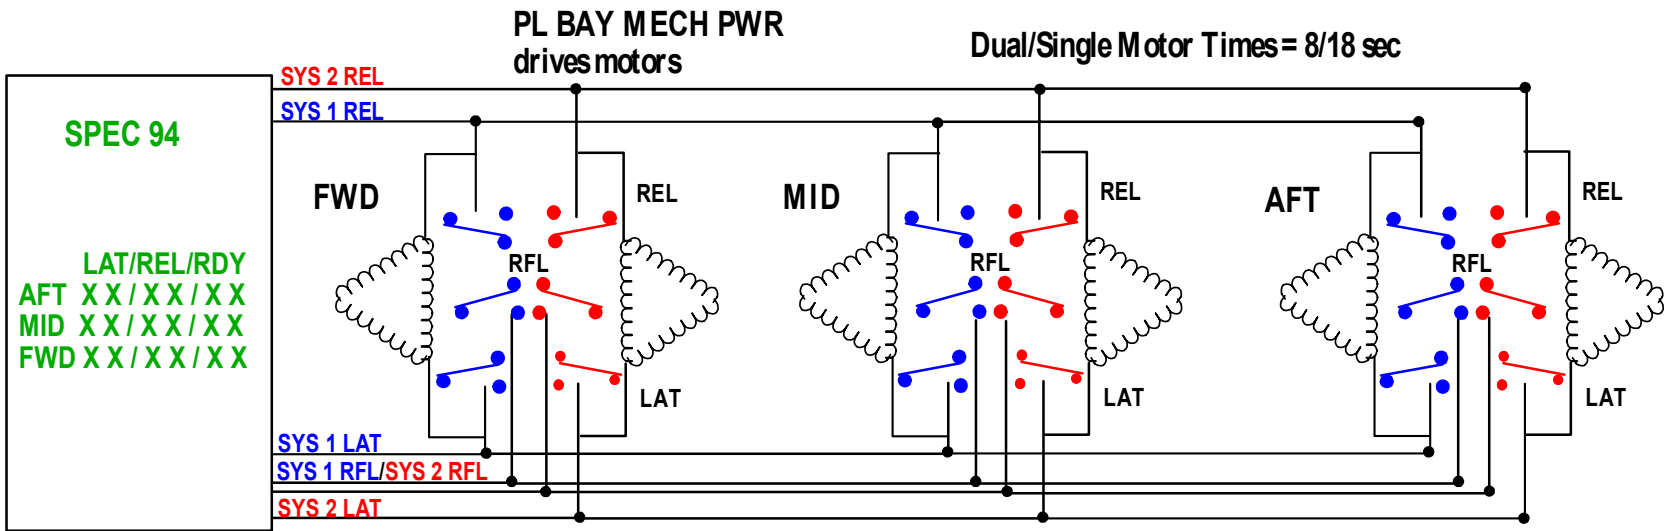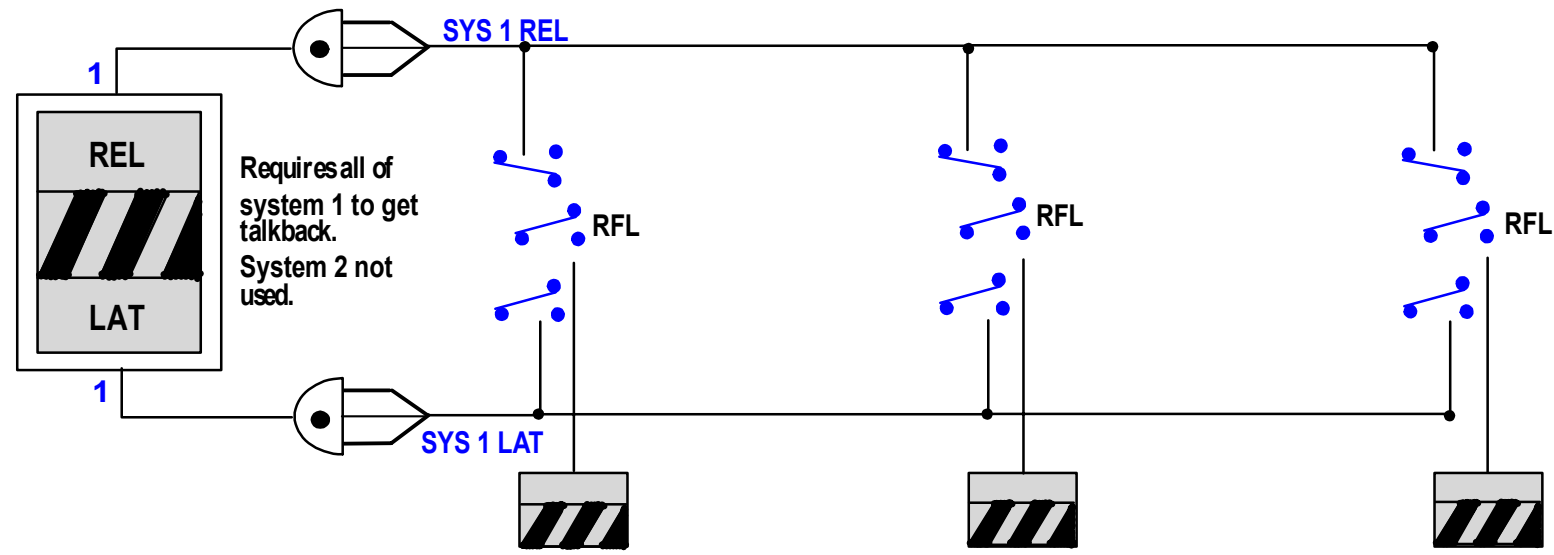

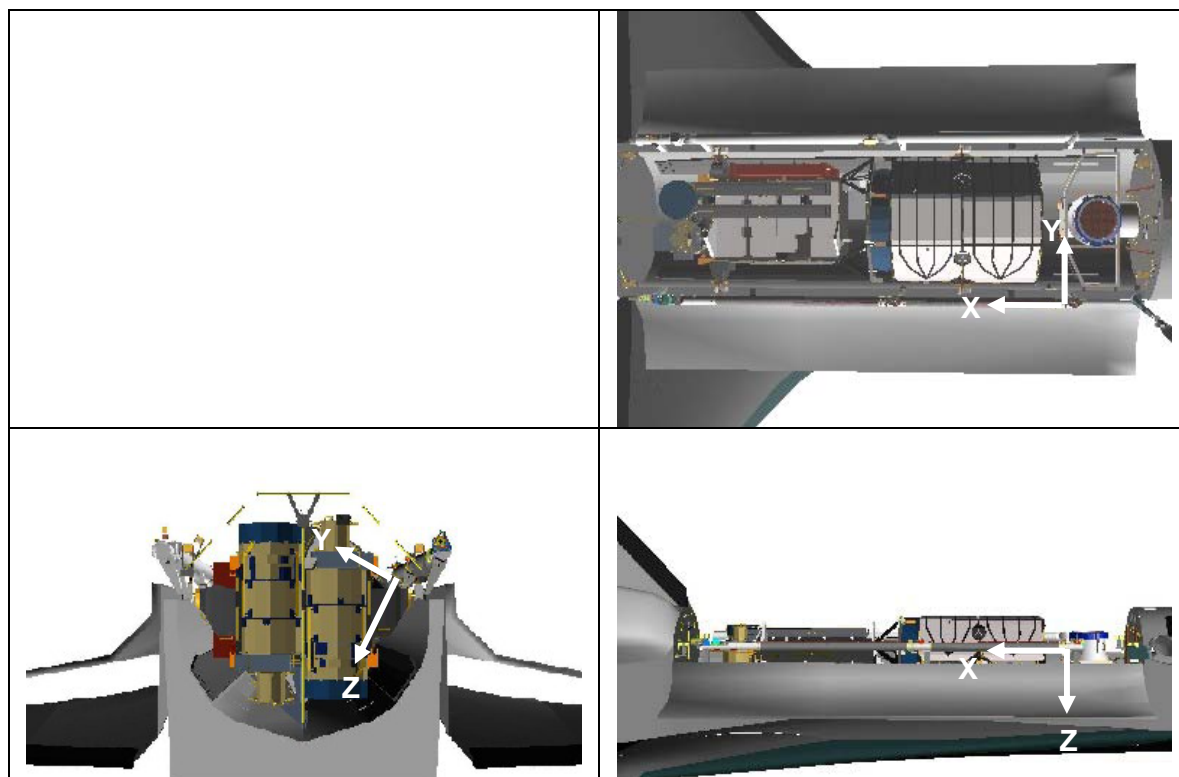

POR:

POR at OBSS fwd striker bar

PURPOSE:

OBSS unberth/berth

FOR RATES:

TRANS LIM ft/sec

ROT LIM deg/sec

COARSE

0.20

0.88

VERN

0.10

0.08

JOINT RATES:

SHOULDER LIM deg/sec

ELBOW LIM deg/sec

WRIST LIM deg/sec

COARSE

1.27

1.78


2.64

VERN

0.42

0.59

0.88

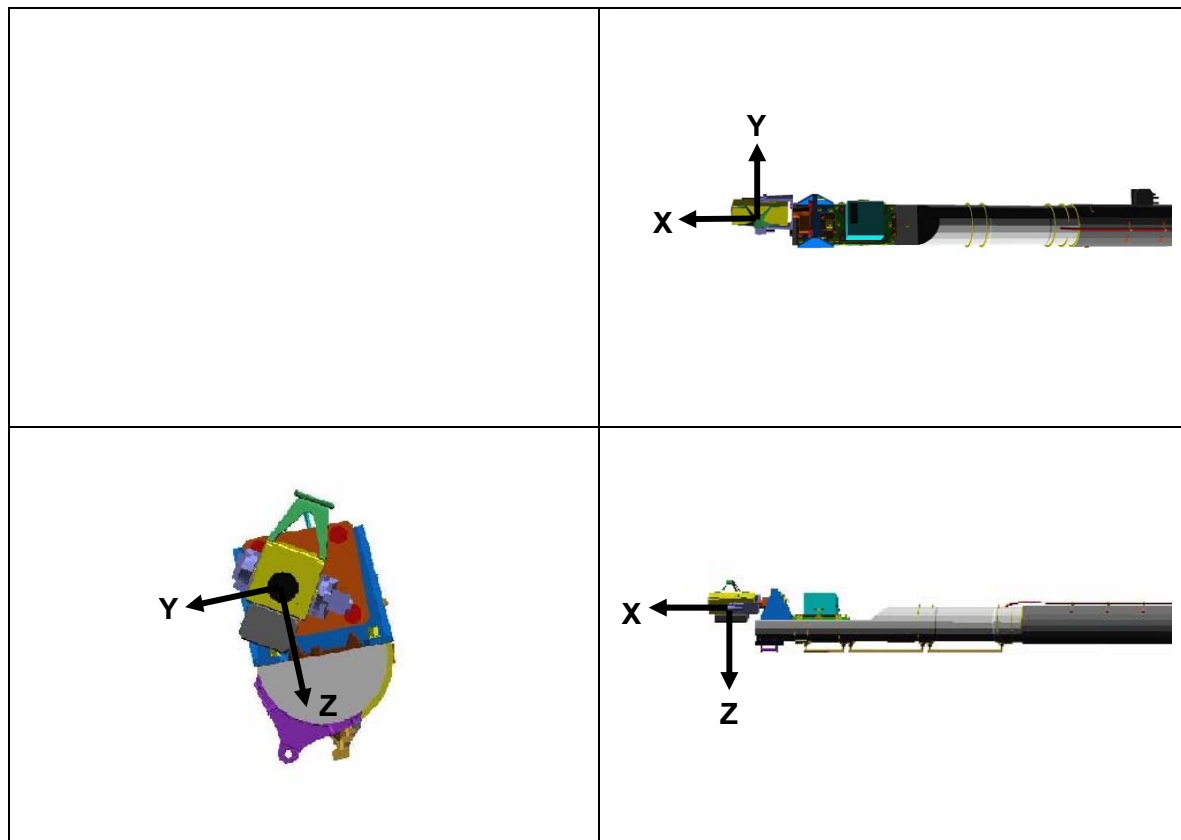

POR:

POR at OBSS ITVC/LDRI PTU Pivot Point

PURPOSE:

OBSS Surveys using LDRI/IDC

FOR RATES:

TRANS LIM ft/sec

COARSE

0.23

VERN

0.20

ROT LIM deg/sec

2.64

0.88

JOINT RATES:

SHOULDER LIM deg/sec

COARSE

1.27

VERN

0.42

ELBOW LIM deg/sec

1.78

0.59

WRIST LIM deg/sec

2.64

0.88

RATIONALE: The LDRI scan rate is 4.3 M/min (0.25 ft/s), while the IDC scan rate is 3.6 M/min (0.20 ft/s)

OBSS JOINT ANGLES VS POR COORDINATES

I

OBSS PRE-GRAPPLE

SY	SP	EP	WP	WY	WR	
-90.0	+87.6	-129.5	-57.5	0.0	-249.6	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+96	-513	270	350	1	0
-680	+95	-495	0	0	340	1
-1271	+92	-510	0	0	10	2

OBSS GRAPPLE/BERTH (Expected Values)

SY	SP	EP	WP	WY	WR	
-90.0	+76.5	-134.6	-40.9	0.0	-250.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+106	-454	270	350	1	0
-680	+105	-435	0	0	341	1
-1271	+106	-451	0	0	11	2

OBSS HOVER

SY	SP	EP	WP	WY	WR	
-90.0	+79.8	-123.1	-55.7	0.0	-250.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+128	-514	270	350	1	0
-680	+126	-496	0	0	341	1
-1271	+127	-511	0	0	11	2

OBSS SJ PRE-GRAPPLE

SY	SP	EP	WP	WY	WR	
-90.0	+87.9	-129.8	-57.0	0.0	-250.0	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-680	+96	-513	270	350	1	0
-680	+94	-495	0	0	341	1
-998	+97	-506	0	0	11	2

OBSS JETTISON

SY	SP	EP	WP	WY	WR	
-29.5	+66.7	-68.5	+26.8	+18.9	-9.9	
X	Y	Z	PITCH	YAW	ROLL	PL ID
-1078	-1	-745	25	0	1	0
-1094	-5	-761	115	0	330	1
-830	-2	-1290	115	0	0	2

OBSS AUTO SEQUENCES

Auto Seq ID	Auto posn	X/ SY	Y/ SP	Z/ EP	PITCH/ WP	YAW/ WY	ROLL/ WR	Pause
1	1	-1270	+350	-445	0	0	11	P
		-90.1	+25.0	-65.8	-57.6	0.0	-249.9	
1	2	-1200	+265	-445	0	0	11	
		-101.0	+42.0	-92.8	-47.5	-1.6	-239.1	
1	3	-1290	+320	-445	0	0	11	
		-87.3	+31.7	-77.0	-53.1	0.4	-252.7	
1	4	-1140	+265	-445	0	0	11	
		-109.8	+39.5	-87.8	-49.7	-2.9	-230.4	
1	5	-1155	+290	-490	0	0	11	
		-106.1	+39.3	-77.9	-59.5	-2.3	-234.1	
1	6	-926	+300	-270	322	0	89	
		-119.0	+46.7	-70.9	+1.4	+26.5	-201.2	
1	7	-909	+255	-274	337	10	82	P
		-127.9	+14.8	-41.0	-13.3	+36.8	-202.8	
1	8	-984	+260	-276	321	16	87	
		-105.9	+15.8	-21.1	-29.4	+23.8	-200.3	
1	9	-1025	+285	-273	304	6	62	
		-85.6	+35.6	-25.9	-51.4	-23.0	-199.3	
1	10	-1233	+508	-293	316	346	64	
		-70.8	+30.1	-33.0	-35.0	-43.5	-225	
1	11	-1300	+516	-272	326	349	55	
		-71.5	+18.8	-30.4	-42.8	-38.8	-242.5	
1	12	-1298	+482	-219	340	352	25	
		-79.0	+11.2	-48.5	-49.8	-22.4	-260.2	
1	13	-1328	+464	-221	348	346	12	P
		-74.9	+16.3	-74.3	-43.0	-12.2	-276.6	
1	14	-1310	+448	-220	348	344	7	
		-75.7	+21.8	-85.4	-41.9	-10.4	-278.6	
1	15	-1066	+233	-199	335	9	28	
		-107.2	+31.2	-77.3	-29.4	-14.2	-212.6	
1	16	-1021	+211	-206	341	12	33	
		-116.7	+20.2	-68.0	-26.1	-2.7	-203.7	
1	17	-919	+213	-222	335	15	49	
		-122.5	+12.2	-38.9	-36.6	+9.4	-192.8	
1	18	-1019	+227	-210	339	11	37	
		-115.7	+22.5	-67.7	-24.7	-1.9	-204.2	
1	19	-1038	+267	-229	315	9	67	
		-95.3	+42.9	-62.1	-22.4	-6.1	-201.6	
1	20	-1268	+483	-236	335	350	44	
		-79.2	+26.2	-65.0	-26.9	-29.3	-249.4	
1	21	-1334	+531	-252	329	343	59	P
		-65.4	+29.3	-58.9	-24.8	-45.6	-251.8	
1	22	-1338	+538	-318	317	342	89	
		-60.6	+18.3	-14.3	-14.3	-42.8	-210.9	
1	23	-1274	+522	-317	308	339	90	
		-58.6	+29.5	-23.2	-9.8	-44.1	-198.0	
1	24	-1222	+479	-341	292	325	82	
		-37.7	+39.3	-26.2	+18.0	-70.0	-153.3	
1	25	-1029	+304	-315	275	340	71	
		-41.4	+41.6	-5.3	-39.4	-69.2	-167.5	

OBSS AUTO SEQUENCES (Cont)

Auto Seq ID	Auto posn	X/ SY	Y/ SP	Z/ EP	PITCH/ WP	YAW/ WY	ROLL/ WR	Pause
1	26	-1009	+284	-282	290	359	89	
		-73.4	+47.9	-31.1	-36.6	-17.0	-185.5	
1	27	-977	+263	-261	309	13	85	
		-97.6	+27.3	-25.9	-34.7	+10.6	-193.8	
1	28	-923	+249	-253	323	16	77	P
		-113.4	+8.9	-13.0	-39.0	+22.2	-194.5	
1	29	-862	+319	-242	284	0	73	
		-83.1	+40.1	-24.7	-40.2	-22.8	-177.6	
1	30	-817	+295	-265	288	2	85	
		-94.8	+40.3	-22.4	-40.8	+0.3	-176.2	
1	31	-740	+295	-279	286	358	88	
		-102.7	+48.8	-31.0	-36.2	+9.6	-172.0	
1	32	-589	+290	-294	267	357	88	
		-97.4	+45.0	-16.1	-45.3	+5.3	-154.9	
1	33	-550	+293	-310	268	353	89	
		-104.9	+52.4	-24.0	-41.2	+13.8	-154.7	
1	34	-198	+177	-252	203	21	109	
		-85.0	+26.4	-72.6	-0.1	-14.1	-102.7	
1	35	-449	+270	-396	205	359	90	
		-49.6	+43.6	-60.7	-6.9	-36.9	-110.4	
1	36	-452	+272	-353	208	357	81	
		-48.4	+47.9	-72.6	+10.9	-42.4	-107.2	
1	37	-522	+272	-317	270	352	72	
		-110.1	+55.5	-25.8	-40.6	+1.7	-156.1	
1	38	-550	+293	-310	268	353	89	
		-104.9	+52.4	-24.0	-41.2	+13.8	-154.7	
1	39	-585	+291	-320	271	353	89	
		-104.2	+47.4	-13.0	-47.2	+12.7	-157.9	
1	40	-634	+291	-312	275	354	91	
		-103.1	+49.0	-18.3	-44.4	+13.2	-161.9	
1	41	-922	+337	-290	293	358	98	P
		-89.3	+42.4	-26.9	-30.0	+5.9	-183.3	
1	42	-964	+297	-346	289	339	118	
		-72.3	+92.5	-78.7	-5.0	+2.4	-176.1	
1	43	-1029	+302	-330	271	335	75	
		-33.4	+43.8	-9.1	-18.6	-71.4	-147.0	
1	44	-1054	+304	-353	271	322	81	
		-17.0	+62.1	-46.2	+54.0	-70.7	-95.1	
1	45	-1276	+510	-364	305	310	100	
		-24.8	+50.3	-66.4	+95.5	-61.7	-113.9	
1	46	-1328	+529	-363	313	316	105	
		-32.4	+48.9	-67.4	+77.0	-62.2	-142.3	
1	47	-1391	+478	-395	320	306	166	
		-17.8	+47.4	-72.6	+78.3	-15.0	-130.9	
1	48	-1292	+476	-390	299	298	121	
		-9.7	+37.4	-49.3	+86.7	-41.3	-100.5	
1	49	-1167	+367	-385	277	299	94	
		+1.1	+45.8	-48.4	+97.1	-48.3	-69.4	

OBSS AUTO SEQUENCES (Cont)

Auto Seq ID	Auto posn	X/ SY	Y/ SP	Z/ EP	PITCH/ WP	YAW/ WY	ROLL/ WR	Pause
1	50	-1096	+300	-376	269	307	92	
		+1.9	+56.2	-49.9	+81.5	-56.5	-70.2	
1	51	-1060	+281	-389	263	313	87	
		-2.9	+48.6	-26.7	+58.0	-62.0	-75.5	
1	52	-978	+283	-384	262	320	77	
		-13.0	+63.5	-43.5	+58.4	-68.1	-79.5	
1	53	-899	+284	-386	247	319	72	P
		-9.7	+60.2	-46.1	+60.7	-64.5	-70.7	
2	54	-899	+284	-386	247	319	72	P
		-9.7	+60.2	-46.1	+60.7	-64.5	-70.7	
2	55	-550	-50	-900	100	295	345	
		+110.0	+46.1	-17.0	+100.3	-57.7	+69.9	
2	56	-150	+20	-355	241	312	350	
		+143.7	+75.9	-61.9	+13.4	+33.8	+153.8	
2	57	-164	+20	-355	241	312	350	P
		+142.3	+78.7	-65.4	+14.5	+35.0	+153.1	
3	58	-164	+20	-355	241	312	350	P
		+142.3	+78.7	-65.4	+14.5	+35.0	+153.1	
3	59	-155	+50	-373	240	314	1	
		+148.1	+84.0	-70.9	+23.9	+37.5	+152.1	
3	60	-170	+63	-305	262	328	17	
		+175.0	+56.5	-21.9	-22.8	+24.1	+185.5	
3	61	-170	+45	-330	260	328	17	
		+173.2	+51.3	-6.1	-31.1	+26.4	+184.7	
3	62	-145	+15	-315	240	300	330	
		+136.7	+51.4	-43.1	+0.9	+30.4	+150.1	
3	63	-157	+36	-319	228	286	312	
		+132.6	+21.8	-12.4	-10.1	+34.7	+141.3	
3	64	-155	-8	-336	209	295	292	
		+123.4	+50.4	-59.1	+12.5	+33.2	+137.7	
3	65	-164	+10	-288	222	289	279	
		+129.4	+29.9	-24.8	-28.2	+18.5	+151.8	
3	66	-158	+5	-320	224	292	300	
		+129.2	+41.4	-38.9	-7.6	+28.8	+146.3	
3	67	-170	+15	-380	226	295	357	
		+128.8	+46.0	-43.7	+61.1	+45.2	+104.2	
3	68	-155	+30	-335	235	305	357	
		+135.2	+66.8	-67.5	+47.2	+44.5	+130.4	
3	69	-160	+70	-340	249	330	35	
		+175.3	+85.2	-63.1	+8.8	+45.0	+181.3	
3	70	-202	+92	-330	260	327	49	
		+173.8	+68.8	-41.5	+3.2	+55.8	+172.6	
3	71	-180	+70	-360	249	329	30	
		+175.1	+88.4	-62.7	+3.8	+40.3	+181.4	
3	72	-181	+60	-395	238	297	15	
		+136.5	+54.5	-48.9	+61.4	+47.0	+108.2	
3	73	-179	+33	-405	226	295	357	
		+130.0	+53.8	-52.6	+61.1	+44.7	+106.0	

OBSS AUTO SEQUENCES (Cont)

Auto Seq ID	Auto posn	X/ SY	Y/ SP	Z/ EP	PITCH/ WP	YAW/ WY	ROLL/ WR	Pause
3	74	-185	-35	-400	180	300	310	
		+110.8	+42.4	-69.1	+89.7	+34.6	+87.0	
3	75	-179	-70	-360	161	316	268	
		+98.6	+28.0	-85.7	+88.5	+34.6	+91.9	
3	76	-171	-25	-370	163	310	273	
		+105.1	+33.6	-88.1	+89.2	+33.9	+94.0	
3	77	-170	-50	-300	163	314	245	
		+100.5	+25.8	-83.1	+57.9	+37.9	+112.4	
3	78	-205	-5	-245	182	292	230	
		+115.2	+26.7	-48.4	-14.1	+24.4	+148.9	
3	79	-210	+20	-255	154	296	195	
		+113.5	+10.5	-41.2	-18.8	+25.8	+146.4	
3	80	-208	+61	-265	147	293	187	
		+118.9	+9.2	-40.8	-19.6	+24.2	+145.8	
3	81	-175	+35	-252	151	302	189	
		+114.4	+8	-48.7	-11.7	+23.5	+140.8	
3	82	-184	-28	-256	254	308	309	
		+141.6	+45.8	-20.9	-38.5	+1.0	+167.5	
3	83	-165	+60	-295	140	295	195	
		+122.6	+0.9	-29.0	-9.1	+30.9	+134.4	
3	84	-165	-5	-305	186	295	258	
		+117.4	+40.3	-64.4	+14.2	+32.6	+135.7	
3	85	-165	-75	-340	186	295	258	
		+114.6	+29.0	-32.3	-6.9	+35.3	+136.3	
3	86	-181	-75	-340	186	295	258	P
		+113.0	+31.7	-37.2	-4.9	+36.9	+136.6	
3	87	-216	-65	-273	162	300	213	
		+105.7	+12.2	-33.7	-17.5	+33.5	+143.7	
3	88	-215	-35	-247	155	305	190	
		+104.7	+6.5	-39.6	-23.3	+25.7	+147.1	
3	89	-165	-45	-320	160	297	227	P
		+113.8	+14.2	-32.5	-2.3	+36.2	+131.5	
4	90	-165	-45	-320	160	297	227	P
		+113.8	+14.2	-32.5	-2.3	+36.2	+131.5	
4	91	-500	-280	-800	80	341	289	
		+129.3	+16.3	-56.1	+96.3	-50.5	+44.5	
4	92	-770	-290	-700	40	341	289	
		+137.1	+26.8	-51.2	+68.3	-68.9	+0.6	
4	93	-899	-290	-284	2	341	289	
		+135.0	+19.4	-47.1	+27.9	-63.6	-74.3	
4	94	-899	-252	-284	2	341	289	P
		+138.1	+23.8	-58.9	+35.3	-66.7	-74.2	
5	95	-899	-252	-284	2	341	289	P
		+138.1	+23.8	-58.9	+35.3	-66.7	-74.2	
5	96	-964	-254	-281	10	343	297	
		+131.3	+18.7	-68.2	+38.4	-60.5	-76.3	
5	97	-1027	-281	-267	13	347	304	
		+124.7	+16.1	-75.2	+39.9	-51.4	-77.4	
5	98	-1073	-322	-262	16	355	308	
		+120.7	+12.2	-81.9	+48.1	-42.7	-71.7	

OBSS AUTO SEQUENCES (Cont)

Auto Seq ID	Auto posn	X/ SY	Y/ SP	Z/ EP	PITCH/ WP	YAW/ WY	ROLL/ WR	Pause
5	99	-1208	-450	-257	15	7	319	
		+97.9	+18.9	-97.1	+47.8	-13.6	-58.7	
5	100	-1255	-500	-266	14	3	316	
		+90.7	+21.9	-82.1	+34.1	-8.6	-58.4	
5	101	-1308	-518	-269	12	3	313	
		+83.6	+25.4	-81.6	+33.2	-0.1	-56.6	
5	102	-1367	-500	-230	336	350	326	P
		+67.6	+52.8	-47.0	-47.8	+31.9	-76.5	
5	103	-1303	-481	-229	329	349	320	
		+69.2	+63.6	-53.4	-44.9	+34.8	-86.1	
5	104	-1052	-212	-197	320	322	340	
		+84.	+66.0	-60.1	-61.5	+29.8	-112.2	
5	105	-991	-186	-201	316	319	341	
		+87.3	+67.2	-59.4	-63.0	+31.5	-118.5	
5	106	-890	-188	-208	315	323	326	
		+107.1	+76.7	-69.3	-46.7	+7.4	-134.4	
5	107	-971	-215	-211	306	329	338	
		+84.1	+85.2	-65.4	-69.6	+43.5	-113.4	
5	108	-1018	-253	-218	294	332	313	
		+59.3	+74.8	-39.0	-72.7	+56.0	-115.7	
5	109	-1047	-253	-211	318	340	336	
		+94.4	+102.0	-94.2	-50.1	+27.2	-108.9	
5	110	-1172	-397	-230	305	345	311	
		+56.3	+63.3	-22.2	-69.7	+56.4	-105.2	
5	111	-1299	-484	-236	334	348	328	
		+74.3	+57.9	-49.9	-50.1	+27.9	-83.1	
5	112	-1317	-506	-252	327	352	316	
		+65.4	+64.0	-46.9	-47.6	+40.1	-86.2	
5	113	-1356	-546	-292	314	6	287	
		+36.4	+70.8	-45.6	+5.0	+67.4	-138.9	
5	114	-1323	-537	-315	346	348	282	P
		+80.9	+49.1	-50.2	+5.9	+0.6	-87.1	
5	115	-1244	-513	-305	353	357	287	
		+93.4	+63.0	-95.3	+34.6	-4.2	-77.4	
5	116	-1176	-450	-298	352	2	290	
		+107.5	+76.4	-122.8	+46.3	-12.9	-76.9	
5	117	-1106	-380	-295	352	4	291	
		+129.7	+77.1	-134.2	+56.0	-33.1	-76.8	
5	118	-1023	-300	-288	354	357	289	
		+143.2	+59.7	-116.9	+57.7	-54.0	-76.3	
5	119	-989	-275	-294	350	350	282	
		+141.9	+62.4	-105.9	+54.8	-59.0	-73.1	
5	120	-965	-267	-294	350	350	282	
		+145.2	+59.3	-101.8	+54.9	-62.2	-71.7	
5	121	-933	-261	-289	358	347	283	
		+142.4	+37.4	-82.2	+57.6	-64.1	-64.6	

OBSS AUTO SEQUENCES (Cont)

Auto Seq ID	Auto posn	X/ SY	Y/ SP	Z/ EP	PITCH/ WP	YAW/ WY	ROLL/ WR	Pause
5	122	-920	-256	-288	336	326	284	
		+121.1	+53.9	-52.5	-15.9	-53.9	-112.5	
5	123	-891	-310	-249	333	349	319	P
		+142.1	+74.0	-81.3	-26.3	-32.0	-123.2	
5	124	-575	-287	-320	271	352	294	
		+155.3	+96.8	-30.5	-53.2	-40.4	-146.1	
5	125	-255	-205	-335	249	344	289	
		+165.5	+88.2	-38.3	-33.2	-50.4	-164.3	
5	126	-525	-283	-346	223	337	286	
		+41.8	+65.7	-36.9	+18.8	+70.7	-247.8	
5	127	-459	-275	-307	221	331	292	
		+57.3	+67.9	-52.2	+23.5	+65.5	-240.3	
5	128	-556	-283	-327	241	339	303	
		+48.1	+76.0	-31.0	+18.4	+73.0	-245.1	
5	129	-573	-288	-320	264	348	301	
		+100.4	+96.4	-26.9	-59.4	+21.8	-164.8	
5	130	-702	-288	-320	270	348	301	
		+58.2	+91.1	-19.0	-58.2	+62.3	-168.5	
5	131	-904	-318	-332	319	350	290	
		+144.4	+95.3	-72.9	-25.5	-48.9	-114.5	
5	132	-889	-294	-316	317	347	288	P
		+143.7	+94.7	-73.2	-25.2	-50.2	-117.2	
5	133	-990	-272	-303	318	345	282	
		+126.3	+110.3	-92.0	-17.6	-39.1	-113.6	
5	134	-1081	-318	-360	344	352	241	
		+129.8	+85.6	-116.6	+93.9	-38.5	-44.4	
5	135	-1258	-491	-368	334	357	243	
		+83.4	+91.5	-91.4	+42.0	-9.1	-96.9	
5	136	-1345	-525	-369	339	359	245	
		+71.8	+81.7	-88.9	+49.3	+3.9	-101.1	
5	137	-1342	-480	-396	333	359	216	
		+67.2	+89.8	-87.7	+61.4	-13.0	-107.9	
5	138	-1290	-463	-396	329	358	215	
		+72.8	+95.5	-86.4	+54.2	-19.1	-104.7	
5	139	-1236	-427	-390	333	355	218	
		+88.3	+97.4	-97.0	+66.3	-23.3	-85.6	
5	140	-1120	-319	-390	339	351	222	
		+120.8	+97.3	-113.2	+95.0	-31.3	-45.5	
5	141	-1074	-305	-390	349	338	230	
		+115.5	+62.3	-83.9	+93.3	-34.8	-37.8	
5	142	-1040	-289	-390	352	347	237	
		+131.7	+66.4	-103.0	+106.8	-36.5	-29.3	
5	143	-1008	-287	-367	305	356	261	
		+137.2	+128.7	-76.4	-16.6	-51.9	-98.8	
5	144	-892	-294	-364	342	353	255	P
		+155.7	+62.3	-81.8	+91.5	-57.0	-23.9	
6	145	-892	-294	-364	342	353	255	P
		+155.7	+62.3	-81.8	+91.5	-57.0	-23.9	
6	146	-1600	+25	-985	40	0	11	
		-23.1	+45.6	-48.6	-51.4	+18.3	+26.3	
6	147	-1271	+134	-532	0	0	11	P
		-89.9	+80.2	-118.8	-59.8	+0.0	+109.9	

RMS GO/NO-GO CRITERIA (FLIGHT RULE A12-1001)

		CONTINUE OPERATIONS IF:						
		RMS UNCRADLE	CONTINUE UNLOADED	GRAPPLE UNBERTH	CONTINUE LOADED	HIGH PRIORITY	ENTRY	FLIGHT RULES REF.
A.	SHOULDER BRACE REL (1)	0 ↓ [6]						{A12-91}
B.	JETTISON SYSTEM (2)	1 ↓ [4]	1 ↓ [4]	1 ↓ [4]	1 ↓ [4]	1 ↓		{A12-181}
C.	MPM STOW MOTORS (2)	0 ↓ [6]	0 ↓ [6]	0 ↓ [6]	0 ↓ [6]	2 ↓ [6]		{A12-72}
D.	MRL LAT CAP (3)	[1]	[1]	[1]	[1]	[5]		{A12-73}
E.	MPM (4) STOWED INDICATIONS (8)						[2]	{A12-72}
F.	MPM (4) DEP INDICATIONS (8)	SHOULDER 1 ↓	SHOULDER 1 ↓	SHOULDER 1 ↓	SHOULDER 1 ↓	SHOULDER 1 ↓		{A12-72}
G.	MRLs LATCHED (3)						1 ↓	{A12-73}
H.	MANUAL AUG MODE (1)					3 ↓ [7]		{A12-111}
I.	DIRECT MODE (1)	1 ↓	1 ↓	1 ↓	1 ↓			{A12-111}
J.	SINGLE MODE (1)							{A12-111}
K.	BACKUP MODE (1)	0 ↓	0 ↓	0 ↓	0 ↓			{A12-111}
L.	BRAKES (6)	WRIST ROLL ↓	WRIST ROLL ↓	0 ↓	0 ↓	0 ↓		{A12-115}
M.	AUTO BRAKES (1)	0 ↓ [3]	0 ↓ [3]	0 ↓ [3]	0 ↓ [3]	0 ↓ [3]		{A12-116}
N.	CAPTURE & RIGIDIZE (2)			1 ↓		1 ↓		{A12-161}
O.	DERIGIDIZE (2)			1 ↓	1 ↓	2 ↓		{A12-161}
P.	RELEASE (2)			1 ↓ [6]	1 ↓ [6]	2 ↓ [6]		{A12-161}
Q.	BACKUP, RELEASE (1)			0 ↓ [6]	0 ↓ [6]			{A12-161}
R.	THERMAL (DEG F) -20(0), 176(172), LED -20(0), 147(144), ABE(EF) -20(0), 110(106) ABE(SPA)	REQUIRED	REQUIRED	REQUIRED	REQUIRED	REQUIRED		{A12-3}

@[113095-1809A] @[111298-6744] @[110900-7257]

NOTES:

- [1] CONTINUE OPERATIONS IF ONE FAILURE WILL NOT RESULT IN THE INABILITY TO LATCH AT LEAST TWO MRLs
- [2] ONE AT THE SHOULDER AND ONE AT EITHER THE MID OR AFT PEDESTAL IS REQUIRED
- [3] OPERATIONS IN DIRECT AND BACKUP CAN CONTINUE WITH THE LOSS OF AUTOBRAKES
- [4] RMS SYSTEM REDUNDANCY OR JETT REDUNDANCY IFM REQUIRED. @[113095-1809A]
- [5] CONTINUE OPERATIONS EVEN IF ONE FAILURE WILL RESULT IN THE INABILITY TO LATCH AT LEAST TWO MRLs (ASSUMES CURRENTLY HAVE TWO-LATCH CAPABILITY). EVA CAPABILITY REQUIRED. @[110900-7257]
- [6] EVA CAPABILITY EXISTS FOR THE FOLLOWING CONTINGENCIES:
 - SHOULDER BRACE RELEASE
 - MPM DEPLOY/STOW
 - RMS STRAPDOWN
 - GRAPPLE FIXTURE (GF) RELEASE
- [7] ONE OF SINGLE, DIRECT, OR BACKUP REQUIRED FOR UNCRADLING. @[110900-7257]

FLIGHT RULE REFERENCES

DAP CONSTRAINTS TABLE

SCENARIO	CONDITION	VERN	PRCS ATT CONTROL	PRCS TRANS	OMS
Unloaded (or EVA Ops < 1000 lb)	Pre-cradle or cradled with at least 2 of 3 MRLs latched	GO	GO	GO	GO
	< 5 ft from structure	GO	NO GO	NO GO	NO GO
	≥ 5 ft from structure	GO	GO	GO	NO GO
	Singularity/Reach Limit	GO	NO GO	NO GO	NO GO
	TEST mode	GO	NO GO	NO GO	NO GO
	EE Ops	GO	NO GO	NO GO	NO GO
Loaded (or EVA Ops > 1000 lb)	< 2 ft from structure	NO GO	NO GO	NO GO	NO GO
	Singularity/Reach Limit	NO GO	NO GO	NO GO	NO GO
	TEST mode (unless grappled to a constrained PL)	NO GO	NO GO	NO GO	NO GO
	Maneuvering 1000 lb < PL < 8000 lb (outside 2 ft)	GO	NO GO	NO GO	NO GO
	Maneuvering PL > 8000 lb	NO GO	NO GO	NO GO	NO GO
	Free Flyer EE Ops	NO GO	NO GO	NO GO	NO GO
	Constrained Payload EE Ops	GO	NO GO	NO GO	NO GO
	Grappled to a constrained PL	GO	GO	GO	GO

UNATTENDED ARM CONSTRAINTS

THE RMS MAY BE LEFT **UNATTENDED** IF:

ARM SELECTED

BRAKES ON

MODE NOT DIRECT

JOINT SWITCH IS CRIT TEMP

MCIU MAINTAINS I/O WITH GPC

RMS/PAYLOAD CLEARANCE **GREATER THAN 5 FT**

ORBITER PROXIMITY CONSTRAINTS

Condition	GO IF:
Coarse	> 10 ft from structure
Rate Hold	> 10 ft or moving away from structure
OCAS/ACAS	> 5 ft from structure

SPEC 95 ABE OVERRIDES

SPEC 95 MCIU Override: ABE OVRD	SPEC 96 Fault '↓'	Autobrakes
A	TACHOMETER MICROCOMPUTER POS ENCODER	YES YES YES
B	SPA CMTR MDA DMND BRAKE	YES YES YES
C	TACH TCO A/D CONV	YES YES
No override exists for these failures	MDA OVERCURRENT/ MOTOR DRV FAULT BACKUP RELAY DIRECT DRIVE BITE	NO NO NO

- A 2nd failure of a different type (A, B, or C) for a different joint may be overridden
- A 2nd failure of the same type (A, B, or C) for a different joint will be annunciated, will be protected by autobrakes, and cannot be overridden

For example, firmware cannot override two MDA Demand Voltage failures. If a subsequent failure occurs of the same type on another joint, it will be annunciated and protected by autobrakes

RMS MODE RESPONSE MATRIX

		EE	ORB UNL/ TEST	ORB LD			PL	SINGLE/ IDLE	DIRECT		
				NORM	FLY-CAMR	FLY-PL					
POR	POS/ATT	PL ID 0		PL ID X							
HC RESPONSE	THC	EEOS	OBAS	FCTS	FPTS	PLOS			N/A		
	RHC	EEOS	ORAS	FCRS	FPRS	PLOS					
CONSISTENCY CHK AND RATE LIMS	LRLF	PL ID X									
	NO LF	PL ID 0									

NOTES:

1. PL ID 0 indicates tip of end effector. PL ID X indicates flight specific POR.
2. Fly-Payload Translation System (FPTS) and Fly-Payload Rotational System (FPRS) are defined by ITEMS 21 thru 23 on SPEC 94.
3. Fly-Camera Translation System (FCTS) and Fly-Camera Rotational System (FCRS) are opposite of FPTS and FPRS respectively.
4. While SPEC 94 ITEM 30 set to ORB, POR position is expressed in OBAS and POR attitude is expressed in ORAS. SPEC 94 ITEM 30 REL will display the errors between the current POR position/attitude and the desired POR position/attitude loaded on SPEC 94 ITEMS 18-23. REL will provide these errors such that the operator shall remove the errors (fly them to 0) as if they were commanding in the OBAS (for translations) and ORAS (for rotations) reference frames. As a result of the conversion of the HC inputs required in OBAS/ORAS, REL numbers may change with the mode selected.
5. The GPC loaded rate limit flag (LRLF) must be set in order to achieve loaded rate limits and loaded consistency checks in PL IDs 1 thru 5. If the LRLF is not set, software will assume unloaded rate limits and consistency check parameters independently of current PL ID. The LRLF is set when both EE CAPTURE and EE RIGID MSWs are gained (tb-gray). The LRLF is set to OFF when both EE CAPTURE and EE RIGID MSWs are lost (tb-bp) and EE DERIGID MSW is gained (tb-gray). In the event of EE CAPTURE or EE RIGID MSW failure, a SPEC 95 ITEM entry can be used to force the LRLF to be set.

To Set Loaded Rates:

Rig	Cl	Cap
☐	☐	☐
Derig	Op	Ext
☐	☐	☐


To Set Loaded Rates OFF:

Rig	Cl	Cap
☐	☐	☐
Derig	Op	Ext
☐	☐	☐


HAND CONTROLLER AXIS SWAP

Lost THC Axis	Regain POR Translation Using SPEC 95 ITEMS 32,33
IN	UP
OUT	DOWN
LEFT	IN
RIGHT	OUT
UP	LEFT
DOWN	RIGHT


Lost RHC Axis	Regain POR Rotation Using SPEC 95 ITEMS 32,34
PITCH UP	ROLL RIGHT
PITCH DOWN	ROLL LEFT
YAW LEFT	PITCH DOWN
YAW RIGHT	PITCH UP
ROLL LEFT	YAW LEFT
ROLL RIGHT	YAW RIGHT

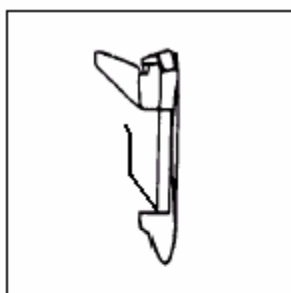


THC AXIS CHANGE
ORB UNL MODE

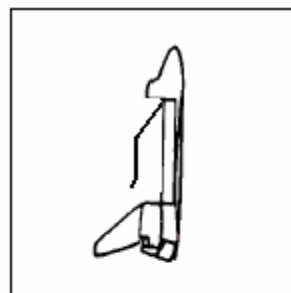

RHC AXIS CHANGE
ORB UNL MODE

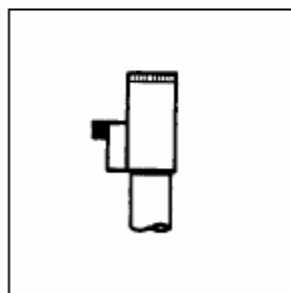

THC AXIS CHANGE
EE MODE

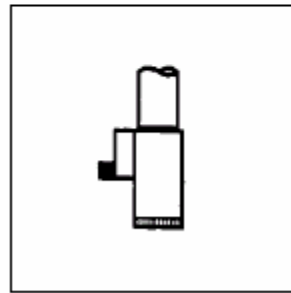

RHC AXIS CHANGE
EE MODE

RMS/EVA VOICE PROTOCOL (GCA)

RMS Maneuvering SHUTTLE VOICE PROTOCOL for EVA Operations

COMMAND	MEANING
No More (commanded motion)	stop commanded motion only
Stop Motion	stop all motion
ALL STOP, ALL STOP, ALL STOP	stop all motion, brakes on (unexpected motion observed)

BODY-REFERENCED COMMANDS

(Translations relative to EVA crewmember)

TRANSLATIONAL COMMANDS	MEANING
IN	straight ahead (out of EVA's chest)
OUT	directly behind (out of EVA's back)
LEFT	to EVA's left
RIGHT	to EVA's right
UP	directly above EVA's head
DOWN	directly below EVA's feet

(Rotations relative to EVA crewmember)

ROTATIONAL COMMANDS	MEANING
PITCH UP	rotate toward EVA's head
PITCH DOWN	rotate toward EVA's feet
YAW RIGHT	rotate about EVA's long axis to right
YAW LEFT	rotate about EVA's long axis to left
ROLL RIGHT	rotate toward EVA's right shoulder
ROLL LEFT	rotate toward EVA's left shoulder

ORBITER-REFERENCED COMMANDS

(used to command translations only)

COMMAND	MEANING
INTO THE BAY	OBAS +Z
OUT OF THE BAY	OBAS -Z
SHUTTLE FORWARD	toward orbiter's nose along OBAS +X axis
SHUTTLE AFT	toward orbiter's tail along OBAS -X axis
SHUTTLE PORT	toward orbiter port along OBAS -Y axis
SHUTTLE STARBOARD	toward orbiter starboard along OBAS +Y axis

STATION-REFERENCED COMMANDS



(used to command translations only)

COMMAND	MEANING
ZENITH	ISSACS -Z
NADIR	ISSACS +Z
STATION FORWARD	ISSACS +X
STATION AFT	ISSACS -X
STATION STARBOARD	ISSACS +Y
STATION PORT	ISSACS -Y

ALL-STOP PROTOCOL

VOICE CMD TO CREW	MEANING	ACTION
‘Stop Motion’ (or other similar request for nominal stop of arm motion)	Stop commanded arm motion, situation is nominal	Smoothly release HCs to stop motion. If in Auto Mode, AUTO SEQ switch – STOP If motion continues, BRAKES – ON If motion still continues, RMS SELECT – OFF
‘All Stop, All Stop, All Stop’	Emergency situation. Stop all motion immediately	Expediently release HCs and stop motion with BRAKES – ON If motion continues, RMS SELECT – OFF
<u>Notes:</u> 1. This table is designed to protect for the worst-case situation (impending structural contact, dangerous EVA condition, unexpected arm motion, arm malfunction, etc) 2. Voice Commands can come from several sources: EVA, MCC, R2/M2, or any crewmember 3. The words “All Stop” are reserved for emergency situations (and repeated three times) 4. In an emergency situation, whoever is giving the “All Stop, All Stop, All Stop” voice command should consider repeating it, in case of poor comm 5. If “All Stop” is heard just once, the arm operator should quickly assess tone of voice and where it came from. If in doubt, treat as an emergency situation. When “All Stop” is heard twice or more, treat as an emergency situation		

ORBITER LOCATION CHART

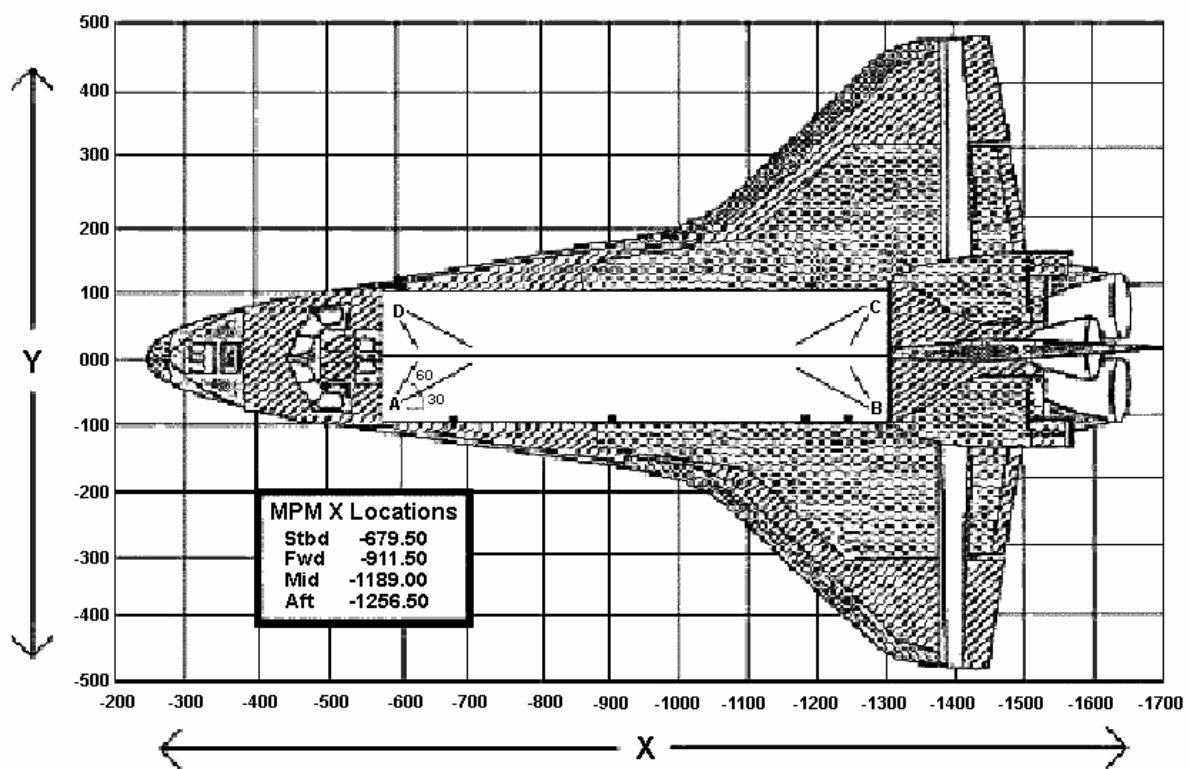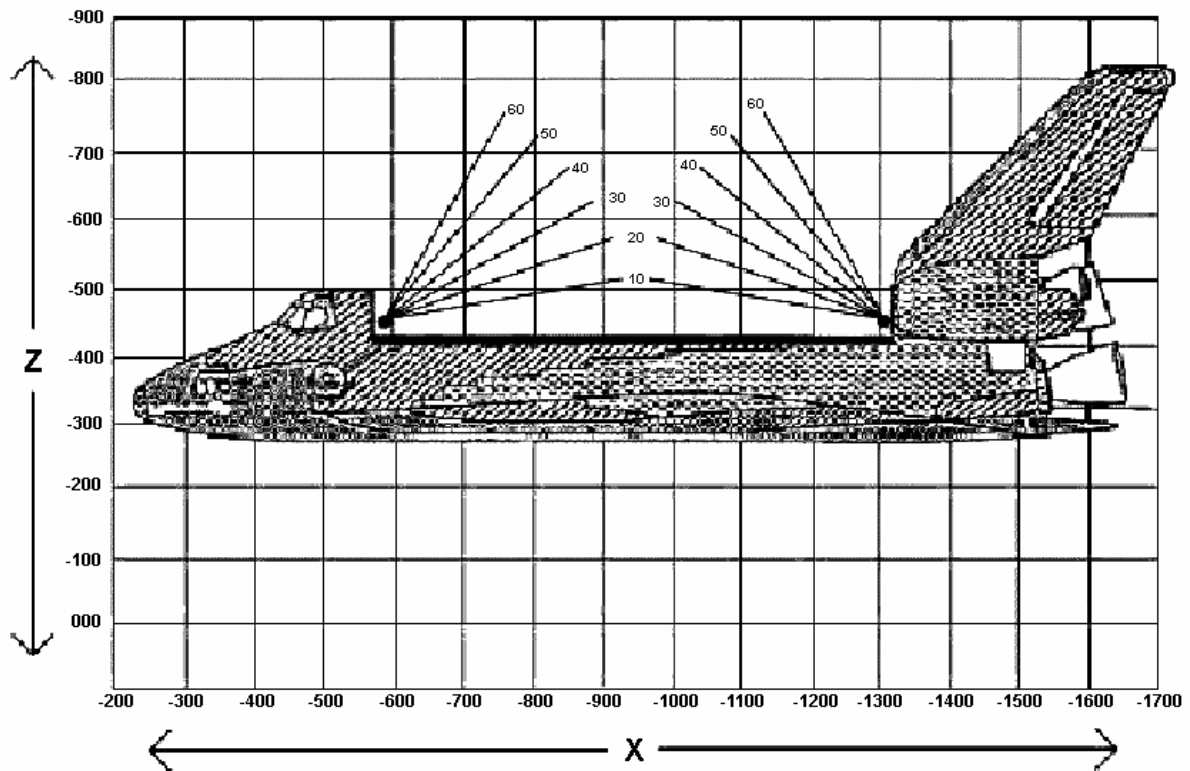

END EFFECTOR CAPTURE/RELEASE SEQUENCE INFO

CAPTURE (AUTO)	RELEASE (*DOBE)
EE mode: AUTO RHC trig: Down (momentary) EE mode: Off EE mode: MAN RHC trig: Down (hold until Close or 3 sec) EE R/D: Rigid (hold until Rigid or 25 sec) EE mode: Off 3rd 5s Rig 6 1st 3s Cl 3 Cap 2 Derig 5 20s 2nd Op 1 Ext 4	EE mode: AUTO [If SJ: choose Man] RHC trig: Up (momentary) After Open: Backaway EE mode: Off EE mode: MAN EE R/D: Derigid (hold until Derigid or until 5 sec) RHC trig: Up (hold until Open or 3 sec) After Open: Backaway EE R/D: Derigid (hold until Extend or 20 sec) EE mode: Off Rig 1 Cl 3 Cap 4 Derig 2 5s 1st Op 5 3s 2nd Ext 6 20s 3rd * DOBE – Derigid, Open, Backaway, Extend

EE AUTO COMMAND LOGIC TRUTH TABLE

MCIU COMMAND	CRITICAL FLAG STATUS TO MCIU					
	EXTEND	CAPTURE	RIGID	OPEN	CLOSE	DERIGID
CAPTURE	X	X	X	X	OFF	X
RIGIDIZE	X	ON	OFF	X	ON	X
DERIGIDIZE	OFF	X	X	X	X	OFF
RELEASE	X	X	X	OFF	X	ON
DERIG. TO EXT	OFF	X	X	ON	X	ON

WHERE X = OFF OR ON

RMS EE C/O FAILURE MATRIX

General notes:

1. Table is designed for a single failure only
2. Rows #1 through #29 are for steps where the expected motor function does not start, does not complete, or takes longer than expected time
3. Row #30 is for C&W that occurs during the procedure, but does not affect motor function
4. Rows #31 through #36 are for microswitch failures where motor function is not affected
5. Rows #37 through #41 are for uncommanded motion that occurs when the EE MODE sw is taken out of OFF

#	Problem	Failure	Impacts	Workaround	Notes
1	Step a	EE Mode sw Man Cap/Rel contact or pole shorted to Man	Auto Close/Open lost for pole failure. Otherwise, full EE functionality remains. However, Auto Rig/Derig will not start until RHC Cap/Rel sw is released. EE snares will drive (or stall) as long as RHC Cap/Rel sw is out of detent. Motor burnout could occur	EE Manual modes. Backup release. Trigger guard provides protection from uncommanded PL release	
2	Steps b, c, and j	(1) EEEU logic ckt, (2) EE mech, (3) EE motor module, (4) EE mode sw "fly-apart"	All EE functions lost	D&C IFM Kit for (4)	For (1), may receive 'S96 PDRS CKCRT EE.' For (4), crew can detect switch feels loose, and ground can detect loss of 10V pole
3	Steps b, c, k, and l	EEEU logic ckt	Close and derigidize lost	None. EE non-functional	
4	Steps b, c, and o	RHC Cap/Rel sw "fly-apart" or stuck	Close, Open, and Auto Rig/Derig lost	D&C IFM Kit	Crew should be able to detect that switch feels loose or stuck, and ground can detect loss of 10V pole
5	Steps b and c	(1) EE Mode sw Cap/Rel pole, (2) K2 relay, (3) EEEU logic ckt, (4) snare mech, (5) RHC Cap/Rel sw mech "hangup"	EE Auto and Man Close lost. Auto and Man Open may be lost. Direct Drive down for K2 relay (both poles)	D&C IFM Kit for (1), (2), or (5)	For (3), may receive 'S96 PDRS CKCRT EE.' For (5), crew can feel and ground can detect loss of 10V pole
6	Steps b, d, and j	(1) EE Man Contr sw derig contact short, (2) EE Man Zener diode stack, (3) D&C panel 28V filter	All EE Man functions lost. Direct drive lost and Safing tb – bp for (3)	Auto capture/release. Backup Release. D&C IFM Kit	EE Man Derig remains for (1) by using EE Mode sw to initiate. For (2), Man Open may be available with Close cmd and Man Derig may be available with Rigid cmd
7	Steps b and d	(1) RHC Cap/Rel sw Manual pole open, (2) EE Mode sw Manual Cap/Rel contact open	EE Man Close and Open lost	Auto capture/release. D&C IFM Kit	
8	Steps b and j	EE Man Zener diode	EE Man Close and Man Rigid lost	Auto Capture. D&C IFM Kit	Closing snares in Man will drive snares Open or stall motor. Rigidizing in Man will Extend carriage or stall motor
9	Step b	RHC Cap/Rel sw Manual Cap contact open	EE Manual Close lost	Auto capture. D&C IFM Kit	

RMS EE C/O FAILURE MATRIX (Cont)

#	Problem	Failure	Impacts	Workaround	Notes
10	Steps d, g, and j	EEEE logic ckt	Auto/Man Open and Rigid lost	None. EE non-functional	
11	Steps d, g, and k	EEEE logic ckt	Auto/Man Open and Derigid lost	None. One grapple remains with carriage partially retracted	Commanding open will close the snares or stall motor, and commanding derigidize will rigidize or stall motor. PL alignment is critical due to smaller capture envelope
12	Steps d, g, k, and l	EEEE logic ckt	Auto/Man Open and Derigid lost	None. One grapple remains with carriage partially retracted	PL alignment is critical due to smaller capture envelope
13	Steps d, g, and o	RHC Cap/Rel sw mechanical hangup	Auto/Man Open and Auto Derig lost	Manual Derigidize. Backup Release. D&C IFM Kit	Crew should be able to feel that sw does not go into detent
14	Steps d and g	EEEE logic ckt	EE Auto and Man Open lost	Backup Release	May receive 'S96 PDRS CKCRT EE'
15	Steps d and k	EE Man Zener diode	EE Man Open and Derig lost	Auto release. D&C IFM Kit	Opening snares in Man will Close snares or stall motor. Derigidizing in Man will Rigidize carriage or stall motor
16	Step d	RHC Cap/Rel sw Manual Rel contact open	EE Manual Open lost	Auto/Backup release. D&C IFM Kit	
17	Steps e, g, and o	(1) RHC Cap/Rel sw Auto pole open, (2) EE Mode sw 10V pole or contact open, (3) MCIU auto logic, (4) D&C-to-MCIU word comm	All EE Auto functions lost. No limping in EE Man mode for (2) pole, or (4). For (1) and (4), RELEASE It cannot be extinguished using Capture switch. For (4), DERIGIDIZE It cannot be extinguished using MAN CONTR sw	Manual EE ops. Backup release. MCIU changeout for (3). Cycle I/O or RMS Select sw to extinguish RELEASE or DERIGIDIZE Its and to reset software checks	For (1), manual payload release will be accompanied by 'PDRS REL.' For (4), manual payload release will be accompanied by 'PDRS REL' and 'PDRS DERIG.' For (1), (2), or (4) ground can detect. For (3), 'S96 PDRS CKCRT EE'. For (4), step k accompanied by 'PDRS DERIG'
18	Steps e and g	EE Mode sw Auto Cap/Rel contact open	EE Auto Close and Open lost	Manual close/open. Backup release	
19	Step e	(1) RHC Cap/Rel sw Auto Cap contact open, (2) Close MSW failed to CLOSE, (3) MCIU auto logic	EE Auto Close lost. Auto Rigidize lost for (1) and possibly (3) No limping in EE MAN mode during Close for (1)	Manual close/rigidize. MCIU changeout for (3)	For (2) or (3), 'S96 PDRS CKCRT EE.' For (2), Derig MSW could also be affected if failure is in WR SPA. Ref rows #21 or #34 for impacts to Derig MSW
20	Steps g and o	(1) RHC Cap/Rel sw Auto Rel contact open, (2) MCIU auto logic	EE Auto Open and Derig lost	Manual open/derigidize. Backup release. MCIU changeout for (2)	For (1), manual payload release will be accompanied by 'PDRS REL.' For (2), 'S96 PDRS CKCRT EE'
21	Step g	(1) Open MSW failed OPEN, (2) Derig MSW failed to not DERIG, (3) MCIU auto logic	EE Auto Open lost. For (2), unable to clear Loaded Rate Limit Flag after PL Capture	Manual open. Backup release. For (2), to get unloaded rates after PL release, use SM94 PL ID 0. MCIU changeout for (3)	'S96 PDRS CKCRT EE.' For (1), Rigid MSW may also be affected if failure is in WY SPA. Ref row #35 for impacts to Rigid MSW
22	Step h	(1) Backup PL Release sw, (2) Backup Release clutch, (3) Backup drive mech failure	Backup PL release lost. One failure from loss of PL release capability	Auto/Man release	

RMS EE C/O FAILURE MATRIX (Cont)

#	Problem	Failure	Impacts	Workaround	Notes
23	Steps i and o	EE Mode sw Rig/Derig pole shorted to Man	EE Auto Rigid/Derigid lost. EE carriage will drive or stall as long as EE Man Contr sw is out of detent. Motor burnout could occur	Manual Rigid/Derigid	
24	Step i	EE Mode sw Man Rig/Derig contact short	Full EE functionality remains. EE carriage will drive or stall as long as EE Man Contr sw is out of detent. Motor burnout could occur	Use EE Auto modes to minimize cycles on EE Man Contr sw	
25	Step j	(1) EE Man Contr sw contact or pole, (2) EE Mode sw Rig/Derig contact or pole, (3) EEEU logic ckt, (4) K1 relay, (5) carriage mech	EE Man Rigid lost (unable to test Derig, Auto Rigid)	Auto rigidize remains for (1) or (2) contact. D&C IFM Kit for (1), (2), or (4). None for (3) or (5)	Need GF to test Auto Rigid and Derigid function. Safing tb bp for (4) if both poles
26	Steps k and l	EEUU logic ckt	EE Auto and Man Derig lost	None. One grapple remains with carriage partially retracted	May receive 'S96 PDRS CKCRT EE.' PL alignment is critical due to smaller capture envelope
27	Steps k and n	EE Man Contr sw contact open	EE Man Derig lost	Auto release. D&C IFM kit	
28	Step o	(1) EE Mode sw Auto Rig/Derig contact open, (2) Extend MSW failed to EXTEND, (3) Open MSW failed to not OPEN, (4) MCIU auto logic	EE Auto Derig lost. Auto rigidize lost for (1) and possibly (4). For (3), motor will continue to drive until EE Mode sw OFF	Manual rig/derig. MCIU changeout for (4)	For (2) or (4), 'S96 PDRS CKCRT EE.' For (2), auto PL release lost if carriage retracted beyond Derig. Also, Capture MSW may also be affected if failure in WP SPA and may additionally receive 'PDRS REL.' For (3), only Derig-to-Extend lost. Also, Rigid MSW may also be affected if failure is in WY SPA. Ref row # 35 for impacts to Rigid MSW
29	Steps m, n, o, and p	(1) Carriage mechanical jam, (2) motor failure during motion	For (1) Auto/Man rigidize/derigidize lost. For (2) all EE functions lost	None. EE non-functional	
30	'PDRS DERIG' during Man Derigid	Man Contr sw 10V contact or pole	For pole failure, no limping during Man Rigidize and DERIGIDIZE It cannot be extinguished using MAN CONTR sw	EE Auto to prevent nuisance alarm and allow limping. Cycle I/O or RMS Select sw to extinguish DERIGIDIZE It and to reset software check	Ground can tell if pole failed
31	Capture MSW always indicating CAPTURE	Capture MSW logic circuit	CK CRT It when snares open. Auto Capture will continue and rigidize carriage without grapple fixture present. Loss of EE Release C/W. Inability to reset loaded rate limit flag	Use SM 94 PL ID 0 for unloaded rates	CK CRT It and 'S96 PDRS CKCRT EE' when snares Open
32	Close MSW always indicating 'not CLOSED'	Close MSW logic circuit	Loss of EE Auto rigidize function	EE Manual Rigidize. Terminate EE snare close function after 3 sec	
33	Extend MSW always indicating 'not EXTENDED'	Extend MSW logic circuit	Carriage will continue to drive (and stall) until EE mode sw OFF for EE Auto Release. Motor burnout possible	Time derigidize-to-extend function and terminate after 20 sec	

RMS EE C/O FAILURE MATRIX (Cont)

#	Problem	Failure	Impacts	Workaround	Notes
34	Derig MSW always indicating DERIGID	Derig MSW logic circuit	EE Auto PL Release will open snares from fully Rigid position	EE Man modes. Derigidize carriage in EE Man (5 sec) prior to performing Auto PL release	CK CRT It and 'S96 PDRS CKCRT EE' when carriage is Rigid
35	Rigid MSW always indicating 'not RIGID'	Rigid MSW logic circuit	Carriage will continue to drive (and stall) during auto capture until EE Mode sw OFF. Motor burnout possible. Loss of Loaded Rate Limit Flag. Uncommanded Derigidize Warning lost	Time rigidize function and terminate after 25 sec. SM 95 available to set loaded rates after capture	
36	Rigid MSW always indicating RIGID	Rigid MSW logic circuit	Auto Rigid lost. Uncommanded Derigidize Warning lost	EE Man modes. Time manual rigidize function and terminate after 25 sec. PL ID 0 available for unloaded rates after PL release	CK CRT It and 'S96 PDRS CKCRT EE' when carriage is Derigid or Extend
37	Snares Close w/o cmd in EE Mode Man	RHC Cap/Rel sw contact or pole short	All EE Man functions lost except Close. If contact short, Open also available while holding sw. Motor burnout can occur while EE Mode sw – Man	EE auto modes. Backup release. D&C IFM Kit	
38	Snares Open w/o cmd in EE Mode Man	RHC Cap/Rel sw contact or pole short	All EE Man functions lost except Open. Motor burnout can occur while EE Mode sw – Man	EE auto modes. D&C IFM Kit	
39	Carriage rigidizes w/o cmd in EE Mode Man	EE Man Contr sw contact or pole short	All EE Man functions lost except Rigid. If contact short, Derigid available while holding sw. Motor burnout can occur while EE Mode sw – Man	EE auto modes. Backup release. D&C IFM Kit	
40	Snares Close w/o cmd in EE Mode Auto	RHC Cap/Rel sw contact or pole short	EE Auto Release lost. Auto Capture available using EE Mode sw to initiate. Limping present while EE Mode sw in Man unless Rigid	EE Man modes. Backup release	Ground can detect if contact or pole short. Uncommanded Release warning unavailable
41	Snares Open and carriage derigidizes w/o cmd in EE Mode Auto	RHC Cap/Rel sw contact or pole short	For contact short, all EE Auto functions remain, but Auto Capture will reverse after completion. If pole short, loss of Auto Cap and limping during Man Close	EE Man modes	Ground can detect if contact or pole short

PDRS EPS IMPACT TABLE

Bus Lost				Equipment Lost
MNA	FPC1	AC1 3Φ	ΦA	MCIU Shoulder Brace Release Mtr A8 Digitals Primary Panel Lighting
			PBM MMC1	Port Mid MRL Mtr Sys 1 Stbd Fwd MRL Mtr Sys 2 PRLA 1/Lat 1-5 Mtr Sys 1 PRLA 2/Lat 1-5 Mtr Sys 1 PRLA 3/Lat 1-5 Mtr Sys 1
			PBM MMC3	Port Aft MRL Mtr Sys 2 Stbd Aft MRL Mtr Sys 1
			O14&A8	
	R14		Monitor 1 Camera C Camera D	
	A6&A14		PRLA 1/Lat 1-5 Mtr Sys 1 PRLA 2/Lat 1-5 Mtr Sys 1 PRLA 3/Lat 1-5 Mtr Sys 1	
	MPC1	Primary Power Payload Power Port & Stbd Heater Sys A Port MPM STO/DEP tb		
		MMC1	Port Mid MRL Mtr Sys 1 Stbd Fwd MRL Mtr Sys 2 Port Mid MPM STO/DEP msw Sys 2 Port Mid MRL LAT/REL/RTL msw Sys 1 Stbd Aft MPM STO/DEP msw Sys 1 Stbd Fwd MRL LAT/REL/RTL msw Sys 2 Port MRL LAT/REL tb Port Mid MRL RTL tb Stbd MPM STO/DEP tb	
		MMC3	Port Aft MRL Mtr Sys 2 Stbd Aft MRL Mtr Sys 1 Port Aft MRL LAT/REL/RTL msw Sys 2 Stbd Aft MRL LAT/REL/RTL msw Sys 1 Port Fwd MPM STO/DEP msw Sys 1 Port Aft MPM STO/DEP msw Sys 1 Stbd Mid MPM STO/DEP msw Sys 2 Stbd MRL LAT/REL tb Stbd Aft MRL RTL tb	
	ML86B		Stbd MRL Deadface Relays Stbd Guillotine Sys A Stbd Jettison Sys A	

PDRS EPS IMPACT TABLE (Cont)

Bus Lost		Equipment Lost
CNTLAB1		Port Fwd MRL Mtr Sys 1 Port Mid MRL Mtr Sys 1 Port Aft MRL Mtr Sys 2 Stbd Fwd MRL Mtr Sys 2 Stbd Mid MRL Mtr Sys 1 Stbd Aft MRL Mtr Sys 1 PRLA 1/Lat 1-5 Mtr Sys 1 PRLA 2/Lat 1-5 Mtr Sys 1 PRLA 3/Lat 1-5 Mtr Sys 1
CNTLAB3	MNA MMC1	Port Mid MRL Mtr Sys 1 Stbd Fwd MRL Mtr Sys 2 Port Mid MPM STO/DEP msw Sys 2 Port Mid MRL LAT/REL/RTL msw Sys 1 Stbd Aft MPM STO/DEP msw Sys 1 Stbd Fwd MRL LAT/REL/RTL msw Sys 2 Stbd MPM STO/DEP tb Port MRL LAT/REL tb Port Mid MRL RTL tb
	MNA MMC3	Port Aft MRL Mtr Sys 2 Stbd Aft MRL Mtr Sys 1 Port Aft MRL LAT/REL/RTL msw Sys 2 Stbd Aft MRL LAT/REL/RTL msw Sys 1 Port Fwd MPM STO/DEP msw Sys 1 Port Aft MPM STO/DEP msw Sys 1 Stbd Mid MPM STO/DEP msw Sys 2 Stbd MRL LAT/REL tb Stbd Aft MRL RTL tb

PDRS EPS IMPACT TABLE (Cont)

Bus Lost				Equipment Lost	
MNB	FPC2	AC2 3Φ	ΦA	B/U Panel Lighting	
			PBM MMC2	Port MPM Mtr Sys 2 Stbd MPM Mtr Sys 1 Port Fwd MRL Mtr Sys 1 Stbd Aft MRL Mtr Sys 2	
				PBM MMC3	PRLA 1/Lat 1-5 Mtr Sys 2 PRLA 2/Lat 1-5 Mtr Sys 2 PRLA 3/Lat 1-5 Mtr Sys 2
					PBM MMC4
	O15&A7&A8			B/U Power Port & Stbd Heater Sys B	
	R14			Monitor 2 VPU Camera A RMS (Elbow & Wrist) Cameras	
	A6&A14			PRLA 1/Lat 1-5 Mtr Sys 2 PRLA 2/Lat 1-5 Mtr Sys 2 PRLA 3/Lat 1-5 Mtr Sys 2	
	MPC2	B/U Power Port & Stbd Heater Sys B Port MPM STO/DEP tb			
		MMC2	Port MPM Mtr Sys 2 Stbd MPM Mtr Sys 1 Port Fwd MRL Mtr Sys 1 Stbd Aft MRL Mtr Sys 2 Port Mid MPM STO/DEP msw Sys 1 Port Fwd MRL LAT/REL/RTL msw Sys 1 Stbd Aft MRL LAT/REL/RTL msw Sys 2 Port MRL LAT/REL tb Port Fwd MRL RTL tb		
			MMC4	Port Mid MRL Mtr Sys 2 Stbd Fwd MRL Mtr Sys 1 Stbd Mid MRL Mtr Sys 1 Port Mid MRL LAT/REL/RTL msw Sys 2 Stbd Fwd MRL LAT/REL/RTL msw Sys 1 Stbd Mid MRL LAT/REL/RTL msw Sys 1 Port Shoulder MPM STO/DEP msw Sys 2 Stbd Fwd MPM STO/DEP msw Sys 1 Stbd MRL LAT/REL tb Stbd Fwd MRL RTL tb Stbd Mid MRL RTL tb	
	ML86B			Port MRL Deadface Relays Port Guillotine Sys A Port Jettison Sys A	

PDRS EPS IMPACT TABLE (Cont)

Bus Lost		Equipment Lost
CNTLBC1		Stbd MPM Mtr Sys 1 Port MPM Mtr Sys 2
	AC2 PBM MMC2	Port MPM Mtr Sys 2 Stbd MPM Mtr Sys 1 Port Fwd MRL Mtr Sys 1 Stbd Aft MRL Mtr Sys 2
	AC2 PBM MMC3	PRLA 1/Lat 1-5 Mtr Sys 2 PRLA 2/Lat 1-5 Mtr Sys 2 PRLA 3/Lat 1-5 Mtr Sys 2
	AC2 PBM MMC4	Port Mid MRL Mtr Sys 2 Stbd Mid MRL Mtr Sys 1
CNTLBC2	AC2 PBM MMC2	Port MPM Mtr Sys 2 Stbd MPM Mtr Sys 1 Port Fwd MRL Mtr Sys 1 Stbd Aft MRL Mtr Sys 2
	AC2 PBM MMC3	PRLA 1/Lat 1-5 Mtr Sys 2 PRLA 2/Lat 1-5 Mtr Sys 2 PRLA 3/Lat 1-5 Mtr Sys 2
	AC2 PBM MMC4	Port Mid MRL Mtr Sys 2 Stbd Mid MRL Mtr Sys 1
CNTLBC3	MNB MMC2	Port MPM Mtr Sys 2 Stbd MPM Mtr Sys 1 Port Fwd MRL Mtr Sys 1 Stbd Aft MRL Mtr Sys 2 Port Mid MPM STO/DEP msw Sys 1 Port Fwd MRL LAT/REL/RTL msw Sys 1 Stbd Aft MRL LAT/REL/RTL msw Sys 2 Port MRL LAT/REL tb Port Fwd MRL RTL tb
	MNB MMC4	Port Mid MRL Mtr Sys 2 Stbd Fwd MRL Mtr Sys 1 Stbd Mid MRL Mtr Sys 1 Port Mid MRL LAT/REL/RTL msw Sys 2 Stbd Fwd MRL LAT/REL/RTL msw Sys 1 Stbd Mid MRL LAT/REL/RTL msw Sys 1 Port Shoulder MPM STO/DEP msw Sys 2 Stbd Fwd MPM STO/DEP msw Sys 1 Stbd MRL LAT/REL tb Stbd Fwd MRL RTL tb Stbd Mid MRL RTL tb

PDRS EPS IMPACT TABLE (Cont)

Bus Lost				Equipment Lost
MNC	FPC3	AC3 3Φ	PBM MMC2	Port Aft MRL Mtr Sys 1 Stbd Mid MRL Mtr Sys 2
			PBM MMC4	Port MPM Mtr Sys 1 Stbd MPM Mtr Sys 2 Port Fwd MRL Mtr Sys 2 Stbd Fwd MRL Mtr Sys 1
	R14			Camera B
	MPC3	MMC2		Port Aft MRL Mtr Sys 1 Stbd Mid MRL Mtr Sys 2 Port Shoulder MPM STO/DEP msw Sys 1 Port Fwd MPM STO/DEP msw Sys 2 Stbd Fwd MPM STO/DEP msw Sys 2 Port Aft MRL LAT/REL/RTL msw Sys 1 Stbd Mid MRL LAT/REL/RTL msw Sys 2 Port MPM STO/DEP tb Port MRL LAT/REL tb Port Aft MRL RTL tb
		MMC4		Port MPM Mtr Sys 1 Stbd MPM Mtr Sys 2 Port Fwd MRL Mtr Sys 2 Port Fwd MRL LAT/REL/RTL msw Sys 2 Port Aft MPM STO/DEP msw Sys 2 Stbd Mid MPM STO/DEP msw Sys 1 Stbd Aft MPM STO/DEP msw Sys 2 Stbd MPM STO/DEP tb
	ML86B			Port Guillotine Sys B Stbd Guillotine Sys B Port Jettison Sys B Stbd Jettison Sys B
	CNTLCA1			Port Fwd MRL Mtr Sys 2 Port Mid MRL Mtr Sys 2 Port Aft MRL Mtr Sys 1 Stbd Fwd MRL Mtr Sys 1 Stbd Aft MRL Mtr Sys 2 Stbd Mid MRL Mtr Sys 2
CNTLCA2			Port MPM Mtr Sys 1 Stbd MPM Mtr Sys 2	

PDRS EPS IMPACT TABLE (Cont)

Bus Lost		Equipment Lost
CNTLCA3	MNC MMC2	Port Aft MRL Mtr Sys 1 Stbd Mid MRL Mtr Sys 2 Port Shoulder MPM STO/DEP msw Sys 1 Port Fwd MPM STO/DEP msw Sys 2 Stbd Fwd MPM STO/DEP msw Sys 2 Port Aft MRL LAT/REL/RTL msw Sys 1 Stbd Mid MRL LAT/REL/RTL msw Sys 2 Port MPM STO/DEP tb Port MRL LAT/REL tb Port Aft MRL RTL tb
	MNC MMC4	Port MPM Mtr Sys 1 Stbd MPM Mtr Sys 2 Port Fwd MRL Mtr Sys 2 Port Fwd MRL LAT/REL/RTL msw Sys 2 Port Aft MPM STO/DEP msw Sys 2 Stbd Mid MPM STO/DEP msw Sys 1 Stbd Aft MPM STO/DEP msw Sys 2 Stbd MPM STO/DEP tb

PDRS OI MDM/DSC IMPACT TABLE

MDM OF1	
Port Aft MRL LAT/REL/RTL msw Sys 2 TLM	PRLA 3/Lat 1 LAT/REL/RTL Sys 2 TLM
Stbd Aft MRL LAT/REL/RTL msw Sys 1 TLM	PRLA 3/Lat 2 LAT/REL/RTL Sys 2 TLM
PRLA 2/Lat 2 LAT/REL/RTL Sys 2 TLM	PRLA 3/Lat 3 LAT/REL/RTL Sys 2 TLM
PRLA 2/Lat 3 LAT/REL/RTL Sys 2 TLM	PRLA 3/Lat 4 LAT/REL/RTL Sys 2 TLM
PRLA 2/Lat 4 LAT/REL/RTL Sys 2 TLM	PRLA 3/Lat 5 LAT/REL/RTL Sys 2 TLM
PRLA 2/Lat 5 LAT/REL/RTL Sys 2 TLM	
MDM OF2	
PRLA 1/Lat 1 LAT/REL/RTL Sys 2 TLM	PRLA 2/Lat 5 LAT/REL/RTL Sys 1 TLM
PRLA 1/Lat 2 LAT/REL/RTL Sys 2 TLM	PRLA 3/Lat 1 LAT/REL/RTL Sys 1 TLM
PRLA 1/Lat 3 LAT/REL/RTL Sys 2 TLM	PRLA 3/Lat 2 LAT/REL/RTL Sys 1 TLM
PRLA 1/Lat 4 LAT/REL/RTL Sys 2 TLM	PRLA 3/Lat 3 LAT/REL/RTL Sys 1 TLM
PRLA 1/Lat 5 LAT/REL/RTL Sys 2 TLM	PRLA 3/Lat 4 LAT/REL/RTL Sys 1 TLM
PRLA 2/Lat 1 LAT/REL/RTL Sys 2 TLM	PRLA 3/Lat 5 LAT/REL/RTL Sys 1 TLM
MDM OF4	
Port Mid MRL LAT/REL/RTL msw Sys 1 TLM	PRLA 2/Lat 2 LAT/REL/RTL Sys 1 TLM
Stbd Fwd MRL LAT/REL/RTL msw Sys 2 TLM	PRLA 2/Lat 3 LAT/REL/RTL Sys 1 TLM
Primary Power TLM	PRLA 2/Lat 4 LAT/REL/RTL Sys 1 TLM
B/U Power TLM	
MDM OA1	
Port Mid MRL LAT/REL/RTL msw Sys 2 TLM	Stbd Mid MRL LAT/REL/RTL msw Sys 1 TLM
MDM OA2	
Port Shoulder MPM STO/DEP msw Sys 1 TLM	Port Shoulder MPM STO/DEP msw Sys 2 TLM
Stbd Fwd MPM STO/DEP msw Sys 1 TLM	Stbd Fwd MPM STO/DEP msw Sys 2 TLM
Port Fwd MRL LAT/REL/RTL msw Sys 1 TLM	Port Fwd MRL LAT/REL/RTL msw Sys 2 TLM
Stbd Fwd MRL LAT/REL/RTL msw Sys 1 TLM	Stbd Aft MRL LAT/REL/RTL msw Sys 2 TLM
MDM OA3	
Port Aft MRL LAT/REL/RTL msw Sys 1 TLM	PRLA 1/Lat 3 LAT/REL/RTL Sys 1 TLM
Stbd Mid MRL LAT/REL/RTL msw Sys 2 TLM	PRLA 1/Lat 4 LAT/REL/RTL Sys 1 TLM
PRLA 1/Lat 1 LAT/REL/RTL Sys 1 TLM	PRLA 1/Lat 5 LAT/REL/RTL Sys 1 TLM
PRLA 1/Lat 2 LAT/REL/RTL Sys 1 TLM	PRLA 2/Lat 1 LAT/REL/RTL Sys 1 TLM

MISCELLANEOUS RMS MOTION NOTES

Uncommanded Motion/Runaway Operator Response:

Mode	1st Response	If no joy – 2nd Response
Any Computer-Supported	BRAKES – ON	RMS SEL – OFF
DIRECT	MODE – Not DIRECT	RMS SEL – OFF
B/U	RMS SEL – OFF	RMS PWR – OFF

Single Joint Ops (General)

Need to Pulse in Single when:

- near structure
- near Singularity or Reach Limit
- to control rates

NOTE: Always Pulse in Direct/Backup when within 10 ft to maintain vernier rates

Cradle/Uncradle Notes

During Uncradle → Must Pulse EP

During Cradle → Must Pulse all Joints

This Page Intentionally Blank

MISCELLANEOUS PROCEDURES

OPERATOR COMMANDED MODE 11-2

RELATIVE POSITION/ATTITUDE DISPLAY 11-4

FLY-CAMERA/FLY-PAYLOAD COMMAND REFERENCE MODE 11-5

BACKUP RELEASE..... 11-6

OPERATOR COMMANDED MODE

The following is shorthand notation that means “perform OPERATOR COMMANDED mode maneuver to shown position/attitude”

BRAKES – OFF (tb-OFF)

(“MODE – OPR CMD, ENTER” may or may not be shown)

OPERATOR COMMAND to: (or “OPR CMD to:”)

X	Y	Z	PITCH	YAW	ROLL	PL ID
data	data	data	data	data	data	0 to 5
SY	SP	EP	WP	WY	WR	
data	data	data	data	data	data	

Above callout performed in following manner:

SM 94 PDRS CONTROL

PL ID, ITEM 3 – (PL ID from above) EXEC

INIT ID, ITEM 24 – (PL ID from above) EXEC

END POS X, ITEM 18 -(X from above) EXEC

Y, ITEM 19 ±(Y from above) EXEC

Z, ITEM 20 -(Z from above) EXEC

END ATT P, ITEM 21 +(P from above) EXEC

Y, ITEM 22 +(Yaw from above) EXEC

R, ITEM 23 +(R from above) EXEC

CMD CK, ITEM 25 EXEC (GOOD or FAIL)

WARNING

CMD CK does not verify RMS trajectory will be clear of orbiter structure. RMS opr must monitor RMS/payload for collision hazard

IF ITEM 25 – FAIL INDICATED

Verify all entries correct, especially X,Z END POS (both neg)

If corrections made, CMD CK, ITEM 25 EXEC (GOOD)

If still no “GOOD”, no OPR CMD possible,
consult MCC for new POS/ATT or MAL

RATE – VERN, as reqd

BRAKES – OFF (tb-OFF)

MODE – OPR CMD, ENTER (OPR CMD It on)

√AUTO SEQ READY It – on

*	If error found in destination entries	*
*	BRAKES – ON (tb-ON) (Items 18-23)	*
*		*
*	Enter corrected destination (Items 18-23)	*
*		*
*	CMD CK, ITEM 25 EXEC (GOOD)	*
*	BRAKES – OFF (tb-OFF)	*
*	MODE – OPR CMD, ENTER	*
*		*
*	√AUTO SEQ READY It – on	*

AUTO SEQ – PRO (IN PROG It on)
 √RMS moves as expected, then

When IN PROG It – off,
 BRAKES – ON (tb-ON)

√RMS at desired POS/ATT, joint angles:

PARAM – POSITION X/Y/Z
 √X,Y,Z = data shown

PARAM – ATTITUDE P/Y/R
 √P/Y/R = data shown

PARAM – JOINT ANGLE
 JOINT (six) – in turn
 √Joint angles = data shown

RELATIVE POSITION/ATTITUDE DISPLAY

The following outlines how to maneuver to RMS position utilizing REL mode via SM SPEC 94 PDRS CONTROL:

Enter target position using procedure OPERATOR COMMANDED MODE

SM 94 PDRS CONTROL

POR DISPLAY: ITEM 30 EXEC (REL)

Maneuver RMS until all digitals equal zero

✓RMS at desired joint angles:

PARAM – JOINT ANGLE

JOINT (six) – in turn

✓Joint angles = desired values

When use of REL mode complete, then

SM 94 PDRS CONTROL

POR DISPLAY: ITEM 30 EXEC (ORB)

✓RMS at desired POS/ATT:

PARAM – POSITION X/Y/Z

✓X,Y,Z = desired values

PARAM – ATTITUDE P/Y/R

✓P,Y,R = desired values

FLY-CAMERA/FLY-PAYLOAD COMMAND REFERENCE MODE

Operational Constraints:

Fly-Camera or Fly-Payload can only be selected if:

- ORB LD It – ON
- SM 94 PDRS CONTROL, ITEM 25: GOOD
- SM 94 PDRS CONTROL: ITEM 3 is equal to ITEM 24

While using Fly-Camera or Fly-Payload, the following SM 94 PDRS CONTROL ITEM entries are illegal: 1, 2, 3, 18-23, 24, 25

Enter the target position (ITEMS 18,19,20) and camera reference attitude (ITEMS 21,22,23) using the procedure OPERATOR COMMANDED MODE

SM 94 PDRS CONTROL



ORB LD CMD REF FLY CAMR (FLY-PL): ITEM 32(33) EXEC (*)

Maneuver RMS to desired position

When use of Fly-Camera or Fly-Payload complete, then

SM 94 PDRS CONTROL

ORB LD CMD REF: ITEM 31 EXEC (*)

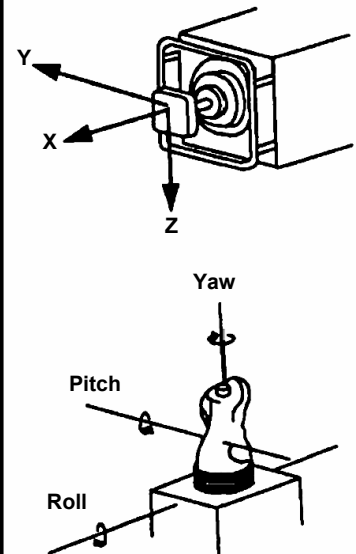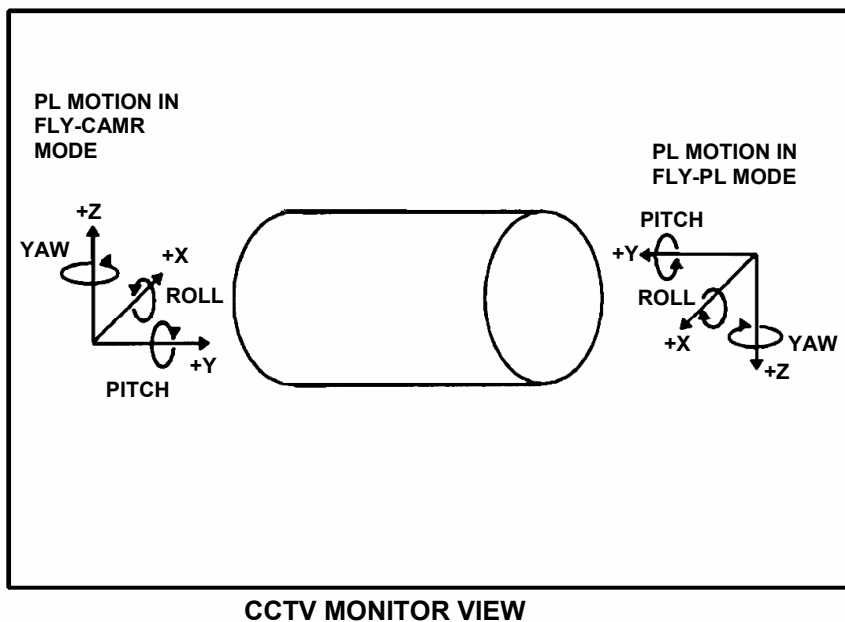

BACKUP RELEASE

1. B/U PAYLOAD RELEASE

√B/U PL REL – OFF

SM 94 PDRS CONTROL

Record WR R _____

RMS SEL – OFF

PWR – B/U (SM ALERT and BCE BYP MCIU)

SEL – PORT

B/U PL REL – ON

Wait 10 sec

Maneuver RMS/orbiter away from PL

B/U PL REL – OFF

2. RECONFIGURE TO PRIMARY POWER

RMS SEL – OFF

PWR – PRI (MA)

SM 94 PDRS CONTROL

I/O ON – ITEM 5 EXEC (*)

RMS SEL – PORT

SAFING – CANCEL (tb-gray)

If WR R different:

WR R – ITEM 26 + (recorded value) EXEC

√BRAKES – ON

CUE CARD CONFIG

This Page Intentionally Blank

TOP

HOOK
VELCRO

**GENERIC END EFFECTOR CUE CARD –
SHUTTLE NOT DOCKED OPS**

MA – RELEASE or PL/EE Interface Suspect

Stop maneuver

DAP: FREE

If PL/EE interface is suspect and RMS/PL config is unsafe:

PULL TEST (PL follows RMS or pin clear of EE)

If expedited release required:

MAN OPEN ($\sqrt{\text{OPEN}}$ tb-gray, 3 sec max)

If no joy, B/U RELEASE (10 sec)

Maneuver arm to safe distance

MA – DERIGIDIZE

Stop maneuver

DAP: FREE

If OBSS grappled:

R12 SPEE PWR – OFF

MAN RIGIDIZE ($\sqrt{\text{RIGID}}$ tb-gray, 25 sec max)

PDRS-3a/O/J

TOP

Back of 'GENERIC END EFFECTOR CUE CARD – SHUTTLE NOT DOCKED OPS'

HOOK
VELCRO

PDRS-3b/O/G

(reduced copy)

TOP

HOOK
VELCRO

**GENERIC END EFFECTOR CUE CARD –
ISS/SHUTTLE DOCKED OPS**

MA – RELEASE

Stop maneuver

√DAP: FREE

If ISS CONTROL:

PCS MSS: SSRMS: Thrusters: Thruster Controls for MSS Ops
If 'Desat Request – Enable'
 cmd 'Desat Request' – Inhibit (Verify – Inh)

MA – DERIGIDIZE

Stop maneuver

√DAP: FREE

If ISS CONTROL:

PCS MSS: SSRMS: Thrusters: Thruster Controls for MSS Ops
If 'Desat Request – Enable'
 cmd 'Desat Request' – Inhibit (Verify – Inh)

If OBSS grappled:

R12 SPEE PWR – OFF
 MAN RIGIDIZE (√RIGID tb–gray, 25 sec max)

PDRS-6a/O/B


TOP

Back of 'GENERIC END EFFECTOR CUE CARD – SHUTTLE DOCKED OPS'

HOOK
VELCRO

PDRS-6b/O/A


(reduced copy)

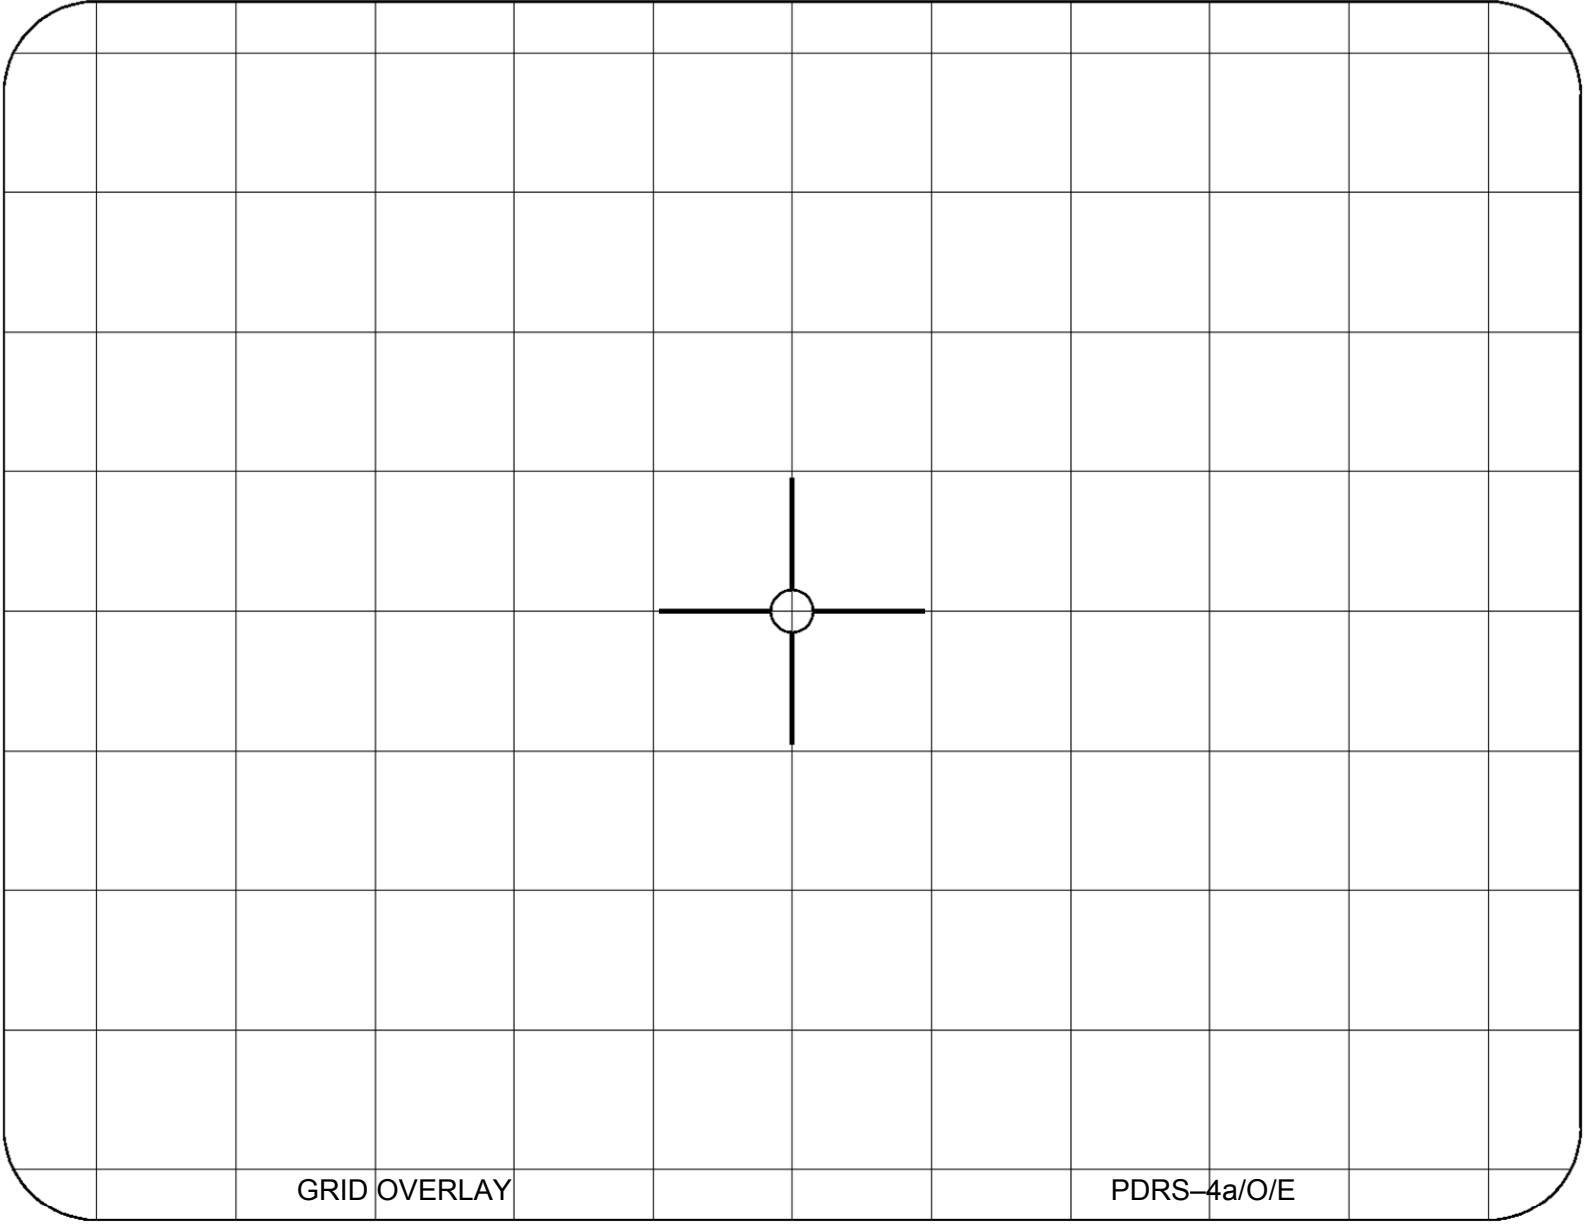


GRID OVERLAY

PDRS-4a/O/E


Note: Fabricate as a transparency

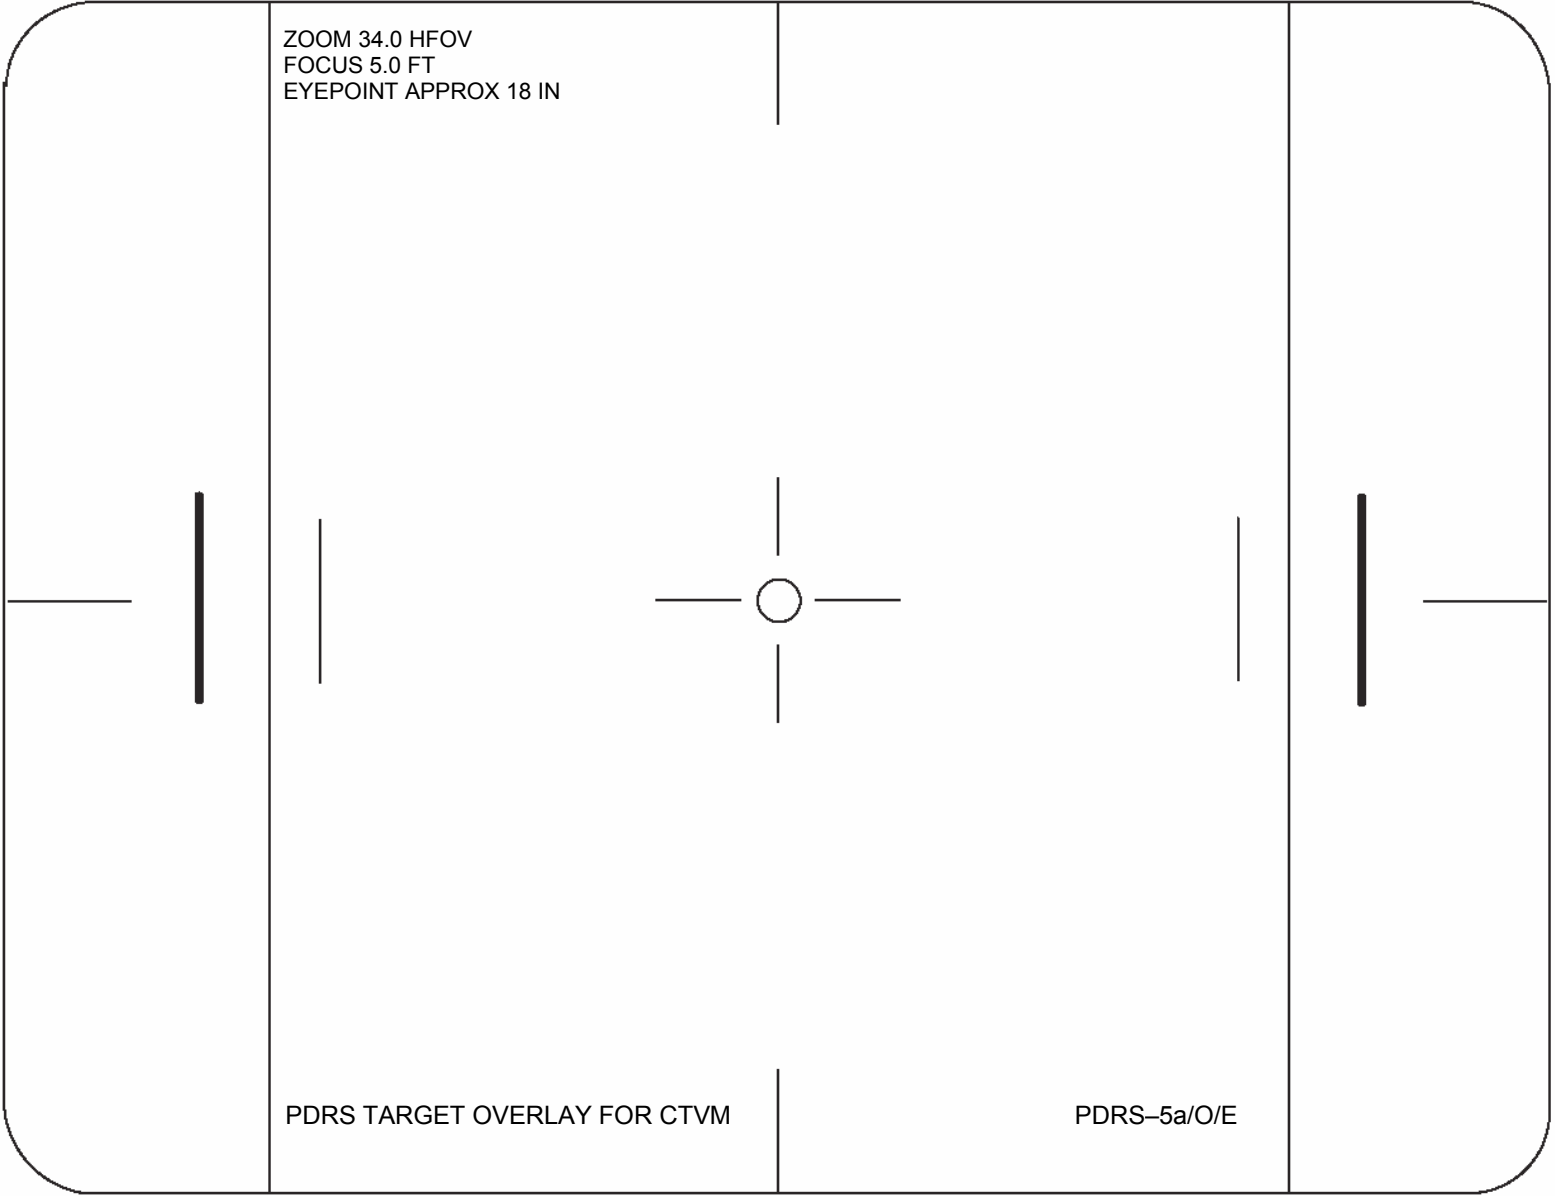

(reduced copy)

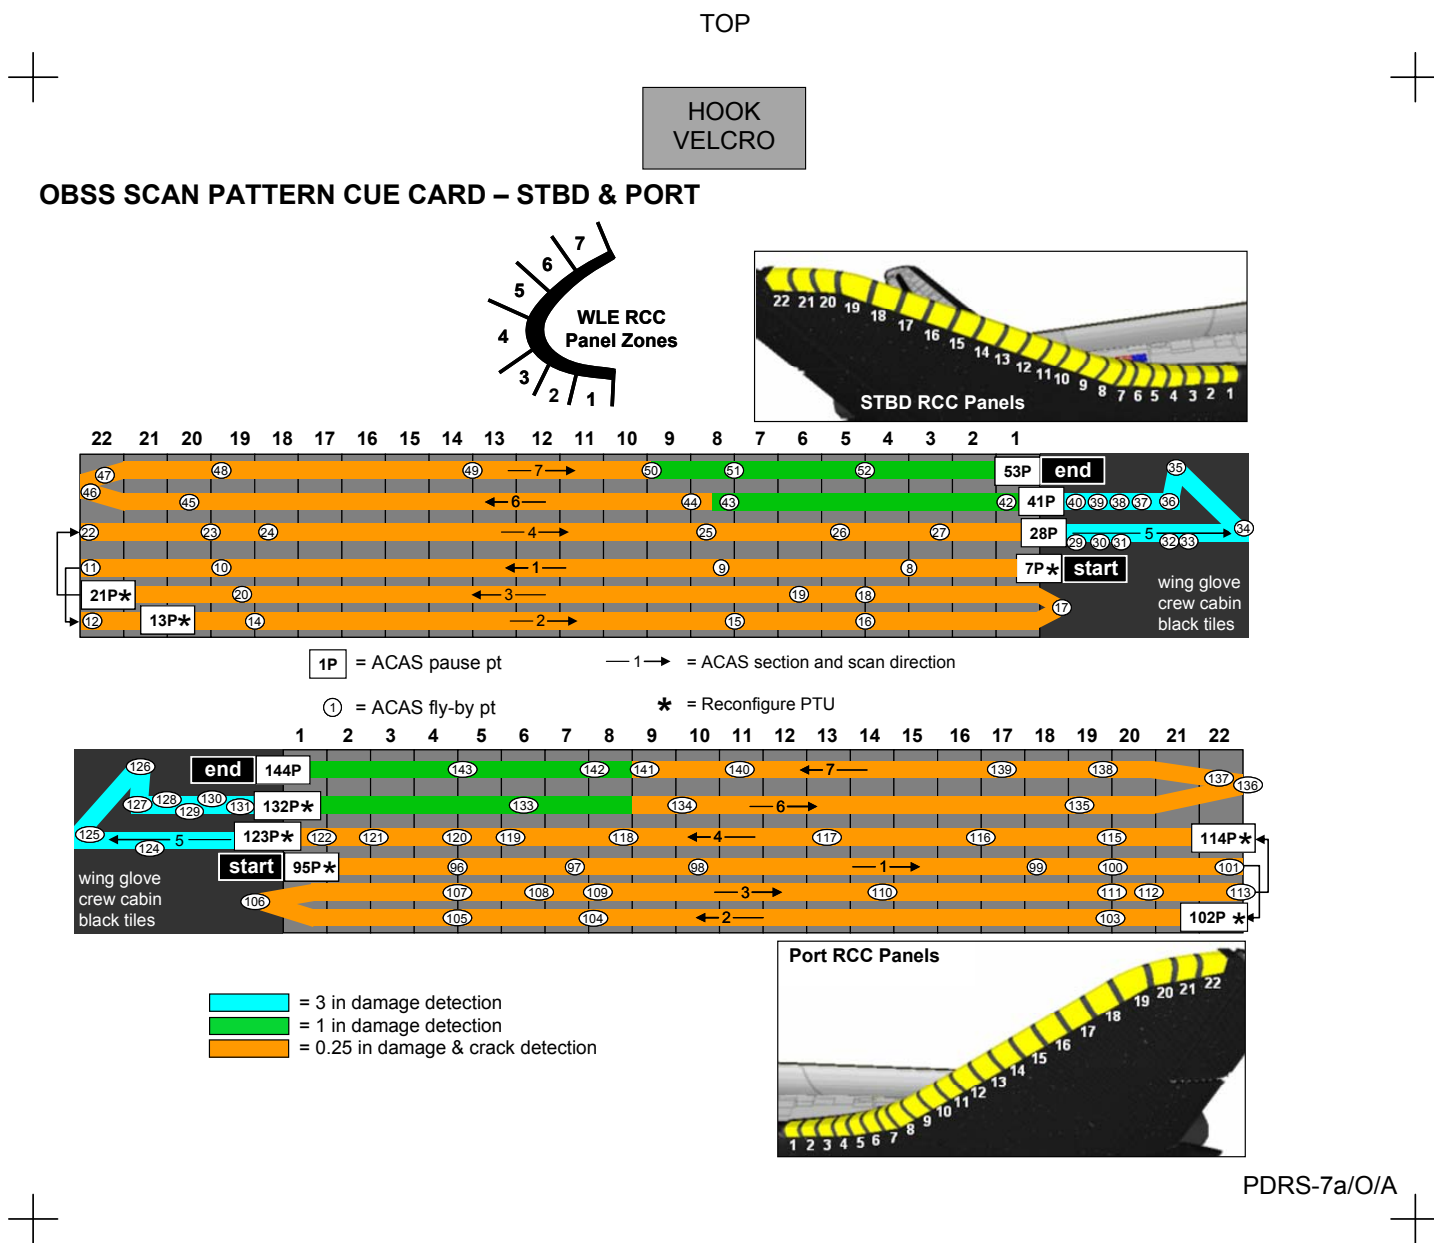

(reduced copy)

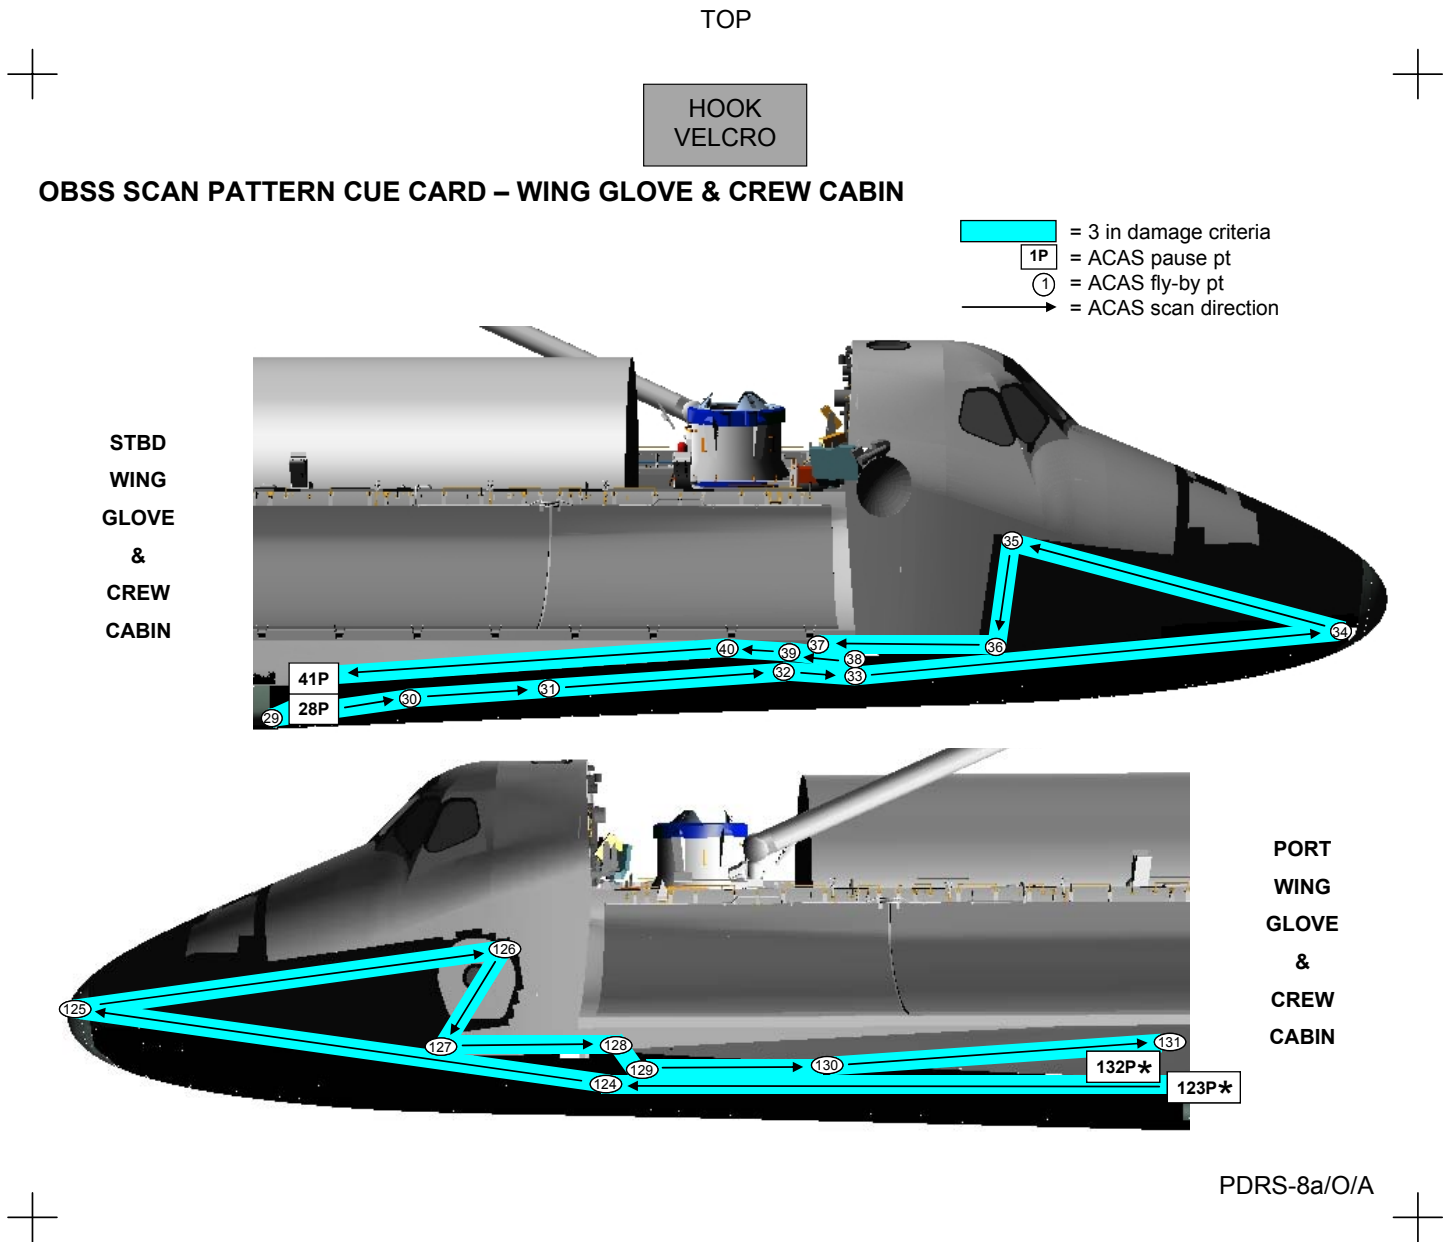




TOP
Back of 'OBSS SCAN PATTERN CUE CARD – WING GLOVE & CREW CABIN'

HOOK
VELCRO



PDRS-8b/O/A



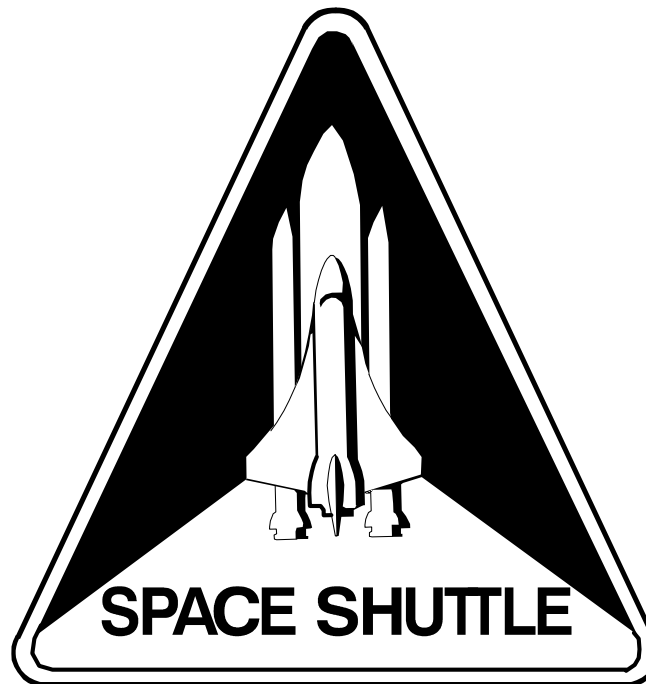

PDRS OPS C/L

**STS
ALL**